

DocuCentre S2110

User Guide



Microsoft, Windows, Windows Server, Internet Explorer, and Microsoft Edge are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Other company names or product names are registered trademarks or trademarks of each company.

Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

For information on license, refer to "About License".

In this manual, safety instructions are preceded by the symbol . Always read and follow the instructions before performing the required procedures.

As the copying machine contains a feature designed to prevent forging of certain documents, there may be rare instances where copies or scanned images do not achieve the desired results.

The data saved in the hard disk of the machine may be lost if there is any problem in the hard disk. Fuji Xerox is not responsible for any direct and indirect damages arising from or caused by such data loss.

Fuji Xerox is not responsible for any breakdown of machines due to infection of computer virus or computer hacking.

Important

1. This manual is protected under copyright laws, and cannot be copied or modified, in whole or part, without a written consent of the copyright owner. However, you may copy this manual for the purpose of operating this machine.
2. Parts of this manual are subject to change without prior notice.
3. We welcome any comments on ambiguities, errors, omissions, or missing pages.
4. Never attempt any procedure on the machine that is not specifically described in this manual. Unauthorized operation can cause faults or accidents. Fuji Xerox is not liable for any problems resulting from unauthorized operation of the equipment.

An export of this product is strictly controlled in accordance with Laws concerning Foreign Exchange and Foreign Trade of Japan and/or the export control regulations of the United States.

Xerox, Xerox and Design, Fuji Xerox and Design, as well as CentreWare are registered trademarks or trademarks of Xerox Corporation in Japan and/or other countries.

Table of Contents

1	Before Using the Machine	9
	Preface	10
	Types of Manuals.....	11
	Using This Guide	12
	Organization of This Guide.....	12
	Conventions	13
	About License.....	14
	Libcurl	14
	FreeBSD	14
	MD5.....	15
2	Environment Settings	17
	Supported Environment	18
	Print Feature	18
	Scan Feature.....	19
	Interface Cables.....	20
	Using the USB Interface.....	20
	Using the Ethernet Interface.....	21
	Setting the Network Environment.....	23
	Setting the Machine's IP Address (IPv4)	23
	Setting the Machine's IP Address (IPv6)	23
	Setting the Machine's IP Address with the Support Tool	24
	Activating the Communication Port To Use	25
	Using CentreWare Internet Services	27
	CentreWare Internet Services.....	27
	Supported Environments and Settings	27
	Starting CentreWare Internet Services.....	28
	Setting Items on CentreWare Internet Services.....	29
	[Properties] Tab	30
	[Support] Tab	38
	Installing the Print Driver/Scan Driver.....	39
	Using Print & Scan Hub.....	40
	Print & Scan Hub (Windows®).....	40
	Installing Print & Scan Hub.....	40
	Starting Print & Scan Hub	40
3	Product Overview	41
	Machine Components	42
	Front, Left Side.....	42
	Right Side, Rear.....	43
	Inside	44

	Duplex Automatic Document Feeder.....	45
	Power Source.....	46
	Switching the Power On.....	46
	Switching the Power Off.....	47
	Power Saver Mode.....	48
	Entering Power Saver Mode.....	48
	Exiting Power Saver Mode.....	49
	Control Panel.....	50
	Machine Status	54
	Icons	55
	Account Mode.....	57
	Types of Account Modes	57
	Setting the Options Configuration.....	63
4	Loading Paper	67
	Paper Types	68
	Supported Paper Weights and Sheet Counts.....	68
	Supported Paper Type.....	69
	Unusable Paper	70
	Storing and Handling Paper	71
	Loading Paper	72
	Loading Paper in Trays 1 and 2 (Optional).....	72
	Loading Paper in Bypass Tray	74
	Changing Paper Size.....	76
	Changing the Paper Size for Trays 1 and 2	76
	Setting the Paper Size.....	78
	Setting the Paper Type.....	80
5	Copy	83
	Overview of Copy Operations.....	84
	Placing Document	84
	Making Advanced Settings.....	87
	Entering the Number of Copies	88
	Starting the Copy Job	89
	Operations Performed While Copying	90
	Canceling the Current Copy Job.....	90
	Advanced Copy Settings	91
	2 Sided	91
	Pages per Side.....	93
	Collated	94
	Original Type.....	95
	Lighten/Darken.....	96
	Reduce/Enlarge	97
	ID Card Copy.....	98

Original Size	102
Paper Supply	103
Sharpness	104
Background Suppression.....	104
Edge Erase	104
Auto Rotation	104
Managing the Copy Paper with Accounting	105
Operations when using the Copy Feature	105
6 Scan.....	107
Scanning Procedure	108
Placing the Document	108
Using the Scan Feature	112
Loading Scan Data Using the PC-Based Application.....	113
Operations during Scanning	115
Canceling the Current Scan Job.....	115
7 Print.....	117
Major Print Driver Functions.....	118
Printing	119
Operations during Printing.....	120
Stopping the Print Job	120
8 Tools.....	121
System Settings Procedure.....	122
Enter System Administration Mode	122
Change Settings.....	123
Exit System Administration Mode	124
System Administrator Program List.....	125
Clock Settings	125
System Settings.....	125
Account Mode Settings	130
Network Settings.....	132
Feature Settings.....	136
9 Machine Status	141
Printing Reports.....	142
Checking the Job Counter	143
Checking Consumables	144
Checking the Total Number of Impressions Copied.....	145
10 Maintenance.....	147
Replacing Consumables.....	148

Replacing the Toner Cartridge	149
Replacing the Drum Cartridge	153
Cleaning the Machine	160
Cleaning the Exterior	160
Cleaning the Document Cover and the Document Glass	161
Cleaning the Document Presser and the Constant Velocity Transport Glass	162
Cleaning Document Feeder Rollers	163
11 Problem Solving	165
Troubleshooting	166
Machine Problems	167
Image Quality Problems	171
Copying Problems	177
Unable to Copy	177
Copy Output Problems	177
Printer Problems	180
Unable to Print	180
Print Output Problems	180
Scan Problems	182
Unable to Scan	182
Unable to Load Scan Data to a Computer	182
Scan Image Quality Problems	183
Network Related Problems	185
Problems Using TCP/IP (LPD/Port9100)	185
Problems Using CentreWare Internet Services	185
Internet/Intranet Connection Problems	186
IPv4 or IPv6 Connection Problems	188
Error Code	189
Paper Jams	201
E-1: Paper Jam in Left Cover [A]	202
E-2: Paper Jam in One Tray Module Cover [B]	204
E-3: Paper Jams in Tray 1	205
E-4: Paper Jams in Tray 2	206
E-5: Paper Jams in Bypass Tray	207
Document Jams	208
12 Appendix	211
Specifications	212
Basic Functions/Copy Functions	212
Print Functions	214
Scan Functions	215
Duplex Automatic Document Feeder	216
Duplex Output Unit	217
One Tray Module (Optional)	217
Printable Area	218

Optional Components	219
Notes and Restrictions	220
Notes and Restrictions on the Use of the Machine	220
Notes and Restrictions on the Use of the Copy Feature.....	221
Notes and Restrictions on the Use of the Print Feature	221
Notes and Restrictions on the Use of the Scan Feature	222
Notes and Restrictions when Connecting to Internet or Intranet.....	222
Notes and Restrictions when Operating from Computers	223
Notes and Restrictions for Using TCP/IP (LPD/Port9100)	223
Notes and Restrictions for IPv6 Connection	223
 Index.....	 225

1

Before Using the Machine

Preface

Thank you for selecting the DocuCentre S2110 (hereafter referred to as "the machine").

This guide describes how to operate the machine and the precautions you should follow during operation. To get the most out of the machine and to use it effectively, be sure to read this guide before use.

This guide assumes that you have a basic knowledge of the operating environment of the personal computer in use and networking environments. For information on the environment of the personal computer in use and the basic knowledge and operations of networking environments, refer to the manuals provided with the personal computer, operating system, and network system.

After reading this guide, be sure to keep it handy for quick reference. It will be useful in case you forget how to perform operations or if a problem occurs with the machine.

Warning:
The equipment will be inoperable when main power fails.

When you use this machine, we recommend that you change the system administrator's user ID and passcode immediately after installing the machine.

For more information on changing the user ID and passcode, refer to "System Administrator Program List" (P.125).

Types of Manuals

The following guides are provided with the machine.

Accompanying Manuals

■ Basic Operation Guide (Booklet)

The guide describes a quick reference for the basic operations, daily maintenance, and problem solving for this machine.

■ Software/Product Manual (Disc)

This media contains User Guide.

Refer to the product manuals contained on the media.

Help Accessible from the Software

■ Driver Help

The help describes the print or scan features, and operations.

Guides for Optional Components

Optional components are available for this machine. Optional components come with an installation procedure guide that provides information on how to set up the product and other details.

Using This Guide

This guide is intended for first time users of the machine. It describes the basic operations for the copy, print, and scan features.

Organization of This Guide

This guide consists of the following chapters:

■ 1 Before Using the Machine

Describes how to use this guide and provides license information.

■ 2 Environment Settings

Describes the environment required to operate the machine.

■ 3 Product Overview

Describes the names of the machine parts as well as basic operations, such as how to turn the machine on and off, how to use the Power Saver feature, and how to use CentreWare Internet Services.

■ 4 Loading Paper

Describes the types of paper and other media that you can use on the machine and how to load paper in a tray.

■ 5 Copy

Describes the basic operation and features of the copy feature.

■ 6 Scan

Describes the basic operations and features of the scan feature.

■ 7 Print

Describes the basic printing operations.

■ 8 Tools

Describes the System Administration mode as well as how to change the default settings.

■ 9 Machine Status

Describes how to check the faults that occurred in the machine and to print various reports.

■ 10 Maintenance

Describes how to replace consumables and to clean the machine.

■ 11 Problem Solving

Describes troubleshooting procedures to solve the problems with the machine.

■ 12 Appendix

Describes the specifications of the machine, optional accessories, and cautions/restrictions.

Conventions

- The screen shots and illustrations used in this guide vary depending on the machine configuration and optional components installed. Some of the items in the screen shots may not be displayed or available depending on your machine configuration.
- The procedures in this guide may vary depending on the driver and utility software being used due to the upgrades.
- In this document, "Computer" refers to a personal computer or workstation.
- The following terms are used in this guide:

- Important : • Important information that you should read.
- Note : • Additional information on operations or features.


- The following symbols are used in this guide:

- " " : • A cross-reference included in this guide.
- [] : • Names of features, screen messages, and input text.
- [] : • Folders, files, applications, button or menu names displayed on the screen.
- [] : • Names of menus, commands, windows, or dialog boxes displayed on the computer screen and their buttons and menu names.
- < > button : • Hardware buttons on the control panel.
- < > key : • Keys on the keyboard of the computer.
- > : • Path to a certain item within a procedure on a computer.
For example: When you see the procedure "to search for files and folders, click [Start] > [Search] > [For Files or Folders]", this means that you need to click [Start], click [Search], and then click [For Files or Folders] to search for files and folders.


- Orientation of documents or paper is described in this guide as follows:

-   Long Edge Feed (LEF):
-   Short Edge Feed (SEF):
- Loading the document or paper in portrait orientation when viewed from the front of the machine.
 - Loading the document or paper in landscape orientation when viewed from the front of the machine.

LEF Orientation

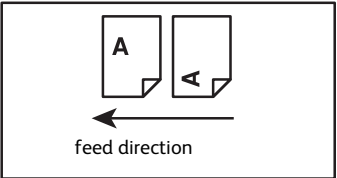

SEF Orientation

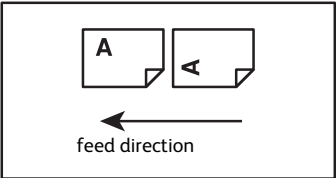

About License

This section describes information about licenses. Be sure to read through it.

Libcurl

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2006, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

FreeBSD

This product contains the part of FreeBSD codes.

The FreeBSD Copyright

Copyright 1994-2006 The FreeBSD Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE FREEBSD PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FREEBSD PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The views and conclusions contained in the software and documentation are those of the authors and should not be interpreted as representing official policies, either expressed or implied, of the FreeBSD Project.

MD5

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose.

It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

2


Environment Settings

Supported Environment

This section describes the environment settings needed to use the machine's print and scan features.

Print Feature

The machine can be connected directly to a computer for use as a local printer, or can be connected to a network for use as a network printer.

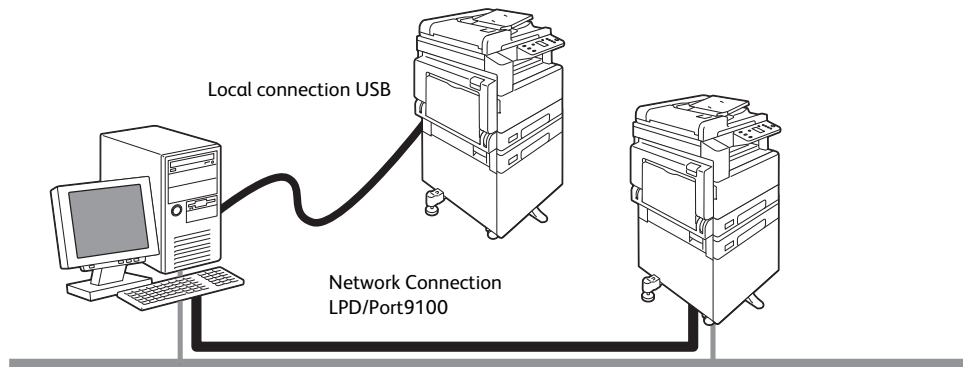

■ Use as a Local Printer

Connect the machine to a computer with a USB cable.

■ Use as a Network Printer

Print from network-connected computers using the TCP/IP protocol.

To use the machine as a network printer, you need to activate the port to use for printing.

- LPD: Activate this setting when using the LPD port.
- Port9100: Activate this setting when using the Port9100 port.

Reference

- For information on how to set TCP/IP, refer to "Setting the Network Environment" (P.23).
- For information on how to activate a communication port, refer to "Activating the Communication Port To Use" (P.25).

Scan Feature

The machine supports the following Scan functions:

Using the USB connection

■ Scan with PC application

Uses the USB connection to import scan data in a computer with a TWAIN or Windows® Image Acquisition (WIA) compatible application.

To use this function, you must install the scan driver from the Media (Software/Product Manual).

Note

- To install the scan driver, follow the instructions provided in the Media Information included in the Media (Software/Product Manual).

Reference

- For information on how to use this feature, refer to "Loading Scan Data Using the PC-Based Application" (P.113).

Using the Network connection

■ Scan with PC application

Uses the Network TWAIN (SOAP) to import scan data in a computer with a TWAIN or Windows Image Acquisition (WIA) compatible application.

To use this function, you must install the scan driver from the Media (Software/Product Manual).

Note

- To install the scan driver, follow the instructions provided in the Media Information included in the Media (Software/Product Manual).

Reference

- For information on how to use this feature, refer to "Loading Scan Data Using the PC-Based Application" (P.113).

Interface Cables

When connecting the machine directly to a computer, use a USB interface. When connecting the machine to a network, use an Ethernet interface.

Using the USB Interface


The machine supports the USB 2.0 interface.

Note

- You can use a cable up to 5 m in length according to the USB 2.0 standard.

To connect the USB interface:


- 1 Press the power switch to the [O] position to turn the power OFF.

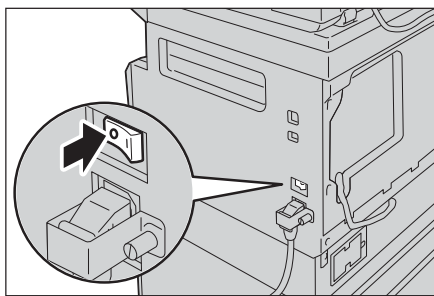

Note


- Check that the display of the status machine diagram is turned off.

- 2 Connect a USB cable to the USB 2.0 interface connector.

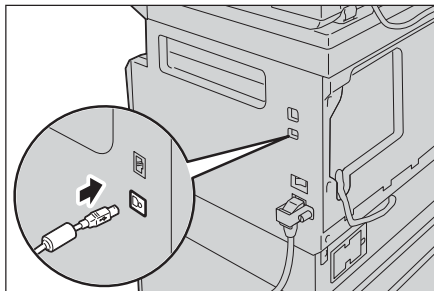

- 3 Connect the other end of the USB cable to the computer.

- 4 Press the power switch to the [I] position to turn the power ON.

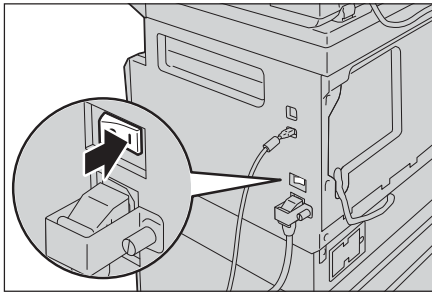


Using the Ethernet Interface

The machine supports 100BASE-TX Ethernet interface.

To connect the Ethernet interface:


- 1 Press the power switch to the [O] position to turn the power OFF.

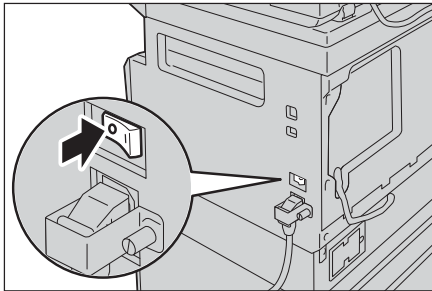

Note

- Check that the display of the status machine diagram is turned off.


- 2 Connect a network cable to the Ethernet interface connector.

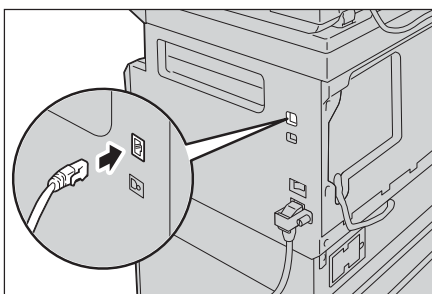

Note

- Prepare a network cable suitable for your network connection. When you replace the network cable, contact our Customer Support Center.

-
-
- 3** Press the power switch to the [I] position to turn the power ON.

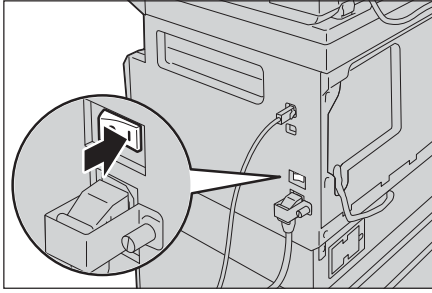

Setting the Network Environment

This section describes how to make the settings needed to use the TCP/IP protocol.

Note

- The machine supports IPv6 addresses in an IPv6 network environment. For more information, refer to "Setting the Machine's IP Address (IPv6)" (P.23).

Setting the Machine's IP Address (IPv4)

To use the TCP/IP protocol, you must set the machine's IP address.

By default, the machine is set to obtain its IP address automatically.

This setting automatically sets the machine's IP address when the machine is connected to a network containing a DHCP server.

Print the System Settings Report to check whether the machine's IP address has already been set.

If the machine's IP address has not been set, you will need to set the IP address on the control panel.

Note

- If the network has a DHCP server, the machine's IP address may be changed, so check the address periodically.
- The machine can acquire address information automatically by using a BOOTP or RARP server.

Reference

- For information on how to print the System Settings Report, refer to "Printing Reports" (P.142).
- For information on how to set the IP address from the control panel, refer to "Network Settings" (P.132).
After setting the program numbers from 1008 to 1020, print out the System Settings Report, and check the applied settings.

Setting the Machine's IP Address (IPv6)

The machine supports IPv6 addresses in an IPv6 network environment.

The machine's IP address type is set to IPv4 by factory default. To use the machine in an IPv6 network environment, set the IP address type to IPv6 or both types. The IPv6 address is set automatically when the machine is restarted.

Print the System Settings Report to check the IPv6 address.

You can set a fixed IPv6 address for the machine using either of the following methods:

- Use the control panel to make the setting manually.
- Use CentreWare Internet Services to make the setting manually. Print the System Settings Report to check the address set automatically, then use that address to access CentreWare Internet Services.

From the [Properties] tab, select [Connectivity] > [Protocols] > [TCP/IP] > [IP Mode]. Set the [IP Mode] to [IPv6] or [Dual Stack]. The IPv6 address can be entered manually if the [Enable Manual Address] checkbox is checked under [IPv6].

Reference

- For information on how to print the System Settings Report, refer to "Printing Reports" (P.142).
- For information on how to make settings from CentreWare Internet Services, refer to "Setting Items on CentreWare Internet Services" (P.29).

Setting the Machine's IP Address with the Support Tool


This section describes how to set the IP address using the Support Tool included in the Media (Software/Product Manual).

Note


- You can change any settings on the Support Tool, when the machine is in standby status or Power Saver mode and has no running job.

- 1 Insert the Media (Software/Product Manual) into your computer.

The Launcher runs automatically.

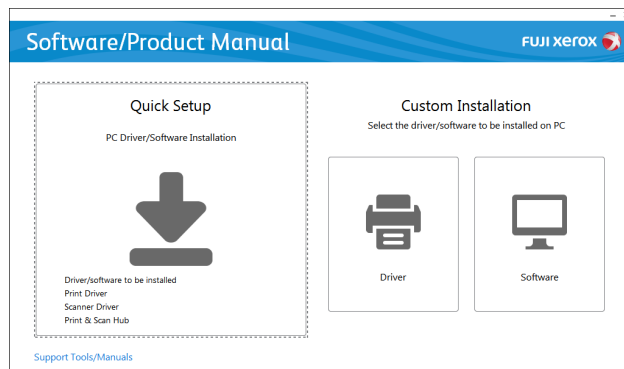

- 2 Select [Support Tools/Manuals] on the main menu screen.
- 3 Select [IP Address Settings] under [Support Tools].

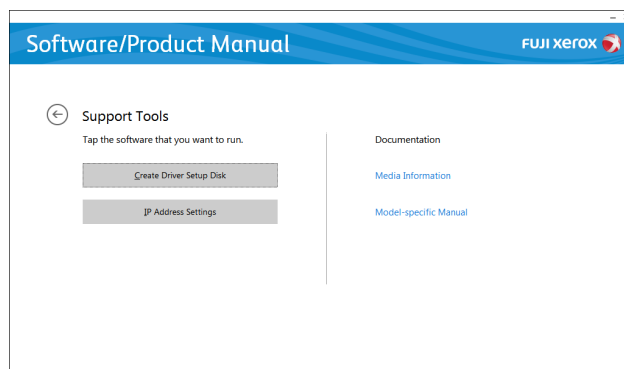

- 4 Select [Advanced] on the [Configure Printer] screen.
- 5 Enter your settings on the [IP Address Settings] screen, and select [Next].
- 6 Check your settings on the [Confirm the settings] screen, and select [Apply].
The specified settings are applied.
- 7 Select [Finish] on the [Configuration Complete] screen.
When the settings are properly configured, the machine reboots automatically and prints System Settings Report.
- 8 Confirm the assigned IP address on the System Settings Report.

Activating the Communication Port To Use

Use CentreWare Internet Services to activate the communication port you want to use. You can activate the following ports:

Port	Description
SNMP	Activate this port to use the SNMP protocol (used for operations such as loading the machine's information to the print driver).
LPD	Activate this port to print when using LPD.
Port9100	Activate this port to print when using Port9100.
Network TWAIN	Activate this port to scan using a PC-based application

Note

- You can change any settings on CentreWare Internet Services, when the machine is in standby status or Power Saver mode and has no running job.

Reference

- For information on how to make settings from CentreWare Internet Services, refer to "Setting Items on CentreWare Internet Services" (P.29).

To activate a communication port:

- 1 Start CentreWare Internet Services.

Reference

- For more information, refer to "Starting CentreWare Internet Services" (P.28).

- 2 Click the [Properties] tab.



- 3 From the menu on the left, select [Connectivity].



- 4** Click [Port Settings], and check the checkbox of the desired port.
- 5** Click [Apply].

Note

- Restart the machine to enable the new settings.

Using CentreWare Internet Services

CentreWare Internet Services

CentreWare Internet Services provides services such as changing settings using a web browser on a computer connected to a TCP/IP network environment.

Note

- The IP address of the machine also needs to be set. For information on how to set the IP address, refer to "Setting the Network Environment" (P.23).
- You can change any settings on CentreWare Internet Services, when the machine is in standby status or Power Saver mode and has no running job.

Supported Environments and Settings

■ Operating Systems and Web Browsers

The operation of CentreWare Internet Services has been verified for the following web browsers:

Operating System	Web Browsers
Windows® 10	Windows Internet Explorer® 11, Microsoft Edge™
Windows® 8.1	Windows Internet Explorer® 10
Windows® 7	Windows Internet Explorer® 8
Windows Server® 2016	Windows Internet Explorer® 11
Windows Server® 2012	Windows Internet Explorer® 10

■ Web Browser Settings

Specifying the machine's address in the web browser is recommended.

Note

- If you specify the machine's address using a proxy server, the service response time may be slow or the screens may not appear. If these problems occur, you will need to set the machine's IP address in the web browser and choose not to use a proxy server. See your web browser's manual for how to make the setting.

You will also need to make other web browser settings to make CentreWare Internet Services work properly.

The following procedure is based on the Internet Explorer 11.0.

- 1 From the [Tools] menu, select [Internet Options].
- 2 In the [General] tab, click [Settings] under [Browsing History].
- 3 In the [Temporary Internet Files] tab, select [Every time I visit the webpage] or [Every time I start Internet Explorer] for [Check for newer versions of stored pages:].
- 4 Click [OK].
- 5 Click [OK] in the [Internet Options] dialog box.

Starting CentreWare Internet Services

To start CentreWare Internet Services:

 
- 1 Start your computer and a web browser.
- 2 In your web browser's address bar, enter the machine's IP address or URL, and then press the <Enter> key.

The top page of CentreWare Internet Services is displayed.

- Example IP address (IPv4)



- Example IP address (IPv6)



- Example URL



Note

- If your network uses DNS (Domain Name System) and the machine's host name is registered on the domain name server, you can access the machine using the Internet address combining the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com" then the Internet address is "myhost.example.com".

- When specifying a port number, add ":" and the port number after the IP address or the Internet address.
- The IPv6 address cannot be entered manually in some cases depending on the web browser that you use.
- HTTPS is not supported.

Setting Items on CentreWare Internet Services

The table below lists the menu items on the CentreWare Internet Services screens.

Note

- You must have a user name and a passcode to change the settings. The user ID "11111" and the passcode "x-admin" is set as default. For information on how to change the user ID and the passcode, refer to "Using CentreWare Internet Services" (P.27) and "System Administrator Settings (Security)" (P.37).
- You cannot enter the system administration mode from a computer while the machine control panel is being used or the machine side is in the system administration mode, or there are any current or pending jobs. Also, you cannot operate the machine control panel while entering the system administration mode from a computer.

Tab	Menu Item	See Page:
Properties		(P.30)
	Description	(P.30)
	General Setup	-
	Usage Counters	(P.30)
	Power Saver Settings	(P.30)
	Connectivity	-
	Port Settings	(P.30)
	Physical Connections	-
	Ethernet	(P.31)
	Protocols	-
	TCP/IP	(P.31)
	SNMP Configuration	(P.32)
	LPD	(P.33)
	Port9100	(P.34)
	HTTP	(P.34)
	Network TWAIN	(P.35)
Support	Security	-
	IP Filtering	(P.35)
	System Administrator Settings	(P.37)
Support		(P.38)
	Support	(P.38)

Important

- Double-byte characters cannot be used in CentreWare Internet Services.

[Properties] Tab

Description

■ Machine Model

The product name is displayed.

■ Serial Number

The product serial number is displayed.

■ Machine Name

You can enter the printer name (between 1 and 32 ASCII code characters excluding colons (:), equal signs (=), at symbols (@), or asterisks (*), which are not valid).

■ Location

You can enter the machine's location (up to 255 ASCII code characters).

■ Contact Person

You can enter the contact person's information (up to 255 ASCII code characters).

■ Administrator's E-mail Address

You can enter the e-mail address of the system administrator (up to 128 characters).

■ Comment

You can enter machine comments (up to 255 ASCII code characters).

■ [Apply] button

You can apply changes by pressing this button.

Usage Counters (General Setup)

You can check the total number of pages printed for each service.

Power Saver Settings (General Setup)

■ Time to Low Power Mode

You can set the time elapse from the last operation until the machine enters Low Power mode. You can set a value between 1 and 60 minutes. (Default: 1)

■ Time to Sleep Mode

You can set the time elapse from Low Power mode until the machine enters Sleep mode. You can set a value between 1 and 239 minutes. (Default: 1)

■ [Apply] button

You can apply changes by pressing this button.

Port Settings (Connectivity)

■ Port

You can activate or deactivate communication ports. You can select from SNMP, LPD, Port9100, and Network TWAIN. Activate each port by checking its checkbox.

■ [Apply] button

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

Ethernet (Connectivity > Physical Connections)**■ Rated Speed**

You can set the Ethernet port speed. You can select from Auto, 10 Mbps Half-Duplex, 10 Mbps Full-Duplex, 100 Mbps Half-Duplex, or 100 Mbps Full-Duplex. (Default: Auto)

■ MAC Address

The machine's MAC address is displayed.

■ [Apply] button

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

TCP/IP (Connectivity > Protocols)**■ IP Mode**

You can set the IP operation mode. You can select from Dual Stack, IPv4, or IPv6. The Dual Stack setting lets you use both IPv4 and IPv6 addresses. (Default: IPv4)

■ General**◆ Protocol**

[Enabled] is displayed.

◆ Physical Connection

[Ethernet] is displayed.

◆ Host Name

[Host Name] is displayed.

◆ IPv4

- IP Address Resolution:
You can set the method used to acquire the IP Address, Subnet Mask and Gateway Address. You can select from STATIC, DHCP, BOOTP, RARP, or DHCP/Autonet for the address acquisition method. (Default: DHCP/Autonet)
- IP Address:
You can enter the IP address when [STATIC] is selected for [IP Address Resolution].
- Subnet Mask:
You can enter the subnet mask when [STATIC] is selected for [IP Address Resolution].
- Gateway Address:
You can enter the gateway address when [STATIC] is selected for [IP Address Resolution].

◆ IPv6

- Enable Manual Address:
You can check this checkbox to enter the IP address and gateway address directly. (Default: Off)

- **IP Address:**
You can enter the IP address when the [Enable Manual Address] checkbox is checked.
- **Automatically Configured Address 1:**
The automatically assigned IPv6 address is displayed.
- **Link-Local Address:**
The automatically assigned link-local address is displayed.
- **Gateway Address:**
You can enter the gateway address when the [Enable Manual Address] checkbox is checked.
- **Automatically Configured Gateway Address:**
The automatically assigned gateway address displayed.

■ [Apply] button

Press this button to confirm the entered settings.

Note

- Reboot the machine to enable new settings.

SNMP Configuration (Connectivity > Protocols)

You can set the SNMP protocol.

■ General

◆ SNMP Port Status

You can check [Enabled] to use SNMP. (Default: On)

◆ [Edit SNMP v1/v2c Properties] button

You can make advanced SNMP v1/v2c settings by pressing this button.

- **Community Name (Read Only):**
You can enter the community name to acquire (up to 32 ASCII code characters). (Default: blank (public))
- **Community Name (Read/Write):**
You can enter the community name to acquire/write (up to 32 ASCII code characters). (Default: blank (private))
- **Trap Community Name:**
You can enter the community name for trap notification (up to 32 ASCII code characters). (Default: blank (SNMP_trap))
- **System Administrator's Login ID:**
You can enter information related to the person in charge of maintenance of the machine (up to 127 ASCII code characters)(Default: blank).

■ Authentication Failure Generic Traps

You can check [Enabled] to send an authentication failure trap notification when an access attempt was made with an invalid community name not registered in the machine. (Default: On)

■ [Advanced] button

You can make the following settings by pressing this button:

◆ [Add UDP IPv4 Address] button

You can add a recipient address for UDP IPv4 trap notification by pressing this button.

- **IP Address:**
You can enter the IP address for entry.
- **UDP Port Number:**
You can set the UDP port No. for entry (a value between 1 and 65535).
- **SNMP Version:**
You can specify the SNMP version for entry as [v1] or [v2c]. (Default: v1)
- **Trap Community Name:**
You can enter the trap community name for entry (between 1 and 32 ASCII code characters). (Default: SNMP_trap)
- **Trap to be Received:**
You can set whether to send notification of [Print], [Cold Start], and [Authentication Failure] events.

◆ **[Add UDP IPv6 Address] button**

You can add a recipient address for UDP IPv6 trap notification by pressing this button.

- **IP Address:**
You can enter the IP address for entry.
- **UDP Port Number:**
You can set the UDP port No. for entry (a value between 1 and 65535).
- **SNMP Version:**
You can specify the SNMP version for entry as [v1] or [v2c]. (Default: v1)
- **Trap Community Name:**
You can enter the trap community name for entry (between 1 and 32 ASCII code characters). (Default: SNMP_trap)
- **Trap to be Received:**
You can set whether to send notification of [Print], [Cold Start] and [Authentication Failure] events.

◆ **[Delete] button**

You can delete the traps specified for the trap notification recipient IP address by pressing this button.

◆ **[Edit] button**

You can display notification information of the trap you are using. You can specify the events for which to send notification.

■ **[Apply] button**

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

LPD (Connectivity > Protocols)

You can set the LPD port.

■ **General**

◆ **LPD Port Status**

You can check [Enabled] to use LPD. (Default: On)

◆ **Physical Connection**

[Ethernet] is displayed.

◆ **Port Number**

You can set the LPD port No. (a value between 1 and 65535). You must set a unique number for each port. (Default: 515)

◆ **Connection Time-Out**

You can set the timeout period that the machine waits before terminating the connection when incoming data stops (between 2 and 3600 seconds). (Default: 60)

◆ **Maximum Connections per Port**

The maximum number of connections is displayed.

■ **[Apply] button**

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

Port9100 (Connectivity > Protocols)

You can set Port9100.

■ **General**◆ **Port9100 Port Status**

You can check [Enabled] to use Port9100. (Default: On)

◆ **Physical Connection**

[Ethernet] is displayed.

■ **Port Information**◆ **TCP Port Number**

You can set the Port9100 port No. (a value between 1 and 65535).

You must set a unique number for each port. (Default: 9100)

◆ **Maximum Connections per Port**

The maximum number of connections is displayed.

◆ **End of Job Timeout**

You can set the amount of time the machine waits before terminating the connection when incoming data stops (between 2 and 3600 seconds). (Default: 60)

◆ **PDL Switching**

[Enabled] is displayed.

■ **[Apply] button**

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

HTTP (Connectivity > Protocols)

You can set the HTTP protocol.

■ Configuration

◆ Connection

[Enabled] is displayed.

◆ Physical Connection

[Ethernet] is displayed.

◆ Keep Alive Timeout

The keep-alive timeout period is displayed.

◆ Port Number

You can set the port No. used for HTTP communication (a value between 1 and 65535).

You must set a unique number for each port. (Default: 80)

◆ Connection Time-Out

Set the connection timeout period from 1 through 255 seconds. (Default: 30)

◆ Title

You can select the display for the title displayed on a browser from [Internet Services] or [Printer Model - IP Address].

(Default: Internet Services)

■ [Apply] button

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

Network TWAIN

You can set the Network TWAIN protocol.

■ General

◆ Network TWAIN Port Status

You can check [Enabled] to use Network TWAIN. (Default: On)

◆ Physical Connection

[Ethernet] is displayed.

◆ Connection Time-Out

Set the connection timeout period from 1 through 255 seconds. (Default: 30)

■ [Apply] button

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

IP Filtering (Security)

You can restrict the supported IP addresses.

■ IPv4 Filtering

◆ IP Filtering

You can check [Enabled] to enable IP Filtering. (Default: Off)

◆ Edit/Delete selection checkbox

You can select the IP Filter to edit/delete.

◆ IP Filter Rule List

The accessible IPv4 address is displayed.

◆ [Add] button

The Add IP Filter Rule - IPv4 screen is displayed. You can add the accessible IPv4 address. You can add up to 10 IPv4 addresses.

- Source IP Address:
You can set the accessible IP address.
- Source IP Mask:
You can set the prefix length of the accessible IP address. (Default: 0)

◆ [Edit] button

The Edit IP Filter Rule - IPv4 screen is displayed. You can edit the accessible IPv4 address.

- Source IP Address:
You can set the accessible IP address.
- Source IP Mask:
You can set the prefix length of the accessible IP address. (Default: 0)

◆ [Delete] button

You can delete the accessible IPv4 address.

■ IPv6 Filtering

◆ IP Filtering

You can check [Enabled] to enable IP Filtering. (Default: Off)

◆ Delete/Edit selection checkbox

You can select the IP Filter to edit/delete.

◆ IP Filter Rule List

The accessible IPv6 address is displayed.

◆ [Add] button

The Add IP Filter Rule - IPv6 screen is displayed. Adds an accessible IPv6 address. You can add up to 10 IPv6 addresses.

- Source IP Address:
You can set the accessible IP address.
- Source IP Mask:
You can set the prefix length of the accessible IP address (Default: 0)

◆ [Edit] button

The Edit IP Filter Rule - IPv6 screen is displayed. Edits the accessible IPv6 address.

- Source IP Address:
You can set the accessible IP address.
- Source IP Mask:
You can set the prefix length of the accessible IP address. (Default: 0)

◆ [Delete] button

You can delete the accessible IPv6 address by pressing this button.

■ [Apply] button

You can apply changes by pressing this button.

Note

- Reboot the machine to enable new settings.

System Administrator Settings (Security)

You can set the system administrator's user ID and the passcode.

■ System Administrator Settings**◆ Administrator's Login ID**

You can enter the system administrator's user ID (between 1 and 32 ASCII code characters in length, excludes "+", ";", "<", ">", "\"", "?", "[", "]", "'", "{", "}", "|", ":". (Default: 11111)

◆ Administrator's Passcode

You can set the system administrator's passcode (between 4 and 12 ASCII code characters or blank). (Default: x-admin)

◆ Retype Administrator's Passcode

You need to re-enter the system administrator's passcode.

◆ Maximum Login Attempts

When login attempts using the system administrator's user ID fail repeatedly, access is denied when the number of failed attempts reaches the number set here.

Specify a number between 0 and 10. Specify 0 to disable this setting.

The total number of failed authentication attempts is reset when authentication is successful or the system is restarted. (Default: 5)

■ [Apply] button

You can apply changes by pressing this button.

[Support] Tab

The link for support information is displayed. The link settings can be changed.

Support

■ [Change Settings] button

You can change the link for support information by pressing this button.

◆ Name

You can enter the link name (between 1 and 63 ASCII code characters).

◆ URL

You can enter the link address (between 1 and 63 alphanumeric characters including the at symbol (@), percent sign (%), period (.), colon (:), forward slash (/), underline(_), hyphen (-), tilde (~), question mark (?), and ampersand (&), which are valid).

■ [Apply] button

You can apply changes by pressing this button.

Installing the Print Driver/Scan Driver

To enable the machine to print and scan, you need to install respective drivers on your computer.

The following drivers are included in the Media (Software/Product Manual).

Driver Name	Description
Print Driver	The recommended print driver for this model
Common Print Driver	The V4 print driver which can be used commonly for various models • Common Print Driver is suitable for printing from Windows store applications such as Microsoft Edge. • Some features are not available for printing from desktop applications. • Common Print Driver is available only for Windows 8.1 or later.
Scanner Driver	Includes the following: • TWAIN-compatible Scan Driver • Windows Image Acquisition (WIA)-compatible Scan Driver • Scanner Connection Tool

The Media (Software/Product Manual) offers the two types of installation menus: Quick Setup and Custom Installation.

Quick Setup allows you to install easily the following drivers and software:

- Print Driver
- Scanner Driver
- Print & Scan Hub^{*}

^{*} : For more information, refer to "Using Print & Scan Hub" (P.40).

To install a specific driver, use the Custom Installation menu.

Reference

- For more information, refer to the Media Information included in the Media (Software/Product Manual).

Using Print & Scan Hub

Print & Scan Hub (Windows®)

Print & Scan Hub is a software which provides the following services:

- Display the status of the machine and its consumables.
- Perform scan jobs, and then edit the scanned data as necessary.

Installing Print & Scan Hub

You can install Print & Scan Hub from the Media (Software/Product Manual).

- 1 Insert the Media (Software/Product Manual) into your computer.

■ Quick Setup

To install easily the basic drivers and software:

- 1) Select [Quick Setup] on the main menu screen.

Reference

- For more information on Quick Setup, refer to "Installing the Print Driver/Scan Driver" (P.39).

■ Custom Installation

To install Print & Scan Hub only:


- 1) Select [Software] under [Custom Installation] on the main menu screen.
- 2) Select [Print & Scan Hub] under [Install Software].

Starting Print & Scan Hub

To start Print & Scan Hub on your computer:

- 1 Click [Start] > [All Programs] > [Fuji Xerox Print & Scan Hub] > [Print & Scan Hub].

For Windows® 10, click [Start] > [All Apps] > [Fuji Xerox Print & Scan Hub] > [Print & Scan Hub].

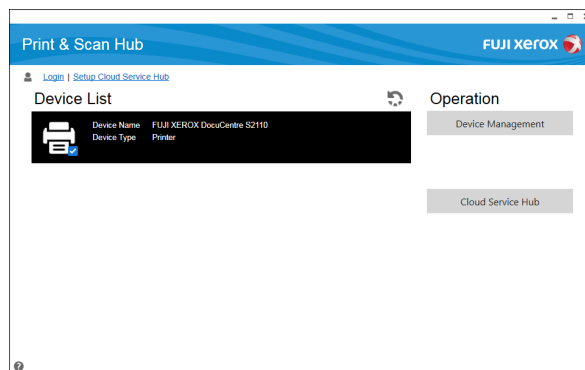


3

Product Overview

Machine Components

This section describes the machine components and their functions.


Front, Left Side

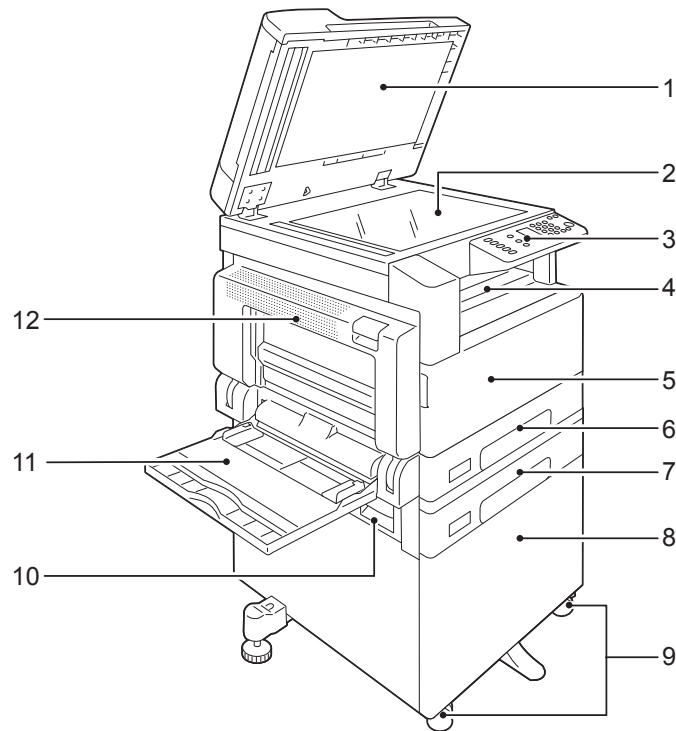

No.	Component	Description
1	Document cover	Holds document in place.
2	Document glass	Place document here.
3	Control panel	Contains the buttons, LED indicators, and status machine diagram used for operations. Reference • For more information, refer to "Control Panel" (P.50).
4	Center tray	Copies and prints are delivered here, facing down.
5	Front cover	Open this cover to replace consumables.
6	Tray 1 (standard tray)	Load paper here.
7	Tray 2 (One Tray Module) (Optional)	Optional tray. Load paper here.
8	Stand	Mounts the machine on the floor. Contains storage space for paper. This stand is available when the One Tray Module is installed.
9	Locking casters	Locks the wheels of the machine. Lock these casters after moving the machine to its installation site.
10	One tray module cover [B]	Open this cover to remove any jammed paper from Tray 2.


No.	Component	Description
11	Bypass tray	Load paper here. The tray can be extended.
12	Left cover [A]	Open this cover to remove any jammed paper. Note When the machine works properly, this cover is locked. To open this cover, make sure to exit Sleep mode and turn the machine's power OFF.

Right Side, Rear

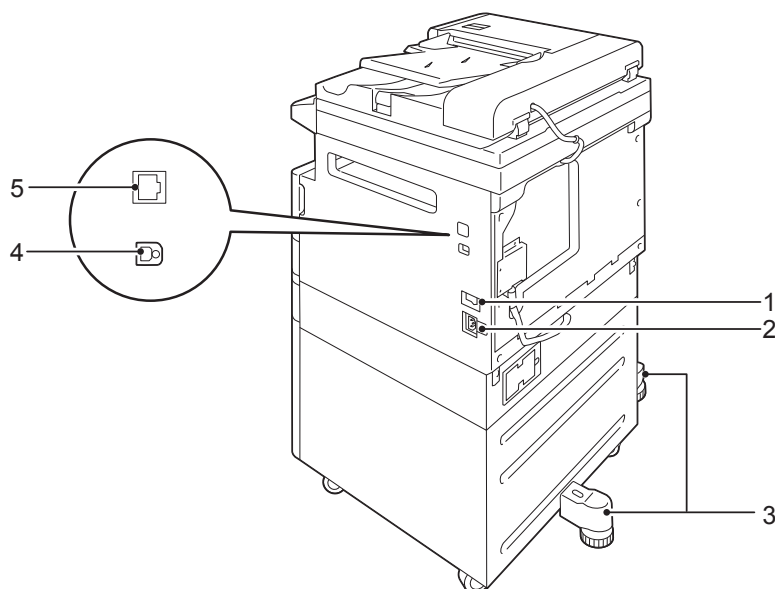


No.	Component	Description
1	Power switch	Switches the power of the machine on and off. Reference For more information, refer to "Power Source" (P.46).
2	Power cord connector	Connects the power cord.
3	Adjusting foot	Prevents the machine from toppling over. Move the machine to its installation site and then rotate this adjuster in clockwise direction until it touches a floor.
4	USB 2.0 interface connector (Type B)	Connect a USB 2.0 cable.
5	100BASE-TX interface connector	Connect a network cable.

Inside

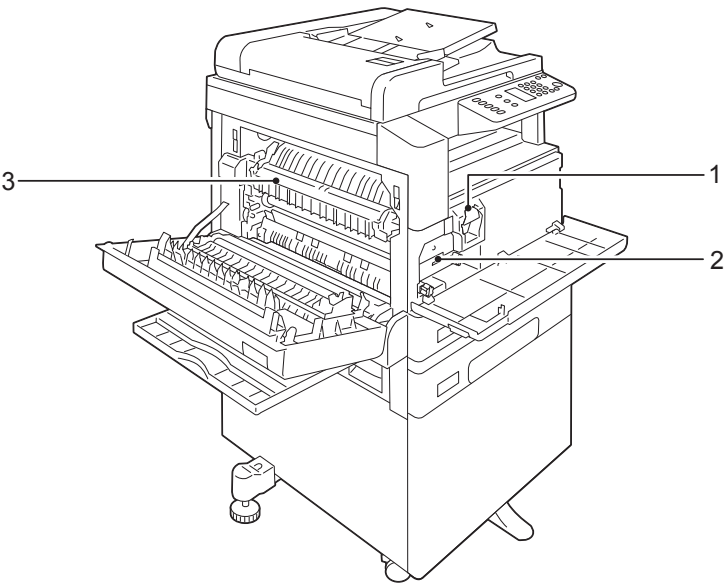

No.	Component	Description
1	Toner cartridge	Contains toner (the powder used to form the image).
2	Drum cartridge	Contains photoconductors.
3	Fusing unit	Fuses toner on paper. Important • Do not touch this unit as it is extremely hot.

Duplex Automatic Document Feeder

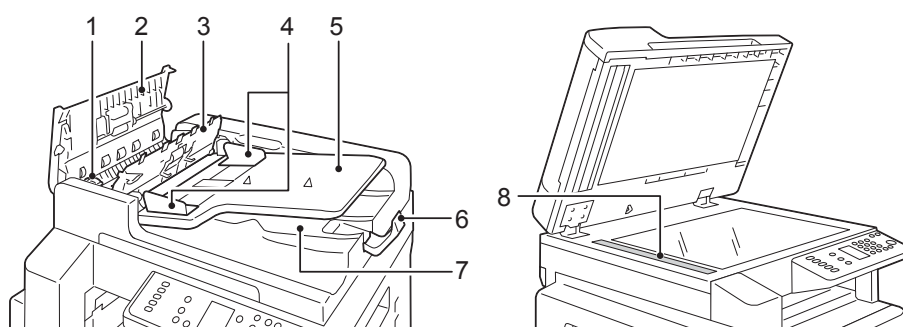

No.	Component	Description
1	Lever	Turn this lever to clear paper jams.
2	Document feeder cover	Open this cover to clear paper jams.
3	Inner cover	Open this cover to clear paper jams.
4	Document guides	Use these guides to align the edges of documents.
5	Document feeder tray	Load documents here.
6	Document stopper	Prevents outputs from falling off.
7	Document output tray	Scanned documents are delivered here.
8	Constant velocity transport glass	Scans a loaded document.

Note

- In this guide, the duplex automatic document feeder is referred to as the "document feeder".

Power Source


Switching the Power On

The following describes how to switch the power on.

The machine takes approximately 19 seconds or less to warm up and to be ready to copy or print after the power is turned on. It may take slightly longer than normal depending on the device configuration.

Switch the power off at the end of the day or when not using the machine for an extended period of time.

- 1 Press the power switch to the [I] position to switch the power on.

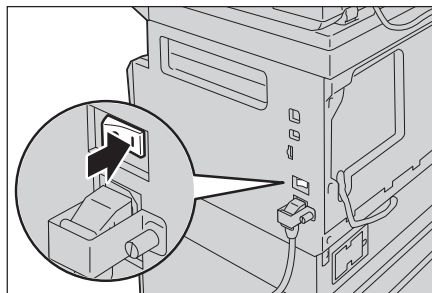

Note

- While the machine is warming up, the status machine diagram displays as shown in the image. The machine is not accessible while it's warming up.



- Make sure that the power cable is connected to the machine and the wall outlet properly.

Switching the Power Off

The following describes how to switch the power off.


Important

- Do not switch the power off in the following situations. If the power is switched off, the processing data may be erased.
 - While data is being received
 - While a job is being printed
 - While a job is being copied
 - While a job is being scanned
- When switching the power off, wait 5 seconds after outputs have been delivered.

Note

- When powering the machine on after it has been switched off, wait 10 seconds after the display goes off.

- 1** Before switching the power off, make sure that the machine has completed all copy or print jobs. Then, make sure that the <Data> indicator does not light up.
- 2** Press the power switch to the [O] position to switch the power off.

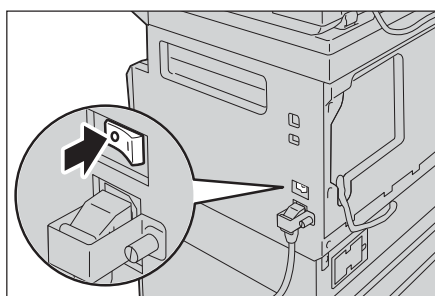

Power Saver Mode

The machine is installed with the Power Saver function that will automatically cut off the electricity to the machine if no copy or print data is received for a certain duration.

There are two Power Saver modes: Low Power mode and Sleep mode.

■ Low Power Mode

The machine's power is not turned OFF completely in Low Power mode. Instead, this mode creates a balance between low power consumption and short warm-up time by controlling the temperature of the fusing unit to a level midway between the power OFF temperature and the "Ready" temperature.

■ Sleep Mode


Sleep mode minimizes power consumption by shutting off the power to all components except the controller. Warm-up time in Sleep mode is longer than in Low Power mode.

Important

- The machine does not enter Sleep Mode when any error (other than Toner Empty or Drum Life End error) occurred.

Entering Power Saver Mode

The display goes off, and the <Power Saver> button of the control panel lights up when the machine is in the Power Saver mode.

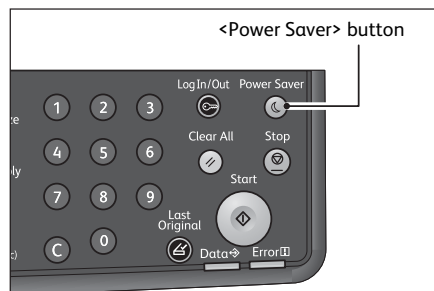

You can set the length of time to wait until the machine enters Low Power/Sleep mode.

Low Power mode is set to [1 minute] and Sleep mode to [1 minute] as default. If the machine is left idle for 1 minute, it switches to Low Power mode. If it is left idle for another minute, it switches to Sleep mode.

You can set the amount of time the machine waits before entering Low Power mode from 1 to 60 minutes, and the amount of time the machine waits before entering Sleep mode from 1 to 239 minutes.

Important

- The fusing unit life is largely influenced by power distribution time on the machine. Setting the amount of time the machine waits before activating the Power Saver function to a long value will keep the machine's power on longer, and the fusing unit may have to be replaced more often. It may cause an early replacement of the fusing unit of the machine. For more information, contact our Customer Support Center.

Reference

- For more information on how to set the time interval for Low Power mode and/or Sleep mode, refer to "System Settings" (P.125) and "Power Saver Settings (General Setup)" (P.30).

Exiting Power Saver Mode

The following describes how to deactivate Power Saver mode.

The machine exits Power Saver mode and the <Power Saver> button light is turned off in the following instances:

■ Exiting Low Power mode

- Receiving a job
- Entering System Administration mode from a computer
- Pressing any button on the control panel
- Taking paper out or putting in a tray
- Opening or closing any cover of the machine

■ Exiting Sleep mode

- Receiving a job
- Entering System Administration mode from a computer
- Pressing the <Power Saver> button
- Pressing any button on the control panel*


* : This feature is available only when the Return from Sleep Mode by Any Key feature is enabled.

Reference

- For more information, refer to "System Settings" (P.125).

Control Panel

The names and functions of the control panel's components are described below.

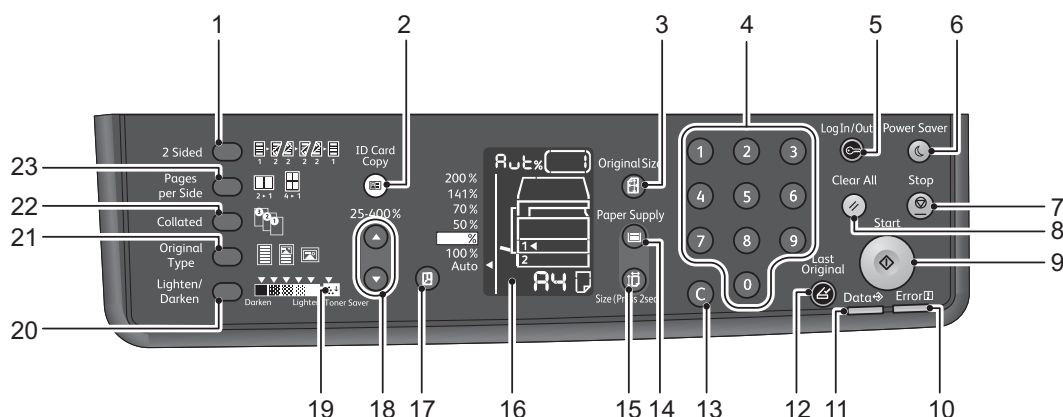

No.	Component	Description
1	<2 Sided> button	Press this button to select 1 Sided or 2 Sided copying. Normally, the icon is off (1 → 1 Sided). The selection moves to the right from off (1 → 1 Sided) → [1 → 2 Sided] → [2 → 2 Sided] → [2 → 1 Sided] every time that the button is pressed. As you press the button when the [2 → 2 Sided] is selected, the indicator light is turned off again. Reference For more information, refer to "2 Sided" (P.91).
2	<ID Card Copy> button	Press this button to use the ID Card Copy feature. While the ID Card Copy feature is selected, the button is lit. Reference For more information, refer to "ID Card Copy" (P.98).
3	<Original Size> button	Press this button to specify the scanning size and orientation for using the document glass. When the document is placed on the document feeder, the scanning size is set automatically. The scanning size changes on the status machine diagram every time that the button is pressed. Reference For more information, refer to "Original Size" (P.102). Press this button to switch the copy mode while the ID Card Copy feature is selected.
4	Numeric keypad	Press these numeric buttons to enter numbers, such as the total number of copies.
5	<Log In / Out> button	Press and hold this button for more than 4 seconds to enter the System Administrator mode. Press this button to exit the System Administration mode. The <Log In/Out> button is lit in the System Administration Mode. Reference For more information, refer to "Enter System Administration Mode" (P.122).

No.	Component	Description
6	<Power Saver> button	Press this button to enter the Power Saver mode to save the electricity when the machine is not in use, and then the button is lit. Press the <Power Saver> button to exit the Power Saver mode. Reference For more information, refer to "Power Saver Mode" (P.48).
7	<Stop> button	Press this button to cancel a current job or errored job.
8	<Clear All> button	Press this button to reset the displayed settings of each feature to default values or clear the entered numbers. The setting is returned to the same condition as the machine is powered on.
9	<Start> button	Press this button to start scanning documents or confirm the value of each setting. This button lights up while the machine is waiting for the next operation. The button also blinks while the machine is waiting for the settings to be confirmed or waiting for the next document to scan. You cannot start a job when the button goes out.
10	<Error> indicator	Blinks when a system error occurs. And it is lit when an error other than system errors (such as paper jam or out of paper) occurs in the machine.
11	<Data> indicator	Blinks while the machine is sending or receiving data from a client.
12	<Last Original> button	Press this button when the last document has already been scanned. This button blinks while the machine is scanning a document and lights up while the machine is waiting for the next document to scan.
13	<C> (Clear) button	Press this button to delete one numerical value that you have entered.
14	<Paper Supply> button	Press this button to select a tray to use. The tray indicator next to the selected tray moves to the next tray on the status machine diagram every time that the button is pressed. Reference For more information, refer to "Paper Supply" (P.103).
15	<Size (Press 2sec)> button	Press this button to select the size and the orientation of paper loaded in the selected tray. The paper size and orientation changes on the status machine diagram every time that the button is pressed. Reference For more information, refer to "Setting the Paper Size" (P.78).
16	Status Machine Diagram (mimic)	Displays error locations, machine status, and other settings. Reference For more information, refer to "Machine Status" (P.54).

No.	Component	Description
17	<Reduce/Enlarge> button	Press this button to select a zoom ratio. The Reduce/Enlarge indicator next to a fixed zoom ratio moves to the next zoom ratio and the zoom ratio changes on the status machine diagram every time that the button is pressed. Reference For more information, refer to "Reduce/Enlarge" (P.97).
18	<Variable Zoom Ratio> button	Press this button to specify the zoom ratio within the range of 25 to 400 % in 1 % increments. The zoom ratio increases every time that the button is pressed. Reference For more information, refer to "Reduce/Enlarge" (P.97).
19	<Toner Saver> icon	The indicator of the <Toner Saver> icon is lit in toner saver mode. Reference For more information, refer to "Lighten/Darken" (P.96).
20	<Lighten/Darken> button	Press this button to select a copy density level or toner saver mode. The selection moves to the right on the status machine diagram every time that the button is pressed. When the button is pressed while the rightmost icon (toner saver mode) is lit, the selection moves back to the leftmost icon. Reference For more information, refer to "Lighten/Darken" (P.96).
21	<Original Type> button	Press this button to select a document type of the document. The selection moves to the right every time that the button is pressed. Reference For more information, refer to "Original Type" (P.95).
22	<Collated> button	Press this button to set collate when copying multiple copies. The selection switches between sorting and stacking every time that the button is pressed. When documents are set in the document feeder, this feature is automatically enabled. Reference For more information, refer to "Collated" (P.94).

No.	Component	Description
23	<Pages per Side> button	Press this button to use Pages per Side feature. Normally, the light is off (Off). The selection moves to the right from [Off] (disabled) → [2-up] → [4-up] every time that the button is pressed. When the button is pressed while [4-up] is lit, the light is turned off again. When [2-up] or [4-up] is selected, the scanning size and orientation that matches the paper size are displayed on the original size display area of the status machine diagram. Reference For more information, refer to "Pages per Side" (P.93).


Note

- Some buttons are not available on some models. If you add certain options, you will become able to use them. For more information, contact our Customer Support Center.

Machine Status

The Status Machine Diagram (mimic) consists of the following contents to display the machine status.

This section provides detailed description of each indicator on the status machine diagram (mimic).

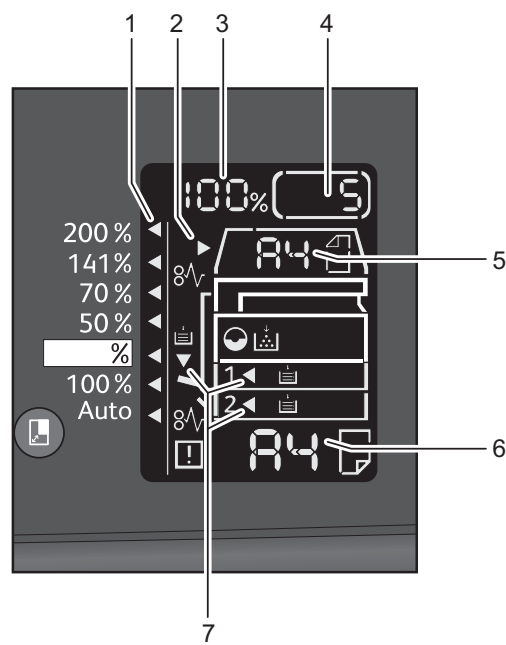

No.	Component	Description
1	Reduce/Enlarge indicator	Indicates the selected zoom ratio.
2	Document indicator	This indicator is lit when a document is placed in the document feeder or a document jam occurs.
3	Reduce/Enlarge display area	Displays the specified zoom ratio within a range of 25 to 400 % . When the automatic detection is selected, [Aut] is displayed. Also displays the total number of copied pages, User ID/ System Administrator ID, program number, and job type ([Prt] for Print, [Scn] for Scan, and [Err] for Error).
4	Total Copy display area	Displays the total number of copies. Also displays a program number or an error code.
5	Original Size display area	Displays the scanning size and orientation that are specified with the <Original Size> button when the document glass is used. When the document is placed in the document feeder, the automatic detection is automatically set and [Aut] is displayed.
6	Paper Size display area	Displays the size and the orientation of the paper loaded in the selected tray. When the automatic detection is selected for the selected tray, [Aut] is displayed.
7	Tray indicators	Indicates the selected tray. When the automatic detection is set for the selected tray, all tray indicators are lit. Also indicates the tray where the paper jam occurred.

Icons

This section describes icons that may appear in the status machine diagram.

■ Toner Cartridge



This icon is lit when the toner cartridge needs to be replaced in the near future. Prepare a new toner cartridge. No error code is displayed at this point.

The icon blinks when the toner cartridge needs to be replaced immediately. Replace the toner cartridge with a new one. The error code [J-1] appears in the display.

Reference

- For information on how to replace the Toner Cartridge, refer to "Replacing the Toner Cartridge" (P.149).

■ Drum Cartridge



This icon is lit when the drum cartridge needs to be replaced in the near future. Prepare a new drum cartridge. No error code is displayed at this point.

The icon blinks when the drum cartridge needs to be replaced immediately. Replace the drum cartridge with a new one. The error code [J-4] appears on the status machine diagram.

Reference

- For information on how to replace the Drum Cartridge, refer to "Replacing the Drum Cartridge" (P.153).

■ Paper Tray Empty



This icon is lit when a tray runs out of paper.

■ Paper / Document Jam



This icon is lit when a paper or document jams in the machine. Check the error code that appears on the status machine diagram, refer to "Paper Jams" (P.201) or "Document Jams" (P.208), and follow the appropriate procedure to remove the jammed paper or document.

■ Error



This icon is lit when an error occurs such as a tray problem, the toner cartridge runs out of ink, and the drum cartridge ends its life.

■ Area - blinking

When a paper/document jam occurs or any cover is open, the notification area blinks as shown below.

Front cover	Left cover [A]	One tray module cover [B]	Tray 1

Tray 2	Bypass tray	Document feeder

When any paper or document jam occurs, [8V] will also appear.

Account Mode

This section describes three different account modes that the machine offers to manage accounts effectively for copy jobs, and how to log in to the machine.

Types of Account Modes

You can select one of the following account modes in the System Settings: No Account Mode, Single Account Mode, or Multiple Account Mode.

Reference

- For information on how to select an account mode in the system settings, refer to "Account Mode Settings" (P.130).

◆ No Account Mode

No passcode is set on the machine in No Account Mode, allowing any users to execute any jobs.

◆ Single Account Mode

A single passcode is set to the machine in Single Account Mode. Only those who have the passcode can execute copy jobs on the machine.

Important

- Passcode entry is not required for print jobs or scan jobs.

◆ Multiple Account Mode

Up to 10 user accounts are set on the machine in the Multiple Account Mode. You can set a desired passcode for each user account. Users are required to enter their account number and passcode to log in to the machine. The system administrator can set the copy job limit on each user account, and also review the total number of copies made by each account.


Important

- Passcode entry is not required for print jobs or scan jobs.

Logging in the Machine in Single Account Mode

The following procedure describes how to log in to the machine when the machine is in Single Account Mode.


When the machine is in Single Account Mode, [_ _ _ _] appears in the status machine diagram.

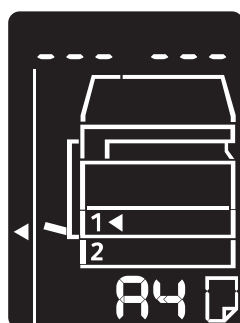

Reference

- For information on how to select an account mode in the system settings, refer to "Account Mode Settings" (P.130).

1 Enter a passcode using the numeric keypad.

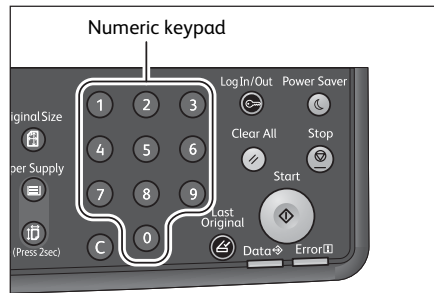


Note

- The passcode is the same as the system administrator's passcode used for entering the system administration mode from the control panel. For information, refer to "Enter System Administration Mode" (P.122).


For security reasons, as you enter each digit of the passcode, a hyphen appears in the display instead of the actual number that you enter.




- 2 Press the <Start> button to confirm the entered passcode.

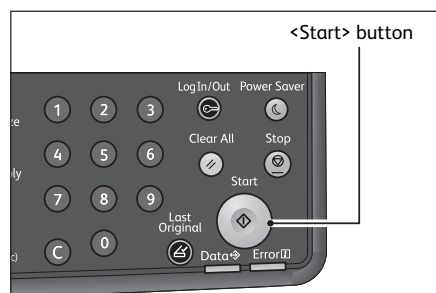

If the entered passcode is correct, the machine enters Copy Mode, and [1] appears in the display.

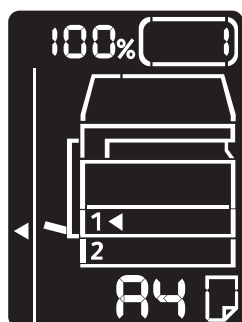

The <Log In/Out> button is lit while you are logged in to the machine.

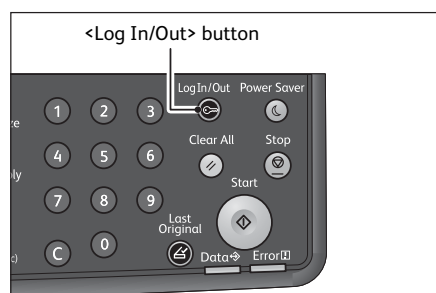


Note

- You do not need to log in to the machine for a scan job or print job.
- To log out, press the <Log In/Out> button again.

Logging in the Machine in Multiple Account Mode

The following procedure describes how to log in to the machine when the machine is in Multiple Account Mode.


When the machine is in Multiple Account Mode, [Id _ _] appears blinking in the status machine diagram.

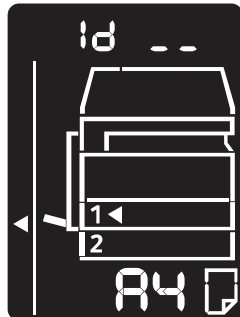

Reference

- For information on how to select an account mode in the system settings, refer to "Account Mode Settings" (P.130).


- 1 Enter an account number using the numeric keypad.

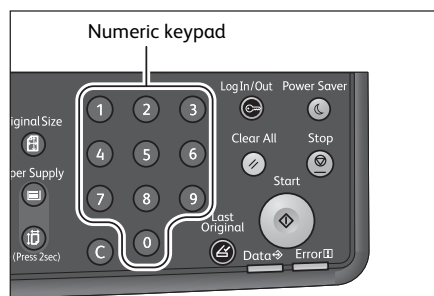


The account number that you enter appears in the display.




- 2 Press the <Start> button to confirm the entered account number.

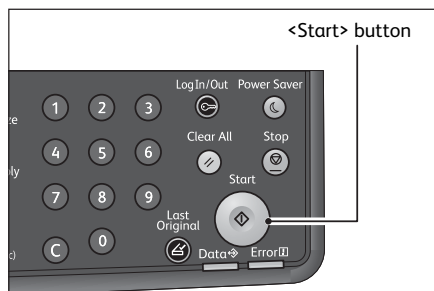


[_ _ _ _] appears in the status machine diagram.

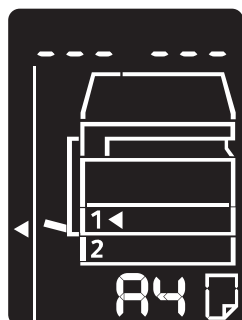


- 3 Enter a passcode which corresponds to the account number that you just entered, using the numeric keypad.

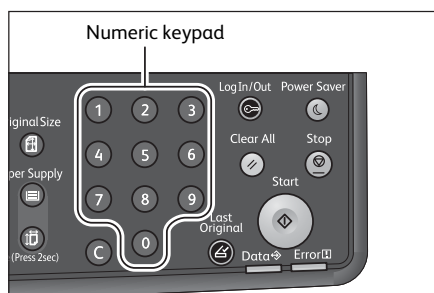


For security reasons, as you enter each digit of the passcode, a hyphen appears in the display instead of the actual number that you enter.

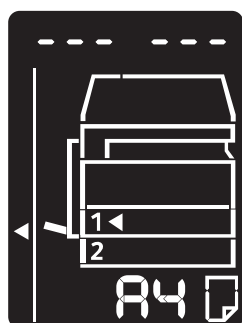


- 4 Press the <Start> button to confirm the entered passcode.

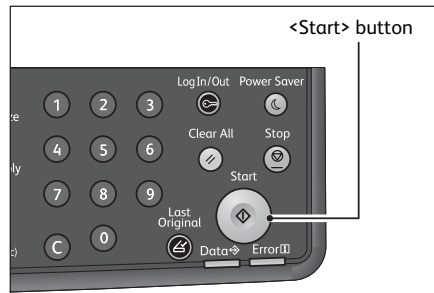

If the entered passcode is correct, the machine enters Copy Mode, and [1] appears in the display.

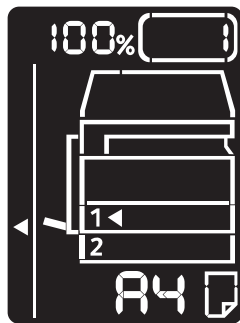

The <Log In/Out> button is lit while you are logged in to the machine.

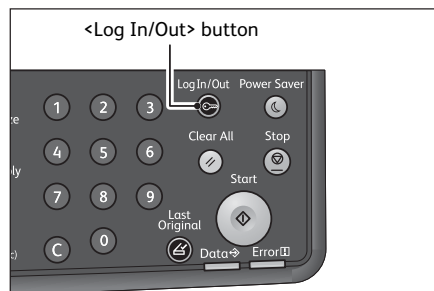

Note

- You do not need to log in to the machine for a scan job or print job.
- To log out, press the <Log In/Out> button again.

Setting the Options Configuration

You can retrieve the information of machine configuration into the print driver.

Update the information of machine configuration when any optional component is changed.

When using the Ethernet interface

You can load the machine's option configuration automatically to the print driver.

Note

- When using this function, activate the SNMP port. (Default: Enabled)
- If you failed to retrieve information of machine configuration or are using the USB interface connection, set the information of machine configuration manually. For more information, click [Help] on the screen to display Help Information.


Follow the steps below to set the option configuration.

- 1 From your computer's [Start] menu, select [Printer and Faxes] to display the property of your machine.


Note

- Some operating systems display [Printer] or [Devices and Printers] instead of [Printer and Faxes].


- 2 Click the [Configuration] tab.

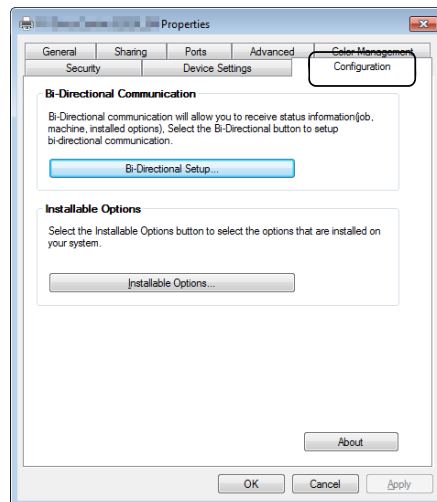

3 Click [Bi-Directional Setup].

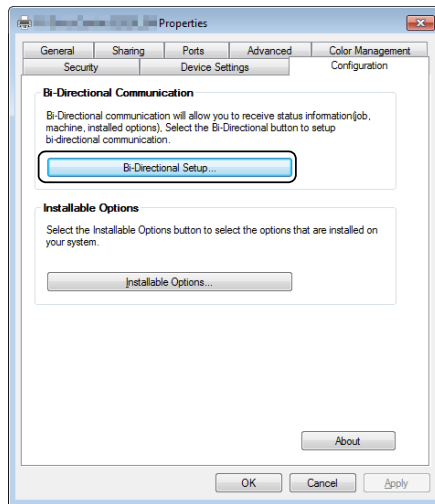


4 Click [Get Information from Printer].

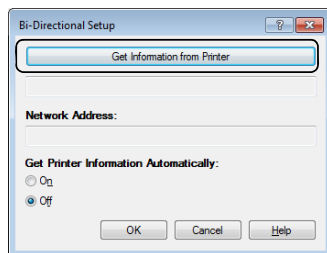


■ If [Printer Searching Method] is displayed

The machine's information is not loaded onto the print driver. Complete the following operations.

- 1) Select [Specify Address], and click [Next].

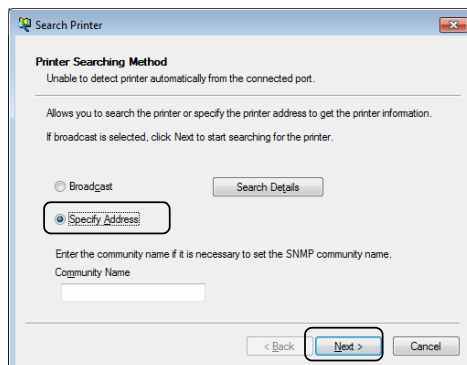

2) Enter the printer name or IP Address in the [Printer Name or IP Address] field.

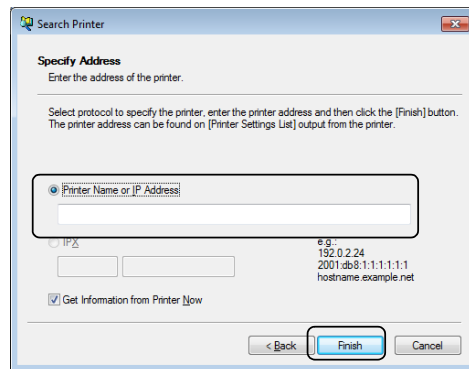

3) Click [Finish].

5 Click [OK].

4

Loading Paper

Paper Types

This section describes the paper types supported by the machine.

Use of non-recommended paper types may result in paper jams, lower print quality, malfunctions, or damage to the machine. To achieve optimum machine performance, use only paper types recommended by Fuji Xerox.

If you desire to use paper other than the paper recommended by Fuji Xerox, contact our Customer Support Center.

WARNING

Do not use conductive paper such as origami paper, carbonic paper or conductively-coated paper. When paper jam occurs, it may cause short-circuit and eventually a fire accident.

Important

- Moisture generated by water, rain, or vapor may cause the printed images to fade. For more information, contact our Customer Support Center.

Supported Paper Weights and Sheet Counts

Paper Trays	Basis Weight/Ream Weight	Loadable Quantity	Paper Types
Tray 1 (Standard)	60 to 90 gsm Ream Weight: 51.6 - 77.4 kg	250 ^{*1} sheets (Up to 27 mm)	Lightweight (60-63 gsm) Plain 1 (64-74 gsm) Plain 2 (75-90 gsm)
Tray 2 (One Tray Module) (Optional)	60 to 216 gsm Ream Weight: 51.6 - 186 kg	500 ^{*1} sheets each (Up to 54 mm)	Lightweight (60-63 gsm) Plain 1 (64-74 gsm) Plain 2 (75-90 gsm)
Tray 5 (Bypass)	60 to 216 gsm Ream Weight: 51.6 - 186 kg	100 ^{*2} sheets (Up to 10 mm)	Heavyweight (91-169 gsm) Extra-HW (170-216 gsm)

*1 : When using 80 gsm paper

*2 : When using Fuji Xerox standard paper

Important

- Paper jams may result if you attempt to print on a different paper type or size than the type or size selected in the print driver, or from a tray that does not support the loaded paper. Select the correct paper size, type, and tray to ensure successful printing.

Note

- Basis weight is the weight of one sheet of paper of 1 m² in size.
- Ream weight is the weight of 1,000 sheets of duodecimo size (788 x 1,091 mm) paper.

■ Supported paper sizes:

- Maximum: A3, 11 x 17"
- Minimum: A5

■ Duplexing (two-sided printing)

The following paper types are supported for automatic duplexing:

Paper Type (Quality)
Lightweight (60 to 63 gsm)
Plain 1 (64 to 74 gsm)
Plain 2 (75 to 90 gsm)

Supported Paper Type

Standard Paper

When printing or copying on commonly used paper (plain paper), use paper meeting the standards described below. To copy or print as clear as possible, we recommend the following standard paper.

Paper Name	Basis Weight (gsm)	Paper Type	Notes / Countermeasure
P paper	64	Plain 1	Tough plain paper suitable for internal documents at the office.

Semi Standard Paper

In addition to the standard paper, the following paper also can be used.

Paper Name	Basis Weight (gsm)	Paper Type	Notes / Countermeasure
Business +	70	Plain 1	-
	75	Plain 2	-
	80	Plain 2	-
Performer +	70	Plain 1	-
	80	Plain 2	-
Professional	70	Plain 1	-
	80	Plain 2	-
Reflex UltraWhite	80	Plain 2	-
Reflex CarbonNeutral	80	Plain 2	-
Reflex recycled	80	Plain 2	-
Double A	80	Plain 2	-
PaperOne Copier	75	Plain 2	-
	80	Plain 2	-

Usable Paper

In addition to the standard/semi-standard paper, the following paper also can be used.

Note

- Some of the followings may not be available in your country.

Paper Name	Basis Weight (gsm)	Paper Type	Notes / Countermeasure
DOUBLE A	80	Plain 2	-
Ncolor209	209	Extra-HW	-
Colotech+	90	Plain 2	-
	100	Heavyweight	-
Xerox Laser Copier White Label (1 cut)	-	-	Label paper
Xerox Laser Copier White Label (8 cut)	-	-	Label paper
Xerox Laser Copier White Label (16 cut)	-	-	Label paper
Xerox Laser Copier Label (24 cut)	-	-	Label paper
Green Wrap (Recycle)	80	Plain 2	-
Recycled Pure+ (Recycle)	80	Plain 2	-
Laserprint	80	Plain 2	-
PAPER ONE COPIER PAPER	70	Plain 1	-
PAPER ONE All Purpose	80	Plain 2	-
Performer	80	Plain 2	-
Professional	80	Plain 2	-
J Paper	82	Plain 2	-
JD Paper	98	Heavyweight	-
X'treme Platinum	80	Plain 2	-
Attitude	70	Plain 1	-

Unusable Paper

Using paper not recommended by Fuji Xerox may cause a paper jam or machine malfunction. Use paper recommended by Fuji Xerox.

- Damp or wet paper
- Paper pre-printed with other printer or copying machine
- Wrinkled, creased, or ripped paper
- Envelopes that are not flat, or that have clasps
- Color paper with surface treatments
- Paper with rough surface, such as pulp paper or fibrous paper
- Punched paper
- Transparency film

Storing and Handling Paper

■ Please keep the following points in mind when storing paper

- Store paper inside a cabinet or other dry place. Paper that has absorbed moisture may result in paper jams and lower image quality.
- After opening a package of paper, wrap and store any remaining paper. We recommend that you store remaining paper in moisture prevention packets.
- Store paper on a flat surface to prevent bends or warping.

■ Please keep the following points in mind when loading paper in a tray

- Align the stack of paper neatly before loading it in a tray.
- Do not use creased or wrinkled paper.
- Do not use warped or curled paper.
- Do not load paper of mixed sizes together into a tray.
- Take care not to touch the print side. Oils from your skin may adhere to the print media, which may affect printing quality. If unavoidable, be sure to use a finger cot, gloves, or other means to cover your fingers before touching the print media.
- LEF is recommended for heavyweight media feeds from the Bypass tray. If a misfeed occurs, please apply an intentional upper curl to the leading edge of the paper.

Loading Paper

This section describes how to load paper in a paper tray.

■ Automatic Tray Selection

When processing a print job, specify the settings in the print driver's screen by selecting [Automatically Select] for [Select By Tray] under [Paper] in the [Paper/Output] tab. The machine automatically selects a tray to match the specified document size and orientation. This function is called as Automatic Tray Selection.

When processing a copy job, select [Aut] by pressing the <Paper Supply> button.

This Automatic Tray Selection function selects the trays in order from Tray 1 > Tray 2 > Bypass Tray if there is more than one paper tray that matches.

Note

- Tray 2 is an optional component.
- When the machine runs out of paper during copying or printing, select the tray containing the paper of the same size and orientation that was being used for copying or printing, and continue copying or printing (Auto Tray Switch feature).

Loading Paper in Trays 1 and 2 (Optional)

The following describes the procedure for loading paper in Trays 1 and 2.

When the machine runs out of paper during copying or printing and an error code is displayed on the screen, add paper in the tray. Copying or printing automatically resumes when paper is added.


Note

- Fan the stack of paper well before loading paper in a tray. It prevents paper from sticking to each other and reduces paper jams.

Reference

- For information on how to change the paper size and orientation in a tray, refer to "Changing the Paper Size for Trays 1 and 2" (P.76).


1 Pull out the tray until it stops.

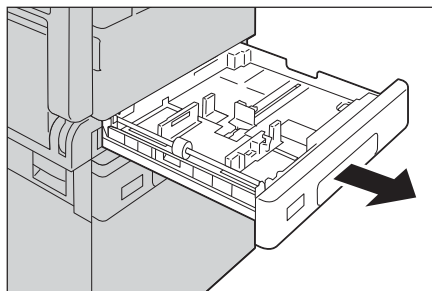


Important

- While the machine is copying or printing, do not pull out the tray that the job uses.
- To prevent paper jams or loading errors, do not load different sizes or types of paper on top of any remaining paper in a tray.


- Pulling out all the trays at once may cause the machine to tilt or fall, causing injury.

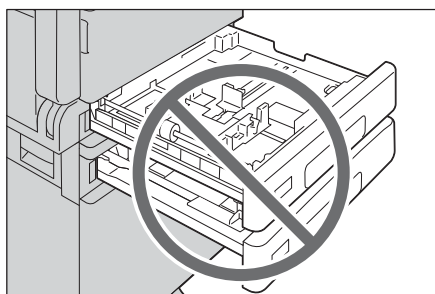


- 2 For Tray 1, push down the metal plate.

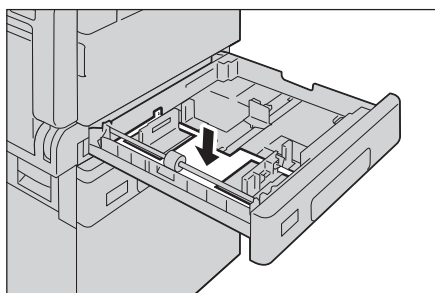

- 3 Adjust the paper guides to the correct position before loading paper.

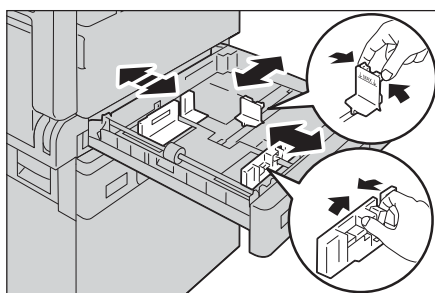

- 4 Load paper with the side to copy or print on facing up. Align the leading edge of paper with the left side of the tray.

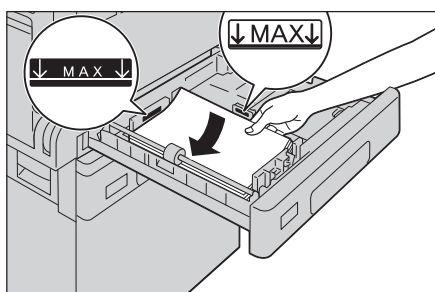

Important

- Do not load paper above the maximum fill line. It may cause paper jams or machine malfunctions.
- Do not place any paper or objects in the empty space on the right side of Tray 1 or 2. It may cause paper jams or machine malfunction.

5 Push the tray in gently until it stops.

Important

- When pushing the tray in, do it slowly. If the tray is pushed with too much force, it may cause machine malfunctions.
- Push the tray in all the way until it stops to prevent paper jams.

Loading Paper in Bypass Tray

When printing or copying on the paper that cannot be set in Tray 1 or 2, use the Bypass tray. The following describes the procedure for loading paper into the Bypass tray. For printing, specify the settings on the [Paper/Output] tab using the print driver. Also specify the type of paper to be loaded.


Important

- To prevent paper jams or loading errors, do not remove paper from its packaging until needed.

Note

- Fan the stack of paper well before loading paper in a tray. It prevents paper from sticking to each other and reduces paper jams.


1 Open the Bypass tray.

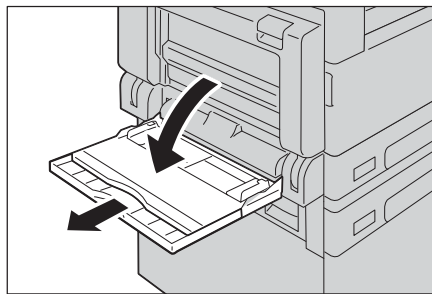

Note

- If necessary, pull out the extension tray. Pull out the extension tray gently.


2 Load paper with the side to be copied or printed on facing down, inserting paper until its edge lightly touches against the paper feed entrance.

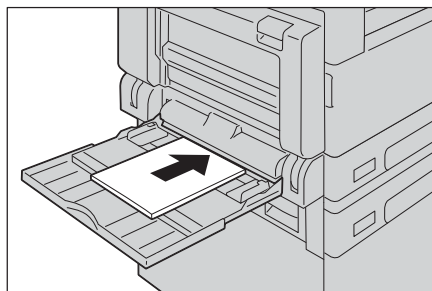

Important

- Do not load mixed paper types in a tray.
- Do not load paper above the maximum fill line. It may cause paper jams or machine malfunctions.
- The machine may not be able to feed or create the desired print quality for some types of heavyweight paper.

- 3** Gently align the paper guides to paper loaded.

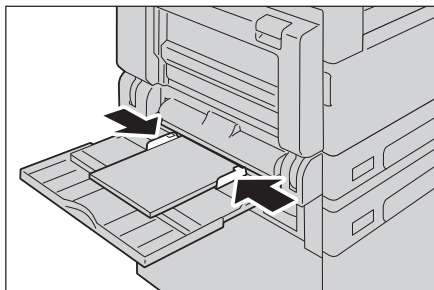

- 4** Execute the copy or print operation.

Changing Paper Size

This section describes how to change paper size in Trays 1 and 2.

Important

- Do not load mixed paper sizes into a tray.


Note

- When you change the size and orientation of paper in a tray, change the paper size setting to match the paper size. For more information on how to change the paper size and orientation settings, refer to "Setting the Paper Size" (P.78).

Changing the Paper Size for Trays 1 and 2


The following describes the procedure for changing paper size in Trays 1 and 2.

- 1 Pull out the tray until it stops.

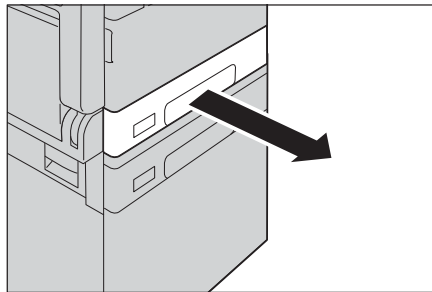
**Important**

- While the machine is copying or printing, do not pull out the tray that the job uses.
- To prevent paper jams or loading errors, do not load different sizes or types of paper on top of any remaining paper in a tray.


- 2 Remove any paper loaded in the tray.
- 3 For Tray 1, push down the metal plate.

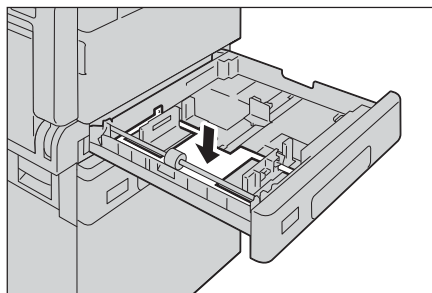

- 4 While pinching the levers of the two paper guides, move them to the edges of paper.

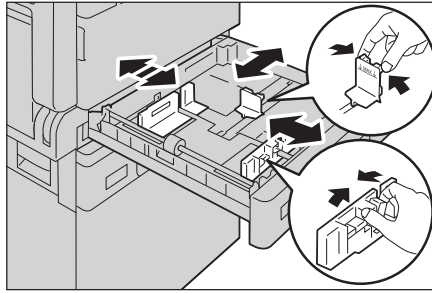

- 5 Load paper with the side to copy or print on facing up. Align the leading edge of paper with the left side of the tray.

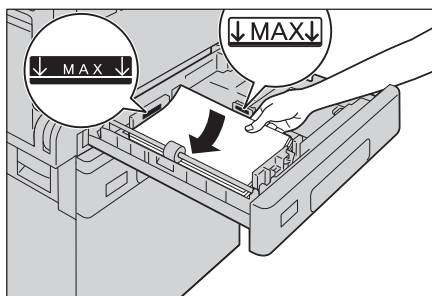

Important

- Do not load paper above the maximum fill line. It may cause paper jams or machine malfunctions.

- 6 Push the tray in gently until it stops.

Important

- When pushing the tray in, do it slowly. If the tray is pushed with too much force, it may cause machine malfunctions.

Note

- Affix the paper size label to the front of the tray.

- 7 Set the paper size setting.

Reference

- Refer to "Setting the Paper Size" (P.78).

Setting the Paper Size

This section describes how to set the paper size and orientation for Trays 1 and 2, and the bypass tray.


After you load paper, make sure to set the size and orientation of the paper loaded into the tray.

Note


- You cannot change the setting while the machine is processing a job.

- 1 Press the <Paper Supply> button to select a tray where the paper you will specify the paper size and orientation is loaded.


In the status machine diagram, the tray indicator lights up on the selected tray, and its paper size and orientation are displayed on the paper size display.

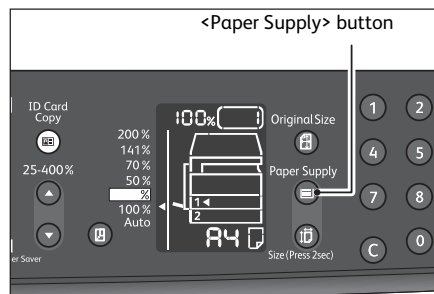

- 2 Press and hold the <Size (Press 2sec) > button for more than 2 seconds until the paper size in the paper size display area starts blinking.

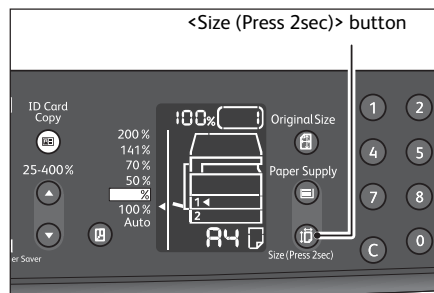

The paper size in the paper size display area blinks and the machine enters paper size setting mode.

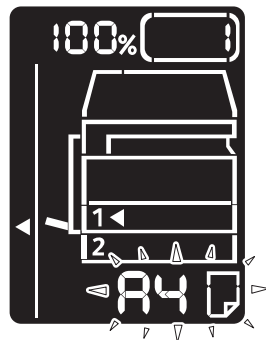

- 3** Press the <Size (Press 2sec)> button to select the size and orientation of the paper loaded in the selected tray.

The selected paper size and orientation are displayed in the status machine diagram.

The <Start> button lights up blinking during the settings.

- 4** Press the <Start> button to confirm the settings.

To exit paper size setting mode without saving the settings, press the <Clear All> button or the <Stop> button.

Important

- Be sure to press the <Start> button. Otherwise the settings of paper size and orientation are canceled and remain the previous settings.

Setting the Paper Type

This section describes how to set the type of paper loaded in tray.

The paper type is set to standard type as default. When loading a different type of paper into a tray, change the paper type setting according to the type of paper loaded in the tray to keep the print quality.

Note

- When loading paper in the bypass tray to print from a computer, you can set the paper type also on the print driver screen.
For more information, refer to the print driver help.

Reference

- Refer to "Supported Paper Type" (P.69).

- 1 Enter the System Administration Mode.


Reference

- Refer to "Enter System Administration Mode" (P.122).

- 2 Press the program number of the tray that you want to confirm, and press the <Start> button.

Program Number	Item
500	Tray 1
501	Tray 2
502	Bypass Tray

The current value is displayed.

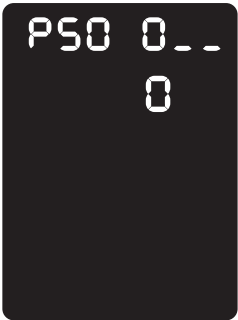

- 3 Press the <Start> button.

- 4** Enter the program number of the paper type that you want to set, and press the <Start> button.

Program Number	Item
0	Normal
2	Heavyweight
5	Lightweight

After the entered program number blinks twice, the new setting is confirmed.



- 5** After you confirm the setting, press the <Log In/Out> button and exit the System Administration mode.

Note

- When you exit the System Administration mode, the <Log In/Out> button light is turned off.

5

Copy

Overview of Copy Operations

This section describes the basic copy procedures.

Placing Document

The following two methods are available to place document:

■ Document feeder

- Single sheet
- Multiple sheets

■ Document glass

- Single sheet
- Bound documents, such as books

Document Feeder

■ Supported document sizes

You can place standard size documents in the document feeder.

When document is placed in the document feeder, the machine detects the document size automatically. The following standard size documents are detected automatically: A5[□], A5[□], A4[□], A4[□], A3[□], B5[□], B5[□], B4[□], 8.5 x 11"[□], 8.5 x 11"[□], 8.5 x 13"[□]*, 8.5 x 14"[□]*, 11 x 17"[□], 16K[□]*, and 8K[□].*

Note

- The document sizes with an asterisk can be automatically detected depending on the settings. You can select one of the following alternative document sizes. For more information, refer to "System Settings" (P.125).
 - 8.5 x 13"[□] or 8.5 x 14"[□]
 - China (8K/16K) or Taiwan (8K/16K)

■ Supported documents types (weights)

Documents with weights from 38 to 128 gsm (50 to 128 gsm for 2 Sided documents) can be placed in the document feeder and scanned.

The document feeder accepts the following number of sheets.

Document Type (gsm)	Number of Sheets
Lightweight (38 to 49 gsm)	110 sheets
Plain (50 to 80 gsm)	110 sheets
Heavyweight (81 to 128 gsm)	75 sheets

Important

- To avoid paper jams, use the document glass for mixed size, folded, wrinkled, cut-and-pasted documents, curled paper, or carbon-backed paper. If you can flatten the curled document, you can use the document.

Follow the steps below to place document in the document feeder.


You can place a single or multiple pages of a document.

- 1 Remove any paper clips or staples from document before placing it in the document feeder.

- 2 Place the document in the center of the document feeder, with the side to be scanned (or the front surface of a 2 sided document) facing up.


Important

- Make sure to exit the power saver mode before loading documents on the document feeder.

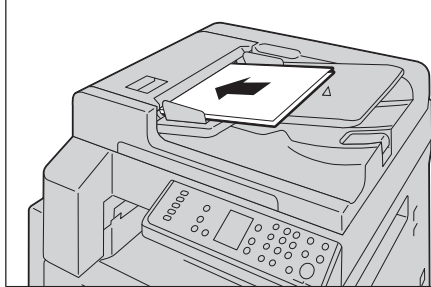


Note


- The document indicator lights up when a document is placed in the document feeder. If the indicator is not lit, place the document again.

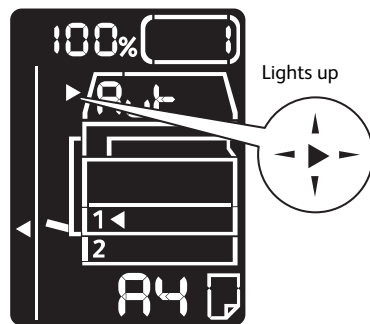

- 3 Align the document guides to each side of document.

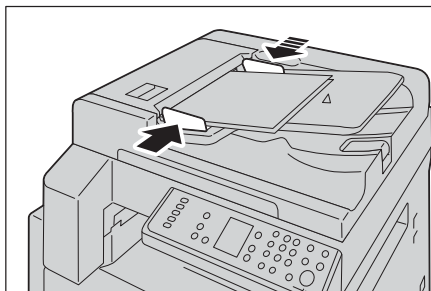

- 4 Open the document stopper.

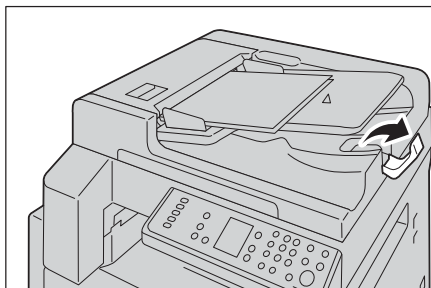

Document Glass

■ Supported document sizes

You can select one of the following document sizes for using the document glass.

A5, A4, A4, A3, B5, B5, B4, 8.5 x 11", 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 17", 16K, and 8K.

Important

- The document size is not detected when using the document glass. For setting the paper size and orientation, refer to "Original Size" (P.102).


⚠ CAUTION

Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

Follow the steps below to place document on the document glass.

You can place a single sheet document or bound document such as book on the document glass.


- 1 Open the document cover.

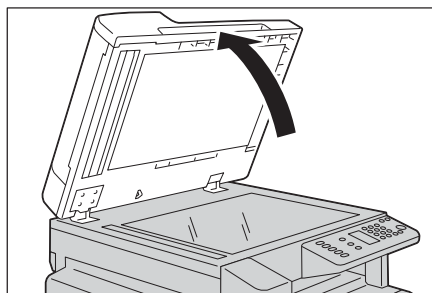


Important

- When using the document glass, make sure to close the document cover after finishing your copy job.

- 2 Place the document face down, and align it against the top left corner of the document glass.

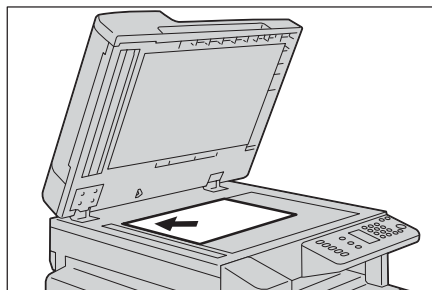

3 Close the document cover.

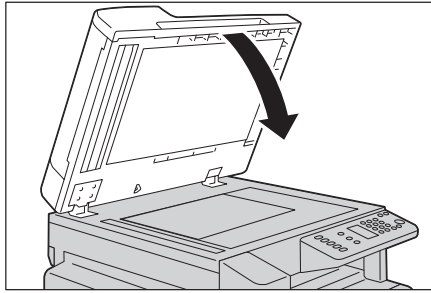**Note**

- Make sure to set the size and orientation of document when using the document glass.

Reference

- Refer to "Original Size" (P.102).

Making Advanced Settings

Note

- The displayed settings may vary according to models.
- You may need to enter a passcode to use the copy feature. Ask your system administrator for the passcode.


Reference

- For more information on advanced settings, refer to "Advanced Copy Settings" (P.91).
- For more information on entering a password, refer to "Enter System Administration Mode" (P.122).


Entering the Number of Copies

You can enter a value between 1 and 999 for the number of copies.

- 1 Use the numeric keypad to enter the desired number of copies.

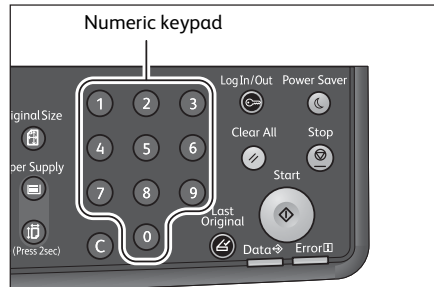


The entered value appears in the status machine diagram.

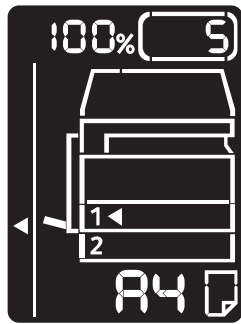


Note

- If you have entered an incorrect value, press the <C> (Clear) button, and then enter the correct value.

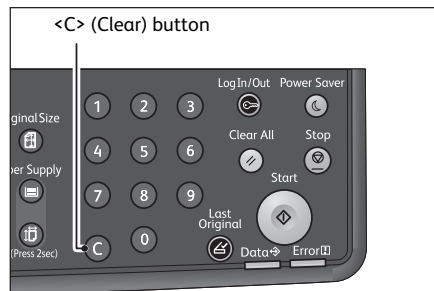

Starting the Copy Job

- 1 Press the <Start> button.

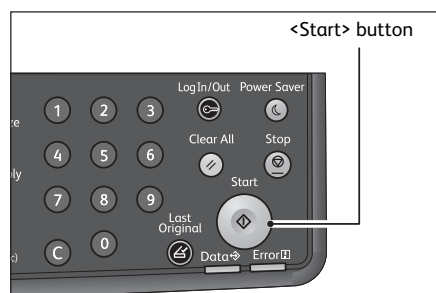

Important

- If document is placed in the document feeder, do not press down on the document while it is being fed through the machine.

Note

- If a problem occurs, an error code appears in the status machine diagram. For information on error codes, refer to "Error Code" (P.189).

Placing document on the document glass


■ Copying multiple sets of documents

If any of the following features are set, a copy job may not be started after loading a document due to the blinking <Last Original> button.

- Collated: On
- 2 Sided: 1 → 2 Sided or 2 → 2 Sided
- Pages per Side: 2 Pages or 4 Pages
- ID Card Copy: On

In this case, press the <Last Original> button after scanning the last document to start copying.

- 1 After all the documents are scanned, press the <Last Original> button to start copying.

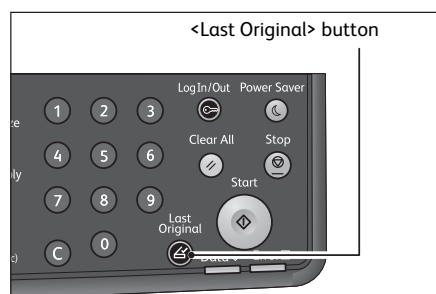


Operations Performed While Copying

You can stop the currently copying job.

Canceling the Current Copy Job

To cancel the currently executing copy job:

- 1 Press the <Stop> button.

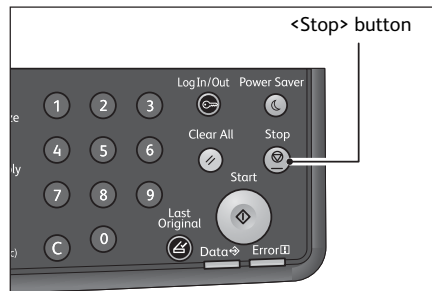

Advanced Copy Settings

This section describes all the settings you can set for the copy feature.

Setting Item	Description	See Page:
2 Sided	Used to select 1 Sided or 2 Sided copying.	(P.91)
Pages per Side	Used to copy multiple documents on a single page.	(P.93)
Collated	Sets the output method to use when making multiple sets of copies.	(P.94)
Original Type	Sets the document type.	(P.95)
Lighten/Darken	Adjusts the copy density.	(P.96)
ID Card Copy	Used to copy ID cards.	(P.98)
Reduce/Enlarge	Sets a reduction or enlargement factor.	(P.97)
Original Size	Sets the document size.	(P.102)
Paper Supply	Sets the tray to use.	(P.103)
Sharpness*	Adjusts the sharpness.	(P.104)
Background Suppression*	Removes the document's background suppression.	(P.104)
Edge Erase*	Adjusts the level of edge erase.	(P.104)
Auto Rotation	Rotates the scanned data when copying.	(P.104)

* : For the features with "", you can change the settings in the System Administration mode.

Note

- You can change the default value of some setting items.


Reference

- For more information on changing the settings, refer to "System Administrator Program List" (P.125).

2 Sided

You can set to scan a 1 Sided or 2 Sided or copy on one or both sides of paper.

- Press the <2 Sided> button to select the desired copy method.

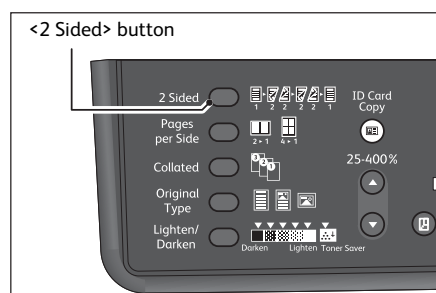

■ 1→1 Sided

Copies 1 Sided document on one side of paper, same appearance as the documents.

■ 1→2 Sided



Copies 1 Sided document on both sides of paper for long side binding.

■ 2→2 Sided



Copies 2 Sided document on both sides of paper, same appearance as the document.

■ 2→1 Sided



Copies 2 Sided document on one side of paper. The 2 Sided document is scanned as the document for long side binding.

To copy 1 → 2 Sided or 2 → 1 Sided for short side binding, change the binding side setting and place the document in landscape orientation. It is not copied properly for short side binding when either the document or paper is placed in portrait orientation or using the "Pages per Side" feature.

Reference

- For more information, refer to "Feature Settings" (P.136).

- 2 When using the document glass, [1→2 Sided] or [2→2 Sided] is selected, and all documents have been scanned, press the <Last Original> button.

This step is necessary when the <Last Original> button is blinking.



Pages per Side

Use this setting to copy 2 or 4 pages of a document together on one sheet of paper.

Selecting [Pages per Side] automatically sets a zoom ratio that will enable the document to fit on the page.


Important

- Align the top edge of the paper against the top edge of the tray.

Note

- Setting [Pages per Side] automatically sets the Reduce/Enlarge setting to automatic.
- The reduction/enlargement is adjusted automatically within the range of 25 to 400%.

- 1 Press the <Pages per Side> button to select the desired copy method.

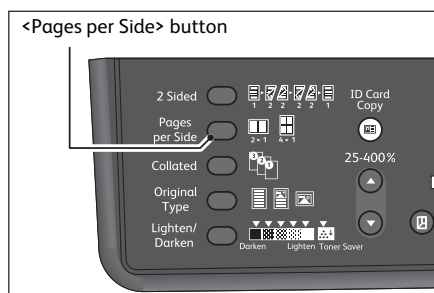

■ Off

Disables the Pages per Side feature.

■ 2 Pages



Copies 2 documents on a single page.


■ 4 Pages



Copies 4 documents on a single page.

- 2 When using the document glass and all documents have been scanned, press the <Last Original> button.


This step is necessary when the <Last Original> button is blinking.

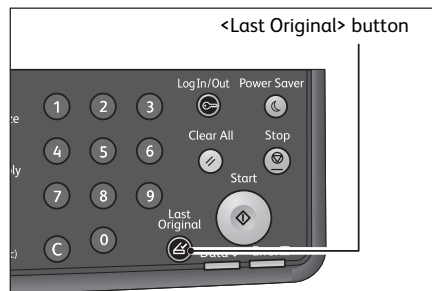

Collated

You can set the output method for copying sets of multiple documents.

- 1 Press the <Collated> button to select the desired output method.

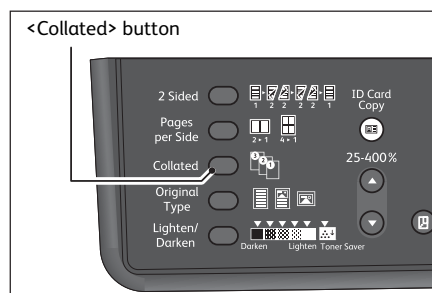

■ Off (the light is off)

Uncollated. The machine outputs the specified number of copies and sorts sheets by page.


■ On



The machine outputs sheets sorted into sets that are arranged in page order. When a document is placed in the document feeder, it automatically turns on. You can also change the setting to off.

- 2 When using the document glass and all documents have been scanned, press the <Last Original> button.


This step is necessary when the <Last Original> button is blinking.

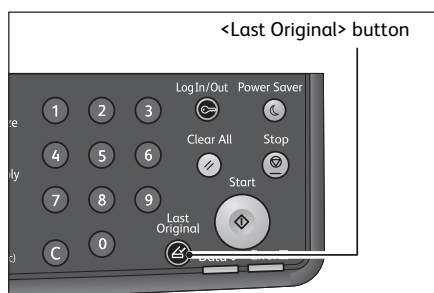

Original Type

You can set the type of document to optimize copies.

- 1 Press the <Original Type> button to select a document type.

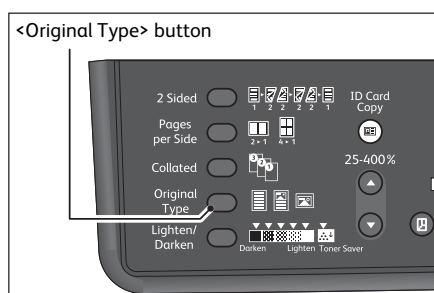

■ Text



Select this option when the document contains sharp black and white objects such as text.

■ Photo & Text



Select this option when the document contains both text and photos.

■ Photo




Select this option when the document contains only photos.

Lighten/Darken

You can set the density from five levels. The farther left the position of ▼, the darker the copy; the farther right, the lighter.

You can also set the toner saver mode.

- 1 Press the <Lighten/Darken> button to select a copy density level.

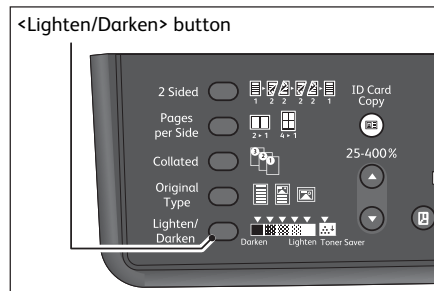

■ Darken +2

Creates copies with the darkest density. Use this setting to scan documents containing light objects.

■ Darken +1

Creates copies with a fairly dark density. Use this setting to scan documents containing fairly light objects.

■ Normal

Creates copies with the same density as the document.

■ Lighten +1

Creates copies with a fairly light density. Use this setting to scan documents containing fairly dark objects.

■ Lighten +2

Creates copies with the lightest density. Use this setting to scan documents containing dark objects.

■ Toner Saver

Creates copies using less amount of toner with the following settings.


- Lighten/Darken: Lighten +2
- Sharpness: Sharpen +2
- Original type: Photo & Text (Should not be changed)

Reduce/Enlarge

You can set the copying zoom ratio.

- 1 Press the <Reduce/Enlarge> button to select a zoom ratio.

In the status machine diagram, the selected zoom ratio is displayed on the Reduce/Enlarge display.

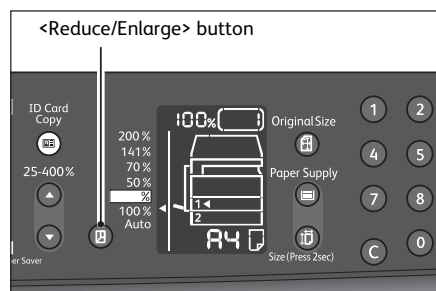

■ 100%

The machine makes the copy the same size as the document.

■ Aut% (Automatic zoom ratio)

The machine automatically sets an appropriate zoom ratio by calculating the document size and the specified paper size to enable the document to fit on the page.

Note

- When using the automatic zoom ratio, you cannot select the automatic paper selection.

■ Fixed zoom ratio

You can set the zoom ratio by selecting from the fixed zoom ratios.


■ Preset zoom ratio (Custom)



You can set a custom zoom ratio in the System Administration mode.

■ Variable zoom ratio

You can set the desired zoom ratio. You can set a value between 25 - 400 (in 1 % increments).

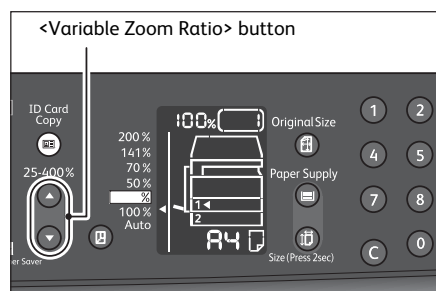

Magnification Table

When you make enlarged/reduced copies from standard size documents on standard size paper, the following copy ratios will be applied.

Copy / Documents	A5	B5	A4	B4	A3
A5	100 %	122 %	141 %	172 %	200 %
B5	81 %	100 %	115 %	141 %	163 %
A4	70 %	86 %	100 %	122 %	141 %
B4	57 %	70 %	81 %	100 %	115 %
A3	50 %	61 %	70 %	86 %	100 %

ID Card Copy

You can copy both sides of an ID card (name card, employee card, etc.) on one side of paper.

The zoom ratio is fixed to 100 % for the ID Card Copy feature.

Press the <ID Card Copy> button to enable this feature.

Important

- Place an ID card in the upright position.
- The minimum size of document for the ID Card Copy feature is ISO/IEC 7810 ID-1 (approx. 86 x 54 mm).


Note

- When the ID Card Copy feature is enabled, the Collated feature becomes disabled.
- When a document is placed in the document feeder, the ID Card Copy feature becomes disabled.
- The default image quality settings for the ID Card Copy feature are as follows:
 - Original Type: Photo & Text
 - Background Suppression: Off

You can select the copy mode from the one card mode and the multiple mode. The following shows some examples of output images.

- One card mode: Copying both side of an ID card in one sheet

Place the document inside the short side of A5 size (148 mm) referring to the document glass scale with 5 mm of distance in four directions.

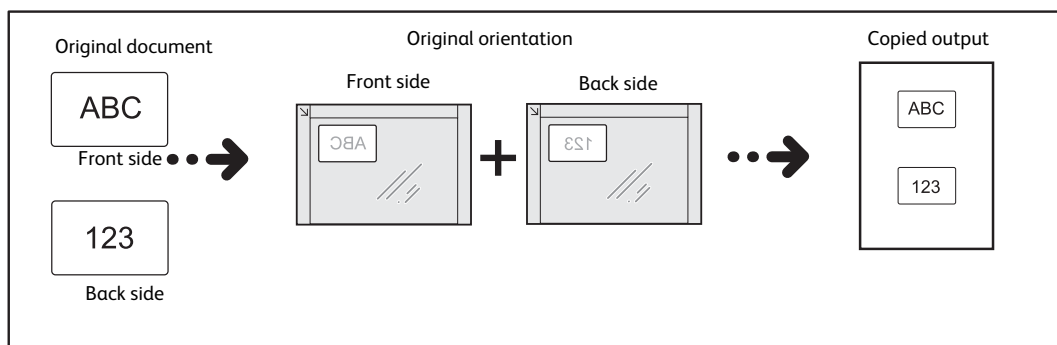


- Multiple mode: Copying multiple cards or an ID card with another document

Place the documents inside A4 LEF size referring to the document glass scale with 5 mm of distance in four directions.

Note

- The layout is automatically adjusted depending on the size, position, and orientation of documents.

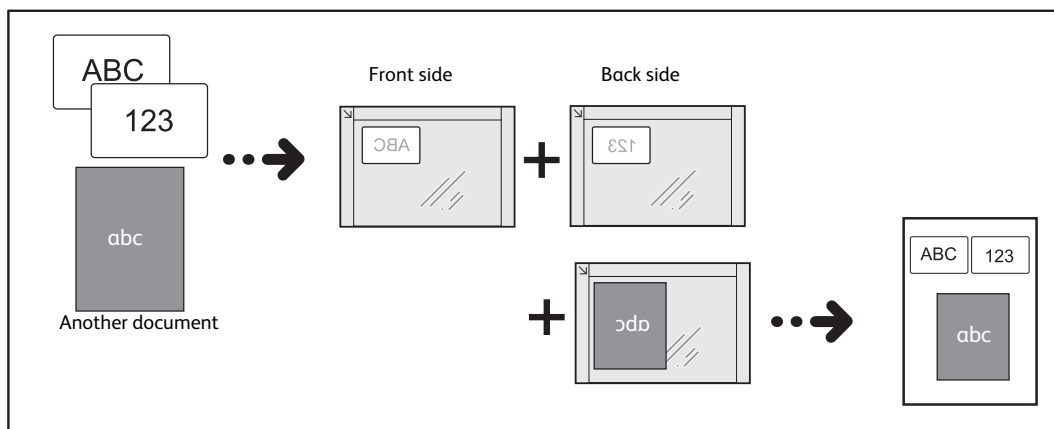


Follow the steps below to use the ID Card Copy feature.

- 1 Place an ID card face down at least 5mm away from the top left corner of the document glass, and then close the document cover.

Placing the ID card too close to the corner of the document glass may not copy the edge of the ID card properly.


Important

- The document cover must be closed so that the machine can detect the document size correctly.
- When the machine cannot detect the document size, you may be required to retry placing the document. In that case, the error code [A-6] appears in the display.

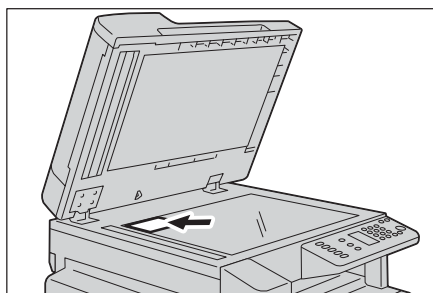


2 Press the <ID Card Copy> button.

The <ID Card Copy> button lights up.

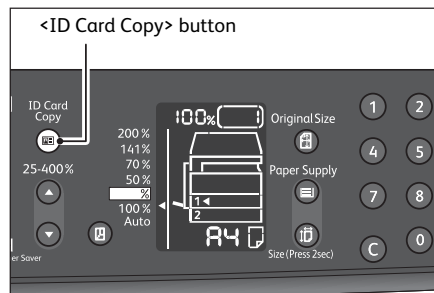

3 Press the <Original Size> button to select the copy mode between the one card mode or the multiple mode.

Each time you press the <Original Size> button, the setting value is switched between one card and multiple.

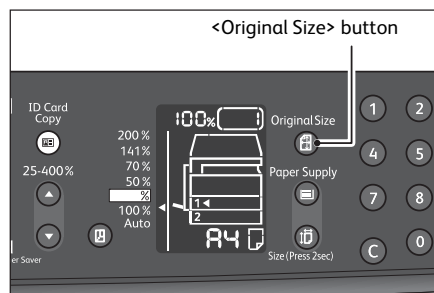

Note

- The <Original Size> button has the mode selection role only for the ID Card Copy feature.

Reference

- For more information on how to set the number of cards in advance, refer to "Feature Settings" (P.136).


■One Card Mode

The scanning area varies depending on the status of the skew correction feature.

- When the skew correction feature is enabled, the machine detects the card size in the range of 150 x 150 mm and rotates the scanned image so as to set the output image at a right angle.

Note

- The machine can adjust the inclination angle between -15 and 15 degrees.
- When the inclination angle is too large to be corrected, the machine scans the area which can contain all edges of the document and prints the scanned image without adjusting the inclination.

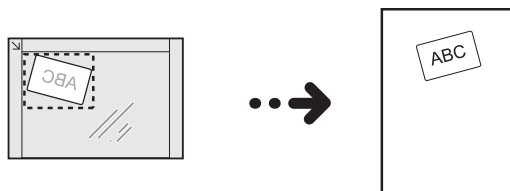


- When the skew correction feature is disabled, the machine scans the area of 100 x 100 mm.

Note

- The skew correction feature is enabled by factory default.
Only the system administrator can disable the feature, when the machine cannot detect the document size correctly.
- When you scan one card and the skew correction feature is disabled, you can change the zoom ratio manually.

Reference

- For more information on how to set the skew correction feature, refer to "Feature Settings" (P.136).

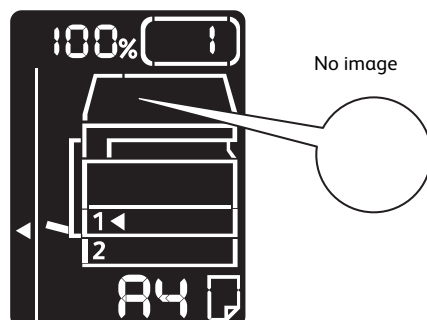


■ Multiple Mode

The machine scans the documents placed on the document glass within 210 x 297 mm and detects the size of each document.


You can copy various types of cards and documents in one sheet.

The scanning process can be repeated up to eight times.

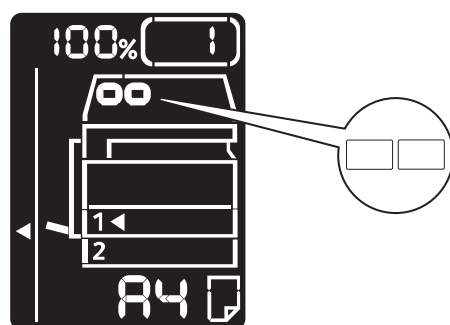

- Press the <Paper Supply> button to select a tray.

In the status machine diagram, the tray indicator lights up on the selected tray, and its paper size and orientation are displayed on the paper size display.

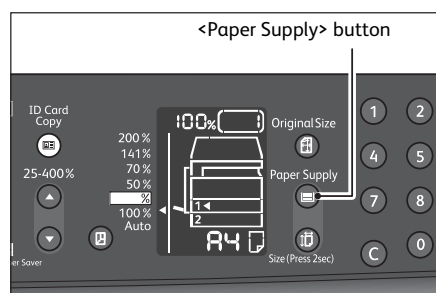


5 Press the <Start> button.

When one-side is finished scanning, the <Start> button lights up blinking.

Note

- If you copy only the one side of a card, press the <Last Original> button to finish scanning.

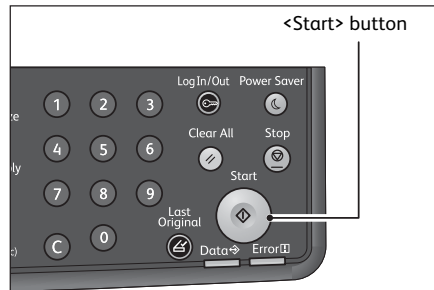


6 Place the other side of the ID card face down slightly away from the top left corner of the document glass, and then close the document cover.

7 Press the <Start> button.

Note

- During the scanning operation, the number of execution appears in the display. For example, the third time in the multiple mode is shown as follows.

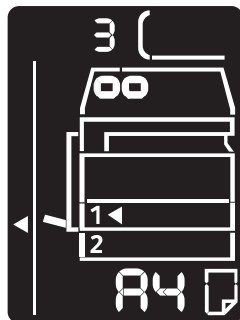

8 When the multiple mode is selected, press the <Last Original> button after you finished scanning all of the documents to be copied.

Note

- The machine finishes scanning after repeated the process eight times and starts to print.

Original Size

You can set the document size and orientation.

After placing the document on the document glass, make sure to set the size and orientation of the document.

Important


- If the document size is larger than the original size, the image may be cut off. Make sure to choose an appropriate document size.

Note

- For the quick selection, you can hide the original size and paper size that are not used from the machine status diagram. For the setting, refer to "System Settings" (P.125).

- 1 Press the <Original Size> button to select a document size.

In the status machine diagram, the selected document size and the orientation are displayed on the original size display.

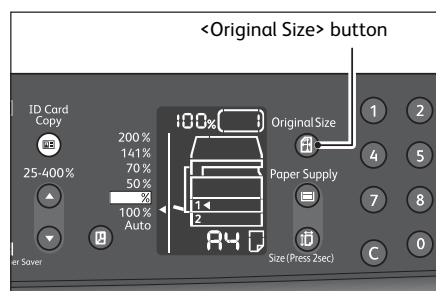

■ Fixed document size (Preset)

You can set the document size of the placed document by selecting from the preset document sizes. The document size and orientation change every time the <Original Size> button is pressed.

■ Not displayed (Original size display area is blank.) (Expected document size)

The machine automatically selects an appropriate scanning area from the specified paper size and the zoom ratio.

When using the document feeder

■ Aut (Automatic document size detection)

When a document is placed in the document feeder, the machine automatically detects a document size from the supported standard sizes.

Paper Supply


You can set the tray for copying.

Note

- If you load paper in the bypass tray, the paper supply is automatically set to the bypass tray.

- 1 Press the <Paper Supply> button to select a tray.

In the status machine diagram, the tray indicator lights up on the selected tray, and its paper size and orientation are displayed on the paper size display.

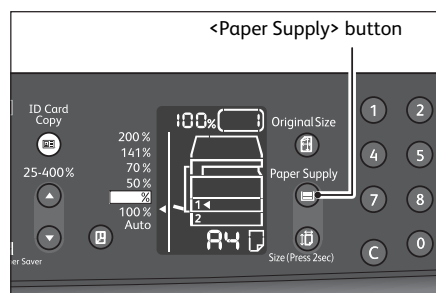

Note

- For the quick selection, you can hide the original size and paper size that are not used from the machine status diagram. For the setting, refer to "System Settings" (P.125).

■ Aut (Automatic paper selection)

Automatically determines the tray holding the appropriate paper, based on the document size and the specified zoom ratio.

Note

- When using the automatic paper selection, you cannot set the automatic zoom ratio.

■ Tray 1, Tray 2, and Bypass tray

Select one of the selectable trays. The indicator moves to the selected tray every time that the <Paper Supply> button is pressed.

Note

- Tray 2 is an optional component.

Sharpness

You can adjust the image sharpness to any of 5 levels.

You can set the sharpness in the System Administration mode. For more information, refer to "System Administrator Program List" (P.125).

Background Suppression

You can set the background suppression level.

When this feature is enabled, the document's background noise is removed during copying. When this feature is disabled, the document's background noise is not removed.

You can set the background suppression in the System Administration mode. For more information, refer to "System Administrator Program List" (P.125).

Edge Erase

You can set to erase the black shadows created around the edge of the paper when copying with the document cover open or copying a bound document.

You can set a value between 0 and 40 mm (in 1 mm increments) for the Edge Erase feature.

Note

- The value set for edge erase applies to all four edges of the document.
- For ID card copy, the edge erase is set separately.

You can set the edge erase in the System Administration mode. For more information, refer to "System Administrator Program List" (P.125).

Auto Rotation

You can set to rotate the scanned data when copying the document with an orientation that differs from the orientation of the paper loaded in tray to fit onto the paper.

You can set this feature in the following cases:

- The tray selection is set to automatic.
- The zoom ratio is set to automatic.
- The zoom ratio is set to "100 %" and both document and paper are the same size.

Make sure to set the size and orientation of document when using the document glass.

Managing the Copy Paper with Accounting

You can manage the copy paper usage for up to 10 users.

You can set the passcode and the maximum number of copied impressions permitted for each user.

The following features are available with Accounting function.

- Display/set the passcode.
- Display the total number of copied impressions.
- Display/set the maximum number of impressions permitted for copying.
- Clear the total number of impressions.

Reference

- For information on accounting modes, refer to "Account Mode Settings" (P.130).

Operations when using the Copy Feature

The operation procedure differs depending on the account mode that you are using.

Reference

- For more information, refer to "Account Mode" (P.57).

6

Scan

Scanning Procedure

The basic flow of scan operations including placing document in the machine and making advanced settings is described below.

Placing the Document

The following two methods are available to load documents:

■ Document feeder

- Single sheet
- Multiple sheets

■ Document glass

- Single sheet
- Bound documents, such as books

Important

- Precautions for scanning from a computer

When you are away from the machine to operate a computer with the documents left on the machine, other users may operate the machine and there is a risk of document loss and information leakage. Use a computer which is as close to the machine as possible. When the scan process is complete, check that you have all pages of the documents.

Document Feeder

■ Supported document sizes

You can place the standard size document in the document feeder.

When document is placed in the document feeder, the machine detects the document size automatically. The following standard size documents are detected automatically: A5[□], A5[□], A4[□], A4[□], A3[□], B5[□], B5[□], B4[□], 8.5 x 11"[□], 8.5 x 11"[□], 8.5 x 13"^{□*}, 8.5 x 14"^{□*}, 11 x 17"[□], 16K^{□*}, and 8K^{□*}.

Note

- The document sizes with an asterisk can be automatically detected depending on the settings. You can select one of the following alternative document sizes. For more information, refer to "System Settings" (P.125).
 - 8.5 x 13"[□] or 8.5 x 14"[□]
 - China (8K/16K) or Taiwan (8K/16K)

■ Selectable document sizes in the scan driver

A5[□], A4[□], A4[□], A3[□], B5[□], B4[□], 5.5 x 8.5"[□], 7.25 x 10.5"[□], 8.5 x 11"[□], 8.5 x 11"[□], 8.5 x 13"[□], 8.5 x 13.4"[□], 8.5 x 14"[□], 11 x 17"[□], 16K^{□*}, and 8K^{□*}.

* : China (8K/16K) and Taiwan(8K/16K)

Note

- TWAIN driver supports the document sizes described above.
The supported document size by Windows Image Acquisition (WIA) driver depends on the running application.

■ Supported documents types (weights)

Documents with weights from 38 to 128 gsm (50 to 128 gsm for 2 Sided documents) can be placed in the document feeder and scanned.

The document feeder accepts the following number of sheets.

Document Type (gsm)	Number of Sheets
Lightweight (38 to 49 gsm)	110 sheets
Plain (50 to 80 gsm)	110 sheets
Heavyweight (81 to 128 gsm)	75 sheets

Important

- To avoid paper jams, use the document glass for mixed size, folded, wrinkled, cut-and-pasted documents, curled paper, or carbon-backed paper. If you can flatten the curled document, you can use the document.


Follow the steps below to place document on the document feeder.

You can place a single or multiple pages of a document.

- 1 Remove any paper clips or staples from document before placing it in the document feeder.
- 2 Place the document in the center of the document feeder, with the side to be scanned (or the front surface of a 2 Sided document) facing up.


Important

- Make sure to exit the power saver mode before loading documents on the document feeder.

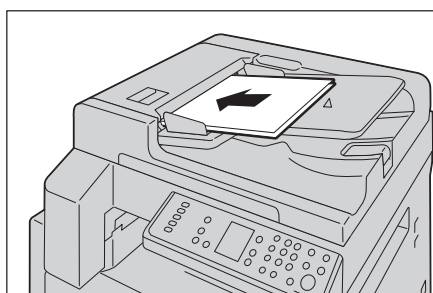


Note


- The document indicator lights up when a document is placed in the document feeder. If the indicator is not lit, place the document again.

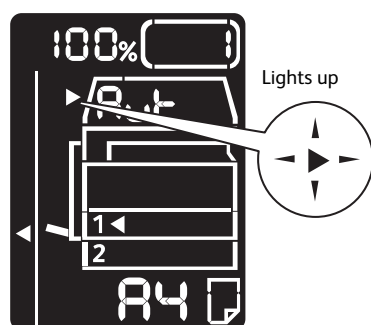

- 3 Align the document guides to each side of the document.

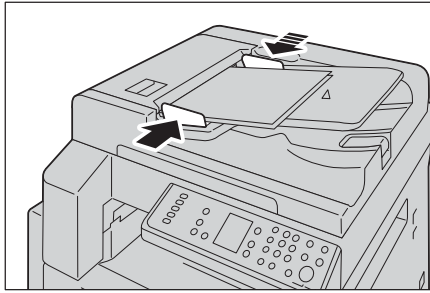

- 4 Open the document stopper.

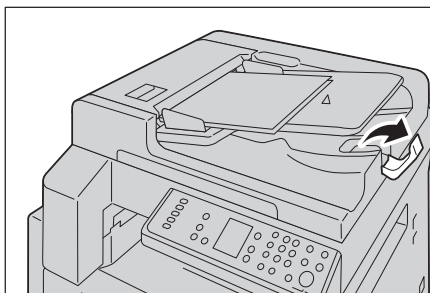

Document Glass

■ Supported document sizes

The maximum size is 297 x 432 mm.

■ Selectable document sizes in the scan driver

A5☐, A4☐, A4☐, A3☐, B5☐, B4☐, 5.5 x 8.5"☐, 7.25 x 10.5"☐, 8.5 x 11"☐, 8.5 x 11"☐, 8.5 x 13"☐, 8.5 x 13.4"☐, 8.5 x 14"☐, 11 x 17"☐, 16K☐*, and 8K☐*.

* : China (8K/16K) and Taiwan(8K/16K)

Note

- TWAIN driver supports the document sizes described above.
The supported document size by Windows Image Acquisition (WIA) driver depends on the running application.


⚠ CAUTION

- **Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.**

Follow the steps below to place document on the document glass.


You can place a single sheet document or bound document such as book on the document glass.

- 1 Open the document cover.

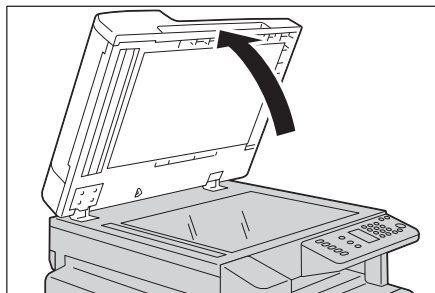
**Important**

- When using the document glass, make sure to close the document cover after finishing your scan job.

- 2 Place the document face down, and align it against the top left corner of the document glass.

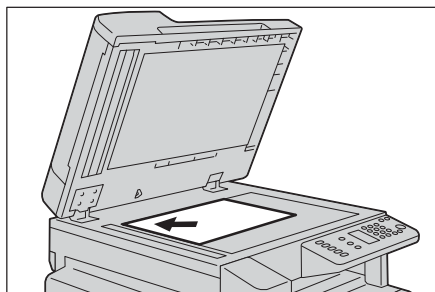

- 3 Close the document cover.

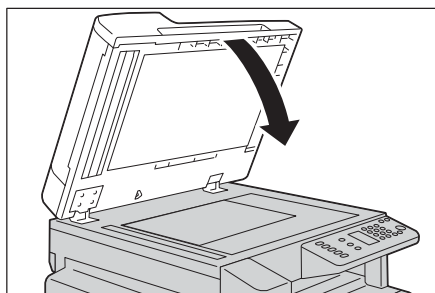

Using the Scan Feature

You can select the scan functions from the following list.

Scan Function	Connection	Details	See Page
Using an application	Network/USB	Scan data is loaded into the computer using the TWAIN or Windows Image Acquisition (WIA)-compatible application.	(P.113)

Note

- The size of the scanned image may be slightly larger than the document size in some cases. This is due to the margin of error introduced with processing.

Loading Scan Data Using the PC-Based Application

This function allows you to load scan data from a TWAIN-compatible or Windows Image Acquisition (WIA)-compatible application installed on a computer. On the computer display, you can set the scanning condition and view the scanning process on the preview screen while scanning the document.

The Network TWAIN (SOAP) or USB can be used for this function.

Note

- Install the scan driver to use this function. For information on how to install the scan driver, refer to "Installing the Print Driver/Scan Driver" (P.39).
- The items you can set will vary according to the TWAIN-compatible and Windows Image Acquisition (WIA)-compatible applications you are using.
- The supported applications are 32-bit only.

Follow the steps below to perform the operation.

- 1 Place the document on the machine.

Reference

- Refer to "Placing the Document" (P.108).

- 2 Start the PC application on your computer.
- 3 Select the menu item for selecting a scanner (source).
- 4 Select [FX DocuCentre S2110].

■ Setting the Machine's IP Address for Network Scanning


You can search network scanners on the Scanner Connection Tool.

Note

- To use the Scanner Connection Tool, install the scan driver via ethernet connection.

To start the Scanner Connection Tool on your computer:

- 1) Click [Start] > [All Programs] ([All Apps] for Windows® 10) > [Fuji Xerox DocuCentre S2110] > [Scanner Connection Tool].

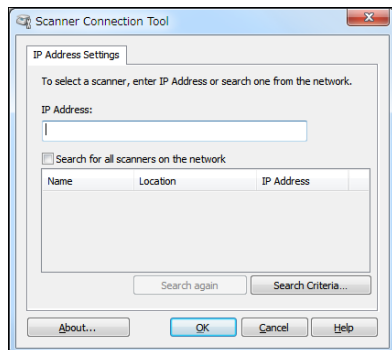

- 2) Select a scanner from the list, and select [OK].

Reference

- For more information, click [Help] in the screen to display Help Information.

5 Make advanced settings as needed.

Note

- For information on the Scan functions, click [Help] in the screen to display Help Information.

6 Click [Scan].

Operations during Scanning


You can stop the currently scanning job.

Canceling the Current Scan Job

To cancel the currently scanning job:

■ On the machine

- 1 Press the <Stop> button.

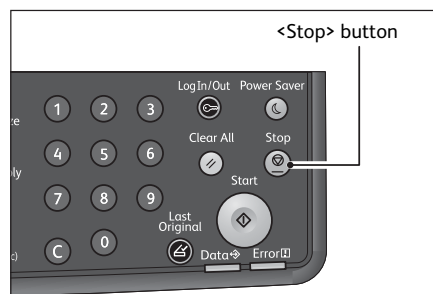

■ On the computer

- 1 Press [Cancel] on the screen that appears while scanning.

7

Print

Major Print Driver Functions

This section describes the major print driver functions used for printing. The print driver must be installed before use.

Reference

- For information on how to install the print driver, refer to "Installing the Print Driver/Scan Driver" (P.39).

Note

- For information on the Print functions, click [Help] in the print driver screen to display the Help Information.
- There are some functions that adding the mounted component information to the print driver from the [Properties] screen under the [Options] tab is required to make the functions available. Any functions not displayed on the screen are not available.

For information on how to set the option information, refer to "Setting the Options Configuration" (P.63).

■ Pages Per Sheet

Prints a multiple-page document on a single page.

■ 2 Sided Print

Prints on both sides of each page.

■ Poster

Enlarges one page of print data to the specified size and prints it on multiple pages. Used to create a large poster.

■ Booklet Layout

2 Sided printing combined with page collation to enable the creation of booklets with the correct page sequence.

■ Watermark

Prints 'Confidential' or another preset character string on top of print data.

■ Annotation

Adds a comment, date, and page numbers onto print data.


Printing

This section describes how to print document.

The procedure used to print will vary according to the application you are using. See your application's manual for the specific procedure.

The steps below are the operation used in the [FX DocuCentre S2110] print driver screen.

- 1 Select [Print] from the application's [File] menu.
- 2 Select [FX DocuCentre XXXXX].
XXXXX: Displayed as "S2110".
- 3 If needed, click [Preferences] to make advanced settings.

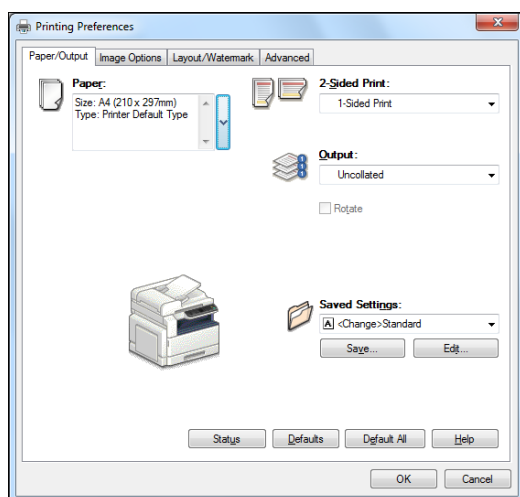

Note

- For information on the Print functions, click [Help] in the print driver screen to display the Help Information.

- 4 Click [OK].
- 5 Click [OK] in the [Print] dialog box.

Operations during Printing


You can cancel the currently printing job.

Stopping the Print Job

To cancel the currently printing job:

■ On the machine

- 1 Press the <Stop> button.

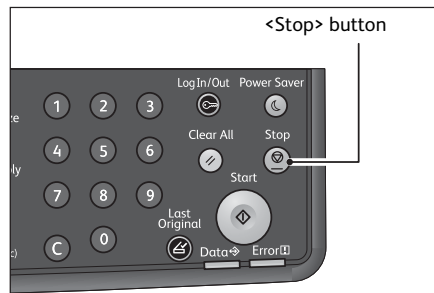

■ On the computer

- 1 Double-click the printer icon  located on the task bar in the lower right corner of the screen.
- 2 Select the document name that you desired to cancel, and then press the <Delete> key.
If there is no document displayed on the window, cancel it manually on the machine.

8

Tools

System Settings Procedure


This section describes the overview of how to change the machine's default settings and check the machine information.

Important

- If there are any current or pending jobs, you cannot enter the System Administration mode.
- During System Administration mode, the following operations cannot be performed.
 - Receiving a print job, and starting a print or scan job.

Enter System Administration Mode

- 1 Press and hold the <Log In/Out> button for more than 4 seconds until the screen below is displayed.

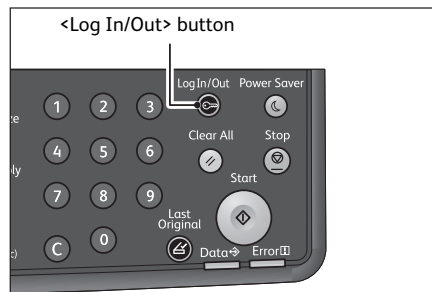

- 2 Use the numeric keypad to enter the password, and then press the <Start> button.

Note


- The password is initially set to "11111" (five digits of "1").
- The password can be changed.
For more information, refer to "System Settings" (P.125).
- The <Log In/Out> button lights up when the machine enters the System Administration mode.

The program number input screen appears, and shows the letter [P].



Change Settings

- 1 Enter a program number using the numeric keypad.

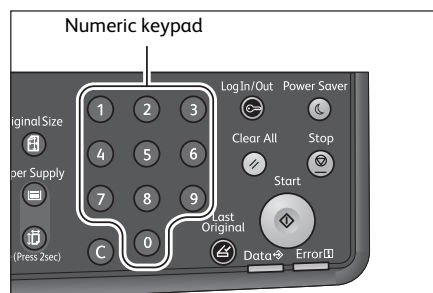

Reference


- For more information, refer to "System Administrator Program List" (P.125).



- 2 Press the <Start> button to confirm the entered value.

Exit System Administration Mode

- 1 Press the <Log In/Out> button.

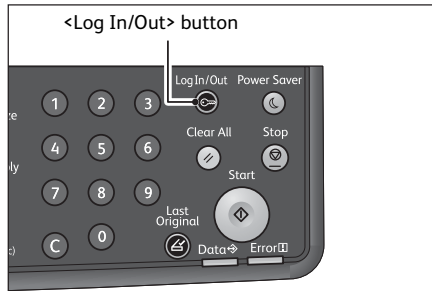**Note**

- The <Log In/Out> button light is turned off when the machine exits the System Administration mode.

System Administrator Program List

This section describes the programmable system settings on the machine.

Clock Settings

Note

- When setting the system clock at the first time, set the [Date Format] and the [Time Format] as well.

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
1	Year	Set the year of the machine's system clock.	2010* - 2031
2	Month	Set the month of the machine's system clock.	1* - 12
3	Day	Set the day of the machine's system clock.	1* - 31
4	Hour	Set the hour of the machine's system clock.	0* - 23
5	Minute	Set the minute of the machine's system clock.	0* - 59
6	Date Format	Set the date display format.	0: YYMMDD* 1: MMDDYY 2: DDMMYY
7	Time Format	Set the time display format.	0: 12h 1: 24h*

System Settings

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
100	Low Power Mode Timer	Set the amount of time that the machine waits before entering Low Power mode. You can set a value between 1 to 60 minutes (in 1 minute increments). The machine's power is not turned OFF completely in Low Power mode. Instead, this mode creates a balance between low power consumption and short warm-up time by controlling the temperature of the fusing unit to a level midway between the power OFF temperature and the "Ready" temperature.	1* - 60 minutes

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
101	Sleep Mode Timer	Set the amount of time that the machine enters Sleep mode from Low Power mode. You can set a value between 1 and 239 minutes (in 1 minute increments). Sleep mode minimizes power consumption by shutting off the power to all components except the controller. Warm-up time in Sleep mode is longer than in Low Power mode.	1* - 239 minutes
102	Auto Clear Timer	Set the amount of time that the machine waits before automatically returning to the default display screen when no operation is being performed.	0: 15 seconds 1: 30 seconds 2: 45 seconds* 3: 1 minute 4: 2 minutes 5: 3 minutes 6: 4 minutes
103	Auto Print Timer	Set the amount of time that the machine waits after the operations such as using the control panel, placing or removing a document in the document feeder, and taking out or putting in a tray, until starting to print automatically. You can set a value between 1 and 240 seconds (in 1 second increments).	1 - 240 seconds (Default: 10 seconds)
104	Auto Scan Complete Timer	Set the amount of time that the machine waits before automatically processing the next job determined that there is no additional document to be loaded when using the document glass.	1: 20 seconds 2: 30 seconds* 3: 60 seconds 4: 90 seconds
105	Job Cancel Timer	Set the amount of time that the machine waits before automatically cancelling all jobs that are being paused when an error occurs.	0: Invalid 60 - 5940 seconds (Default: 600 seconds)
106	Job Done Timer	Set the amount of time for the job complete screen to be displayed in the control panel when a job is completed.	1 - 10 seconds (Default: 3 seconds)
107	Low Power Mode After Print Job	Set whether to enter the Low Power mode immediately after the Job Done Timer is time out.	0: Follow the Low Power Mode Timer* 1: When the Low Power Mode Timer is set to valid, enter the Low Power Mode immediately after the Job Done Timer is time out.

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
108	Job History Verbose	Set whether to log the job history of Copy and Scan (USB).	0: No log* 1: Log
109	Return from Sleep Mode by Any Key	Set whether to exit the Sleep mode by touching any button on the control panel.	0: Invalid* 1: Valid
202	Report Manual Output Direction	Select the report to print.	1: System Settings Report* 2: Service Settings Report 3: Job History Report 4: Error History Report 5: Job Counter Report
206	Paper Class	Set the paper size series to be used.	2: Inch Series (8 x 14") 3: AB Series (8 x 13") 4: AB Series (8K/16K)* 5: Inch Series (8 x 13.4")
207	Error Display of Drum Cartridge Replacement	Set the frequency to display the error code when it is time for replacing the drum cartridge. Note • To exit the screen with the error code, press any buttons of the control panel.	0: Do not display 1: When switching the machine ON and OFF* 2: When the time is out that is set on the Auto Reset
208	Error Display of Drum Cartridge Life	Set the frequency to display the error code when the drum cartridge life ends. Note • To exit the screen with the error code, press any buttons of the control panel.	0: Do not display 1: When switching the machine ON and OFF 2: When reached the timeout on the Auto Reset*
209	Error Display of Toner Cartridge Replacement.	Set the frequency to display the error code when it is time for replacing the toner cartridge. Note • To exit the screen with the error code, press any buttons of the control panel.	0: Do not display 1: When switching the machine ON and OFF* 2: When reached the timeout on the Auto Reset
212	Switching legal size for DADF	Set the legal size for the document feeder when the program number 206 is set to 4.	0: 8.5 x 13"  * 2: 8.5 x 14" 
213	Switching 8K/16K size	Switch 8K/16K size according to the machine's region of use.	0: China* 1: Taiwan
300	Limited display of the paper/ document size	Set whether to limit the display of the paper/document size on the status machine diagram.	0: (No Limit)* 1: A5

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
301	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: A4
302	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: A3
303	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: B5
304	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: B4
305	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 5.5 x 8.5
306	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 7.25 x 10.5
307	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 8.5 x 11
308	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 8.5 x 13
309	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 8.5 x 14
310	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 11 x 17
311	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 16K
312	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 8K
313	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram.	0: (No Limit)* 1: 8.5 x 13.4

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
314	Limited display of the paper/ document size	Set whether to limit the display of the paper/ document size on the status machine diagram. Note • There will be no difference even after this setting is changed.	0: (No Limit)* 1: Custom size
400	1st digit of the System Administrator Password	Set the 1st digit of the system administrator password.	0 - 9 (Default:1)
401	2nd digit of the System Administrator Password	Set the 2nd digit of the system administrator password.	0 - 9 (Default:1)
402	3rd digit of the System Administrator Password	Set the 3rd digit of the system administrator password.	0 - 9 (Default:1)
403	4th digit of the System Administrator Password	Set the 4th digit of the system administrator password.	0 - 9 (Default:1)
404	5th digit of the System Administrator Password	Set the 5th digit of the system administrator password.	0 - 10 (When the password is 4-digit, enter 10.) (Default:1)
405	6th digit of the System Administrator Password	Set the 6th digit of the system administrator password.	0 - 10 (When the password is 5-digit, enter 10.) (Default:10)
500	Paper Type in Tray 1	Set the paper type in Tray 1.	0: Plain 1* 1: Plain 2 5: Lightweight
501	Paper Type in Tray 2	Set the paper type in Tray 2.	0: Plain 1* 1: Plain 2 2: Heavyweight 3: Extra-HW 5: Lightweight
502	Paper Type in Bypass Tray	Set the paper type in Bypass Tray.	0: Plain 1* 1: Plain 2 2: Heavyweight 3: Extra-HW 5: Lightweight
511	Auto paper/tray selection setting in Tray 2	Set the auto paper/tray selection in Tray 2.	0: Off 1: On*
512	Auto paper/tray selection setting in Bypass Tray.	Set the auto paper/tray selection in Bypass Tray.	0: Off 1: On*

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
900	Firmware Version of Controller	Displays the firmware version of the controller.	-
901	Firmware Version of UI panel	Displays the firmware version of the UI panel.	-
902	Firmware Version of DADF	Displays the firmware version of the document feeder.	-
7000	Copy & Print Counter	Displays the total number of the copy job, print job, report job, and maintenance report.	-
7001	Copy Counter	Displays the total number of pages printed.	-
7002	Print Counter	Displays the total number of the print job, report job, and maintenance report.	-
7003	Large Size Counter	Displays the total number of the large size print job.	-
9000	Region	Select the machine's region of use.	36: Australia* 156: China 158: Taiwan 344: Hong Kong 360: Indonesia 410: Korea 458: Malaysia 554: New Zealand 608: Philippines 702: Singapore 704: Viet Nam 764: Thailand
9001	Fault Message Language for MIB	Select the language for fault messages used in the Management Information Base (MIB).	0: English* 1: Simplified Chinese

Account Mode Settings

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
203	Account Mode	Select the machine account mode. Reference • Refer to "Account Mode" (P.57).	0: Account Free Mode* 1: Single Account Mode 2: Multi Account Mode
600	All Accounts Copy Count Clear	Clear the copy count of all the accounts.	0: Do not clear* 1: Clear
601	Account Number 1 Password	Specify the account number 1's password using three digits.	4 - 6 digit numbers (Default: 0001)

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
602	Account Number 2 Password	Specify the account number 2's password using three digits.	4 - 6 digit numbers (Default: 0002)
603	Account Number 3 Password	Specify the account number 3's password using three digits.	4 - 6 digit numbers (Default: 0003)
604	Account Number 4 Password	Specify the account number 4's password using three digits.	4 - 6 digit numbers (Default: 0004)
605	Account Number 5 Password	Specify the account number 5's password using three digits.	4 - 6 digit numbers (Default: 0005)
606	Account Number 6 Password	Specify the account number 6's password using three digits.	4 - 6 digit numbers (Default: 0006)
607	Account Number 7 Password	Specify the account number 7's password using three digits.	4 - 6 digit numbers (Default: 0007)
608	Account Number 8 Password	Specify the account number 8's password using three digits.	4 - 6 digit numbers (Default: 0008)
609	Account Number 9 Password	Specify the account number 9's password using three digits.	4 - 6 digit numbers (Default: 0009)
610	Account Number 10 Password	Specify the account number 10's password using three digits.	4 - 6 digit numbers (Default: 0010)
611	Account Number 1 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 1.	0 (No Limit)* - 255 (1 = 1,000)
612	Account Number 2 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 2.	0 (No Limit)* - 255 (1 = 1,000)
613	Account Number 3 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 3.	0 (No Limit)* - 255 (1 = 1,000)
614	Account Number 4 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 4.	0 (No Limit)* - 255 (1 = 1,000)
615	Account Number 5 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 5.	0 (No Limit)* - 255 (1 = 1,000)
616	Account Number 6 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 6.	0 (No Limit)* - 255 (1 = 1,000)
617	Account Number 7 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 7.	0 (No Limit)* - 255 (1 = 1,000)

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
618	Account Number 8 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 8.	0 (No Limit)* - 255 (1 = 1,000)
619	Account Number 9 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 9.	0 (No Limit)* - 255 (1 = 1,000)
620	Account Number 10 Copy Job Limit	Specify the maximum number of pages allowed to copy for the account number 10.	0 (No Limit)* - 255 (1 = 1,000)
7101	Account Number 1 Copy Count	Shows the total number of copies made under account number 1.	-
7102	Account Number 2 Copy Count	Shows the total number of copies made under account number 2.	-
7103	Account Number 3 Copy Count	Shows the total number of copies made under account number 3.	-
7104	Account Number 4 Copy Count	Shows the total number of copies made under account number 4.	-
7105	Account Number 5 Copy Count	Shows the total number of copies made under account number 5.	-
7106	Account Number 6 Copy Count	Shows the total number of copies made under account number 6.	-
7107	Account Number 7 Copy Count	Shows the total number of copies made under account number 7.	-
7108	Account Number 8 Copy Count	Shows the total number of copies made under account number 8.	-
7109	Account Number 9 Copy Count	Shows the total number of copies made under account number 9.	-
7110	Account Number 10 Copy Count	Shows the total number of copies made under account number 10.	-

Network Settings

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
1006	Ethernet Speed	Set the communication speed.	17: 10BASE-T Half 18: 100BASE-TX Half 33: 10BASE-T Full 34: 100BASE-TX Full 127: Auto*

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
1007	IP Mode	Set the type of TCP/IP.	4: IPv4* 6: IPv6 10: Both IPv4 and IPv6
1008	Get IP Address	Set the retrieve method for the IP address, subnet mask and gateway address.	1: RARP 2: DHCP 4: BOOTP 8: DHCP with AutoIP* 16: Set manually
1009	Manual IP Address 1 on IPv4	Set the 1st 8-bit of the machine's IP address using the IPv4.	0* - 255
1010	Manual IP Address 2 on IPv4	Set the 2nd 8-bit of the machine's IP address using the IPv4.	0* - 255
1011	Manual IP Address 3 on IPv4	Set the 3rd 8-bit of the machine's IP address using the IPv4.	0* - 255
1012	Manual IP Address 4 on IPv4	Set the 4th 8-bit of the machine's IP address using the IPv4.	0* - 255
1013	Manual Subnet Mask 1 on IPv4	Set the 1st 8-bit of the machine's subnet mask using the IPv4.	0* - 255
1014	Manual Subnet Mask 2 on IPv4	Set the 2nd 8-bit of the machine's subnet mask using the IPv4.	0* - 255
1015	Manual Subnet Mask 3 on IPv4	Set the 3rd 8-bit of the machine's subnet mask using the IPv4.	0* - 255
1016	Manual Subnet Mask 4 on IPv4	Set the 4th 8-bit of the machine's subnet mask using the IPv4.	0* - 255
1017	Manual Gateway Address1 on IPv4	Set the 1st 8-bit of the machine's gateway address using the IPv4.	0* - 255
1018	Manual Gateway Address2 on IPv4	Set the 2nd 8-bit of the machine's gateway address using the IPv4.	0* - 255
1019	Manual Gateway Address3 on IPv4	Set the 3rd 8-bit of the machine's gateway address using the IPv4.	0* - 255
1020	Manual Gateway Address4 on IPv4	Set the 4th 8-bit of the machine's gateway address using the IPv4.	0* - 255
1021	IPv4 IP Filter	Set whether to use only the IPv4 when connecting to the machine.	0: No IPv4 access control* 1: Use IPv4 access control
1022	Allowed IPv4 IP Address (1) - 1	Set the 1st 8-bit of the Allowed IPv4 IP Address (1) - 1.	0* - 255

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
1023	Allowed IPv4 IP Address (1) - 2	Set the 2nd 8-bit of the Allowed IPv4 IP Address (1) - 2.	0* - 255
1024	Allowed IPv4 IP Address (1) - 3	Set the 3rd 8-bit of the Allowed IPv4 IP Address (1) - 3.	0* - 255
1025	Allowed IPv4 IP Address (1) - 4	Set the 4th 8-bit of the Allowed IPv4 IP Address (1) - 4.	0* - 255
1026	IPv4 Access Control Mask bit length (1)	Set the bit length (1) of Access Control Mask for IPv4.	0* - 32
1030	Allowed IPv4 IP Address (2) - 1	Set the 4th 8 bit of the Allowed IPv4 IP Address (2) - 1.	0* - 255
1031	Allowed IPv4 IP Address (2) - 2	Set the 4th 8 bit of the Allowed IPv4 IP Address (2) - 2.	0* - 255
1032	Allowed IPv4 IP Address (2) - 3	Set the 4th 8 bit of the Allowed IPv4 IP Address (2) - 3.	0* - 255
1033	Allowed IPv4 IP Address (2) - 4	Set the 4th 8 bit of the Allowed IPv4 IP Address (2) - 4.	0* - 255
1034	IPv4 Access Control Mask bit length (2)	Set the bit length (2) of Access Control Mask for IPv4.	0* - 32
1038	Allowed IPv4 IP Address (3) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (3) - 1.	0* - 255
1039	Allowed IPv4 IP Address (3) - 2	Set the 2nd 8 bit of the Allowed IPv4 IP Address (3) - 2.	0* - 255
1040	Allowed IPv4 IP Address (3) - 3	Set the 3rd 8 bit of the Allowed IPv4 IP Address (3) - 3.	0* - 255
1041	Allowed IPv4 IP Address (3) - 4	Set the 4th 8 bit of the Allowed IPv4 IP Address (3) - 4.	0* - 255
1042	IPv4 Access Control Mask bit length (3)	Set the bit length (3) of Access Control Mask for IPv4.	0* - 32
1046	Allowed IPv4 IP Address (4) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (4) - 1.	0* - 255
1047	Allowed IPv4 IP Address (4) - 2	Set the 2nd 8 bit of the Allowed IPv4 IP Address (4) - 2.	0* - 255
1048	Allowed IPv4 IP Address (4) - 3	Set the 3rd 8 bit of the Allowed IPv4 IP Address (4) - 3.	0* - 255

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
1049	Allowed IPv4 IP Address (4) - 4	Set the 4th 8 bit of the Allowed IPv4 IP Address (4) - 4.	0* - 255
1050	IPv4 Access Control Mask bit length (4)	Set the bit length (4) of Access Control Mask for IPv4.	0* - 32
1054	Allowed IPv4 IP Address (5) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (5) - 1.	0* - 255
1055	Allowed IPv4 IP Address (5) - 2	Set the 1st 8 bit of the Allowed IPv4 IP Address (5) - 2.	0* - 255
1056	Allowed IPv4 IP Address (5) - 3	Set the 1st 8 bit of the Allowed IPv4 IP Address (5) - 3.	0* - 255
1057	Allowed IPv4 IP Address (5) - 4	Set the 1st 8 bit of the Allowed IPv4 IP Address (5) - 4.	0* - 255
1058	IPv4 Access Control Mask bit length (5)	Set the bit length (5) of Access Control Mask for IPv4.	0* - 32
1062	Allowed IPv4 IP Address (6) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (6) - 1.	0* - 255
1063	Allowed IPv4 IP Address (6) - 2	Set the 1st 8 bit of the Allowed IPv4 IP Address (6) - 2.	0* - 255
1064	Allowed IPv4 IP Address (6) - 3	Set the 1st 8 bit of the Allowed IPv4 IP Address (6) - 3.	0* - 255
1065	Allowed IPv4 IP Address (6) - 4	Set the 1st 8 bit of the Allowed IPv4 IP Address (6) - 4.	0* - 255
1066	IPv4 Access Control Mask bit length (6)	Set the bit length (6) of Access Control Mask for IPv4.	0* - 32
1070	Allowed IPv4 IP Address (7) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (7) - 1.	0* - 255
1071	Allowed IPv4 IP Address (7) - 2	Set the 1st 8 bit of the Allowed IPv4 IP Address (7) - 2.	0* - 255
1072	Allowed IPv4 IP Address (7) - 3	Set the 1st 8 bit of the Allowed IPv4 IP Address (7) - 3.	0* - 255
1073	Allowed IPv4 IP Address (7) - 4	Set the 1st 8 bit of the Allowed IPv4 IP Address (7) - 4.	0* - 255
1074	IPv4 Access Control Mask bit length (7)	Set the bit length (7) of Access Control Mask for IPv4.	0* - 32
1078	Allowed IPv4 IP Address (8) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (8) - 1.	0* - 255
1079	Allowed IPv4 IP Address (8) - 2	Set the 1st 8 bit of the Allowed IPv4 IP Address (8) - 2.	0* - 255
1080	Allowed IPv4 IP Address (8) - 3	Set the 1st 8 bit of the Allowed IPv4 IP Address (8) - 3.	0* - 255
1081	Allowed IPv4 IP Address (8) - 4	Set the 1st 8 bit of the Allowed IPv4 IP Address (8) - 4.	0* - 255

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
1082	IPv4 Access Control Mask bit length (8)	Set the bit length (8) of Access Control Mask for IPv4.	0* - 32
1086	Allowed IPv4 IP Address (9) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (9) - 1.	0* - 255
1087	Allowed IPv4 IP Address (9) - 2	Set the 1st 8 bit of the Allowed IPv4 IP Address (9) - 2.	0* - 255
1088	Allowed IPv4 IP Address (9) - 3	Set the 1st 8 bit of the Allowed IPv4 IP Address (9) - 3.	0* - 255
1089	Allowed IPv4 IP Address (9) - 4	Set the 1st 8 bit of the Allowed IPv4 IP Address (9) - 4.	0* - 255
1090	IPv4 Access Control Mask bit length (9)	Set the bit length (9) of Access Control Mask for IPv4.	0* - 32
1094	Allowed IPv4 IP Address (10) - 1	Set the 1st 8 bit of the Allowed IPv4 IP Address (10) - 1.	0* - 255
1095	Allowed IPv4 IP Address (10) - 2	Set the 1st 8 bit of the Allowed IPv4 IP Address (10) - 2.	0* - 255
1096	Allowed IPv4 IP Address (10) - 3	Set the 1st 8 bit of the Allowed IPv4 IP Address (10) - 3.	0* - 255
1097	Allowed IPv4 IP Address (10) - 4	Set the 1st 8 bit of the Allowed IPv4 IP Address (10) - 4.	0* - 255
1098	IPv4 Access Control Mask bit length (10)	Set the bit length (10) of Access Control Mask for IPv4.	0* - 32
1103	SNMP Port Status	Set the start status of SNMP port.	0: Disabled 1: Enabled*
1104	LPD Port Status	Set the start status of LPD port.	0: Disabled 1: Enabled*
1105	Port 9100 Port Status	Set the start status of Port 9100 port.	0: Disabled 1: Enabled*
1106	CentreWare Internet Services Start Status	Set the start status of CentreWare Internet Services Start Status.	0: Disabled 1: Enabled*
1107	Network Port Status for Scanning	Set the start status of the port for network scanning.	0: Disabled 1: Enabled*

Feature Settings

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
3000	Paper Supply (Copying)	Set the default tray. You can select 2 (Tray2) only when the One Tray Module (optional) is installed.	0: Automatic 1: Tray1* 2: Tray2 5: Bypass tray

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
3002	Reduce/Enlarge (Copying)	Set the default zoom ratios.	0: 100 % 1: 50.0 % 2: 70.7 % 3: 141.4 % 4: 200.0 % 254: Preset 255: Auto*
3003	Edge Erase (Copying)	Set the amount of Edge Erase.	0 - 40 mm (Default: 2 mm)
3004	Original Type (Copying)	Set the default setting of [Original Type].	1: Text* 2: Text & Photo 3: Photo
3005	Lighten/Darken (Copying)	Set the default setting of [Lighten/Darken].	0: Light +2 1: Light +1 2: Normal* 3: Dark +1 4: Dark +2 5: Toner Saver
3006	Sharpness (Copying)	Set the value of the sharpness.	0: Soft +2 1: Soft +1 2: Normal* 3: Sharp +1 4: Sharp +2
3007	Background Suppression (Copying)	Set whether to suppress the document's background color.	0: Off 1: On*
3008	Document Size (Copying)	Set the default document size when the program number 206 is set to 2 (Inch Series (8 x 14")).	1: 11 x 17" 2: A3 6: 8.5 x 14" 7: 8.5 x 13" 9: A4 10: 8.5 x 11" 16: 8.5 x 11" * 17: 5.5 x 8.5" 18: A4 22: 7.25 x 10.5" 134: Expected document size
		Set the default document size when the program number 206 is set to 3 (AB Series (8 x 13")).	1: 11 x 17" 2: A3 5: B4 6: 8.5 x 14" 7: 8.5 x 13" 9: A4 10: 8.5 x 11" 14: B5 16: 8.5 x 11" 18: A4 * 19: A5 23: B5 134: Expected document size

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
3008 (Continued)	Document Size (Copying)	Set the default document size when the program number 206 is set to 4 (AB Series (8K/16K)).	1: 11 x 17" 2: A3 3: 8K (China) 4: 8K (Taiwan) 5: B4 6: 8.5 x 14" 7: 8.5 x 13" 9: A4 10: 8.5 x 11" 14: B5 16: 8.5 x 11" 18: A4 * 19: A5 20: 16K (China) 21: 16K (Taiwan) 23: B5 134: Expected document size
		Set the default document size when the program number 206 is set to 5 (Inch Series (8 x 13.4")).	1: 11 x 17" 2: A3 6: 8.5 x 14" 9: A4 10: 8.5 x 11" 16: 8.5 x 11" * 17: 5.5 x 8.5" 18: A4 22: 7.25 x 10.5" 56: 8.5 x 13.4" 134: Expected document size
3009	2 Sided (Copying)	Set the default setting of [2 Sided].	0: 1 → 1* 1: 1 → 2 2: 2 → 1 3: 2 → 2
3010	Preset Zoom Ratio (Copying)	Set the preset zoom ratio. You can set a value between 25 and 400 % (in 1 minute increments).	25 - 400 % (Default: 81 %)
3011	Background Suppression Level (Copying)	Set the suppression level of [Background Suppression] (Program number: 3007) when the feature is set to ON. This feature is available when scanning the monochrome document.	0: Level1 1: Level2* 2: Level3 3: Level4 4: Level5
3012	Edge Erase ID Card Copy (Copying)	Set the amount of Edge Erase for ID Card Copy feature. Note This setting is used when you scan 1 card and the skew correction feature is disabled.	0 - 10 mm (Default: 3 mm)

Program Numbers	Menu Items	Descriptions	Values (*: Default setting)
3013	Scanning Mode for ID Card Copy	Set the mode to scan the document using the ID Card Copy feature.	1: Scanning 1 card* 3: Scanning multiple cards
3015	Binding side for 2 Sided copying (Document)	Set the binding side when the document  is set. When the "Pages per Side" is selected, the long side binding is set.	3: Long side binding* 4: Short side binding
3016	Binding side for 2 Sided copying (Paper)	Set the binding side when the paper is set. When the "Pages per Side" is selected, the long side binding is set.	3: Long side binding* 4: Short side binding
3017	Default Document Type for ID Card Copy	Set the document type for ID Card Copy.	1: Text 2: Text & Photo* 3: Photo
3018	Default Skew Correction for ID Card Copy	Set the skew correction type for ID Card Copy when the scanning mode is "Scanning 1 card".	0: Disabled 2: Rotation up to 15 degrees*
3019	Default Frame Margin for ID Card Copy	Set the amount of frame margin for ID Card Copy.	4 - 8 mm (Default: 4 mm)
3030	Substitute Paper Selection (Printing)	Set whether to switch the paper size between A4 and Letter, when paper of the specified size is not loaded in any trays.	0: Disabled 1: Enabled*
3050	Report for IP Address Settings	Set whether to print the System Settings Report when the machine is restarted after you have changed the IP address settings with the Support Tool.	0: Disabled 1: Enabled*
3070	Network Scanning Timeout	Set the amount of time that the machine waits for the scanning process before the network communication times out.	1 - 255 seconds (Default: 30 seconds)

9

Machine Status

Printing Reports

The machine can print the following reports:

Report	Description
System Settings Report	Prints the machine's hardware configuration, version information, status of consumables, number of pages printed by each feature, the items that can be set by CentreWare Internet Services, and their values.
Service Settings Report	Prints the items that can be set from the control panel in the System Administration mode.
Job History Report	Shows the job execution results. Prints the results of the most recent jobs (up to 50 jobs' worth). Note - When the Job History exceeds 50 jobs, each new job replaces the oldest job in the history. - When printed a job (single page job) continuously, the error information of the jammed page may not be recorded.
Error History Report	Prints information on errors generated in the machine. Up to 42 errors are recorded sequentially from newest to oldest. Records information on up to 10 paper jams or similar errors. Note The Error History may record less than 42 errors if it contains errors with a large amount of information. When the Error History exceeds its capacity, each new error recorded replaces the oldest error.
Job Counter Report	Prints the total number of pages printed by each feature, along with tallies such as the copy total and permitted maximum number of copies by each user in multiple account mode.

Note

- The items printed will vary according to the machine's settings.

Follow the steps below to print a report.

- 1 Enter the System Administration mode.

Reference


- Refer to "Enter System Administration Mode" (P.122).

- 2 Enter the program number "202", and press the <Start> button.
- 3 Enter the number of the report that you want to print, and press the <Start> button.

Number	Description
1	System Settings Report
2	Service Settings Report
3	Job History Report
4	Error History Report
5	Job Counter Report

Note

- To stop the current printing job, press the <Stop> button.

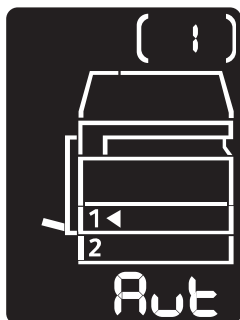

When the print job is completed, the status machine diagram displays as shown in the image.



- 4 When you finish printing, press the <Log In/Out> button to exit the System Administration mode.

Note

- When you exit the System Administration mode, the <Log In/Out> button light is turned off.

Checking the Job Counter

You can check the number of pages printed by the machine under the "Billing Information" on the System Settings Report output.

■ Meter 1

The total number of pages printed or copied is displayed.

■ Meter 2

The total number of pages copied is displayed.

■ Meter 3

The total number of pages printed is displayed.

Checking Consumables

You can check the statuses of consumables such as toner cartridge and drum cartridge under the "Consumables" on the System Settings Report output.

■ Toner Status

Shows the toner cartridge status.

◆ [OK]

Replacement is not currently needed.

◆ [Reorder]

Replacement is currently not needed, but the cartridge will need to be replaced soon. Make sure to have a new toner cartridge on hand.

◆ [Replace Soon]

Replacement is needed soon.

■ Drum Status

Shows the drum cartridge status.

◆ [OK]

Replacement is not currently needed.

◆ [Reorder]

Replacement is currently not needed, but the cartridge will need to be replaced soon. Have a new drum cartridge on hand.

◆ [Replace Soon]

Replacement is needed soon.

◆ [Replace Now]

Replacement is needed now.

Checking the Total Number of Impressions Copied

The machine can display the total number of impressions each user has copied and the maximum number of impressions each user is permitted to copy.

This feature can be used in Multiple Account mode to manage the copy paper.

Reference

- Accounting for copy paper: "Managing the Copy Paper with Accounting" (P.105)

To check, follow the steps below.

- 1 Enter the System Administration mode.

Reference

- Refer to "Enter System Administration Mode" (P.122).

- 2 Enter the program number of the group that you want to check, press the <Start> button.

■ Copied Impressions

Program Number	Description
7101	Copied impressions by User 1.
7102	Copied impressions by User 2.
7103	Copied impressions by User 3.
7104	Copied impressions by User 4.
7105	Copied impressions by User 5.
7106	Copied impressions by User 6.
7107	Copied impressions by User 7.
7108	Copied impressions by User 8.
7109	Copied impressions by User 9.
7110	Copied impressions by User 10.

■ Copy Limit

Program Number	Description
611	Copy limit for User 1.
612	Copy limit for User 2.
613	Copy limit for User 3.
614	Copy limit for User 4.
615	Copy limit for User 5.
616	Copy limit for User 6.
617	Copy limit for User 7.
618	Copy limit for User 8.
619	Copy limit for User 9.
620	Copy limit for User 10.

- 3** Check the value displayed.



Note

- You can see the next value by pressing the <Start> button when ► appears.
- To return to the program number input screen, press the <Stop> button.

- 4** When you finish checking, press the <Log In/Out> button, and exit the System Administration mode.

Note

- When you exit the System Administration mode, the <Log In / Out> button light is turned off.

10

Maintenance

Replacing Consumables

The machine is provided with the following consumables. We recommend the use of the following consumables as they are manufactured to meet the specifications of the machine.

Type of Consumables/ Periodic Replacement Parts	Product Code	Quantity/Box
Standard Capacity Toner Cartridge	CT202873	1 unit/box
Drum Cartridge	CT351075	1 unit/box

Note

- We recommend that you always keep spare consumables/periodic replacement parts available.

WARNING

- **Never use a vacuum cleaner for spilled toner and residual toner in this product, toner cartridge or toner bottle. It may catch fire by electric sparks inside a vacuum cleaner and cause explosion. Use a broom or a wet cloth to wipe off the spills. If you spill a large volume of toner, contact your local Fuji Xerox representative.**
- **Never throw a toner cartridge into an open flame. Remaining toner in the cartridge may catch fire and cause burn injuries or explosion. If you have a used toner cartridge no longer needed, contact your local Fuji Xerox representative for its disposal.**

CAUTION

- **Keep drum cartridges and toner cartridges out of the reach of children. If a child accidentally swallows toner, spit it out, rinse mouth with water, drink water and consult a physician immediately.**
- **When replacing drum cartridges and toner cartridges, be careful not to spill the toner. In case of any toner spills, avoid contact with clothes, skin, eyes and mouth as well as inhalation.**
- **If toner spills onto your skin or clothing, wash it off with soap and water. If you get toner particles in the eyes, wash it out with plenty of water for at least 15 minutes until irritation is gone. Consult a physician if necessary. If you inhale toner particles, move to a fresh air location and rinse your mouth with water. If you swallow toner, spit it out, rinse your mouth with water, drink plenty of water and consult a physician immediately.**

■ Handling consumables/periodic replacement parts

- Do not store boxes of consumables/periodic replacement parts upright.
- Do not unpack consumables/periodic replacement parts before use. Avoid storing consumables/periodic replacement parts in the following locations:
 - In high temperature and humid locations
 - Near heat-generating devices
 - Areas exposed to direct sunlight
 - Dusty areas
- When using consumables/periodic replacement parts, carefully read precautions for use. Precautions for use are instructed on their bodies or packages, or a precaution sheet is included in their packages.
- We recommend always keeping spare consumables/periodic replacement parts in stock.
- When calling our Customer Support Center to order consumables/periodical replacement parts, have the product codes ready.
- The use of consumables/periodic replacement parts not recommended by Fuji Xerox may impair machine quality and performance. Use only consumables/periodic replacement parts recommended by Fuji Xerox.

■ Checking the status of consumables


You can check the status of consumables.



Reference

- For more information, refer to "Checking Consumables" (P.144).

Replacing the Toner Cartridge

The following error codes and icons are displayed in the status machine diagram when the remaining toner level has become low.

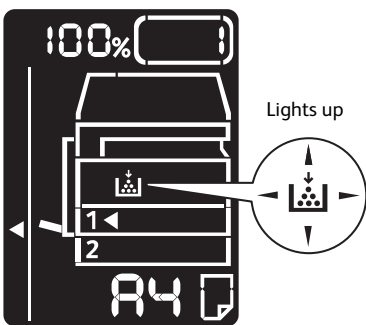Error Code	Status Machine Diagram	Required Action
-	 The diagram shows a status machine display with a toner cartridge icon. A light up arrow points to the icon, and the text 'Lights up' is written next to it. The display also shows '100%' at the top, 'A4' at the bottom, and a small '1' and '2' next to the cartridge icon.	When the toner cartridge icon is lit, the toner cartridge will need to be replaced after about 2,500 pages*. Have a replacement toner cartridge ready.

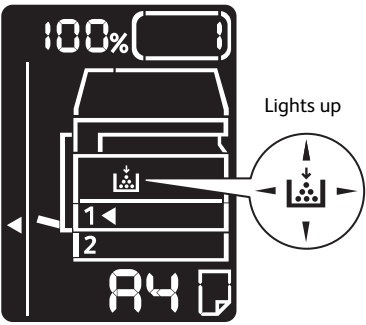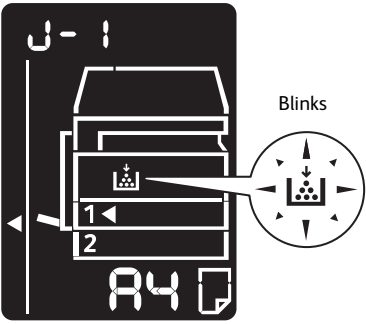Error Code	Status Machine Diagram	Required Action
	 The diagram shows a machine status screen with '100%' at the top, a toner cartridge icon that is lit (indicated by a circle with arrows pointing out), and 'A4' at the bottom. A callout shows the lit icon with the text 'Lights up'.	When the toner cartridge icon is lit (blinks for three seconds), the toner cartridge will need to be replaced after about 100 pages*. Have a replacement toner cartridge ready.
J-1	 The diagram shows a machine status screen with 'J-1' at the top, a toner cartridge icon that is blinking (indicated by a circle with arrows pointing out), and 'A4' at the bottom. A callout shows the blinking icon with the text 'Blinks'.	When the error code appears, the toner cartridge icon starts blinking, and the error indicator is lit, the toner cartridge needs to be replaced. Replace the toner cartridge.


* : The remaining page yield for copy/print jobs is applicable when A4 paper LEF () is used. The value is an estimate and varies depending on the conditions such as the content printed, paper size, paper type, and the machine operating environment.

Important


- When you replace a toner cartridge, toner may spill and soil the floor. We recommend laying paper on the floor beforehand.
- The use of toner cartridges not recommended by Fuji Xerox may degrade image quality and performance. Use only the toner cartridges recommended by Fuji Xerox.
- When the remaining amount of toner is low, the machine may stop printing and display an error code. If this occurs, replace the toner cartridge to resume copying or printing.
- Leave the machine's power ON when replacing the toner cartridge.

Follow the steps below to replace the toner cartridge.


- 1 Make sure that the machine is not operating, and open the front cover.

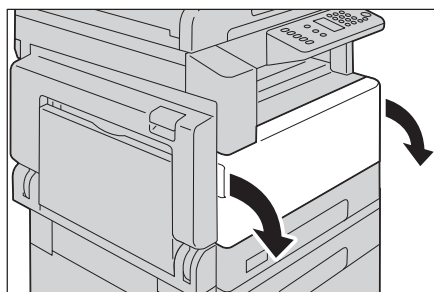

- 2 Hold the handle of the toner cartridge and lift it up slightly.

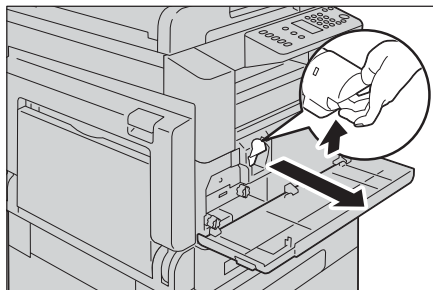

- 3 Gently pull the toner cartridge out of the machine.

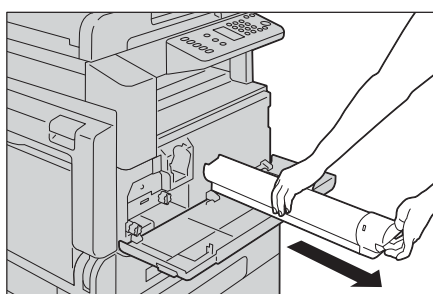


⚠ WARNING

- **Never throw a toner cartridge into an open flame. Remaining toner in the cartridge may catch fire and cause burn injuries or explosion.**
- **If you have a used toner cartridge no longer needed, contact your local Fuji Xerox representative for its disposal.**

Important

- Pull out the toner cartridge slowly. Otherwise, toner may spill from the cartridge.
- Return the used toner cartridges to your local Fuji Xerox representative.



- 4 Unpack a new toner cartridge, and shake it lightly up/down, and left/right 10 times.

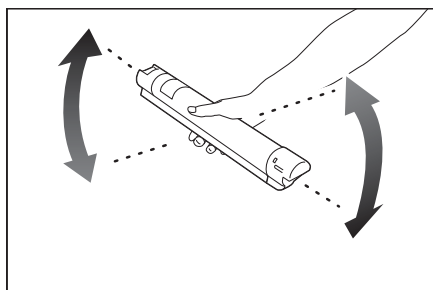


Important

- Do not touch the shutter.

- 5** Orient the toner cartridge with the arrow (↑) facing up, and insert it as far as it will go.

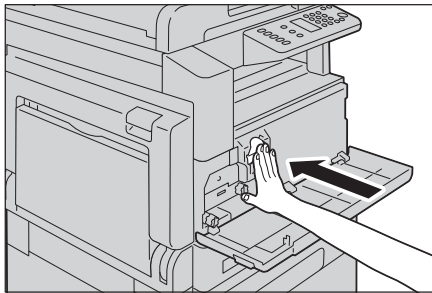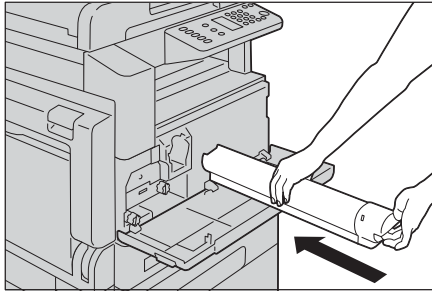

- 6** Close the front cover.




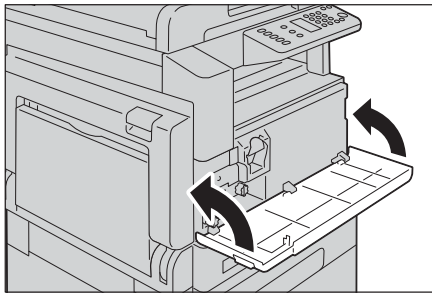




Note

- If the front cover is not completely closed, an error code will appear and the machine will remain paused.

Replacing the Drum Cartridge

The following error codes and icons are displayed in the status machine diagram when the drum cartridge is near the end of its service life.

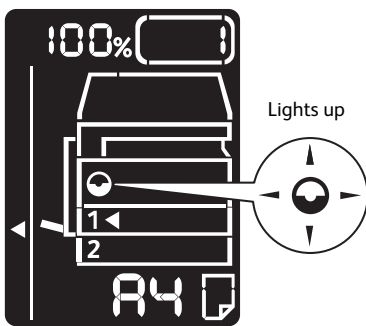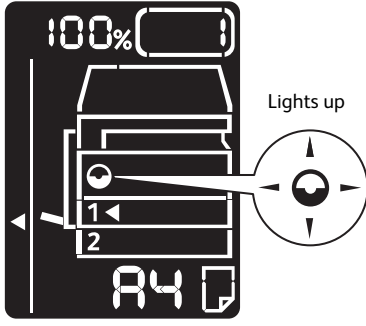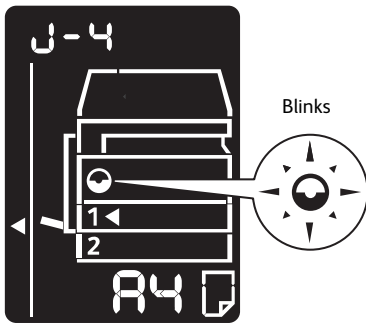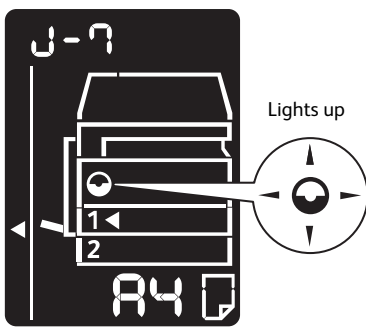Error Code	Status Machine Diagram	Required Action
-	 Lights up	When the drum cartridge icon is lit, the drum cartridge will need to be replaced after about 4,000 pages*. Have a replacement drum cartridge ready.
-	 Lights up	When the drum cartridge icon is lit (blinks for three seconds), the drum cartridge will need to be replaced after about 1,000 pages*. Have a replacement drum cartridge ready.
J-4	 Blinks	When the error code appears, the drum cartridge icon starts blinking, and the error icon is lit, the drum cartridge needs to be replaced. Replace the drum cartridge.
J-7	 Lights up	When the error code appears and the drum cartridge icon is lit, it is time of expiration for the warranty period of the image quality on the drum cartridge.

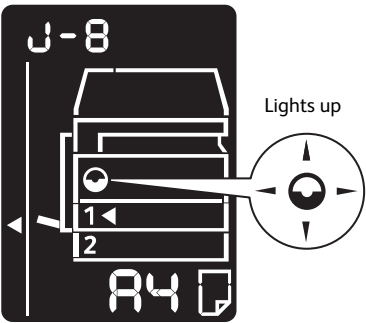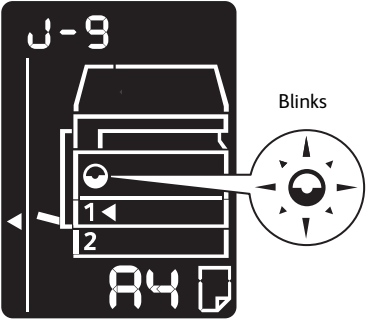Error Code	Status Machine Diagram	Required Action
J-8		When the error code appears and the drum cartridge icon is lit (blinks for three seconds), it is time of expiration for the warranty period of performance on the drum cartridge.
J-9		When the error code appears, the drum cartridge icon blinks, and the error indicator is lit, the machine detected a failure due to using a drum cartridge that is not supported. Replace the drum cartridge immediately.

* : The service life values shown are the total number of A4 (A4) pages that can be printed. Actual remaining service life will vary depending on the paper size and orientation, number of consecutive pages printed, and the machine's operating environment. Use the figures above only as a guideline.


Important

- The use of drum cartridges not recommended by Fuji Xerox may lower the machine's output quality or performance. Always use drum cartridges recommended by Fuji Xerox in the machine.


Note

- Do not expose drum cartridges to direct sunlight or strong indoor fluorescent lights. Do not touch or scratch the drum surface. Print quality may be affected.


- 1 Make sure that the machine is not operating, and open the front cover.

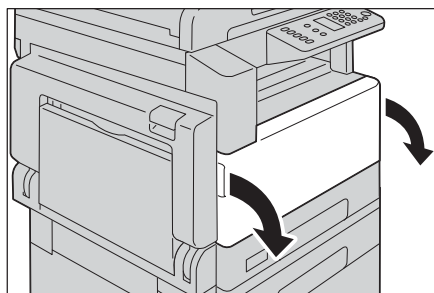


- 2 Open the Bypass tray (1), and then while lifting up the release lever (2), gently open the left cover (3).

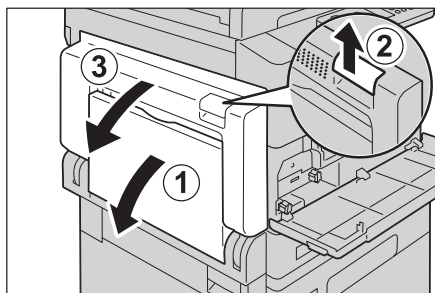

- 3 Loosen the two screws counterclockwise (1), and slowly slide out the drum cartridge (2).

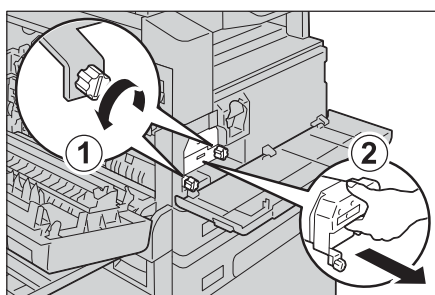

- 4 Hold the bottom of the drum cartridge as shown in the illustration, and gently pull out the drum cartridge from the machine.

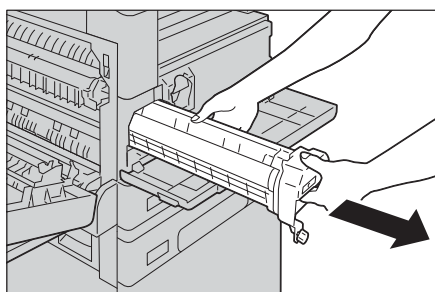


- 5 Take the new drum cartridge out of the box, and insert the used drum cartridge into the supplied plastic bag and place it into the box.


Important

- Do not place the new drum cartridge in an upright position.
- Return the used drum cartridge to your local Fuji Xerox representative.


- 6** Peel the protective sheet off the new drum cartridge.

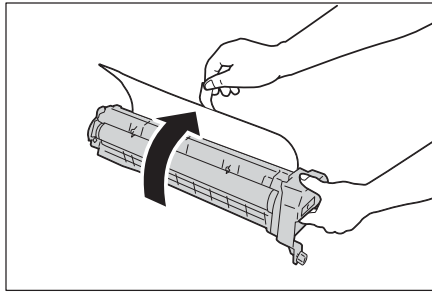


- 7** Insert the new drum cartridge.

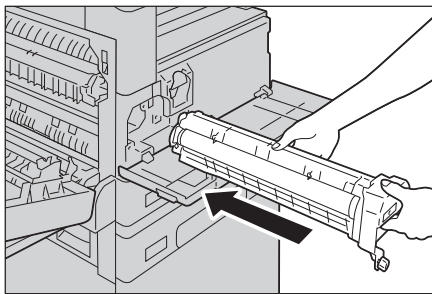


- 8** Tighten the two screws clockwise.

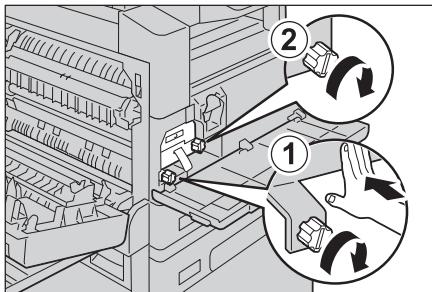


- 9** Peel off the drum cartridge's protective strip.

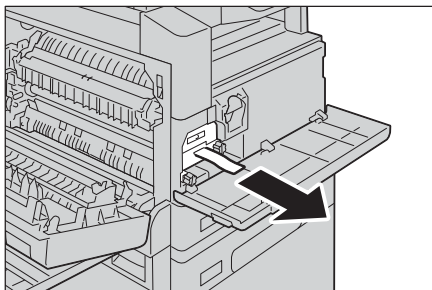

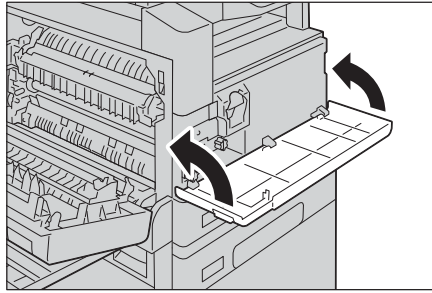10 Close the front cover.**Note**

- If the front cover is not completely closed, an error code will appear and the machine will remain paused.


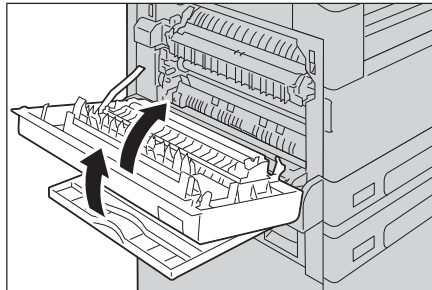
11 Gently close the left cover and the Bypass tray.**Note**

- If the left cover is not completely closed, an error code will appear and the machine will remain paused.



12 Enter the System Administration mode.**Reference**

- Refer to "Enter System Administration Mode" (P.122).


- 13** Enter the program number "8000", and press the <Start> button.

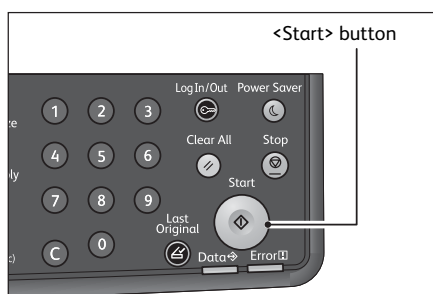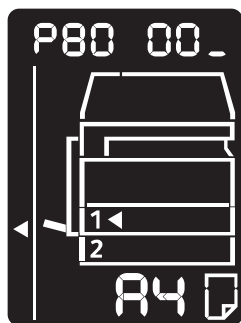

- 14** Enter the value [950807], and press the <Start> button.

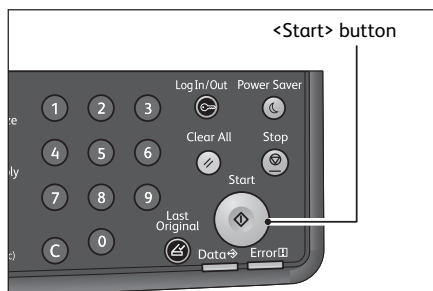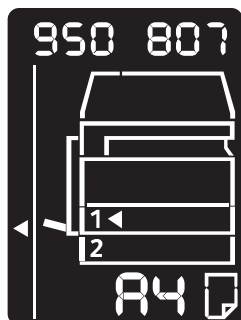

15 In the confirmation screen, press the <Start> button.

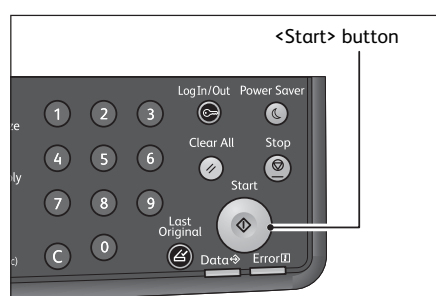

When the initializing is completed, the end screen will appear.



Cleaning the Machine

This section describes how to clean the machine such as the outer casing, the document cover, the document feeder, and the document glass.

⚠ WARNING

- **When cleaning this product, use the designated cleaning materials exclusive to it.**
- **Other cleaning materials may result in poor performance of the product. Never use aerosol cleaners to avoid catching fire and explosion.**

⚠ CAUTION

- **When cleaning this product, always switch off and unplug it. Access to a live machine interior may cause electric shock.**


Cleaning the Exterior

The following describes how to clean the exterior of the machine.

Important

- Do not use benzene, paint thinner, or other volatile liquids or spray insect repellent on the machine as they may discolor, deform, or crack covers.
- Cleaning the machine with an excessive amount of water may cause the machine to malfunction or damage documents during copying, scanning, or printing.

- 1 Wipe the exterior with a firmly wrung soft cloth moistened with water.

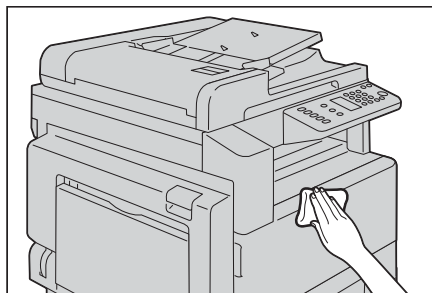

Important

- Do not use cleaning agents other than water or neutral detergent.

Note

- If you cannot remove the dirt easily, gently wipe the machine with a soft cloth moistened with a small amount of neutral detergent.

- 2 Wipe off any excess water with a soft cloth.

Cleaning the Document Cover and the Document Glass


If the document cover and document glass become soiled, smudges may appear on copies, or scanned documents and the machine may not properly detect document sizes.

To ensure clean copies at all times, clean the document cover and the document glass about once a month.

Important

- Do not use benzene, paint thinner, or other organic solvents. Doing so may damage paint or coating on plastic parts.
- Cleaning the machine with an excessive amount of water may cause the machine to malfunction or damage documents during copying or scanning.

- 1 Wipe the document cover with a soft cloth moistened with water to remove any dirt, and then wipe it with a soft, dry cloth.

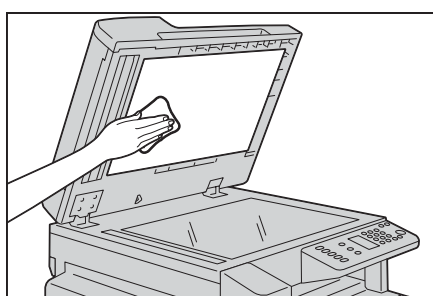


Important

- Do not use cleaning agents other than water or neutral detergent.

Note

- If you cannot remove dirt easily, gently wipe the document cover with a soft cloth moistened with a small amount of neutral detergent.

- 2 Wipe the document glass with a soft cloth moistened with water to remove any dirt, and then wipe it with a soft, dry cloth.

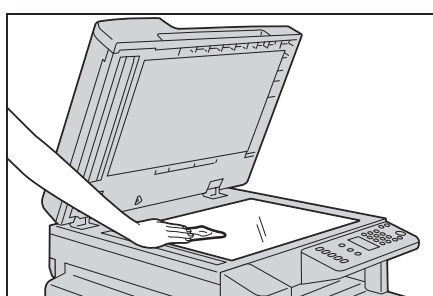

Important

- Do not use cleaning agents other than water or neutral detergent.

Note

- If you cannot remove dirt easily, gently wipe the document glass with a soft cloth moistened with a small amount of neutral detergent.

Cleaning the Document Presser and the Constant Velocity Transport Glass


If the document presser or constant velocity transport glass becomes soiled, smudges may appear on copies, or scanned documents and the machine may not properly detect document sizes.

To ensure clean copies at all times, clean the document presser and the constant velocity transport glass about once a month.

Important

- Do not use benzene, paint thinner, or other organic solvents. Doing so may damage paint or coating on plastic parts.
- Cleaning the machine with an excessive amount of water may cause the machine to malfunction or damage documents during copying or scanning.

- 1 Wipe the document presser with a soft cloth moistened with water to remove any dirt, and then wipe it with a soft, dry cloth.

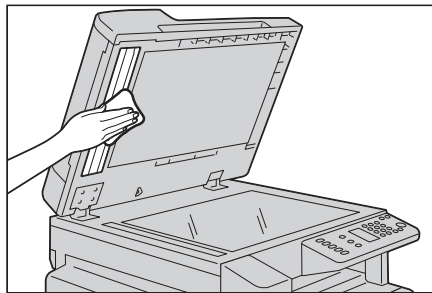


Important

- Do not press the film with an excessive force as it can be easily damaged.
- Do not use cleaning agents other than water or neutral detergent.

Note

- If you cannot remove dirt easily, gently wipe the document presser with a soft cloth moistened with a small amount of neutral detergent.

- 2 Wipe the constant velocity transport glass with a soft cloth moistened with water to remove any dirt, and then wipe it with a soft dry cloth.

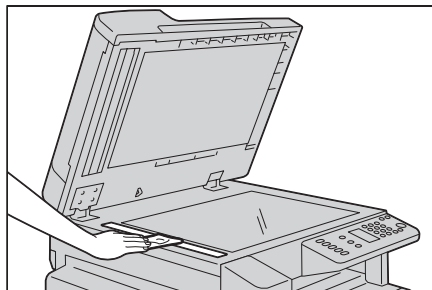

Important

- Do not use cleaning agents other than water or neutral detergent.

Note

- If you cannot remove dirt easily, gently wipe the constant velocity transport glass with a soft cloth moistened with a small amount of neutral detergent.

Cleaning Document Feeder Rollers


If the document feeder rollers become soiled, smudges may appear on copies, or scanned documents and paper jams may occur.

To ensure clean copies at all times, clean the document feeder rollers about once a month.

Important

- Do not use benzene, paint thinner, or other organic solvents. Doing so may damage paint or coating on plastic parts.
- Cleaning the machine with an excessive amount of water may cause the machine to malfunction or damage documents during copying or scanning.


- 1 Lift the latch of the document feeder cover until it is completely open.

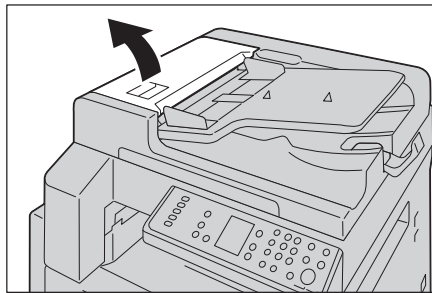

Note

- When you fully open the cover, it enters a fixed position. Open the cover gently.

- 2 While turning the rollers, wipe them with a soft cloth moistened with water.

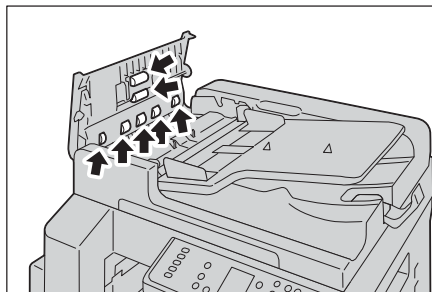

Important

- Do not use cleaning agents other than water or neutral detergent.
- Use a cloth firmly wrung to prevent water drops from falling into the machine. If water gets into the machine, it may cause the machine to malfunction.

Note

- If you cannot remove dirt easily, gently wipe the rollers with a soft cloth moistened with a small amount of neutral detergent.

- 3 Close the document feeder cover until it clicks into place, and confirm that there is no space between the near or far side of the cover and the document feeder.


11

Problem Solving

Troubleshooting

This section describes troubles that may occur with the machine and their solutions.

Follow the troubleshooting procedure below to solve the problems.

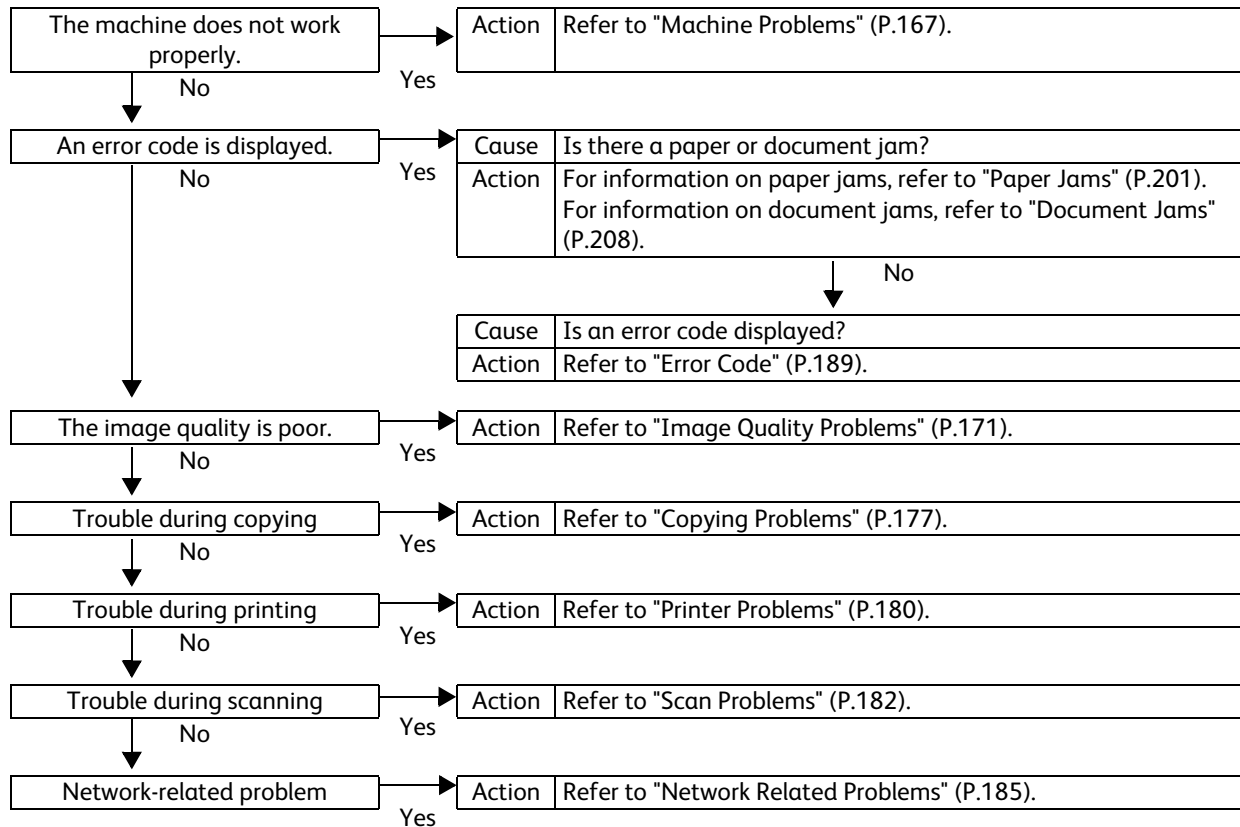

If you cannot resolve an error despite following the above procedure, contact our Customer Support Center.

Machine Problems

Check the machine's status again if you suspect a malfunction.

Symptom	Possible Cause	Remedy
The machine is not powered on.	Is the power switched ON?	Switch the power ON. Reference • Refer to "Power Source" (P.46).
	Is the power cord plugged into the power outlet?	Switch the power OFF and make sure the power plug is inserted securely. Then switch the power ON.
	Is the power cord disconnected from the machine?	
	Does the AC outlet supply power properly?	Connect another appliance to the outlet to verify the power supply.
The <Error> indicator is blinking.	The system of the machine or the components installed may have a trouble.	Switch the power OFF, then ON again. If the problem persists, contact our Customer Support Center.
The <Error> indicator is lit.	Is paper or document jammed?	Remove the jammed paper or document. Reference • Refer to "Paper Jams" (P.201). • Refer to "Document Jams" (P.208).
	Is the machine front cover or another cover open?	Follow the instructions in the displayed error code to take the required action. Reference • Refer to "Error Code" (P.189).
The display is dark.	Is the <Power Saver> button lit?	The machine is in the Power Saver mode. Press the control panel's <Power Saver> button to turn off the Power Saver mode.
Unable to print or copy.	Is there an error code displayed in the control panel's display?	Follow the instructions in the displayed error code to take the required action. Reference • Refer to "Error Code" (P.189).
	Is the power cord connected?	Switch the power OFF and make sure the power plug is inserted securely into the power outlet. Then switch the power ON.
The <Data> indicator does not light even though you instructed the machine to print.	Is the interface cable connected?	Check the interface cable connection. Reference • Refer to "Interface Cables" (P.20).
	Is the computer's environment correctly set?	Check the computer environment such as print driver settings.
	Is the required port status set to [Enabled]?	Check the status of the port to use, and then set the port status to [Enabled]. Reference • Refer to "Activating the Communication Port To Use" (P.25).

Symptom	Possible Cause	Remedy
Unable to print although a print job is instructed to Bypass tray.	Is the specified paper size loaded in the tray?	Follow the instructions in the displayed error code to place paper of the correct size, and then try again. Reference - Refer to "Error Code" (P.189). - Refer to "Loading Paper in Bypass Tray" (P.74).
The print quality is poor.	An image quality problem may have occurred.	Take the required action described in "Image Quality Problems". Reference Refer to "Image Quality Problems" (P.171).
Unable to insert or remove a tray.	Did you open a cover or switch the machine off during printing?	Do not forcibly insert or remove the tray. Switch off the power. In a few seconds, switch on the power. When the machine is ready to receive data, insert or remove the tray.
Unable to copy with the specified size.	Is the document glass or the document cover dirty?	Clean the document glass or document cover. Reference Refer to "Cleaning the Document Cover and the Document Glass" (P.161).
	Is the document a transparency or highly translucent medium?	Use the document glass to copy the document, placing a sheet of white paper on top of it.
	Is the document in the correct position?	Place the document correctly. Reference Refer to "Placing Document" (P.84).
	Is the document loaded correctly?	
	Are the document guides on the document feeder set in the correct positions?	Align the document guides correctly. Reference Refer to "Placing Document" (P.84).
	Is the document folded?	Smooth out the document and place it again correctly. Reference Refer to "Placing Document" (P.84).
Paper is often jammed or wrinkled.	Is paper loaded correctly in the tray?	Load paper correctly. Reference Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).
	Is the tray inserted correctly?	Correctly insert the tray by firmly pushing it until it stops. Reference Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).
	Is the paper damp?	Replace the paper with a new one.
	Is the paper curled?	Turn over the paper in the tray, or replace the paper with a new one.

Symptom	Possible Cause	Remedy
Paper is often jammed or wrinkled.	Are the paper and tray settings correct?	Correctly set the paper settings to correspond to the paper loaded. Reference • Refer to "Changing the Paper Size for Trays 1 and 2" (P.76).
	Are any torn pieces of paper remaining or is there a foreign object in the machine?	Open the cover of the machine or pull out the tray to remove any torn pieces or foreign objects. Reference • Refer to "Paper Jams" (P.201).
	Is non-standard paper loaded in the tray?	Replace with paper that meets machine specifications. Reference • Refer to "Paper Types" (P.68).
	Is paper exceeding the maximum fill line in the tray?	Load paper in the tray so that it does not exceed the maximum fill line. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).
	Are the paper guides set correctly?	Load paper correctly, and align the paper guides to the paper. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72). • Refer to "Loading Paper in Bypass Tray" (P.74).
	Is the paper finely cut out?	Some paper types may not be cut out finely. Load the paper after fanning it well.
A document is not fed onto document feeder.	Is the document small?	The minimum size of document that can be loaded into the document feeder is A5  .
An error code appears when paper is loaded in Bypass tray and the <Start> button is pressed	Check the positions of the paper guides of Bypass tray.	Adjust the paper guides to the correct positions. Reference • Refer to "Error Code" (P.189). • Refer to "Loading Paper in Bypass Tray" (P.74).
Documents often jam.	Are suitable types of documents being used?	Correctly load the documents suitable for the document feeder. Reference • Refer to "Placing Document" (P.84).
	Are you using the irregular shaped documents, business cards, transparencies, or thin documents?	
	Are there any sticky tags, paper clips or adhesive tape on the document?	Remove any sticky tags, paper clips, or adhesive tape from the document before copying.
	Are the document guides set in the correct positions?	Adjust the document guide positions. Reference • Refer to "Placing Document" (P.84).

Symptom	Possible Cause	Remedy
Documents often jam.	Is a piece of torn paper remaining in the document feeder?	Open the document feeder cover and check inside. Reference • Refer to "Document Jams" (P.208).
An edge of the document is folded.	Is the document curled?	Flatten the curl and load the document again.




Image Quality Problems


If the image quality of the printout is poor, use the table below to find our most likely cause, and take the required action.


If the image quality remains poor after taking the required action, contact our Customer Support Center.

Symptom	Possible Cause	Remedy
Copies are dirty.	Is the document glass or the document cover dirty?	Clean the document glass or the document cover. Reference • Refer to "Cleaning the Document Cover and the Document Glass" (P.161).
	Is the document a transparent type such as a transparency medium?	When copying highly translucent documents, dirt on the document cover shows up in the copy. Place a sheet of white paper over the document before copying.
	Is the document on colored or rough paper, or a blueprint?	Adjust the copy density or remove the background paper color before copying. Reference • Refer to "Lighten/Darken" (P.96).
	Is the document on glossy printing paper?	Glossy printing paper easily sticks to the document glass, and shadows can resemble dirt in the copy. Place a transparency or transparent film under the document before copying.
Black lines appear in copies.	Is the document feeder's constant velocity transport glass dirty?	Clean the constant velocity transport glass. Reference • Refer to "Cleaning the Document Presser and the Constant Velocity Transport Glass" (P.162).
Copies are too dark.	Is the copy density set to a high value?	Adjust the copy density. Reference • Refer to "Lighten/Darken" (P.96).
Copies are too light.	Is the document light?	
	Is the copy density set to a low value?	
The copy is slightly out of position.	Is the paper loaded in the correct position such as the paper's leading edge drifted away from the corners of the tray?	Load paper correctly, and align the paper guides to the paper. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72). • Refer to "Loading Paper in Bypass Tray" (P.74).
Copies are out of position or crooked.	Have you placed the document correctly?	Place the document correctly. Reference • Refer to "Placing Document" (P.84).

Symptom	Possible Cause	Remedy
Copies are out of position or crooked.	Is the paper loaded correctly in the tray?	Load the paper correctly. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).
	If using Bypass tray, have you loaded the paper so that the paper guides are in contact with it?	Load the paper correctly. Reference • Refer to "Loading Paper in Bypass Tray" (P.74).
	Are the document feeder's document guides misaligned?	Place the document correctly, moving the document guides into contact with the edges of the document. Reference • Refer to "Placing Document" (P.84).
	Have you mounted the tray securely?	Mount the tray by inserting it securely all the way into the machine. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).
Copies have missing parts in them.	Is the paper damp?	Damp paper creates missing parts or unclear copies. Replace it with paper from an unopened pack.
	Is the paper in the tray creased or wrinkled?	Remove any problematic sheets, or replace the paper with paper from an unopened pack.
	Are you copying a cut-and-pasted or creased document?	Cut-and-pasted or creased parts of the document may not be making proper contact with the document glass. Place a stack of white paper on top of the document to bring it into proper contact with the document glass.
Striped patterns appear in copies.	Are you attempting to make an enlarged copy of the document with a too large enlargement factor?	When making enlarged copies, some enlargement factors can create striped patterns. Adjust the copy enlargement factor. Reference • Refer to "Reduce/Enlarge" (P.97).
The printout is light (faded, unclear). 	The paper is damp.	Replace the paper with new paper.
	The drum cartridge has deteriorated or been damaged.	Replace the drum cartridge with a new one. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
	The toner cartridge has run out of toner.	Replace the toner cartridge with a new one. Reference • Refer to "Replacing the Toner Cartridge" (P.149).

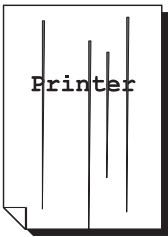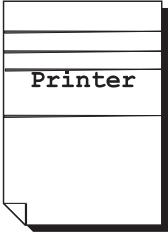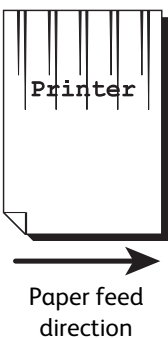Symptom	Possible Cause	Remedy
Black spots appear in copies. 	The drum cartridge has deteriorated or been damaged.	Replace the drum cartridge with a new one. Reference Refer to "Replacing the Drum Cartridge" (P.153).
Black or colored lines appear in printouts. 	The drum cartridge has deteriorated or been damaged.	Replace the drum cartridge with a new one. Reference Refer to "Replacing the Drum Cartridge" (P.153).
	The constant velocity transport glass is dirty.	Clean the constant velocity transport glass. Reference Refer to "Cleaning the Document Presser and the Constant Velocity Transport Glass" (P.162).
Dirt appears at regular intervals in the printout. 	The paper feed path is dirty. The drum cartridge has deteriorated or been damaged.	Print several sheets. Replace the drum cartridge with a new one. Reference Refer to "Replacing the Drum Cartridge" (P.153).

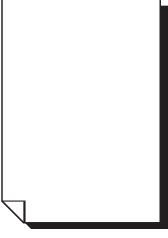Symptom	Possible Cause	Remedy
White spots appear in areas of black fill. 	The paper is unsuitable.	Load the correct type of paper.
	The drum cartridge has deteriorated or been damaged.	Replace the drum cartridge with a new one. Reference Refer to "Replacing the Drum Cartridge" (P.153).
The printout comes off on the fingers. The toner is not fused to the paper. The paper is contaminated with toner. 	The paper is damp.	Replace the paper with new paper.
	The paper is unsuitable.	Load the correct type of paper.
The entire printout is black. 	The drum cartridge has deteriorated or been damaged.	Replace the drum cartridge with a new one. Reference Refer to "Replacing the Drum Cartridge" (P.153).
	A high-voltage power supply failure may have occurred.	Contact our Customer Support Center.
The printout is blank. 	Multiple pages were fed through the machine at once (double feeding).	Riffle through the stack of paper thoroughly before loading it.
	The toner cartridge has run out of toner.	Replace the toner cartridge with a new one. Reference Refer to "Replacing the Toner Cartridge" (P.149).
	A power failure or high-voltage power supply failure may have occurred.	Contact our Customer Support Center.

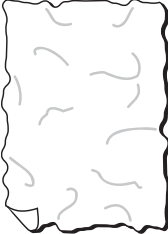Symptom	Possible Cause	Remedy
The printout contains white areas, or white or colored stripes. 	The paper is damp.	Replace the paper with new paper.
	The paper is unsuitable.	Load the correct type of paper.
The printout is faint overall. 	When using the Bypass tray to print, the paper size specified in the print driver does not match the type and size of the paper actually loaded.	Load paper of the correct type and size in the Bypass tray. Reference Refer to "Loading Paper in Bypass Tray" (P.74).
	Multiple pages were fed through the machine at once.	Riffle through the stack of paper thoroughly before loading it.
The paper is wrinkled. 	The paper is unsuitable.	Replace the paper with new paper.
	Paper has been added to the paper loaded.	
	The paper is damp.	
Text is blurry. 	The paper is unsuitable.	Replace the paper with new paper.
	Paper has been added to the paper loaded.	
	The paper is damp.	

Symptom	Possible Cause	Remedy
White or color patches appear vertically.	The drum cartridge has deteriorated or been damaged.	Replace the drum cartridge with a new one. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
	The toner cartridge has run out of toner.	Replace the toner cartridge with a new one. Reference • Refer to "Replacing the Toner Cartridge" (P.149).
The printout is slanted.	The paper cassette's paper guides are not aligned to the correct position.	Align the horizontal and vertical paper guides properly. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72). • Refer to "Loading Paper in Bypass Tray" (P.74).

Copying Problems

This section provides possible solutions to various problems you may encounter when using the Copy features.

Unable to Copy

The table below lists possible solutions when you are unable to copy.

Symptom	Possible Cause	Remedy
The document is not fed properly through the document feeder.	The document size is too small.	The minimum size of document that can be loaded on the document feeder is A5  .
	The document is not a supported type.	The document feeder does not support warped documents, business cards, transparencies, thin documents, or documents with attached stick-on notes, paper clips or tape. Reference • Refer to "Paper Types" (P.68).
	The document guides are misaligned.	Align the document guides properly to match the document size.
	There are document shreds stuck in the document feeder.	Open the document feeder cover, and remove the document shreds. Reference • Refer to "Document Jams" (P.208).
	You have placed a document containing pages of different sizes.	You cannot place documents with different size pages.

Copy Output Problems

The table below lists possible solutions to problems with the copy output.

Symptom	Possible Cause	Remedy
Copies are dirty.	The document cover or document glass is dirty.	Clean the document cover or document glass. Reference • Refer to "Cleaning the Document Cover and the Document Glass" (P.161).
	The document is a transparency or highly translucent medium.	When copying highly translucent documents, dirt on the document cover shows up in the copy. Place a sheet of white paper over the document before copying.
	The document is on colored or rough paper, or is a blueprint.	The paper's background color is being copied. Adjust the copy density or image quality, or specify background suppression before copying.

Symptom	Possible Cause	Remedy
Copies are dirty.	The document is printed on glossy printing paper.	Glossy printing paper easily sticks to the document glass, and shadows can resemble dirt in the copy. Place a transparency or transparent film under the document before copying.
Copies are too dark or too light.	The copy density adjustment is not right.	Adjust the copy density. Reference • Refer "Lighten/Darken" (P.96).
	The document is light.	Adjust the copy density. Reference • Refer "Lighten/Darken" (P.96).
	The image quality setting is not correct for the document.	If the copy output of black text is too light, set [Original Type] to [Text]. Reference • Refer to "Original Type" (P.95).
The copy is slightly out of position.	The paper loaded in the tray is misaligned.	Align the paper stack, and load it so that the leading edge of the paper is aligned with the front corners of the tray.
Copies have missing parts in them.	The paper is damp.	Damp paper creates missing parts or unclear copies. Replace it with paper from an unopened pack.
	The paper in the tray is creased or wrinkled.	Remove any problematic sheets, or replace the paper with paper from an unopened pack.
	The document has been cut-and-pasted, or is creased.	Cut-and-pasted or creased parts of the document may not be making proper contact with the document glass. Place a stack of white paper on top of the document to bring it into proper contact with the document glass.
	The document size is not correct.	Check the document size set correctly. Reference • Refer to "Original Size" (P.102).
	The paper size is not correct.	Check the paper size set correctly. Reference • Refer to "Setting the Paper Size" (P.78).
Striped patterns appear in copies.	The document's enlargement factor is too large.	When making enlarged copies, some enlargement factors can create striped patterns. Adjust the copy enlargement factor. Reference • Refer to "Reduce/Enlarge" (P.97).
Copies are out of position or crooked	You have not placed the document correctly.	Place the document correctly. Reference • Refer to "Placing Document" (P.84).
	The document feeder's document guides are misaligned.	Place the document correctly, moving the document guides into contact with the edges of the document.

Symptom	Possible Cause	Remedy
Copies are out of position or crooked	You have not mounted the tray securely.	Mount the tray by inserting it securely all the way into the machine.
	The paper guides of the bypass tray are misaligned.	Place the document correctly, moving the document guides into contact with the edges of the document.
	The document size is not correct.	Check the document size set correctly. Reference • Refer to "Original Size" (P.102).
	The paper size is not correct.	Check the paper size set correctly. Reference • Refer to "Setting the Paper Size" (P.78).
The copy is not the desired size.	The document cover or document glass is dirty.	Clean the document cover or document glass. Reference • Refer to "Cleaning the Document Cover and the Document Glass" (P.161).
	The document is a transparency or highly translucent medium.	Place a sheet of white paper over the document before copying.
	The document has shifted out of position.	Place the document correctly. Reference • Refer to "Placing Document" (P.84).
	The document feeder's document guides are misaligned.	Place the document correctly, moving the document guides into contact with the edges of the document. Reference • Refer to "Placing Document" (P.84).
	The document is creased.	Smooth out the document and place it again correctly. Reference • Refer to "Placing Document" (P.84).
	The document size setting is incorrect.	Check the document size set correctly. Reference • Refer to "Original Size" (P.102).
	The paper size setting is incorrect.	Check the paper size set correctly. Reference • Refer to "Setting the Paper Size" (P.78).
The edges of copies are cut off.	The document exceeds the printable area.	Adjust the reduction/enlargement factor to reduce the copy slightly.
	The document size is not correct.	Check the document size set correctly. Reference • Refer to "Original Size" (P.102).
	The paper size is not correct.	Check the paper size set correctly. Reference • Refer to "Setting the Paper Size" (P.78).

Printer Problems

This section provides possible solutions to various problems you may encounter when using the Print features.

Unable to Print

The table below lists possible solutions when you are unable to print.

Symptom	Possible Cause	Remedy
Data remains in the printer icon.	The machine's power is not ON.	Switch the machine's power ON. Reference • Refer to "Power Source" (P.46).
	The computer's cable is disconnected.	Connect the computer's cable.
	The machine's cable is disconnected.	Connect the machine's cable. Reference • Refer to "Interface Cables" (P.20).
	An error has occurred in the machine.	Check the error information, and take the required action.
	There is a problem in the network connecting the computer and machine.	Contact your Network Administrator.
	The port is not activated.	Activate the port to use. Reference • Refer to "Activating the Communication Port To Use" (P.25).
	The machine is connected to multiple computers.	Wait a while, and then try printing again.
Data has been sent to the machine.	No paper has been loaded.	Load paper.
	There is no paper of the specified size.	Load paper of the specified size. Reference • Refer to "Loading Paper" (P.72).
	An error has occurred in the machine.	Check the error information, and take the required action.
	Job execution has been paused.	Use the screen to select whether to cancel the job.

Print Output Problems

The table below lists possible solutions to print output problems.

Symptom	Possible Cause	Remedy
The printout is on the wrong paper size.	The wrong size paper was loaded in the specified tray.	Change the size of the paper loaded in the tray, or change the print options to use a tray containing the specified paper size.

Symptom	Possible Cause	Remedy
The image at the edges of the paper is missing.	The document exceeds the machine's printable area.	Enlarge the machine's print area, or reduce the document's print area.
The settings specified in the printing options are disabled.	The print driver of another model machine is in use.	Install the machine's print driver.
	An option has not been mounted.	Check the options mounted in the machine, and then reselect the items in [Items] under [Options] in the print driver.
The computer is not using the print driver supplied with the machine (is using another company's print driver).	Confirm whether the print driver on the computer is the one supplied with the machine.	On the computer, select the print driver supplied with the machine. If the print driver is not listed for selection, install the print driver and then select it. Operation is not guaranteed if another company's print driver is used.

Scan Problems

This section provides possible solutions to various problems you may encounter when using the Scan feature.

Unable to Scan

The table below lists possible solutions when you are unable to scan.

Symptom	Possible Cause	Remedy
The document is not fed properly through the document feeder.	The document size is too small.	The minimum size of document that can be loaded on the document feeder is A5  .
	The document is not a supported type.	The document feeder does not support warped documents, business cards, transparencies, thin documents, or documents with attached stick-on notes, paper clips or tape. Reference • Refer to "Paper Types" (P.68).
	The document guides are misaligned.	Align the document guides properly to match the document size. Reference • Refer to "Placing the Document" (P.108).
	There are document shreds stuck in the document feeder.	Open the document feeder cover, and remove the document shreds. Reference • Refer to "Document Jams" (P.208).

Unable to Load Scan Data to a Computer

The table below lists possible solutions when you are unable to load a scanned document to a computer.

Symptom	Possible Cause	Remedy
Unable to find the scanner.	The machine's power is not ON.	Switch the machine's power ON. Reference • Refer to "Power Source" (P.46).
	The computer's USB cable is disconnected.	Reconnect the computer's disconnected USB cable. Reference • Refer to "Interface Cables" (P.20).
	The machine's USB cable is disconnected.	Reconnect the machine's disconnected USB cable. Reference • Refer to "Interface Cables" (P.20).

Symptom	Possible Cause	Remedy
Unable to find the scanner.	The machine's IP address has changed.	Reset the setting on the Scanner Connection Tool. Reference • Refer to "Loading Scan Data Using the PC-Based Application" (P.113).
Unable to load data from the scanner due to a TWAIN communication error.	The scan driver is not installed.	Install the scan driver.
Operation stopped while loading data.	Is the file size too large?	Lower the resolution setting, and then try loading the data again.

Scan Image Quality Problems

This table below lists possible solutions to problems with the image quality of scan data.

Symptom	Possible Cause	Remedy
The scanned image is dirty.	The document cover or document glass is dirty.	Clean the document cover or document glass. Reference • Refer to "Cleaning the Document Cover and the Document Glass" (P.161).
	The document is a transparency or highly translucent medium.	When scanning highly translucent documents, dirt on the document cover shows up in the output. Place a sheet of white paper over the document before scanning.
	The document is on colored or rough paper, or is a blueprint.	Adjust the scan density or image quality before scanning.
	The scanned document is printed on glossy printing paper.	Glossy printing paper easily sticks to the document glass, and shadows can resemble dirt in the scan. Place a transparency or transparent film under the document before scanning.
The image is too dark or too light.	The scan density is not properly adjusted.	Adjust the scan density.
	The Original Type is unsuitable.	Select the proper Original Type for the document.
There are missing parts in the image.	The document has been cut-and-pasted, or is creased.	Cut-and-pasted or creased parts of the document may not be making proper contact with the document glass. Place a stack of white paper on top of the document to bring it into proper contact with the document glass.

Symptom	Possible Cause	Remedy
The image is not the desired size.	The document cover or document glass is dirty.	Clean the document cover or document glass. Reference • Refer to "Cleaning the Document Cover and the Document Glass" (P.161).
	The document is a transparency or highly translucent medium.	Place a sheet of white paper over the document before scanning.
	The document has shifted out of position.	Place the document correctly. Reference • Refer to "Placing the Document" (P.108).
	The document feeder's document guides are misaligned.	Place the document correctly, moving the document guides into contact with the edges of the document. Reference • Refer to "Placing the Document" (P.108).
	The document is creased.	Smooth out the document and place it again correctly.
The image is not in color.	[Color Mode] is set to [Black & White].	Select [Color].
The image is grainy.	A low resolution is set.	Set a higher resolution. Reference • Refer to "Placing the Document" (P.108).

Network Related Problems

This section provides possible solutions to network problems.

Problems Using TCP/IP (LPD/Port9100)

The table below lists possible causes for problems that occur when using TCP/IP (LPD/Port9100), the methods to check, and the required actions to take.

■ Unable to Print

Possible Cause	How to Check	Remedy
The correct IP address has not been set.	Have the Network Administrator check whether the machine's IP address is correct.	Set the correct IP address in the machine.
An unrecoverable failure occurred while processing a print job.	Check whether an error is displayed in the control panel's display.	Turn the machine's power OFF, wait until the display becomes blank, and then turn the power ON again.
The selected protocol is not compatible with the computer	Check the selected protocol.	Select a protocol compatible with the computer.

Problems Using CentreWare Internet Services

The table below lists possible solutions to problems you may encounter when using CentreWare Internet Services.

Symptom	Remedy
Unable to connect to CentreWare Internet Services.	Is the machine operating normally? Check whether the machine's power is ON.
	Is [Internet Services] running? Print a System Settings Report and check it.
	Has the Internet address been entered correctly? Check the Internet address again. If you still can't connect to CentreWare Internet Services, try connecting by entering the IP address.
	Are you using a proxy server? The machine cannot connect to some proxy servers. Do not use a proxy server. Set your web browser [Not using proxy server], or set the address you are using to [Not using proxy server].
The message "Please wait" is not going away.	Wait for a while. If the condition persists, press the [Refresh] button. If the condition still persists, check whether the machine is operating normally.

Symptom	Remedy
Nothing happens after pressing [Refresh].	Are you using a supported web browser? Reference See "Using CentreWare Internet Services" (P.27) to check whether your web browser is a supported type.
The frame on the right is not updated after selecting a menu item from the frame on the left.	
The screen display is fragmented.	Change your web browser's window size.
The display is not updated.	Press [Refresh].
Nothing happens after pressing [Apply].	Are the entered values correct? If you entered an out-of-range value, it is automatically changed to a value within range.
	Are you now using, or did you just use the machine's control panel? When the Auto Reset feature is set, settings made by CentreWare Internet Services are not applied until the preset amount of time has elapsed. Wait for a while.
	Is the machine in the Power Saver mode? Cancel the Power Saver mode, and then try again.
When you click [Apply], a message such as "The server has returned ineffective or unrecognizable response" or "No data" is displayed on the browser.	Is the password correct? The password you re-entered for confirmation does not match. Enter the password correctly.
	Restart the machine.

Internet/Intranet Connection Problems

The table below lists possible causes and solutions for problems that may occur when connecting to the Internet or an intranet.

Unable to Connect to the Internet or an Intranet

Possible Cause	Remedy
The IP address has not been set correctly.	Check the IP address setting. If the IP address has not been set correctly, specify a fixed IP address or use DHCP or Autonet to resolve the IP address.
The IP gateway address has not been set correctly.	Enter the IP gateway address correctly when connecting to a proxy server or web server via an IP gateway.
The subnet mask has not been set correctly.	Set the subnet mask correctly, to match the environment in use.
The DNS server address has not been set correctly.	Check the DNS server address.
The DNS server selected cannot resolve the address.	Select a DNS server that can resolve the address. - When connecting via the proxy server Set the IP address of a DNS server that can resolve the address of the proxy server. - When not connecting via the proxy server Set the IP address of a DNS server that can resolve the destination address.

Possible Cause	Remedy
The setting of the address that does not use a proxy server is incorrect.	Confirm whether only addresses that do not use a proxy server are set. Even if addresses not through a proxy server are specified using the FQDN, if a server is directly accessed using its IP address, the registered server is not excluded. Set the address not to use a proxy server. Likewise, even if you directly specify an address that does not use a proxy server, if a server is accessed with the FQDN, the registered server is not excluded. Set an IP address with the FQDN not to use a proxy server.
The connected server or proxy server is down.	Check whether the server or proxy server to connect to is working normally.
A network cable is disconnected or broken.	Check the network cable connections. The use of a spanning tree environment is recommended to create a network environment resistant to disconnections.
Unable to communicate due to the load on the server application.	Wait a while, and then access the server again.
An error has occurred but is not displayed on the control panel.	Errors that occur while executing background processes are not displayed on the control panel. Print the Job History Report to check the execution results.
Unable to connect due to an access restriction set in the proxy server, firewall or web server.	Types of access restrictions are listed below. Check the set access restriction. • Address (port) restriction • SSL restriction • User access (or access authority level) restriction • Content block • Scheme restriction (such as restriction on use of HTTP) • Forwarded data size restriction • Method restriction (such as restriction on use of POST) • HTTP header restriction (such as access permitted only on certain browsers) • Time restriction (such as use permitted only during certain time slots)

Unable to Connect to the Desired Web Server

Symptom	Remedy
The machine is not set to use a proxy server.	If the machine is not set to use a proxy server in an environment that uses one, you cannot connect to the desired web server. Set the machine to use a proxy server.
The machine is set to use a proxy server even though the environment does not use a proxy server.	Do not set the machine to use a proxy server in an environment not requiring the use of the proxy server (such as an intranet).
The proxy server address has not been set correctly.	If the machine is set to use a proxy server, you will not be able to connect to the desired web server if the proxy server address is not set correctly. Set the proxy server address correctly.
Unable to connect because the user name or password is incorrect when the proxy server requires authentication.	Set a user name and password in the machine that the proxy server will permit connection for.

IPv4 or IPv6 Connection Problems

The table below lists possible solutions to problems that may occur when connecting to an IPv4 or IPv6 address.

Unable to Connect to an IPv4 Address

Symptom	Remedy
When entering an IPv4 address, the machine does not work properly when 0 is added to the head of values in the address, such as 192.0.2.014.	Do not add 0 to the head of address values.

Unable to Connect to an IPv6 Address

Symptom	Remedy
Unable to access the machine by specifying a link-local address.	Append a scope ID to the link-local address. When using Internet Explorer on Windows OS to access the machine by specifying fe80::203:baff:fe48:9010, append the Windows Ethernet adapter local area connection number (such as 8) as the scope ID (for example, enter fe80::203:baff:fe48:9010 % 8).
Unable to communicate with a Windows operating system supporting IPv6.	Set fixed addresses in Windows operating systems supporting IPv6.
Searches for devices outside the router do not work properly.	When going outside the router in an SMB search, enter the recipient address directly. Multicasting is only supported within a local link (FF02::1).

Unable to Print in an IPv6 Environment

Symptom	Remedy
Unable to use a shared Windows printer from a Windows operating system supporting IPv6 in an IPv6 network environment without a DNS server.	Register the machine's computer name in the "hosts" file in the Windows operating system supporting IPv6. Example: Register the name in the file C:\Windows\system32\driver\etc\hosts.

Other IPv6 Problems


Symptom	Remedy
IPv6 addresses are not entered correctly in output Job Logs.	Use IPv4.

Error Code

This section describes error codes.

An error code (X-X) or (XXX-XXX) blinks if printing terminated abnormally because of an error, or a malfunction occurred in the machine.

- Display Example of Error Code

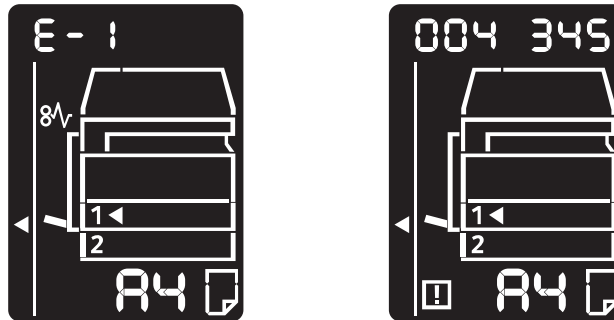

Refer to the error codes in the following table to resolve problems.

Important

- If an error code is displayed, any print data remaining in the machine and information stored in the machine's memory is not secured.

If an error code is displayed that is not listed in the following table, or if you cannot resolve an error despite following the instructions described in the table, contact our Customer Support Center. The contact number is printed on the label or card attached to the machine.

Note

- If a two-digit error code (X-X) appears, you can view the grouped six-digit error code (XXX-XXX) while holding down the <ID Card Copy> button.

■ Error code (X-X)

Error Code	Cause	Remedy
A-1	Documents jammed in the document feeder.	Remove the jammed document. Reference • Refer to "Document Jams" (P.208).
A-2	The size of documents that are loaded in the document feeder is not supported.	Place the document on the document glass. If a document is jammed, remove the jammed paper. Reference • Refer to "Document Jams" (P.208).
A-3	The document size cannot be detected.	Check the followings: - Only documents are placed on the document feeder. - The document guides are aligned to the document. - All documents are the same size. The mixed size documents cannot be loaded at the same time. If containing different sizes, use the document glass. To continue the processing job, reload the documents that have not been copied or scanned yet, and then press the <Start> button. Reference • Refer to "Placing Document" (P.84).
A-5	The document feeder cover is open.	Close the cover. Reference • Refer to "Machine Components" (P.42).
A-6	The document for the ID Card Copy feature cannot be detected.	Reset the document on the document glass, and then press the <Start> button. To cancel a job, press the <Stop> button. Reference • Refer to "ID Card Copy" (P.98).
C-0	Either there is no tray to auto-select or no appropriate size of paper loaded in the selected tray.	First, select the desired tray from the trays with lit indicators by pressing the <Paper Supply> button and pull out the selected tray. Next, load paper that is the same size and orientation displayed in the paper size display area of the status machine diagram, and then press the <Start> button. To cancel a job, press the <Stop> button. Reference • Refer to "Loading Paper" (P.67).
C-1	Out of paper in Tray 1.	Reload paper in Tray 1. If the tray is empty, load paper. Reference • Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).

Error Code	Cause	Remedy
C-2	Out of paper in Tray 2.	Reload paper in Tray 2. If the tray is empty, load paper. Reference Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72).
C-3	Out of paper in the Bypass tray.	Reload paper in the Bypass tray. If the tray is empty, load paper. Reference Refer to "Loading Paper in Bypass Tray" (P.74).
C-5	The size and orientation of paper loaded in Tray 1 do not match the settings of the machine.	Confirm that the size and orientation of paper loaded in Tray 1 match the settings displayed in the paper size display area, and reload paper adjusting with the paper guides. Reference - Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72). When changing the setting of paper size and orientation, cancel the job first by pressing the <Stop> button. Reference - Refer to "Changing the Paper Size for Trays 1 and 2" (P.76).
C-6	The size and orientation of paper loaded in Tray 2 do not match the settings specified in the machine.	Confirm that the size and orientation of paper loaded in Tray 2 match the settings displayed in the paper size display area, and reload paper adjusting with the paper guides. Reference - Refer to "Loading Paper in Trays 1 and 2 (Optional)" (P.72). When changing the setting of paper size and orientation, cancel the job first by pressing the <Stop> button. Reference - Refer to "Changing the Paper Size for Trays 1 and 2" (P.76).
C-7	The size and orientation of paper loaded in the Bypass tray do not match the settings of the machine.	Confirm that the size and orientation of paper loaded in the Bypass tray match the settings displayed in the paper size display area, and reload paper adjusting with the paper guides. Reference - Refer to "Loading Paper in Bypass Tray" (P.74). When changing the setting of paper size and orientation, cancel the job first by pressing the <Stop> button. Reference - Refer to "Changing the Paper Size for Trays 1 and 2" (P.76).

Error Code	Cause	Remedy
C - 9	When the Pages per Side feature or the Reduce/Enlarge feature is activated, the zoom ratio required for page layout is beyond the range of 25 - 400 %.	Press the <Stop> button. Change the zoom ratio to fit entirely in the paper, place all documents, and then press the <Start> button.
E - 1	Papers jammed in the machine's left cover.	Open the machine's left cover, and remove the jammed paper. Reference • Refer to "E-1: Paper Jam in Left Cover [A]" (P.202).
E - 2	Papers jammed in the machine's one tray module cover.	Open the machine's one tray module cover, and remove the jammed paper. Reference • Refer to "E-2: Paper Jam in One Tray Module Cover [B]" (P.204).
E - 3	Papers jammed in Tray 1 or the machine's left cover.	Remove the jammed paper. Reference • Refer to "Paper Jams" (P.201).
E - 4	Papers jammed in Tray 2 or the machine's one tray module cover.	Remove the jammed paper. Reference • Refer to "Paper Jams" (P.201).
E - 5	Papers jammed in the Bypass tray or the machine's left cover.	Remove the jammed paper. Reference • Refer to "Paper Jams" (P.201).
E - 6	The machine's left cover is open.	Close the cover. Reference • Refer to "Machine Components" (P.42).
E - 7	The machine's front cover is open.	Close the cover. Reference • Refer to "Machine Components" (P.42).
E - 8	The machine's one tray module cover is open.	Close the cover. Reference • Refer to "Machine Components" (P.42).
E - 9	The image will be cut off with the current setting.	Place the document in landscape orientation, and then press the <Start> button. Important • When using the document feeder, reload all documents in the document feeder without opening the document cover.
H - 0	Cooling inside the machine.	Automatically started. Do not open any cover of the machine.
J - 1	Out of toner.	Replace the toner cartridge. Reference • Refer to "Replacing the Toner Cartridge" (P.149).

Error Code	Cause	Remedy
J-4	The drum cartridge needs to be replaced.	Turn the power off, wait for 10 seconds after the display is turned off, and then turn the power on again. If the display cannot be turned off, replace the drum cartridge. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
J-5	The machine cannot detect the drum cartridge.	Remove the seal on the drum cartridge. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
J-6	The drum cartridge is defective.	Replace the drum cartridge. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
J-7	The warranty period of the image quality on the drum cartridge is expired.	It may affect the image quality. Replacing the drum cartridge is recommended. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
J-8	The warranty period of performance on the drum cartridge is expired.	It may damage the machine. Replace the drum cartridge. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
J-9	The drum cartridge is defective.	Replace the drum cartridge immediately. Otherwise, the machine will be damaged. Reference • Refer to "Replacing the Drum Cartridge" (P.153).
L-1	Reached the maximum copy limit while the limit is set. Also, the user who reached the copy job limit has logged in.	Press the <Stop> button, and contact your system administrator.
n-1	A job is canceled due to out of memory in reading.	Change the setting, and then try again.
n-2	A job is canceled.	Change the setting, and then try again.

Error Code	Cause and Remedy
003-500	[Cause] When using the Pages per Side function, the printout doesn't fit in the paper with the specified reduction/enlargement factor. [Remedy] Press the control panel's <Stop> button, and change the setting.
003-754	[Cause] An IPS error occurred. [Remedy] Press the control panel's <Stop> button, and cancel the job.
003-795	[Cause] When enlarging/reducing a scanned document to the paper size specified, the reduction/enlargement ratio exceeds the allowed range. [Remedy] Press the control panel's <Stop> button, and change the setting.

Error Code	Cause and Remedy
003-942	[Cause] A document with a non-standard size is set in the document feeder. [Remedy] Press the control panel's <Stop> button, and check the document.
003-957	[Cause] The document for the ID Card Copy feature cannot be detected. [Remedy] Reset the document on the document glass, and then press the <Start> button. To cancel a job, press the <Stop> button. Reference Refer to "ID Card Copy" (P.98).
003-963	[Cause] When [Auto] is set for [Paper Supply] for a copy job, the size of the scan document is larger than the paper size that can be copied. [Remedy] Press the control panel's <Stop> button, and change the setting.
003-972	[Cause] Exceeded the maximum pages that can be scanned during a copy/scan job. [Remedy] Press the control panel's <Stop> button, and cancel the job.
003-973	[Cause] The image size is too large when enlarging/reducing a scanned document that does not match the orientation of paper. [Remedy] Take one of the following measures. - Reduce the magnification with [Reduce/Enlarge]. - Change the orientation of paper or document.
004-345	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
005-122 005-123 005-125 005-131 005-132 005-134 005-135 005-136 005-139 005-145 005-147 005-196 005-197 005-198 005-199	[Cause] A document jam occurred in the document feeder. [Remedy] Remove the jammed document. Reference Refer to "Document Jams" (P.208).
005-210 005-275 005-280 005-288	[Cause] An error occurred in the document feeder. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
005-305	[Cause] The document feeder cover is open. [Remedy] Close the document feeder cover.
005-500	[Cause] An error occurred in the document feeder. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.

Error Code	Cause and Remedy
005-907 005-908 005-913	[Cause] A document jam occurred in the document feeder. [Remedy] Remove the jammed document. Reference Refer to "Document Jams" (P.208).
005-940	[Cause] An error occurred in the document feeder. [Remedy] Press the control panel's <Stop> button, and set the document on the document feeder again.
005-948	[Cause] A document size mismatch error occurred in the document feeder. [Remedy] Press the control panel's <Stop> button, and cancel the job.
007-271	[Cause] Tray 2 malfunction. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center. You can use a tray other than Tray 2.
010-311 010-312 010-320 010-327 010-379 010-392	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
010-602	[Cause] Temperature sensor of the machine detected abnormality. [Remedy] The machine will automatically recover when the machine cools down. Wait for a while, and try again.
016-372	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
016-500 016-501 016-502	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.
016-570	[Cause] A communication error occurred while scanning. [Remedy] Press the control panel's <Stop> button, and cancel the job.
016-571	[Cause] A communication error occurred during print processing. [Remedy] The machine will automatically recover. Wait a moment, and try again.
016-742 016-744	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.
016-749	[Cause] An error occurred. [Remedy] Press the control panel's <Stop> button, and cancel the job.
016-759	[Cause] A setting has been entered for the maximum number of permitted copies, and has been reached. Alternatively, a user who has reached their maximum number of copies logged in. [Remedy] Press the control panel's <Stop> button, and cancel the job.
016-776	[Cause] A job is canceled. [Remedy] Press the control panel's <Stop> button, and cancel the job.

Error Code	Cause and Remedy
016-799	[Cause] An invalid print parameter is included in the print data of the application, or the print data and the Print Setup settings may not match. [Remedy] Press the control panel's <Stop> button, and cancel the job.
016-981	[Cause] The EPC memory is full. [Remedy] Press the control panel's <Stop> button, and cancel the job.
024-365	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
024-910	[Cause] The paper size set for Tray 1 and the paper size specified for the job are not the same. [Remedy] Press the control panel's <Stop> button to cancel the job or change the paper to the specified paper size.
024-911	[Cause] The paper size set for Tray 2 and the paper size specified for the job are not the same. [Remedy] Press the control panel's <Stop> button to cancel the job or change the paper to the specified paper size.
024-915	[Cause] The paper size set for the Bypass tray and the paper size specified for the job are not the same. [Remedy] Press the control panel's <Stop> button to cancel the job or change the paper to the specified paper size.
024-950	[Cause] There is no paper in Tray 1 and another tray cannot be selected. [Remedy] Load more paper, or press the control panel's <Stop> button to cancel the job.
024-951	[Cause] There is no paper in Tray 2 and another tray cannot be selected. [Remedy] Load more paper, or press the control panel's <Stop> button to cancel the job.
024-954	[Cause] There is no paper in the Bypass tray and another tray cannot be selected. [Remedy] Load more paper, or press the control panel's <Stop> button to cancel the job.
024-958	[Cause] When the Bypass tray is selected for a print job, the specified paper does not match the type or size of the paper actually loaded. [Remedy] Press the control panel's <Stop> button to cancel the job or change the paper to the specified paper size.
024-959	[Cause] Tray 1 has not been inserted or the paper guides are in an unsupported position. [Remedy] Press the control panel's <Stop> button and insert Tray 1, or check the position of the paper guides.
024-960	[Cause] Tray 2 has not been inserted or the paper guides are in an unsupported position. [Remedy] Press the control panel's <Stop> button and insert Tray 2, or check the position of the paper guides.

Error Code	Cause and Remedy
024-965	[Cause] The paper specified for the job is not loaded into any of the trays. [Remedy] Load the specified paper and press the control panel's <Start> button, or press the control panel's <Stop> button to cancel the job.
024-966	[Cause] Attempted to select a tray automatically although all trays except the Tray 5 (bypass) are not selectable for auto selection. [Remedy] Press the control panel's <Stop> button, and try again.
026-737	[Cause] A network error occurred. [Remedy] Consult your network administrator whether the network or the server has any problem.
042-325	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
042-400	[Cause] The odor filter life is over. [Remedy] Contact our Customer Support Center.
042-608	[Cause] The VOC filter life is over. [Remedy] Contact our Customer Support Center.
042-614	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.
045-310	[Cause] An error occurred. [Remedy] Remove the jammed paper. Reference • Refer to "Paper Jams" (P.201).
045-313 061-321 061-325	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
062-277	[Cause] An error occurred in the document feeder. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
062-311	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
062-360 062-371 062-380 062-386 062-393 062-396	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.

Error Code	Cause and Remedy
071-105	[Cause] An error occurred in the left cover [A] or Tray 1. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
072-102	[Cause] An error occurred in the one tray module cover [B] or Tray 2. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
072-105	[Cause] A paper jam occurred in the one tray module cover [B]. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
072-210 072-215 072-461 072-470	[Cause] An error occurred in Tray 2 (One Tray Module). [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
075-135	[Cause] A paper jam occurred in the left cover [A] or the Bypass tray. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
077-101 077-103 077-104 077-106	[Cause] A paper jam occurred in the left cover [A]. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
077-129	[Cause] A paper jam occurred in the left cover [A]. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
077-212	[Cause] An error occurred in the One Tray Module. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
077-300	[Cause] The front cover is open. [Remedy] Close the front cover.
077-301	[Cause] The left cover [A] is open. [Remedy] Close the left cover [A].
077-309	[Cause] The one tray module cover [B] is open. [Remedy] Close the one tray module cover [B].
077-900 077-901	[Cause] A paper jam occurred in the left cover [A]. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).

Error Code	Cause and Remedy
077-904	[Cause] A paper jam occurred in the one tray module cover [B]. [Remedy] Remove the jammed paper. Reference Refer to "Paper Jams" (P.201).
091-402	[Cause] The drum cartridge needs to be replaced soon. [Remedy] Replace the drum cartridge. Reference Refer to "Replacing the Drum Cartridge" (P.153).
091-406	[Cause] The drum cartridge life is over. [Remedy] Replace the drum cartridge. Contact your local Fuji Xerox representative or sales representative. Reference Refer to "Replacing the Drum Cartridge" (P.153).
091-424	[Cause] The drum cartridge life is over. [Remedy] Replace the drum cartridge immediately. Contact your local Fuji Xerox representative or sales representative. Reference Refer to "Replacing the Drum Cartridge" (P.153).
091-430	[Cause] The drum cartridge life is over. [Remedy] Replace the drum cartridge. Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center. Reference Refer to "Replacing the Drum Cartridge" (P.153).
092-660	[Cause] A drum cartridge error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.
092-661	[Cause] Temperature SNR (in CRU) value is out of range. [Remedy] Exchange the Sensor unit, and switch off the machine power, make sure that the display is blank, and then switch on the machine power.
092-668	[Cause] ATC SNR (in drum cartridge) value is out of range. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.
092-910	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power.
093-312	[Cause] An error occurred with the toner cartridge. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.

Error Code	Cause and Remedy
093-912	[Cause] There is no more toner in the toner cartridge. [Remedy] Replace the toner cartridge. Reference Refer to "Replacing the Toner Cartridge" (P.149).
093-956	[Cause] The machine cannot detect the drum cartridge. [Remedy] Remove the seal on the drum cartridge.
093-959	[Cause] An error occurred with the drum cartridge. [Remedy] Replace the drum cartridge. Contact your local Fuji Xerox representative or sales representative. Reference Refer to "Replacing the Drum Cartridge" (P.153).
116-321 116-323	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
116-324	[Cause] An error occurred. [Remedy] The machine will automatically recover. Wait for a while, and try again.
116-334 116-343 116-377 116-390	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
116-747	[Cause] Unable to complete scanning due to the scanning area being too small. [Remedy] Decrease the value of the Edge Erase or reduce the zoom ratio.
117-326 117-332 123-314	[Cause] An error occurred. [Remedy] Switch off the machine power, make sure that the display is blank, and then switch on the machine power. If the same message is displayed again, contact our Customer Support Center.
124-311	[Cause] An error occurred in starting up. [Remedy] Contact our Customer Support Center.

Paper Jams

This section describes procedures to clear paper jams.

When paper jams in the machine, the machine stops, and a tray indicator and the Paper/Document Jam icon on the status machine diagram (mimic) light up. An error code also appears in the display, which indicates which procedures to take to remove the jammed paper.

Carefully remove the jammed paper without tearing it. Do not leave any pieces of paper in the machine.

Note

- If a paper jam error code remains in the display after you have removed the jammed paper, it is possible that paper is jammed in another location in the machine or that pieces of paper are still left in the machine. Check the status machine diagram (mimic) and the error code, and remove the jammed paper completely.
- After removing the jammed paper, a copy job resumes automatically.
- A print job resumes automatically from the page being printed just before the paper jam occurred.
- While running a copy job using the document feeder without collating the copied output (meaning that the document feeder feeds and scans the documents one sheet at a time), if a paper jam occurs on the machine, the machine resumes to make a copy of the already scanned document automatically after removing the jammed paper. However, as for the remaining document, you must press the <Start> button again to allow the document feeder to feed and scan the rest of the loaded documents.

WARNING

If you need to pull out a tray to remove paper jam, contact your local Fuji Xerox representative. Do not pull out a tray, otherwise it may cause injuries.

CAUTION

Do not attempt to remove a paper deeply jammed inside the product, particularly a paper wrapped around the fusing unit or the heat roller. Otherwise, it may cause injuries or burns. Switch off the product immediately and contact your local Fuji Xerox representative.

Important

- Pulling out a tray after a paper jam without checking where the jam is located may cause the paper to tear and leave shreds inside the machine. To prevent equipment failure, check the location of paper jams before attempting to clear them.
- The paper jam display will not go out if paper shreds remain in the machine.
- When clearing paper jams, leave the machine's power ON. Switching the power OFF erases information stored in the machine's memory.
- Do not touch parts inside the machine. Printing errors may result.


E-1: Paper Jam in Left Cover [A]

Follow the steps below to clear paper jams inside the machine's left cover.

Important


- When removing paper, there may be an image on the machine's Transfer Belt (the black film belt) inside the left cover. Do not touch the Transfer Belt. Image quality may be affected, or the Transfer Belt may be damaged and need replacement.
- "E-1" appears if you start copying or printing with the paper tray slightly open. Make sure that the paper tray is completely closed when loading paper or clearing a paper jam.

- 1 Open the Bypass tray (1), and then while lifting up the release lever (2) gently open the left cover (3).

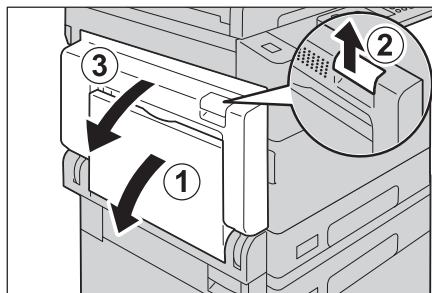


■ If the paper is jammed around the fusing unit

- 1) Pull down the latch.

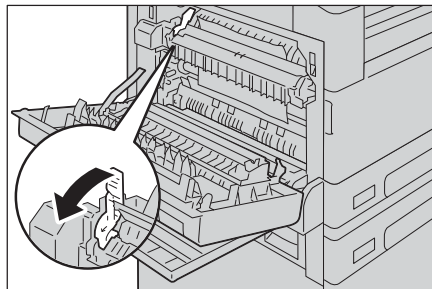

- 2) Remove the jammed paper.

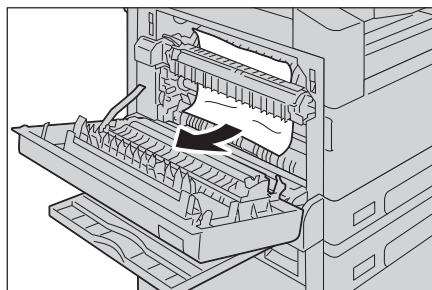


Note

- Do not leave any torn pieces of paper inside the machine.


- 3) Return the latch back to their position.

■ If the paper is jammed within the left cover


- 1) If the paper is jammed in the location as shown in the figure, remove the jammed paper pulling upwards.

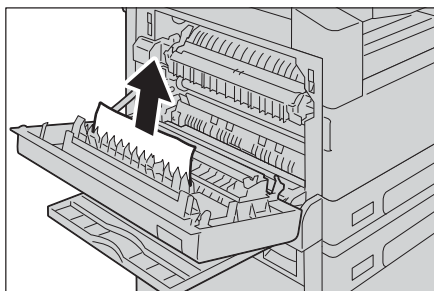

- 2) If the paper is jammed in the location as shown in the figure, remove the jammed paper pulling upwards.

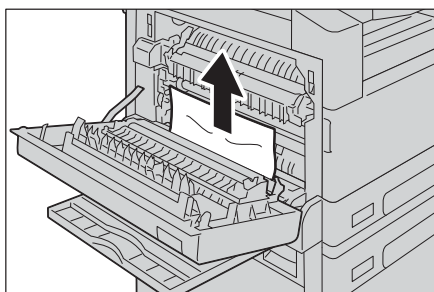


- 2 Push on the center of the left cover, close it slowly, and raise the Bypass tray.

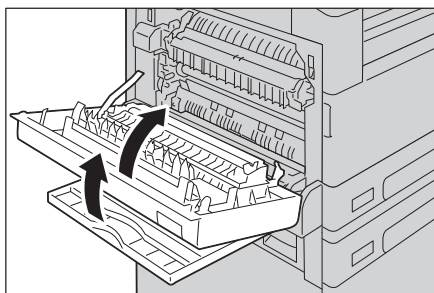


E-2: Paper Jam in One Tray Module Cover [B]

Follow the steps below to clear paper jams inside the machine's one tray module cover.

- 1 Pull the release lever, and slowly open the one tray module cover.

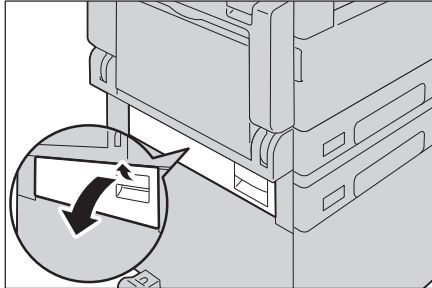


- 2 Remove the jammed paper.

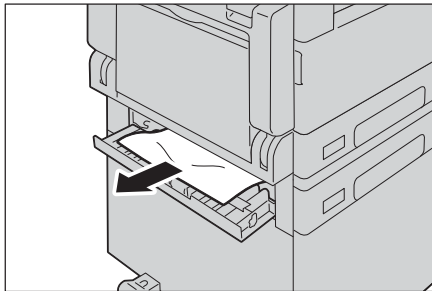

Note

- The paper may be jammed in the upper part where it is difficult to see. Check thoroughly for jammed paper.
- If the paper tears, check to make sure there are no remaining shreds in the machine.

- 3 Close the one tray module cover gently.

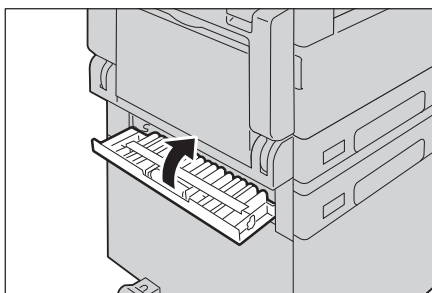


E-3: Paper Jams in Tray 1

Follow the steps below to clear paper jams in Tray 1.

Important

- "E-3" appears if you start copying or printing with the paper tray slightly open. Make sure that the paper tray is completely closed when loading paper or clearing a paper jam.


- 1 Remove the jammed paper by referring to "E-1: Paper Jam in Left Cover [A]" (P.202).
- 2 If the jammed paper cannot be removed, pull out the tray.

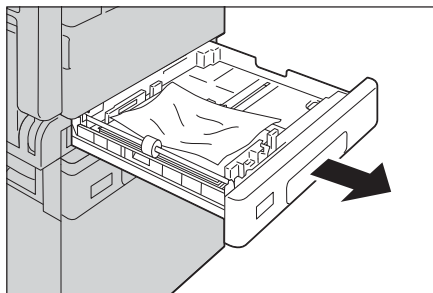

Important

- Pulling out a tray after a paper jam without checking where the jam is located may cause the paper to tear and leave shreds inside the machine. To prevent equipment failure, check the location of paper jams on the display before attempting to clear them.


- 3 Remove the jammed paper.

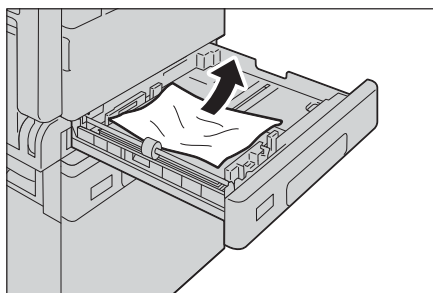

Note

- If the paper tears, check to make sure there are no remaining shreds in the machine.


- 4 Push the tray in gently until it stops.

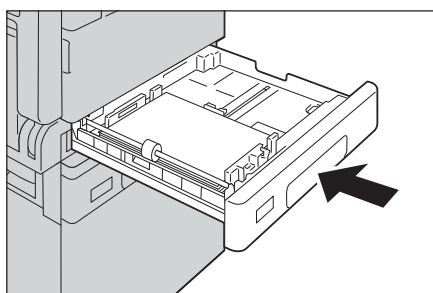

E-4: Paper Jams in Tray 2

Follow the steps below to clear paper jams in Tray 2.


- 1 Remove the jammed paper by referring to "E-2: Paper Jam in One Tray Module Cover [B]" (P.204).
- 2 If the jammed paper cannot be removed, pull out the tray.

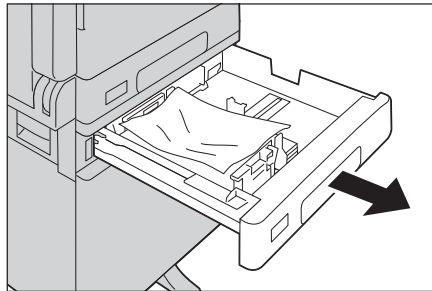

Important

- Pulling out a tray after a paper jam without checking where the jam is located may cause the paper to tear and leave shreds inside the machine. To prevent equipment failure, check the location of paper jams on the display before attempting to clear them.


- 3 Remove the jammed paper.

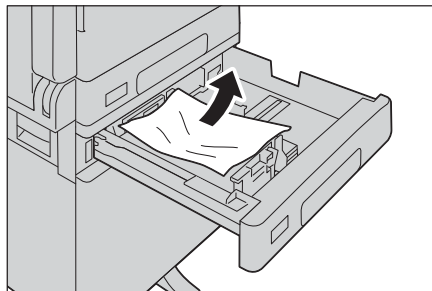

Note

- If the paper tears, check to make sure there are no remaining shreds in the machine.


- 4 Push the tray in gently until it stops.

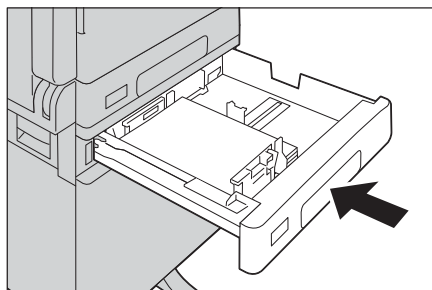

E-5: Paper Jams in Bypass Tray

Follow the steps below to clear a paper jam in the Bypass tray.

- 1 Inspect the inside (around the paper feed entrance) of the Bypass tray, and remove the jammed paper.

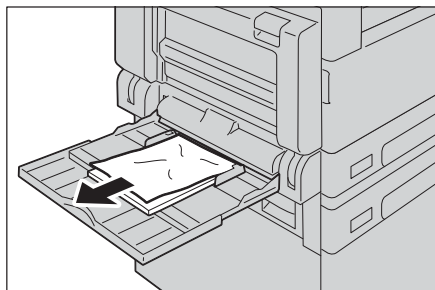


Important

- If multiple sheets of paper were loaded, remove all the paper while you clear the jam.

Note

- If the paper tears, check to make sure there are no remaining shreds in the machine.

- 2 If multiple sheets of paper were loaded, align the corners of the removed paper.
- 3 Insert the paper with the side to print on facing down, aligning it so that its leading edge lightly contacts the paper feed entrance.

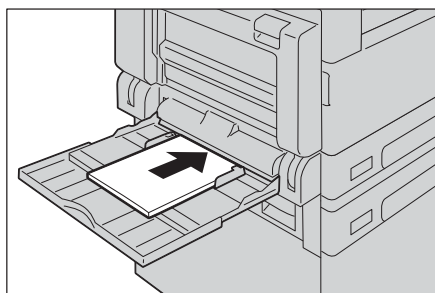

- 4 Remove the jammed paper by referring to "E-1: Paper Jam in Left Cover [A]" (P.202).

Document Jams

If a document jams in the document feeder, the machine stops, and an error code [A-1], [A-2], [A-3] appears in the display. A document indicator and the Paper/Document Jam icon on the status machine diagram (mimic) light up.


The following procedure describes how to remove the jammed documents in the document feeder.

Follow the steps below to remove the jammed document.

Note


- When the machine cannot detect the document size correctly, the document may be ejected before being scanned.

- 1 Pull up the front handle of the document feeder cover, and open the document feeder cover completely.

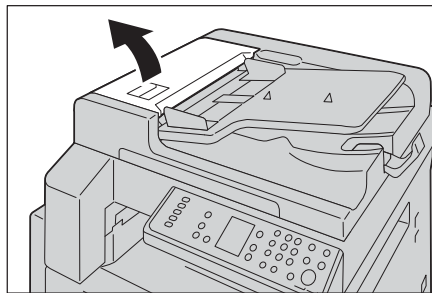
**Note**

- The cover will remain fixed in position when fully opened. Open the cover slowly.

- 2 If the document has not yet been fed into the feeder, remove it.

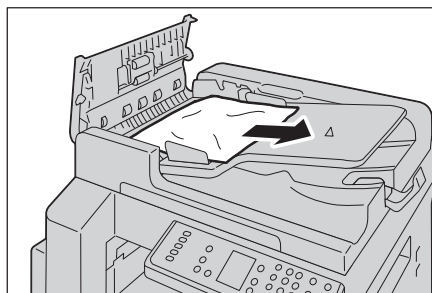


- 3** If you cannot find the document, turn the knob to feed the document to the top, then remove it.

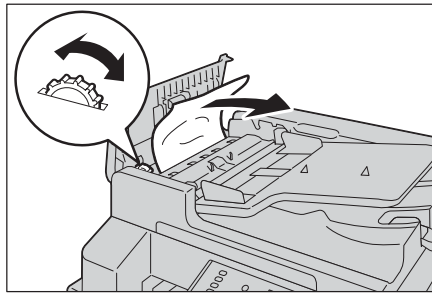


Important

- If the document has been fed into the feeder, do not pull it out directly. The document may tear.

- 4** If you cannot find the document, lift up the handle to open the inner cover.

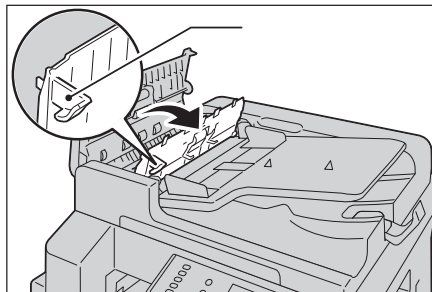

- 5** Turn the knob to feed the document to the top, then remove it.

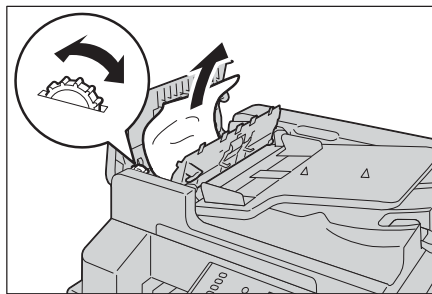


Note

- If the document has been fed into the feeder, do not pull it out directly. The document may tear.


- 6** Close the document feeder's inner cover.
- 7** Close the document feeder cover until it clicks into place, and confirm that there is no space between the near or far side of the cover and the document feeder.
- 8** If you cannot find the document, carefully lift up the document feeder. If you find the document, remove it, and then close the document feeder.

- 9** If you cannot find the document in Step 8, lift up the document feeder tray and remove the document.

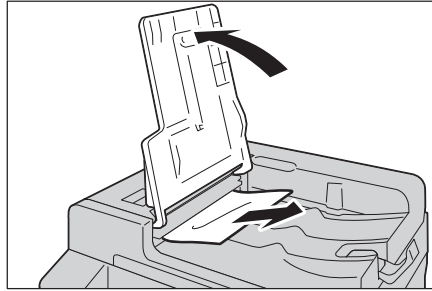

- 10** Carefully move the document feeder tray back into position.

- 11** Make sure that the document is not torn, wrinkled, or folded, and then reload the documents to complete the job.

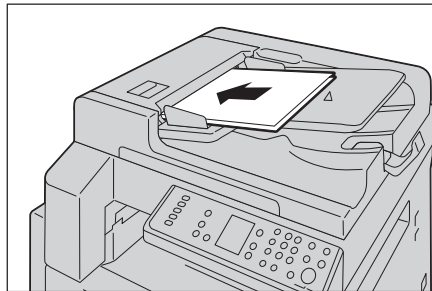

After removing the jammed document:

Copy:

Place the unscanned document again including the jammed pages.

Scan (TWAIN/WIA(Windows Image Acquisition)):

Place the unscanned document again including the jammed pages.

Note

- Torn, wrinkled or folded document pages can cause document jams, or damage. Always copy torn, wrinkled, or folded documents by placing them directly on the document glass.

12

Appendix

Specifications

This section lists the main specifications of the machine. Note that the specifications and the appearance of the product may change without prior notice.

Basic Functions/Copy Functions

■ Type

Desktop

■ Memory Capacity

256 MB

■ Scan Resolution

600 x 600 dpi

■ Print Resolution

600 x 600 dpi

■ Halftone/Printable Colors

256 shades of gray scales

■ Warm-up Time

18 seconds or less

■ Important

- At room temperature, 23°C

■ Original Size

The maximum size is 297 x 432 mm (A3, 11 x 17") for both sheets and books.

■ Paper Size

Maximum: A3, 11 x 17"

Minimum: A5

Image loss width: 5.5 mm max. at top, right, and left; 6.0 mm max. at bottom

■ Paper Weight

Tray 1 (standard): 60 - 90 gsm

Tray 2 (optional): 60 - 216 gsm

Bypass tray: 60 - 216 gsm

■ Important

- Use paper recommended by Fuji Xerox. Copying may not be performed correctly depending on the conditions.

■ First Copy Output Time

Document glass: 7.4 sec. or less (A4□)

Document feeder: 13 sec. or less (A4□)

■ Reduction/Enlargement

Size-for-Size 1:1 ± 0.8 %

Preset %: 50 %, 70 %, 100 %, 141 %, 200 %

Variable %: 25 % - 400 % (1 % increments)

■ Continuous Copy Speed

- Paper Trays 1 and 2: Continuous 1 Sided copy/same magnification

A4□, B5□, 8.5 x 11"□: 21 sheets/minute

A4, 8.5 x 11": 15 sheets/minute

B4: 12 sheets/minute

A3: 10 sheets/minute

- Paper Trays 1 and 2: Continuous 2 Sided copy/same magnification

A4□, B5□, 8.5 x 11"□: 13.1 pages/minute

A4, 8.5 x 11": 8.7 pages/minute

B4: 7.9 pages/minute

A3: 7.2 pages/minute

Important

- The speed may be reduced due to image quality adjustment.
- These are the speeds used for Bond, Plain, and Recycled paper. Print performance can be varied depending on the type of paper used.
- When using 80 gsm paper

■ Paper Tray Capacity

Standard: 350 sheets (Tray 1 (250 sheets) + Bypass tray (100 sheets))

Optional: 500 sheets (One Tray Module)

Maximum: 850 sheets (Standard + Optional)

Important

- When using 80 gsm paper

■ Continuous Copy

999 sheets

Important

- The machine may pause temporarily to perform image stabilization.

■ Output Tray Capacity

250 sheets (A4)

Important

- When using 80 gsm paper

■ Power Source

AC 220 - 240 V ±10 %, 6A, 50/60 Hz

■ Power Consumption

AC 220V: 1.3 kW or less

AC 240V: 1.4 kW or less

Low Power mode: 40.0 W or less

Sleep mode: 1.5 W or less

■ Dimensions

Width 595 x Depth 580 x Height 484 mm (with platen cover)

Width 595 x Depth 580 x Height 576 mm (with document feeder)

■ Weight

28 kg (with platen cover)

32 kg (with document feeder)

Important

- Toner cartridge is not included.

■ Space Requirement

Width 947 x Depth 580 mm (with platen cover)

Width 973 x Depth 580 mm (with document feeder and duplex output unit)

Important

- When the Bypass tray is fully extended.

Print Functions

■ Type

Built-in

■ Paper Size

Same as the Basic Functions/Copy Functions

■ Continuous Print Speed

Same as the Basic Functions/Copy Functions

Important

- The speed may be reduced due to image quality adjustment. Print speed may also drop depending on the document.

■ Print Resolution

Output resolution: 600 x 600 dpi

Data processing resolution: 600 x 600 dpi

■ PDL

Standard: FX HBPL (Host Based Print Language)

■ Protocol

Network connection: TCP/IP (lpd, Port9100)

■ Supported Operating System

Microsoft® Windows® 10
 Microsoft® Windows® 10 x64
 Microsoft® Windows® 8.1
 Microsoft® Windows® 8.1 x64
 Microsoft® Windows® 7
 Microsoft® Windows® 7 x64
 Microsoft® Windows Server® 2016 x64
 Microsoft® Windows Server® 2012 R2 x64
 Microsoft® Windows Server® 2012 x64
 Microsoft® Windows Server® 2008 R2 x64
 Microsoft® Windows Server® 2008
 Microsoft® Windows Server® 2008 x64

Important

- For information about the latest supported OS, refer to the Fuji Xerox Web site.

■ Interface

USB 2.0, Ethernet 100BASE-TX/10BASE-T

Scan Functions

■ Type

Color scanner

■ Original Size

Same as the Basic Functions/Copy Functions.

■ Scan Resolution

Monochrome: 600 x 600 dpi, 400 x 400 dpi,
 300 x 300 dpi, 200 x 200 dpi, 150 x 150 dpi
 Color: 400 x 400 dpi, 300 x 300 dpi, 200 x 200 dpi, 150 x 150 dpi

■ Scanning Speed

Monochrome: 23 sheets/minute (200 dpi)
 Color: 23 sheets/minute (200 dpi)
 Standard document is ISO IEC24734 (A4□, first sheet, scan driver (USB 2.0)).

Important

- The scanning speed varies depending on documents.

■ Interface

USB 2.0, Ethernet 100BASE-TX/10-BASE-T

■ Scan Driver

- Interface

USB 2.0 (TWAIN,WIA1.0/WIA2.0)*, TCP/IP (TWAIN,WIA1.0/WIA2.0)*

* : WIA stands for Windows Image Acquisition.

- Operating System

Microsoft® Windows® 10

Microsoft® Windows® 10 x64

Microsoft® Windows® 8.1

Microsoft® Windows® 8.1 x64

Microsoft® Windows® 7

Microsoft® Windows® 7 x64

Microsoft® Windows Server® 2016 x64

Microsoft® Windows Server® 2012 R2 x64

Microsoft® Windows Server® 2012 x64

Microsoft® Windows Server® 2008 R2 x64

Microsoft® Windows Server® 2008

Microsoft® Windows Server® 2008 x64

Important

- For information about the latest supported OS, refer to the Fuji Xerox Web site.
- File Format
Depends on the application software used for scanning.

Duplex Automatic Document Feeder

■ Type

Duplex automatic document feeder

■ Original Size/Paper Weight

- Maximum:A3, 11 x 17"
- Minimum:A5
- 38 - 128 gsm (2 Sided: 50 - 128 gsm)

■ Capacity

110 sheets

Important

- When using 80 gsm paper

■ Feeding Speed

23 sheets/min (A4□, 1 Sided)

■ Dimensions/Weight

Width 540 x Depth 498 x Height 95 mm, 5.8 kg

Duplex Output Unit

■ Paper Size

Maximum:A3, 11 x 17"

Minimum:A5

■ Paper Weight

60 - 110 gsm

Note

- Use the bypass tray when using 91 - 110 gsm paper.

One Tray Module (Optional)

■ Paper Size

Maximum: A3, 11 x 17"

Minimum: A5

■ Paper Weight

60 - 216 gsm

■ Capacity

500 sheets x 1 tray

Note


- When using 80 gsm paper.

■ Dimensions/Weight

Width 540 x Depth 540 x Height 111 mm, 11 kg

Printable Area

The standard printable area is the area of the page within 5.5 mm from the top, left and right edges, and 6.0 mm from the bottom edge of the paper. The actual printable area may vary depending on the printer (plotter) and control language.

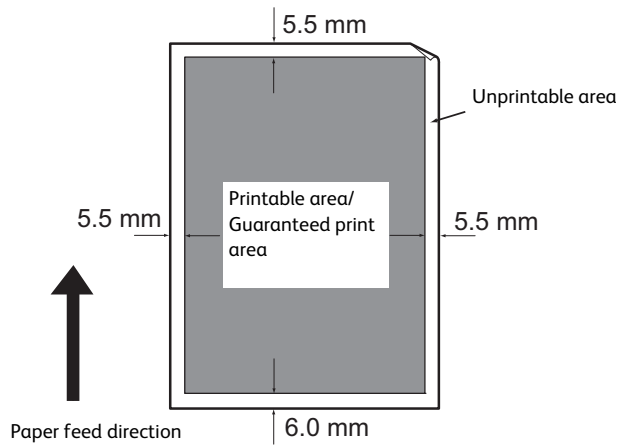

Optional Components

The following table shows the optional components available. To purchase these options, contact our Customer Support Center.

Product Name	Description
One Tray Module	A tray that can load 500 sheets of paper (when using 80 gsm paper).
Stand	A special stand used to mount the machine on the floor. Contains storage space for paper. This stand is available when the One Tray Module is installed.
Tray Lock	Locks the trays on the machine.
Localize Kit for TH	A control panel with Thai, an error code label, and the Basic Operation Guide in Thai.

Note

- The optional components are subject to change without notice.
- For the latest information, contact our Customer Support Center.

Notes and Restrictions

This section describes the notes and restrictions to observe when using the machine.

Notes and Restrictions on the Use of the Machine

■ Notes on Switching Off the Power

After the power is switched off, the machine performs internal power off processes for a while. After turning the power off, turning it on again before the screen display has disappeared will not start the machine right away. Before turning the power on, check that the operation screen display has disappeared.

■ Installing and Moving the Machine

- Contact our Customer Support Center or a Customer Engineer before moving the machine.
- Do not subject the machine to shocks while it is in operation.
- Take care not to get fingers caught when closing the document cover.
- Do not place any objects near the ventilation openings of the machine's exhaust fan.

■ Character Codes

In data transmission from a computer, if characters that the machine does not support are included in the file names, these characters may not be displayed correctly. Only ASCII characters can be used.

■ Hard Disk

You cannot install a hard disk into this product.

■ Printing Results

- Depending on the type of used media, rubber roller marks may be left behind along the scanning direction or toner wax components adhere to the paper during 2 Sided printing or when the output destination is changed during continuous printing.
- Droplets of water may adhere to the printing paper immediately after the power is turned on to the machine.
- Depending on the type of used media, pinch roller marks and minute scratches may form in the scanning direction.
- During two-side printing with coated paper, indentations may appear on the back side of the paper.
- Line unevenness may occur along the scanning direction in high-volume printing in low-humidity environments.
- Colors may appear muted on the underside of high-density images in printing in low-temperature, low-humidity environments.
- Small white spots may appear within images on the back side of the paper in printing in low-humidity environments.

■ Document Feeder

The machine does not detect a document placed in the document feeder during Sleep mode.

Notes and Restrictions on the Use of the Copy Feature

■ Copy Feature

The machine does not offer the Improves Fit function.

■ ID Card Copy

- While the ID Card Copy feature is enabled, you cannot select the automatic paper selection.
- When the original document is larger than the standard printable size, the output image is not printed in the center of a sheet and the edges of the scanned image may be lost.
- When the multiple mode is selected, the scanned images which overflow the first page are laid out and printed on the second page or later.
- The machine may not detect the document size correctly, when the original document is under the following conditions:
 - The original document is white and thin.
 - The original document is placed at an excessive angle.
 - The original document is placed out of the scanning area.

■ About Memory

If the machine's memory capacity becomes insufficient when copying using the collated feature, it outputs only the document data which is being scanned.

Notes and Restrictions on the Use of the Print Feature

Important

- You cannot operate the Scan and Print features simultaneously.
If you start a print job while a scan job is running, the scan job may fail.

■ Output of Long Feed Documents

The output of long feed documents is not supported.

■ Print Jobs while the Control Panel is being Operated

The processing print job or output speed may be reduced in the following cases:

- When the control panel is operated during print job execution

■ When the Print Results Differ from the Settings

As in the following cases, insufficient memory for the print page buffer may cause print result in not printing as specified.

- A 2 sided print job is printed on one side.
- A job was terminated (If data cannot be written to the print page buffer, the job including that page is terminated).

■ Job Counter Counts for 2 Sided Printing

When printing a 2 sided print job, depending on the application being used, blank sheets can be inserted automatically to adjust pages. These blank sheets inserted by the application also are counted by the meter.

■ Error Codes

The error "E-1" occurs besides a paper jam when the paper size setting is not correctly specified. Refer to the Error Code "C-7" and check paper size setting.

Refer to "Error Code" (P.189).

Notes and Restrictions on the Use of the Scan Feature

This section describes notes and restrictions to observe when using the Scan feature.

Important

- You cannot operate the Scan and Print features simultaneously.
If you start a print job while a scan job is running, the scan job may fail.

Reference

- For the notes and restrictions on the scan driver, see the "Readme" information on the Media (Software/Product Manual) that came with the machine.

■ Restriction on Scanning Capacity

The maximum scanning capacity for one page is 297 x 432 mm. For standard sizes, A3 or 11 x 17 inches.

■ Scan Driver

Using the TWAIN-compatible application with Windows Image Acquisition (WIA) driver may abort scanning.

In this case, scan with the TWAIN driver.

Notes and Restrictions when Connecting to Internet or Intranet

■ Internet/Intranet Connections

Depending on the web server, server application, proxy server, and firewall, you may not be able to connect to the Internet or intranet.

To connect to the Internet or intranet using a third party server application, proxy, or firewall, the following requirements must be met:

- RFC2617: HTTP Authentication: Basic and Digest Access Authentication must be satisfied. (only Basic authentication is supported, the other authentications are not supported)
- Supporting the GET/CONNECT/POST methods

Reference

- For information on the supported OS, refer to "Specifications" (P.212).

■ CentreWare Internet Services

- Depending on the browser settings, text for language selection may not be displayed correctly.
- The tabs may not be displayed correctly when there are several browsers to access to CentreWare Internet Services at the same time or condition of the network. In this case, refresh the display.

Notes and Restrictions when Operating from Computers

■ Supported OS

The supported OS may vary depending on the functions. For more information, refer to "Specifications" (P.212).

■ Important

- For information about the latest supported OS, refer to the Fuji Xerox Web site.

Notes and Restrictions for Using TCP/IP (LPD/Port9100)

This section describes notes and restrictions to observe when using TCP/IP (LPD/Port9100).

■ Configuration on the Machine

- IP addresses are managed for the entire system. Configure the settings only after consulting your network administrator.
- The setting of subnet mask and gateway addresses may be required depending on the network environment. Consult your network administrator and configure the required settings.

■ Configuration on the Computer

- IP addresses are managed for the entire system. Configure the settings only after consulting your network administrator.
- When setting the network such as IP addresses with a host used under the Network Information Service (NIS), consult your NIS administrator.

■ While Printing

When you change a computer's IP address or a computer name, queries and cancel processes submitted from the machine are no longer executed correctly. Thus, turn the machine off and on when there is no print data in the receiving buffer.

■ Note

- You can use the machine's control panel to cancel printing of the current print data in the machine's receiving buffer but not printing of pending print data.

Notes and Restrictions for IPv6 Connection

This section describes notes and restrictions to observe when using IPv6 connection.

■ Reference

- For information on the supported OS, refer to "Specifications" (P.212).
- IPv6-in-IPv4-tunneling in the machine itself is not supported.

■ Important

- If [IP Mode] is set to [IPv6], the IPv6-inIPv4-tunneling cannot be performed.
- Communication problems may occur when multiple routers exist on the same subnet.
- The network settings of the DNS server or a server used by the machine may cause performance problems when using services in a dual stack environment.
- Automatically set IPv6 addresses and IPv6 DNS server addresses may be unavailable addresses.

"Unavailable IPv6 addresses" mean site-local addresses (fec0::) or addresses with the IPv6 documentation prefix (2001:db8::/32).

- IPv4 DNS information can sometimes be used directly after machine startup if the IP operation mode is Dual Stack, DNS information has been set for both IPv4 and IPv6, and the machine is communicating with a device specified using an FQDN.
- The address displayed as the machine's IP address may change.
For example, in Dual Stack mode, either the IPv4 address or IPv6 address may not be displayed, or a different IPv6 address may be displayed.
- In the following cases, the machine may not be able to identify whether addresses are for the same device, so may not be able to execute status check (lpq) or cancel (lprm) commands for user print jobs executed by LPD.
 - When simultaneously operating IPv4 and IPv6 addresses with the same host
 - When simultaneously operating multiple IPv6 addresses with the same host
- IPv6 addresses may not be correctly recorded on job logs. Use an IPv4 network for correct logging.

Index

Numerics

2 Sided	91
2 Sided Print	118

A

Account Mode.....	57
Account Mode Settings.....	130
Activating the Communication Port To Use.....	25
[Add] button	36
[Add UDP IPv4 Address] button	32
[Add UDP IPv6 Address] button	33
Administrator's E-mail Address	30
Administrator's Login ID.....	37
Administrator's Passcode.....	37
[Advanced] button	32
Advanced Copy Settings.....	91
Annotation	118
[Apply] button.....	30, 31, 32, 33, 34, 35, 37, 38
Area - blinking	56
Authentication Failure Generic Traps	32
Auto Rotation.....	104
Automatic Tray Selection.....	72

B

Background Suppression	104
Booklet Layout.....	118

C

Canceling the Current Copy Job.....	90
Canceling the Current Scan Job	115
CentreWare Internet Services	222
Change Settings.....	123
[Change Settings] button.....	38
Changing Paper Size	76
Changing the Paper Size for Trays 1 and 2	76
Checking Consumables	144
Checking the Job Counter	143
Checking the status of consumables.....	149
Checking the Total Number of Impressions Copied	145
Cleaning Document Feeder Rollers.....	163

Cleaning the Document Cover and the Document Glass	161
Cleaning the Document Presser and the Constant Velocity Transport Glass.....	162
Cleaning the Exterior	160
Cleaning the Machine	160
Clock Settings.....	125
Collated	94
Comment.....	30
Configuration.....	35
Connection.....	35
Connection Time-Out	34, 35
Contact Person	30
Control Panel.....	50
Copy.....	83
Copying multiple sets of documents	89
Copying Problems	177

D

Darken +1	96
Darken +2	96
[Delete] button	33, 36
Delete/Edit selection checkbox	36
Description	30
Document Jams	208
Drum Cartridge.....	55
Drum Status.....	144
Duplexing (two-sided printing)	69

E

E-1: Paper Jam in Left Cover [A]	202
E-2: Paper Jam in One Tray Module Cover [B].....	204
E-3: Paper Jams in Tray 1	205
E-4: Paper Jams in Tray 2.....	206
E-5: Paper Jams in Bypass Tray	207
Edge Erase	104
[Edit] button	33, 36
[Edit SNMP v1/v2c Properties] button	32
Edit/Delete selection checkbox.....	36
End of Job Timeout	34
Entering Power Saver Mode	48
Error.....	56

Error Code.....	189
Error code (X-X)	190
Ethernet (Connectivity > Physical Connections).....	31
Exit System Administration Mode.....	124
Exiting Low Power mode	49
Exiting Power Saver Mode	49
Exiting Sleep mode.....	49

F

Feature Settings.....	136
Front, Left Side	42

G

General	31, 32, 33, 34, 35
---------------	--------------------

H

Handling consumables/periodic replacement parts	149
Host Name	31
HTTP (Connectivity > Protocols).....	34

I

Icons	55
ID Card Copy.....	98
Image Quality Problems.....	171
Installing Print & Scan Hub	40
Installing the Print Driver/Scan Driver	39
Interface Cables.....	20
Internet/Intranet Connection Problems	186
IP Filter Rule List	36
IP Filtering	35, 36
IP Filtering (Security)	35
IP Mode	31
IPv4	31
IPv4 Filtering.....	35
IPv4 or IPv6 Connection Problems.....	188
IPv6	31
IPv6 Filtering	36

K

Keep Alive Timeout.....	35
-------------------------	----

L

Lighten +1	96
Lighten +2	96
Lighten/Darken.....	96
Loading Paper.....	67, 72
Loading Paper in Bypass Tray	74
Loading Paper in Trays 1 and 2 (Optional).....	72
Loading Scan Data Using the PC-Based Application	113
Location.....	30
Logging in the Machine in Multiple Account Mode....	60
Logging in the Machine in Single Account Mode.....	57
Low Power Mode	48
LPD (Connectivity > Protocols).....	33
LPD Port Status	33

M

MAC Address	31
Machine Components	42
Machine Model	30
Machine Name.....	30
Machine Problems.....	167
Machine Status	54, 141
Magnification Table.....	98
Maintenance	147
Major Print Driver Functions	118
Managing the Copy Paper with Accounting	105
Maximum Connections per Port.....	34
Maximum Login Attempts.....	37
Meter 1	143
Meter 2	143
Meter 3	143
Multiple Account Mode.....	57

N

Name.....	38
Network Related Problems	185
Network Settings	132
Network TWAIN.....	35
Network TWAIN Port Status.....	35
No Account Mode	57
Normal.....	96

O

[OK]	144
On the computer.....	115, 120
On the machine.....	115, 120
Operating Systems and Web Browsers.....	27
Operations during Printing	120
Operations when using the Copy Feature.....	105
Optional Components	219
Original Size.....	102
Original Type.....	95
Overview of Copy Operations.....	84

P

Pages Per Sheet.....	118
Pages per Side	93
Paper / Document Jam	55
Paper Jams.....	201
Paper Supply.....	103
Paper Tray Empty.....	55
Paper Types	68
PDL Switching	34
Photo	95
Photo & Text	95
Physical Connection	31, 33, 34, 35
Port.....	30
Port Information.....	34
Port Number	34, 35
Port Settings (Connectivity).....	30
Port9100 (Connectivity > Protocols).....	34
Port9100 Port Status	34
Poster.....	118
Power Saver Mode	48
Power Saver Settings (General Setup)	30
Power Source.....	46
Print & Scan Hub (Windows?).....	40
Printable Area	218
Printer Problems.....	180
Printing	119
Printing Reports.....	142
Problem Solving	165
Problems Using CentreWare Internet Services	185
Product Overview.....	41
[Properties] Tab.....	30
Protocol	31

R

Rated Speed	31
Reduce/Enlarge	97
[Reorder]	144
[Replace Now].....	144
[Replace Soon].....	144
Replacing Consumables.....	148
Replacing the Drum Cartridge	153
Replacing the Toner Cartridge	149
Retype Administrator's Passcode	37
Right Side, Rear	43

S

Scan	107
Scan Driver	222
Scan Problems	182
Scanning Procedure.....	108
Selectable document sizes in the scan driver... ..	108, 110
Semi Standard Paper	69
Serial Number	30
Setting Items on CentreWare Internet Services.....	29
Setting the Machine's IP Address (IPv4).....	23
Setting the Machine's IP Address (IPv6).....	23
Setting the Machine's IP Address with the Support Tool	24
Setting the Network Environment.....	23
Setting the Options Configuration.....	63
Setting the Paper Size	78
Setting the Paper Type	80
Single Account Mode.....	57
Sleep Mode	48
SNMP Configuration (Connectivity > Protocols)	32
SNMP Port Status	32
Standard Paper	69
Starting CentreWare Internet Services	28
Starting Print & Scan Hub	40
Stopping the Print Job.....	120
Storing and Handling Paper.....	71
Support	38
[Support] Tab.....	38
Supported document sizes	84, 108, 110
Supported documents types (weights).....	84, 109
Supported Environments and Settings.....	27
Supported paper sizes:	68

Supported Paper Type.....	69
Switching the Power Off.....	47
Switching the Power On.....	46
System Administrator Program List.....	125
System Administrator Settings.....	37
System Administrator Settings (Security).....	37
System Settings.....	125

T

TCP Port Number.....	34
TCP/IP (Connectivity > Protocols).....	31
Text.....	95
Time to Low Power Mode.....	30
Time to Sleep Mode.....	30
Title.....	35
Toner Cartridge.....	55
Toner Saver.....	96
Toner Status.....	144
Tools.....	121
Troubleshooting.....	166

U

Unable to Connect to an IPv4 Address.....	188
---	-----

Unable to Connect to an IPv6 Address.....	188
Unable to Copy.....	177
Unable to Load Scan Data to a Computer.....	182
Unable to Print.....	180
Unable to Print in an IPv6 Environment.....	188
Unusable Paper.....	70
URL.....	38
Usable Paper.....	70
Usage Counters (General Setup).....	30
Use as a Local Printer.....	18
Use as a Network Printer.....	18
Using CentreWare Internet Services.....	27
Using Print & Scan Hub.....	40
Using the Ethernet Interface.....	21
Using the Scan Feature.....	112
Using the USB Interface.....	20

W

Watermark.....	118
Web Browser Settings.....	28
When using the Ethernet interface.....	63

DocuCentre S2110
User Guide

Fuji Xerox Co., Ltd.

ME7949E2-1 (Edition 1)

May 2017

Copyright © 2017 by Fuji Xerox Co., Ltd.