

ApeosPort-IV C7780
ApeosPort-IV C6680
ApeosPort-IV C5580
DocuCentre-IV C7780
DocuCentre-IV C6680
DocuCentre-IV C5580



User Guide

Microsoft, Windows, Windows NT, Windows Server, Windows Vista, Internet Explorer, and Microsoft Network are trademarks or registered trademarks of Microsoft Corporation in the U.S. and other countries.

NetWare is a registered trademark of Novell, Inc. in the United States and other countries.

Adobe, Acrobat, PostScript, and Adobe PostScript 3 are trademarks of Adobe Systems Incorporated.

Macintosh and Mac OS are registered trademarks of Apple Inc.

PCL, HP-GL, and HP-GL/2 are registered trademarks of Hewlett-Packard Corporation.

RSA and BSAFE are either registered trademarks or trademarks of RSA Security Inc. in the United States and/or other countries.

RSA Security Inc. All right reserved.

All product/brand names are trademarks or registered trademarks of the respective holders.

Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

For information on license, refer to About License.

In this manual, safety instructions are preceded by the symbol . Always read and follow the instructions before performing the required procedures.

The data saved in the hard disk of the machine may be lost if there is any problem in the hard disk. Fuji Xerox is not responsible for any direct and indirect damages arising from or caused by such data loss.

Fuji Xerox is not responsible for any breakdown of machines due to infection of computer virus or computer hacking.

Important

1. This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied or modified in whole or part, without the written consent of the publisher.
2. Parts of this manual are subject to change without prior notice.
3. We welcome any comments on ambiguities, errors, omissions, or missing pages.
4. Never attempt any procedure on the machine that is not specifically described in this manual. Unauthorized operation can cause faults or accidents. Fuji Xerox is not liable for any problems resulting from unauthorized operation of the equipment.

An export of this product is strictly controlled in accordance with Laws concerning Foreign Exchange and Foreign Trade of Japan and/or the export control regulations of the United States.

XEROX, the sphere of connectivity design, PDF Bridge, ContentsBridge, ApeosWare, and CentreWare are trademarks or registered trademarks of Xerox Corporation in the U.S. or Fuji Xerox Co., Ltd.

DocuWorks is a trademark of Fuji Xerox Co., Ltd.

Table of Contents

Table of Contents	3
1 Before Using the Machine	13
Preface	14
Types of Manuals	15
Using This Guide	16
Organization of This Guide	16
Conventions	17
Safety Notes	19
Electrical Safety	20
Machine Installation	21
Operational Safety	24
Consumable	27
Location of Warning and Caution Labels	29
Regulation	31
Radio Frequency Emissions (Class B)	31
Product Safety Certification (CB)	31
Regulatory Information for RFID	31
Environment	32
About License	33
RSA BSAFE	33
Heimdal	33
JPEG Code	33
Libcurl	34
FreeBSD	34
OpenLDAP	35
DES	37
AES	37
TIFF (libtiff)	37
ICC Profile (Little cms)	37
XPS (XML Paper Specification)	37
EDICT and COMPDIC	37
Cyrus SASL	38
Legal Notice	39
2 Product Overview	41
Machine Components	42
Power Source	50
Switching the Main Power On	50
Switching the Power On	50
Switching the Power Off	51
Switching the Main Power Off	52

Ground Fault Interrupter	53
Energy Saver Mode.....	54
Entering the Energy Saver Mode.....	55
Exiting the Energy Saver Mode	55
Control Panel.....	56
Middle Size Color UI	56
Large Size UI	60
Screens and Buttons Displayed.....	63
About the [Services Home] Screen	64
Entering Text	68
3 Copy	69
Copying Procedure.....	70
Step 1 Loading Documents	70
Step 2 Selecting Features	72
Step 3 Entering a Quantity.....	73
Step 4 Starting the Copy Job.....	74
Step 5 Confirming the Copy Job in Job Status	75
Operations during Copying.....	76
Stopping the Copy Job	76
Changing the Number of Copies	77
Interrupting the Copy Job	78
Simple Copy	79
Paper Supply (Selecting the Paper for Copying)	79
Reduce/Enlarge (Making Enlarged/Reduced Copies)	80
2 Sided Copying (Making 2 Sided Copies)	81
Black & White/Color (Selecting the Color for Copying).....	81
Lighten/Darken (Adjusting the Copy Density)	82
2 Pages per Side (Copying Two Pages onto One Sheet)	82
1 Staple.....	82
Copy	85
Reduce/Enlarge (Making Enlarged/Reduced Copies)	85
Paper Supply (Selecting the Paper for Copying)	89
Output Color (Selecting the Color for Copying)	92
2 Sided Copying (Making 2 Sided Copies)	96
Copy Output (Specifying Finishing Options).....	96
Pages per Side (Copying Multiple Pages onto One Sheet).....	97
Lighten/Darken (Adjusting the Copy Density)	97
Image Quality	98
Original Type (Selecting the Document Type).....	98
Image Options (Adjusting Copy Density/Sharpness/Saturation of Images)	99
Image Enhancement (Erasing the Background Color of Documents/Adjusting Contrast)	100
Color Effects (Selecting an Image Quality).....	101
Color Balance (Adjusting Color Balance)	102

Color Shift (Adjusting the Color Tone)	104
Gloss Level (Enhancing Gloss of the Document)	105
Layout Adjustment.....	106
2 Sided Copying (Making 2 Sided Copies)	106
Book Copying (Copying Facing Pages onto Separate Sheets)	108
2 Sided Book Copying (Making 2 Sided Copies of Facing Pages)	109
Original Size (Specifying the Scan Size for the Document).....	111
Mixed Size Originals (Scanning Different Size Documents Simultaneously).....	112
Edge Erase (Erasing Edges and Margin Shadows of the Document)	113
Image Shift (Adjusting the Image Position).....	114
Invert Image (Making Reversed Copies of Images).....	117
Original Orientation (Specifying the Orientation of Loaded Documents)	118
Image Rotation (Changing the Orientation of Images)	118
Output Format	120
2 Sided Copying (Making 2 Sided Copies)	120
Booklet Creation (Creating a Booklet)	121
Covers (Attaching Covers to Copies).....	124
Pages per Side (Copying Multiple Pages onto One Sheet)	125
Poster (Making Enlarged Copies Spread over Multiple Sheets).....	127
Repeat Image (Making Multiple Copies on One Sheet).....	128
Annotations (Adding a Comment/a Date/Page Numbers to Copies)	129
Watermark (Printing Control Numbers on the Background of Copies)	135
Secure Watermark (Managing Document Security)	138
Tab Margin Shift (Copying on Tab Stock Paper)	141
Face Up/Down Output (Specifying Face Up or Down)	142
Folding (Outputting Bi-Folded/Tri-Folded Paper).....	142
Preset Repeat Image (Making Multiple Copies on a Single Sheet)	143
Transparency Options (Inserting Blank Sheets between Transparencies).....	144
Copy Output (Specifying Finishing Options)	146
ID Card Copy (Copying Both Sides of an ID Card).....	153
Job Assembly	155
Build Job (Processing Documents Scanned with Different Settings as One Job)	155
Sample Job (Checking the Finished Output of the Copy).....	160
Combine Original Sets (Adding Originals)	161
Delete Outside/Delete Inside (Deleting Outside or Inside of the Selected Area)	162
Stored Programming (Calling a Stored Program for Build Job).....	164
4 Fax	165
Fax Procedure	166
Step 1 Loading Documents.....	166
Step 2 Selecting Features.....	168
Step 3 Specifying Destinations	169
Step 4 Starting the Fax Job	171
Step 5 Confirming the Fax Job in Job Status.....	172

Operations during Faxing	173
Stopping the Fax Job	173
Changing the Scan Settings	174
About Internet Fax	176
Internet Fax Features	176
Sending Internet Fax	178
Receiving Internet Fax	179
Useful Features	181
About IP Fax (SIP)	184
IP Fax (SIP) Features	185
Feature Comparison with Regular Fax	187
Sending IP Fax (SIP)	188
Receiving IP Fax (SIP)	188
About Server Fax	189
Sending Server Fax	189
Simple Fax	191
Specifying a Destination Using the Numeric Keypad	192
Speed Dialing (Specifying a Destination Using an Address Number)	192
Specifying a Destination Using a One Touch Button	193
Resolution (Specifying the Scanning Resolution)	194
Original Type (Selecting the Document Type)	195
2 Sided Scanning (Transmitting 2-sided Originals)	196
Fax/Internet Fax	197
Internet Fax/Fax/IP Fax (SIP) (Selecting Internet Fax/Fax)	197
+ Add (Sending Faxes to Multiple Recipients)	198
Specifying a Destination Using the Address Book	199
Speed Dialing (Specifying a Destination Using an Address Number)	200
Specifying a Destination Using a One Touch Button	201
Specifying a Destination Using the Keyboard Screen	202
Specifying a Destination Using the Redial Feature	203
Specifying a Line (Port)	203
Entering Specific Symbols	204
Removing/Confirming a Recipient	205
Lighten/Darken (Adjusting Fax Density)	205
2 Sided Scanning (Transmitting 2-sided Originals)	206
Original Type (Selecting the Document Type)	207
Resolution (Specifying the Scanning Resolution)	208
Layout Adjustment	209
2 Sided Scanning (Transmitting 2-sided Originals)	209
Original Size (Specifying the Scan Size for the Original)	209
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	210
Book Faxing (Scanning Facing Pages onto Separate Sheets)	211
Reduce/Enlarge (Specifying a Scan Ratio)	213
Fax/Internet Fax Options	214

Acknowledgement Report (Confirming Transmission Results).....	214
Starting Rate (Selecting a Communication Mode).....	216
Priority Send/Delay Start (Specifying Send Priority/Send Time).....	217
Transmission Header Text (Adding Sender Name and Phone Number to Faxes)	219
Cover Page (Transmitting Documents With a Cover Page)	220
Internet Fax Subject (Specifying the Internet Fax Subject).....	222
Internet Fax Message (Editing the Internet Fax Mail Contents).....	222
Recipient Print Sets (Printing Multiple Sets at the Remote Machine)	224
Pages per Side (Combining Multiple Pages into One Sheet)	224
Remote Folder (Using Remote Folder).....	225
F Code (Using F Code Transmission)	228
Internet Fax Profile (Specifying Internet Fax Profiles)	232
Encryption (Sending Internet Fax Encrypted by S/MIME)	233
Digital Signature (Sending Internet Fax with a Digital Signature by S/MIME)	234
More Options	235
Remote Polling (Retrieving Files from Remote Machines)	235
Store for Polling (Storing Files on the Machine that a Remote Machine can Retrieve)	238
On-hook (Confirming Remote Machine Response Prior to Transmission)	239
Broadcast	241
Broadcast Send (Transmitting to Multiple Recipients).....	241
Relay Broadcast (Transmitting Documents Through a Relay Station)	242
Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)	245
Receiving Faxes	249
Switching between Auto Receive and Manual Receive	250
Using Auto Receive	250
Using Manual Receive	251
Using Folder Receive.....	251
Facsimile Information Services.....	252
Using the Receiver.....	252
When Not Using a Receiver.....	253
5 Scan	255
Scanning Procedure	256
Step 1 Loading Documents.....	256
Step 2 Selecting the Features.....	258
Step 3 Starting the Scan Job	261
Step 4 Confirming the Scan Job in Job Status	262
Step 5 Saving the Scanned Data	263
Operations during Scanning	264
Stopping the Scan Job.....	264
Previewing the Scanned Images during a Scan Job	265
Changing Scan Settings	266

E-mail	267
Address Book (Specifying an E-mail Address)	268
New Recipient (Entering an Address)	270
Add Me (Adding the Sender's Address)	271
Recipient(s) (Editing a Recipient)	272
From (Setting the Sender's Address)	273
Subject (Setting the Subject)	274
Message (Entering the E-mail Body)	274
Preview (Previewing the Scanned Images during a Scan Job)	274
Color Scanning (Selecting an Output Color)	275
2 Sided Scanning (Scanning Both Sides of a Document)	276
Original Type (Selecting the Document Type)	277
File Format (Selecting a File Format for Output Data)	278
Network Scanning	287
Preview (Previewing the Scanned Images during a Scan Job)	288
Color Scanning (Selecting an Output Color)	288
2 Sided Scanning (Scanning Both Sides of a Document)	288
Original Type (Selecting the Document Type)	288
File Format (Selecting a File Format for Output Data)	288
Scan to PC	289
Transfer Protocol (Selecting a Transfer Protocol)	289
Address Book (Specifying a Destination PC Using the Address Book)	290
Browse (Specifying a Destination PC by Browsing Your Network)	291
Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)	292
Preview (Previewing the Scanned Images during a Scan Job)	294
Color Scanning (Selecting an Output Color)	294
2 Sided Scanning (Scanning Both Sides of a Document)	294
Original Type (Selecting the Document Type)	294
File Format (Selecting a File Format for Output Data)	294
Store to Folder	295
Color Scanning (Selecting an Output Color)	296
2 Sided Scanning (Scanning Both Sides of a Document)	296
Original Type (Selecting the Document Type)	296
Preview (Previewing the Scanned Images during a Scan Job)	296
Store to USB	297
Save in (Specifying a Storage Location in the USB Memory Device)	298
Details (Displaying the Details of a Storage Location in the USB Memory Device)	299
Preview (Previewing the Scanned Images during a Scan Job)	299
Color Scanning (Selecting an Output Color)	299
2 Sided Scanning (Scanning Both Sides of a Document)	300
Original Type (Selecting the Document Type)	300
File Format (Selecting a File Format for Output Data)	300
Store & Send Link	301

Scan To (Displaying the E-mail Address of the Authenticated User).....	302
From (Displaying the E-mail Address of the Authenticated User).....	302
Subject (Setting the Subject)	302
Message (Entering the E-mail Body)	302
Color Scanning (Selecting an Output Color).....	302
2 Sided Scanning (Scanning Both Sides of a Document).....	302
Original Type (Selecting the Document Type)	302
Preview (Previewing the Scanned Images during a Scan Job)	303
File Format (Selecting a File Format for Output Data).....	303
Advanced Settings.....	304
Photographs (Scanning a Color Photograph)	304
Image Options (Adjusting Scan Density and Image Sharpness).....	305
Image Enhancement (Erasing the Background Color of Documents/Adjusting Contrast)	306
Shadow Suppression (Suppressing the Document Background)	307
Color Space (Specifying the Color Space)	307
Layout Adjustment.....	309
Resolution (Specifying a Scanning Resolution)	310
2 Sided Scanning (Scanning Both Sides of a Document).....	310
Book Scanning (Scanning Facing Pages on Separate Sheets).....	310
Original Size (Specifying a Scan Size)	312
Mixed Size Originals (Scanning Different Size Documents Simultaneously).....	313
Edge Erase (Erasing Edges and Margin Shadows in the Document)	314
Reduce/Enlarge (Specifying a Scanning Ratio)	315
Original Orientation (Specifying the Orientation of the Loaded Documents)	316
E-mail Options/Filing Options	317
Quality/File Size (Specifying an Image Compression Ratio When Scanning)	318
Read Receipts (Specifying Read Receipts).....	318
Split Send (Sending in Sections)	319
File Name (Specifying a Name for the File to be Sent).....	320
Reply To (Specifying a Reply Address)	320
File Name Conflict (Setting the Action to be Taken for File Name Conflict)	321
File Name (Specifying a Name for the File to be Saved).....	321
Encryption (Sending E-mail Encrypted by S/MIME)	322
Digital Signature (Sending E-mail with a Digital Signature by S/MIME)	322
Login Name.....	323
Password	323
Meta Data	323
6 Send from Folder.....	325
Folder Operating Procedure	326
Step 1 Opening the [Send from Folder] Screen.....	326
Step 2 Selecting a Folder.....	326
Step 3 Checking/Selecting Files in a Folder	327
Step 4 Operating Files in a Folder	327

Selecting a Folder	328
Checking/Operating Files in a Folder	329
Checking File Details.....	331
Printing Files in a Folder.....	332
Configuring/Starting Job Flow	335
[Link Job Flow Sheet to Folder] Screen.....	337
Job Flow Restrictions.....	339
7 Job Flow Sheets	341
Job Flow Procedure	342
Step 1 Opening the [Job Flow Sheets] Screen.....	342
Step 2 Selecting a Job Flow Sheet.....	343
Step 3 Confirming/Changing the Job Flow Sheet.....	343
Step 4 Starting the Job Flow Sheet	343
Selecting/Changing a Job Flow Sheet	344
8 Stored Programming.....	347
Stored Programming Overview	348
Registering/Deleting/Renaming Stored Programs	349
Registering Stored Programs	350
Notes and Restrictions on Registering Stored Programs	351
Registering Stored Programs for Build Job	352
Deleting Stored Programs	352
Entering/Changing a Stored Program Name	353
Assigning/Changing Icons for Stored Programs.....	354
Calling a Stored Program	355
Calling a Stored Program for Build Job	356
9 Web Applications	357
Web Applications Overview.....	358
Accessing Web Applications	359
Accessing Using Buttons Registered on the [Services Home] Screen	360
10 Media Print (Text and Photos).....	361
Overview of Media Print	362
Supported Media and File Formats	363
Notes and Restrictions on Media Print	364
Media Print - Text.....	365
Selecting Files	365
[Select From List] Screen	366
Media Print - Photos.....	367
Selecting Files	367
[Select From List] Screen	368
Selecting the Printing Options	369

Media Print - Photos	369
Media Print - Text.....	370
Index Print.....	371
11 Job Status	373
Job Status Overview.....	374
Checking Current/Pending Jobs.....	375
Checking Completed Jobs.....	377
Printing and Deleting Stored Jobs	378
Secure Print	378
Sample Set	380
Delayed Print	382
Charge Print.....	384
Private Charge Print.....	386
Public Folder	388
Undelivered Faxes	390
Printing Pending Jobs.....	392
Handling Error Terminations.....	393
12 Computer Operations.....	395
Features Overview	396
Print	397
Print Features	397
Setup.....	399
Printing.....	399
E-mail Printing	400
Setup.....	400
Receiving E-Mail	400
Sending Fax	402
Registering Destinations	402
Importing Scanned Data.....	404
Importing to a TWAIN Compatible Application.....	404
Importing Using Stored File Manager 3	406
Importing Using CentreWare Internet Services	409
Importing Using EasyOperator.....	410
CentreWare Internet Services	412
13 Appendix	417
Glossary	418
Index.....	425

1 Before Using the Machine

This chapter describes how to use this guide, as well as safety notes and legal notice you should read before using the machine.

• Preface	14
• Types of Manuals	15
• Using This Guide	16
• Conventions	17
• Safety Notes	19
• Regulation.....	31
• Environment.....	32
• About License	33
• Legal Notice.....	39

Preface

Thank you for selecting the ApeosPort-IV C7780/C6680/C5580, DocuCentre-IV C7780/C6680/C5580 (hereafter referred to as “the machine”).

This guide describes how to operate the machine and the precautions you should follow during operation. To get the most out of the machine and to use it effectively, be sure to read this guide before use.

The guide assumes that you are familiar with a personal computer and that you are knowledgeable of computer networks. When you need additional information, refer to the manuals provided with the personal computer, operating system, and network products.

For information on how to configure your network environment, refer to the Administrator Guide. For information on optional components for the print feature, also refer to the guide provided with each optional component.

After reading this guide, be sure to keep it handy for quick reference. It will be useful in case you forget how to perform operations or if a problem occurs with the machine.

Warning:

This equipment will be inoperable when mains power fails.

Types of Manuals

The following guides are provided with the machine.

Accompanying Manuals

■ **User Guide (this guide) (Document CD-ROM)**

The guide describes all the necessary steps for copy, print, scan, and fax.

■ **Administrator Guide (Document CD-ROM)**

The guide is intended for system administrators, and describes how to configure network and how to solve problems that may occur with the machine. This guide also describes daily maintenance and the System Settings procedures.

■ **Quick Reference Guide (Booklet)**

The guide describes the basic operations of the machine, as well as daily management and maintenance.

■ **Manual (HTML)**

The manual describes installation and configuration procedures for print drivers and the printer environment. This manual is included in the Driver CD Kit.

■ **Print Driver Help**

The help describes print features and operations.

■ **CentreWare Internet Services Help**

The help describes how to change various settings of the machine using a web browser, and how to import scanned data to a computer from the machine.

Guides for Optional Components

Optional components are available for this machine. Some of them come with user guides. The guides for optional components describe all the necessary steps for using the optional components and installing the software.

Using This Guide

This guide is intended for first time users of the machine. It describes the basic operations for the Copy, Print, Scan, and Fax services.

Organization of This Guide

This guide consists of the following chapters:

■1 Before Using the Machine

Describes how to use this guide, as well as safety notes, legal notices, and other important information you should read before using the machine.

■2 Product Overview

Describes the basic information of the machine, such as the names of components, how to use the touch screen, how to switch the machine on and off, and how to exit the Energy Saver mode.

■3 Copy

Describes the basic operations and features for the Copy service.

■4 Fax

Describes the basic operations and features for the Fax services.

■5 Scan

Describes the basic operations and features for the Scan services.

■6 Send from Folder

Describes the basic operations and features to use folders.

■7 Job Flow Sheets

Describes the operations to use a job flow created on a remote system.

■8 Stored Programming

Describes the Stored Programming service that enables you to store customized job settings.

■9 Web Applications

Describes the operations to connect to web applications.

■10 Media Print - Text Media Print (Text and Photos)

Describes the basic operations and features of Media Print that allows you to print image data and document files.

■11 Job Status

Describes how to check job status and how to delete jobs.

■12 Computer Operations

Describes operations performed from a computer, such as printing documents, importing scanned files, using Direct Fax, and operating CentreWare Internet Services.

■13 Appendix

Contains a glossary of terms used in this guide.


Conventions

- The screen shots and illustrations used in this guide vary depending on the machine configuration and optional components installed. Some of the items in the screen shots may not be displayed or available depending on your machine configuration.
- The procedures in this guide may vary depending on the driver and utility software being used due to the upgrades.
- In this document, "Computer" refers to a personal computer or workstation.
- The following terms are used in this guide:
 - Important : Important information that you should read.
 - Note : Additional information on operations or features.
- The following symbols are used in this guide:
 - " " : • A cross-reference included in this guide.
 - [] : • Names of CD-ROM, features, and touch screen messages and input text.
 - [] : • Folders, files, applications, button or menu names displayed on the touch screen.
 - [] : • Names of menus, commands, windows, or dialog boxes displayed on the computer screen and their buttons and menu names.
 - < > button : Hardware buttons on the control panel.
 - < > key : Keys on the keyboard of the computer.
 - > : • Path to a certain item within a procedure on the control panel.
For example: When you see the procedure "select [Tools] > [Setup] > [Create Folder]", this means that you need to select [Tools], select [Setup], and then select [Create Folder].
 - > : • Path to a certain item within a procedure on a computer.
For example: When you see the procedure "to search for files and folders, click [Start] > [Search] > [For Files or Folders]", this means that you need to click [Start], click [Search], and then click [For Files or Folders] to search for files and folders.
 - Cross-reference
For example: "Refer to "5 Tools" > "Common Service Settings" > "Audio Tones" in the Administrator Guide."
The sentence above means that you need to refer to the section "Audio Tones", which can be found under "Common Service Settings" in chapter 5 Tools of the Administrator Guide.

- Orientation of documents or paper is described in this guide as follows:

☐, ☐, Long Edge Feed (LEF): Loading documents or paper in portrait orientation when you view the machine from the front.

☐, ☐, Short Edge Feed (SEF): Loading documents or paper in landscape orientation when you view the machine from the front.

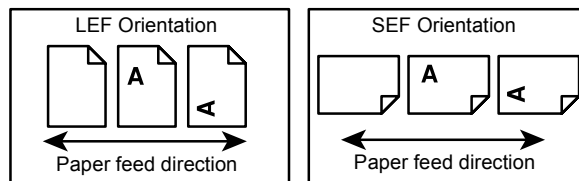

Safety Notes

Before using this product, read "Safety Notes" carefully for safety use.
This product and recommended supplies have been tested and found to comply with strict safety requirements including safety agency approvals and compliance with environmental standards. Follow the following instructions for safety use.

**WARNING**
Any unauthorized alteration including an addition of new functions or connection to external devices may not be covered by the product warranty. Contact your local Fuji Xerox representative for more information.

Follow all warning instructions marked on this product. The warning marks stand for the followings:

 DANGER	Used for item that if not followed strictly, can lead death or severe or fatal injuries and the possibility to do it is comparatively high.
 WARNING	Used for items that if not followed strictly, can lead to severe or fatal injuries.
 CAUTION	Used for items that if not followed strictly, can cause injuries to user or damages to machine.
 : A symbol for items to pay attention to when handling machine. Follow instructions carefully to use machine safely.  Caution  Flammable  Explodable  Electric shock  Heated surface  Moving object  Pinched fingers	
 : A symbol for prohibited items. Follow instructions carefully to avoid any dangerous acts.  Prohibited  No fire  Do not touch  Do not use in bathroom  Do not tear down  Keep away from wet  Never touch with wet hand	
 : A symbol for items that must be performed. Follow instructions carefully to carry out these essential tasks.  Instructions  Unplug  Ground/Earth	

Electrical Safety

⚠ WARNING

This product shall be operated by the power source as indicated on the product's data plate. Consult your local power company to check if your power source meets the requirements.



WARNING: Connect this product to a protective earth circuit.

This product is supplied with a plug that has a protective earth pin. The plug fits only into an earthed electrical outlet. This is a safety feature. If the plug doesn't fit to the outlet, contact an electrician to replace the outlet to avoid risk of electric shock. Never use an earthed adapter plug to connect the product to the electrical outlet that has no earth connection terminal.

Improper connection of a grounding conductor may cause electric shock.



Plug the power cord directly into a grounded electrical outlet. To prevent overheating and a fire accident, do not use an extension cord, a multi-plug adaptor or a multiple connector. Consult your local Fuji Xerox representative to check if an outlet is grounded.



Connect this product to a branch circuit or an outlet that has larger capacity than the rated ampere and voltage of this product. See the data plate on the rear panel of this product for its rated ampere and voltage.



Never touch the power cord with wet hands. It may cause electric shock.



Do not place an object on the power cord.



Always keep the plug connection free of dust. The dusty and damp environment may bring about minute electric current in a connector. It may generate heat and eventually cause a fire accident.



To avoid the risk of electric shock and a fire accident, only use the power cord supplied with this product or the ones designated by Fuji Xerox.

The power cord is exclusive use for this product. Do not use it for any other product.

Do not damage or alter the power cord. Damage and alteration may generate heat and eventually cause electric shock or a fire accident.

If the power cord is damaged or insulated wires are exposed, contact your local Fuji Xerox representative for its replacement. Do not use a damaged or uninsulated cord to avoid the risk of electric shock and a fire accident.

⚠ CAUTION



When cleaning this product, always switch off the power and then the main power inside the body front cover, and unplug the product. Access to a live machine interior may cause electric shock.



Do not unplug or re-plug this product with the main power switch and the power switch on. Plugging and unplugging a live connector may deform the plug and generate heat, and eventually cause a fire accident.



Hold the plug not the cord when unplugging this product, or it may damage the cord and cause electric shock or a fire accident.



Always switch off and unplug the machine when it is not used over an extended period of time. It may cause deterioration of insulations and eventually electric shock or a fire accident.



Once a month, switch off this product and check if

- the power cord is plugged firmly into an electrical outlet;
- the plug is not excessively heated, rusted or bent;
- the plug and electrical outlet are free of dust; and
- the power cord is not cracked or worn down.

Once you notice any unusual condition, switch off the power and then the main power inside the body front cover, and unplug the power cord. Contact your local Fuji Xerox representative.

Machine Installation

WARNING



Do not locate this product where people might step on or trip over the power cord. Friction or excessive pressure may generate heat and eventually cause electric shock or a fire accident.

CAUTION



Never locate this product in the following places:

- Near radiators or any other heat sources
- Near volatile flammable materials such as curtains
- In the hot, humid, dusty or poorly ventilated environment
- In the place receiving direct sunlight
- Near cookers or humidifiers








Locate this product on a level and sturdy surface that can withstand a weight of 541 Kg. Otherwise, if tilted, the product may fall over and cause injuries.




Locate this product in a well-ventilated area. Do not obstruct ventilation openings of the product.

Keep the minimum clearance as follows for ventilation and an access to the power plug. Unplug the product if an abnormal condition is noted.

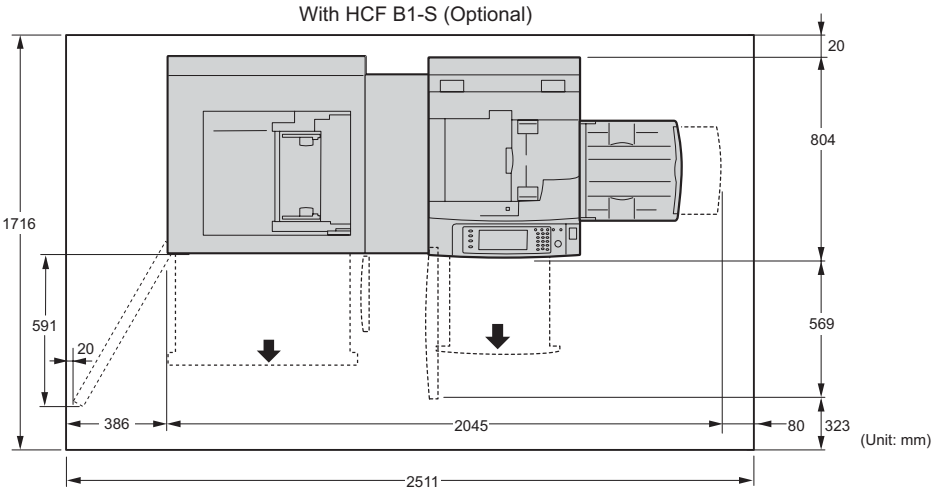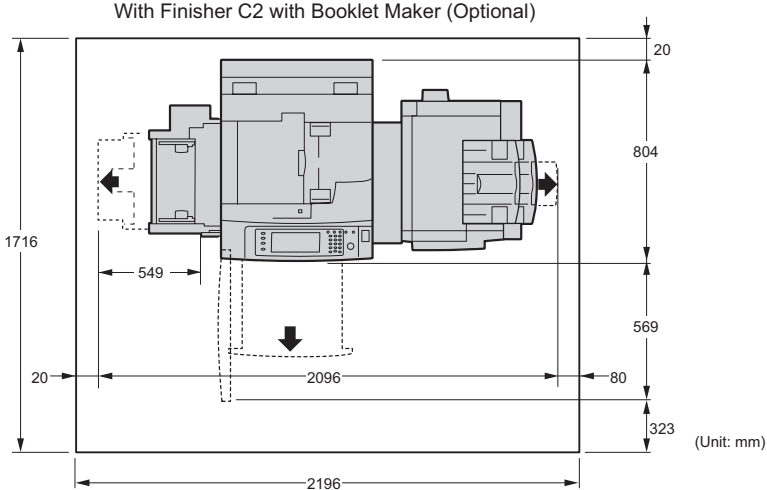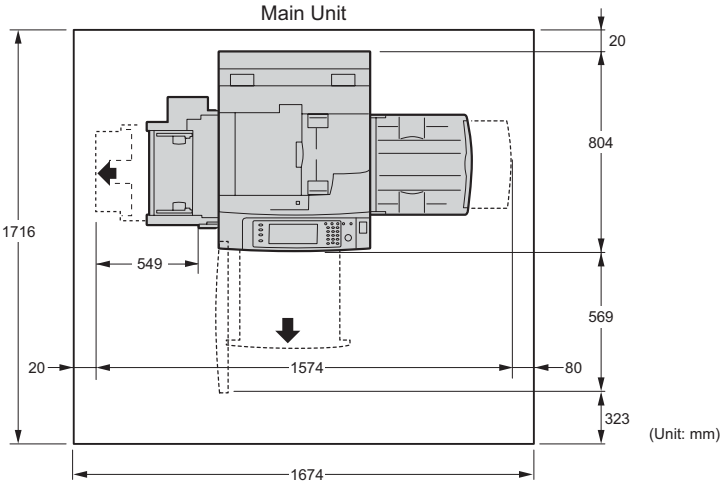

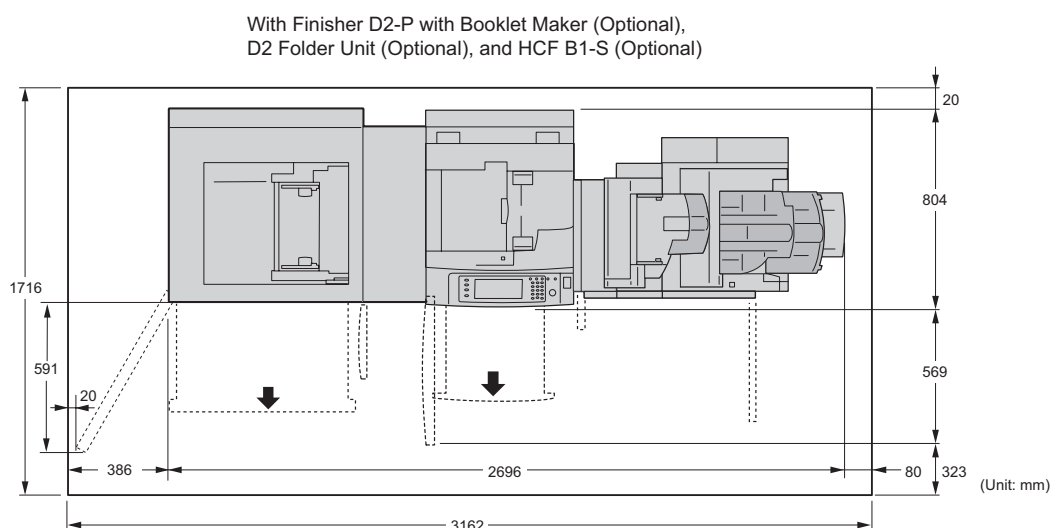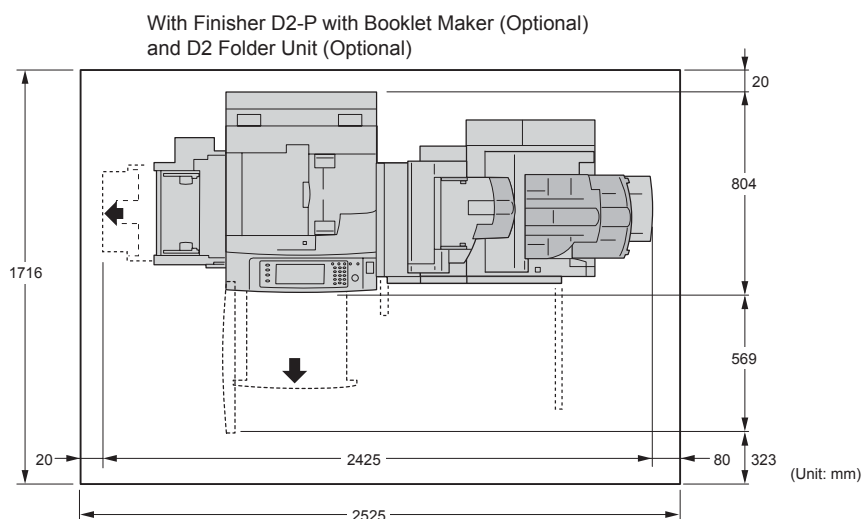


Do not incline the product at more than 10 degree angle. Otherwise, it may fall over and cause injuries.

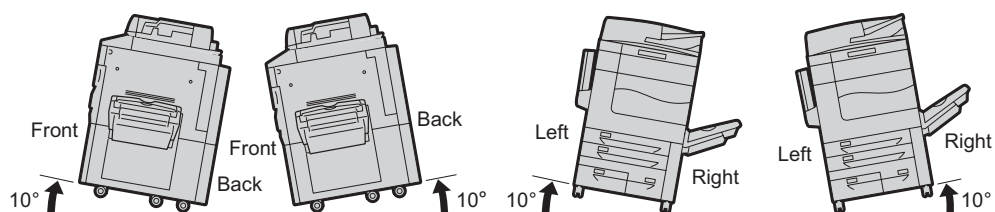



Always lock the wheels of this product after installation. Otherwise, it may fall over or slide and cause injuries.

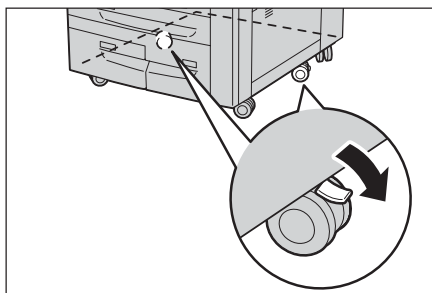

To bundle wires and cables, always use the cable ties and spiral tubes that Fuji Xerox supplies. Otherwise, it may cause some defects.

Others



To keep this product in a good performance and condition, always use it in the following environment:

- Temperature: 10 - 32°C
- Humidity: 15 - 85%

When the product is left in a chilly room and the room is rapidly warmed up by heater, dew condensation may form inside the product and cause a partial deletion on printing.

Operational Safety

⚠ WARNING



The operator's product maintenance procedures are described in the customer documentation supplied with this product. Do not carry out any other maintenance procedures not described in the documentation.



This product features safety design not to allow operators access to hazard areas. The hazard areas are isolated from operators by covers or protectors which require a tool to remove. To prevent electric shock and injuries, never remove those covers and protectors.



To avoid the risk of electric shock and a fire accident, switch off the power and then the main power inside the body front cover. Unplug the product promptly in the following conditions, then contact your local Fuji Xerox representative.

- The product emits smoke or its surface is unusually hot.
- The product emits unusual noise or odor.
- The power cord is cracked or worn down.
- A circuit breaker, fuse or any other safety device is activated.
- Any liquid is spilled into the product.
- The product is soaked in water.
- Any part of the product is damaged.



Do not insert any object into slots or openings of this product.

Do not place any of the followings on the product:

- Liquid container such as flower vases or coffee cups
- Metal parts such as staples or clips
- Heavy objects

If liquid is spilled over or metal parts are slipped into the product, it may cause electric shock or a fire accident.



Do not place liquid, particles, small metal pieces or their containers in consumable storage spaces. Spills may cause electric shock or fire due to short-circuit.



Do not place dangerous objects (e.g., fragiles, volatile and flammable chemicals, creatures) in [consumable storage spaces]. Otherwise, it may cause catching fire.



Do not use conductive paper such as origami paper, carbonic paper or conductively-coated paper. When paper jam occurs, it may cause short-circuit and eventually a fire accident.



When cleaning this product, use the designated cleaning materials exclusive to it. Other cleaning materials may result in poor performance of the product. Never use aerosol cleaners, or it may catch fire and cause explosion.



If you need to pull out a tray to remove paper jam, contact your local Fuji Xerox representative. Do not pull out a tray, otherwise it may cause injuries.



Never play the CD-ROM supplied with the product on an audio player. Always use a CD-ROM player. Otherwise, large sound may damage audio players or your ears.



Laser Safety

CAUTION: Any operations or adjustments not stated in the operation manual may cause hazardous light exposure and eventually burn injuries or loss of eyesight.

This product has been tested and found to comply with the Class 1 Laser Equipment requirements defined by the international standard IEC60825 and has no light exposure hazard. The product has no hazardous light emission as it features light protection components and covers to shut in all light beam during operation and maintenance.


⚠ CAUTION

Keep electrical and mechanical safety interlocks active. Keep the safety interlocks away from magnetic materials. Magnetic materials may accidentally activate the product and cause injuries or electric shock.




A ground fault interrupter is embedded in this product. If current leakage occurs, the ground fault interrupter automatically cuts off power circuit to prevent electric shock and a fire accident. The ground fault interrupter is normally ON ("I"). Check once a month if the ground fault interrupter works properly in accordance with the following procedures:


- (1) Press TEST button to turn off the ground fault interrupter.
- (2) Check the indication ("O"). It means that the ground fault interrupter circuit works properly.
- (3) Return the ground fault interrupter switch to ON ("I").

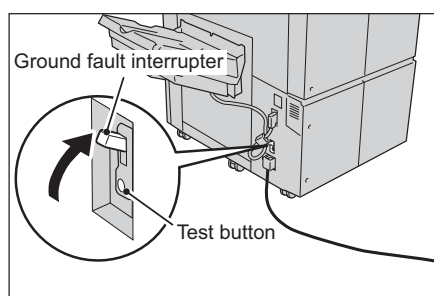

Main Unit

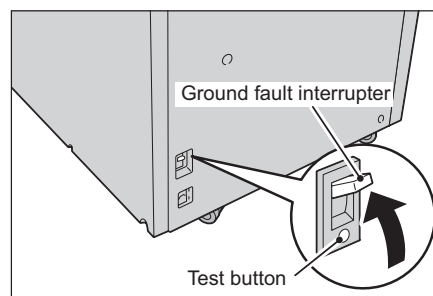

HCF B1-S

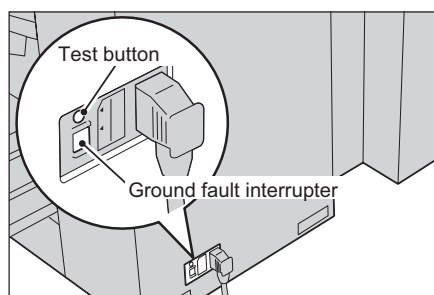

Finisher D2-P with Booklet Maker

If the circuit does not work properly, contact your local Fuji Xerox representative.



Do not attempt to remove a paper jammed deeply inside the product, particularly a paper wrapped around a fusing unit or a heat roller. Otherwise, it may cause injuries or burns. Switch off the power and then the main power inside the body front cover promptly and contact your local Fuji Xerox representative.



Never touch the paper output area of the finisher during operation. It may cause injuries.



Be careful in removing jammed staples.



Be careful not to get injured by waste staples when detaching a staple dust box.

-  Waste staples may come out with output paper. Be careful not to get injured by the staples.
 -  Never touch safety interlocks. When a front cover is open, safety interlocks become activated to stop the machinery. Do not apply pressure on safety interlocks with a coin or screwdriver. Otherwise, the machinery may become activated and cause injuries.
 -  Do not staple punched holes of paper. Sharp points of a staple may cause injuries.
 -  Do not place objects weighing more than 80 Kg in consumable storage spaces. Heavy loads may deform or break them.
 -  Be careful not to drop an object when you bring it out from consumable storage spaces. Otherwise, you may get injured.
 -  Grip the handhold on a door of [consumable storage spaces when you open and close it. Do not hold an upper or bottom edge of the door. Otherwise, you may get injured.
 -  Do not put your weight on or lift up a door of consumable storage spaces. It may cause deforming or breaking it.
 -  Do not forcibly open a door of consumable storage spaces. It may cause deforming or breaking it.
 -  Do not add a shock to a door of consumable storage spaces. Otherwise, the door may break to drop off and you may get injured.
 -  Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.
 -  To move this product to another location, contact your local Fuji Xerox representative.
 -  Ventilate well during extended operation or mass copying. It may affect the office air environment due to odor such as ozone in a poorly ventilated room.
- Provide proper ventilation to ensure the comfortable and safe environment.

Consumable

WARNING

-  Store all consumables in accordance with the instructions given on its package or container.
 -  Use a broom or a wet cloth to wipe off spilled toner. Never use a vacuum cleaner for the spills. It may catch fire by electric sparks inside the vacuum cleaner and cause explosion. If you spill a large volume of toner, contact your local Fuji Xerox representative.
 -  Never throw a toner cartridge into an open flame. Remaining toner in the cartridge may catch fire and cause burn injuries or explosion.
- If you have a used toner cartridge no longer needed, contact your local Fuji Xerox representative for its disposal.



Never throw a waste toner container into an open flame. Toner may catch fire and cause burn injuries or explosion.

If you have a used waste toner container no longer needed, contact your local Fuji Xerox representative for its disposal.

CAUTION



Keep drum cartridges and toner cartridges out of the reach of children. If a child accidentally swallows toner, spit it out, rinse mouth with water, drink water and consult a physician immediately.



When replacing drum cartridges and toner cartridges, be careful not to spill the toner. In case of any toner spills, avoid contact with clothes, skin, eyes and mouth as well as inhalation.



If toner spills onto your skin or clothing, wash it off with soap and water.

If you get toner particles in your eyes, wash it out with plenty of water for at least 15 minutes until irritation is gone. Consult a physician if necessary.

If you inhale toner particles, move to a fresh air location and rinse your mouth with water.

If you swallow toner, spit it out, rinse your mouth with water, drink plenty of water and consult a physician immediately.

Location of Warning and Caution Labels






Always follow all warning instructions marked on or supplied with this product.

To avoid the risk of burn injuries and electric shock, never touch the area with the "High Temperature" or "High Voltage" marks on.

Before Using the Machine

1

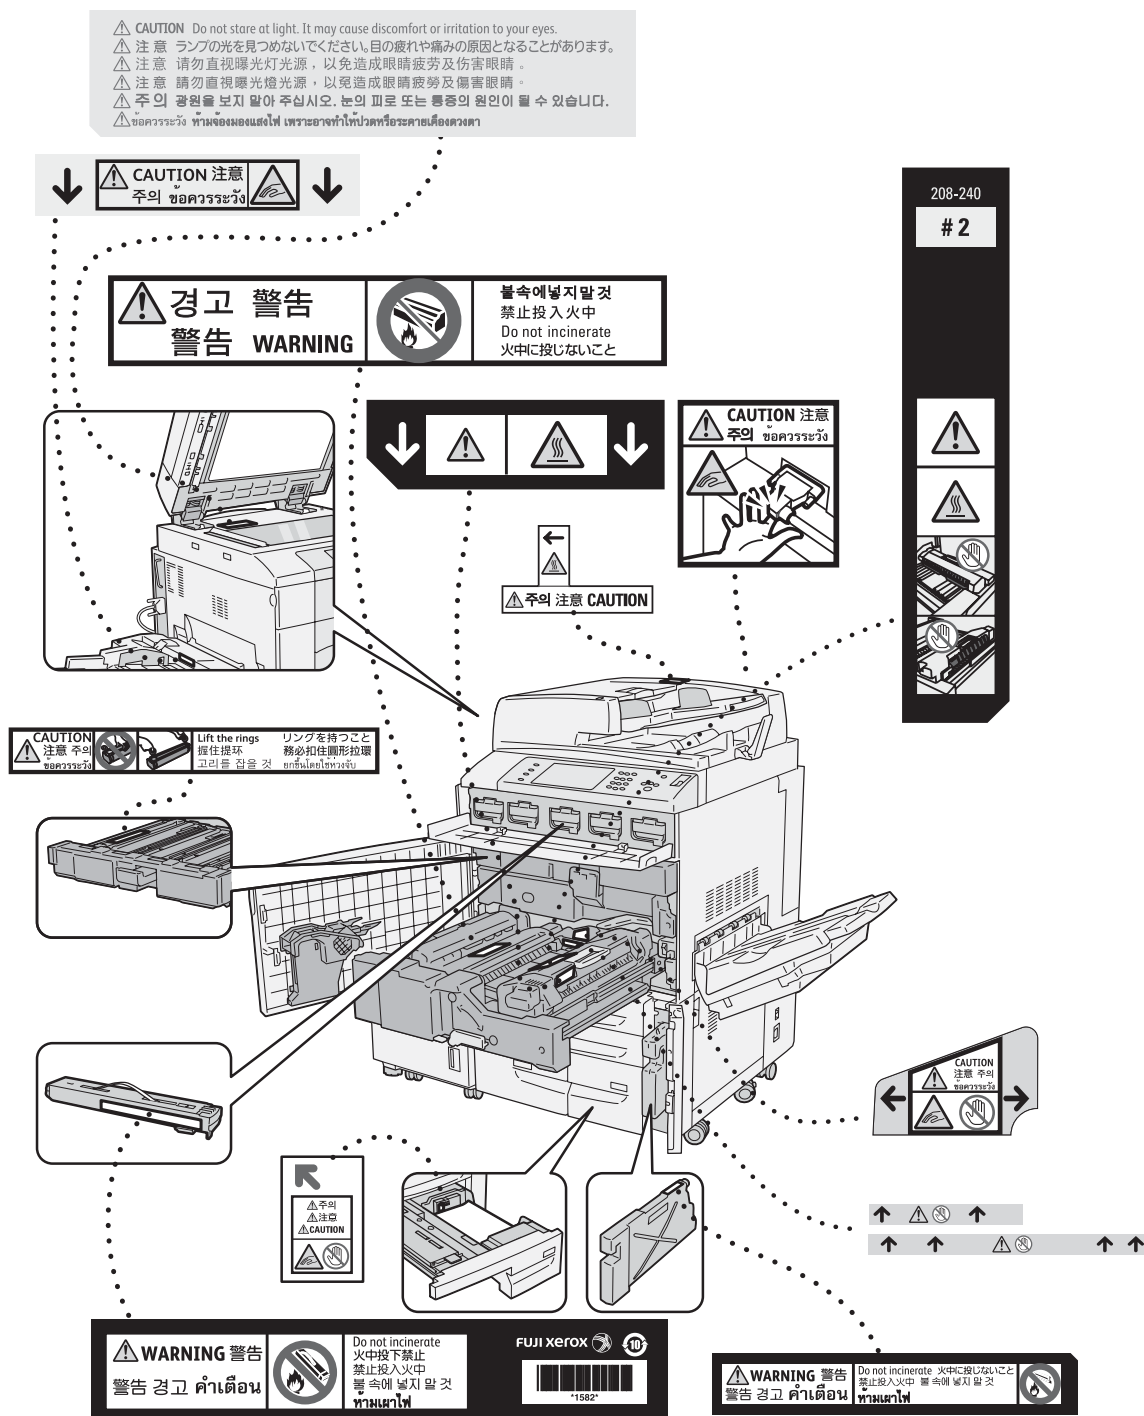

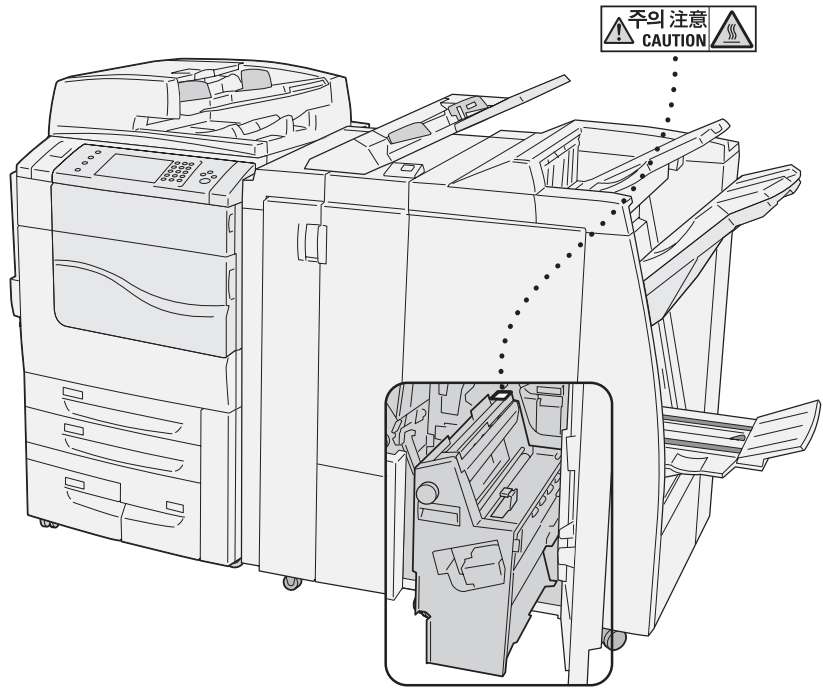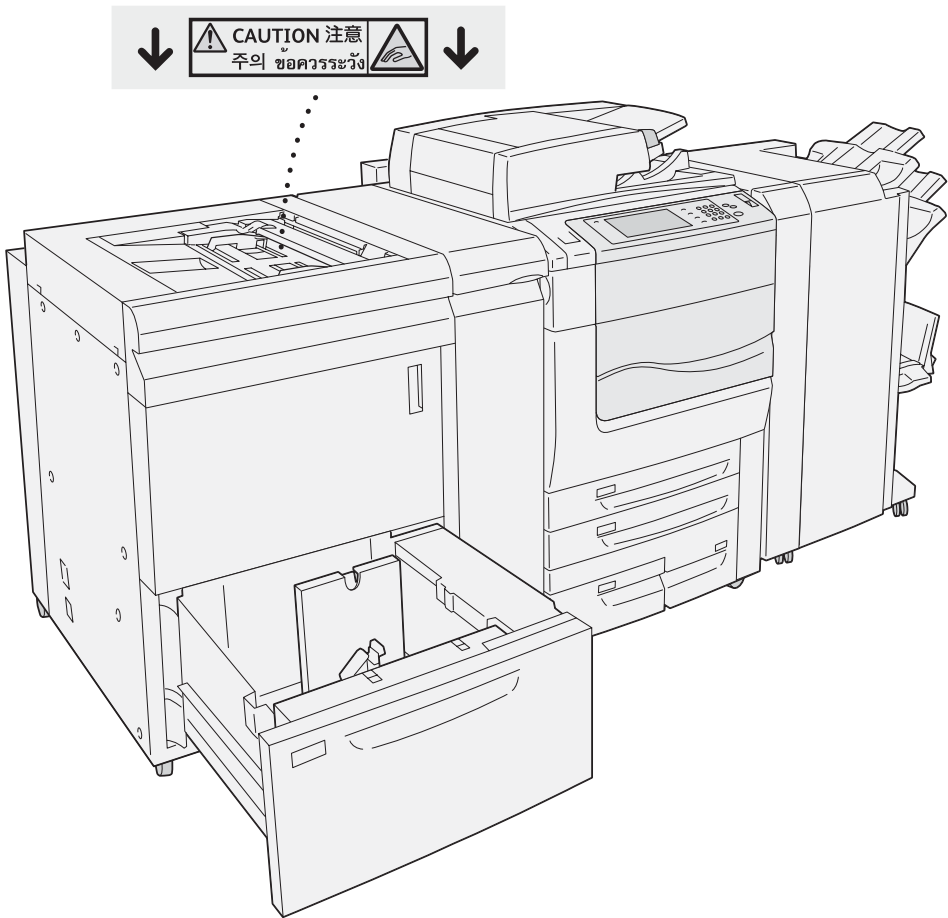

Regulation

Radio Frequency Emissions (Class B)



This product has been tested and found to comply with the limits for a Class B digital device, pursuant to the International Standard for Electromagnetic Interference (CISPR Publ. 22) and Radiocommunications Act 1992 in Australia/New Zealand. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning this product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between this product and the receiver.
- Connect this product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications to this product not specifically approved by Fuji Xerox may void the user's authority to operate this product.

Product Safety Certification (CB)

This product is certified by the following agency using the safety standards listed.

<u>Agency</u>	<u>Standard</u>
NEMKO	IEC60950-1:ed. 2

Regulatory Information for RFID

This product contains Radio Frequency Identification system device (RFID) and it is certified in compliance with applicable local laws and/or regulations.

Environment

- For environmental protection and efficient use of resources, Fuji Xerox reuses returned toner cartridges and drum cartridges to make recycle parts, recycle materials or energy recovery.
- Proper disposal is required for toner cartridges and drum cartridges no longer needed. Do not open toner cartridges and drum cartridges. Return them to your local Fuji Xerox representative.

About License

This section describes information about licenses. Be sure to read through it.

RSA BSAFE



This product includes RSA® BSAFE™ Cryptographic software from RSA Security Inc.

Heimdal

Copyright (c)2000 Kungliga Tekniska Högskolan (Royal Institute of Technology, Stockholm, Sweden). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the Institute nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE INSTITUTE AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INSTITUTE OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

JPEG Code

Our printer software uses some of the codes defined by the Independent JPEG Group.

Libcurl

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2006, Daniel Stenberg, <daniel@haxx.se>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

FreeBSD

This product contains the part of FreeBSD codes.

The FreeBSD Copyright

Copyright 1994-2006 The FreeBSD Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE FREEBSD PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FREEBSD PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The views and conclusions contained in the software and documentation are those of the authors and should not be interpreted as representing official policies, either expressed or implied, of the FreeBSD Project.

OpenLDAP

Copyright 1998-2006 The OpenLDAP Foundation All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted only as authorized by the OpenLDAP Public License.

A copy of this license is available in the file LICENSE in the top-level directory of the distribution or, alternatively, at <http://www.OpenLDAP.org/license.html>.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Individual files and/or contributed packages may be copyright by other parties and/or subject to additional restrictions.

This work is derived from the University of Michigan LDAP v3.3 distribution. Information concerning this software is available at <http://www.umich.edu/~dirsvcs/ldap/ldap.html>.

This work also contains materials derived from public sources.

Additional information about OpenLDAP can be obtained at <http://www.openldap.org/>.

Portions Copyright 1998-2006 Kurt D. Zeilenga.

Portions Copyright 1998-2006 Net Boolean Incorporated.

Portions Copyright 2001-2006 IBM Corporation.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted only as authorized by the OpenLDAP Public License.

Portions Copyright 1999-2005 Howard Y.H. Chu.

Portions Copyright 1999-2005 Symas Corporation.

Portions Copyright 1998-2003 Hallvard B. Furuseth.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that this notice is preserved.

The names of the copyright holders may not be used to endorse or promote products derived from this software without their specific prior written permission. This software is provided "as is" without express or implied warranty.

Portions Copyright (c) 1992-1996 Regents of the University of Michigan.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that this notice is preserved and that due credit is given to the University of Michigan at Ann Arbor. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission. This software is provided "as is" without express or implied warranty.

The OpenLDAP Public License

Version 2.8, 17 August 2003

Redistribution and use of this software and associated documentation ("Software"), with or without modification, are permitted provided that the following conditions are met:

1. Redistributions in source form must retain copyright statements and notices,
2. Redistributions in binary form must reproduce applicable copyright statements and notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution, and
3. Redistributions must contain a verbatim copy of this document.

The OpenLDAP Foundation may revise this license from time to time.

Each revision is distinguished by a version number. You may use this Software under terms of this license revision or under the terms of any subsequent revision of the license.

THIS SOFTWARE IS PROVIDED BY THE OPENLDAP FOUNDATION AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENLDAP FOUNDATION, ITS CONTRIBUTORS, OR THE AUTHOR(S) OR OWNER(S) OF THE SOFTWARE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The names of the authors and copyright holders must not be used in advertising or otherwise to promote the sale, use or other dealing in this Software without specific, written prior permission. Title to copyright in this Software shall at all times remain with copyright holders.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Copyright 1999-2003 The OpenLDAP Foundation, Redwood City, California, USA. All Rights Reserved. Permission to copy and distribute verbatim copies of this document is granted.

DES

This product includes software developed by Eric Young(eay@mincom.oz.au)

AES

Copyright (c) 2003. Dr Brian Gladman. Worcester. UK. All rights reserved.

This product uses published AES software provided by Dr Brian Gladman under BSD licensing terms.

TIFF (libtiff)

Lib TIFF copyright (c) 1988-1997 Sam leffler

Copyright (c) 1991-1997 Silicon Graphics. Inc.

ICC Profile (Little cms)

Little cms copyright (c) 1988-2004 Marti Maria

XPS (XML Paper Specification)

This product may incorporate intellectual property owned by Microsoft Corporation. The terms and conditions upon which Microsoft is licensing such intellectual property may be found at <http://go.microsoft.com/fwlink/?LinkId=52369>.

EDICT and COMPDIC

The Japanese-English dictionaries (EDICT and COMPDIC) edited by The Electronic Dictionary Research and Development Group under the coordination of Professor James William Breen at Monash University are used in the searchable PDF kit option of Fuji Xerox.

These Japanese-English dictionary files are licensed to customers under the terms and conditions of a Creative Commons Attribution-ShareAlike License. Prior to use, be sure to check the terms and conditions of this license at the URL below. Use of these Japanese-English dictionaries is not permitted unless you agree to the terms and conditions of this license.

Furthermore, care should be taken because at the point in time that you begin to use these Japanese-English dictionaries as specified in the said license, you accept and agree to be bound by the terms and conditions of this license.

The Japanese-English dictionaries are provided to customers on an as-is basis, and Fuji Xerox and the original supplier make no representations of warranties of any kind.

- Original Author Information (extracted from <http://www.csse.monash.edu.au/~jwb/edrdg/licence.html>)
Copyright over the documents covered by this statement is held by James William BREEN and The Electronic Dictionary Research and Development Group at Monash University.
- Monash University License Information
<http://www.csse.monash.edu.au/~jwb/edrdg/licence.html>
- Information Regarding EDICT and COMPDIC
<http://www.csse.monash.edu.au/~jwb/edict.html>
http://www.csse.monash.edu.au/~jwb/compdic_doc.html
- Information Regarding the Creative Commons Attribution-ShareAlike License
<http://creativecommons.org/licenses/by-sa/2.5/legalcode>

Cyrus SASL

Copyright (c) 1998-2003 Carnegie Mellon University. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name "Carnegie Mellon University" must not be used to endorse or promote products derived from this software without prior written permission. For permission or any other legal details, please contact
Office of Technology Transfer
Carnegie Mellon University
5000 Forbes Avenue
Pittsburgh, PA 15213-3890
(412) 268-4387, fax: (412) 268-7395
tech-transfer@andrew.cmu.edu
4. Redistributions of any form whatsoever must retain the following acknowledgment:
"This product includes software developed by Computing Services at Carnegie Mellon University (<http://www.cmu.edu/computing/>)."

CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Legal Notice

Copying or printing certain documents may be illegal in your country. Penalties of fines or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy or print in your country.

- Currency
- Banknotes and checks
- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.

2 Product Overview


This chapter describes the basic information of the machine, such as machine components, how to switch the machine on and off, and how to use the touch screen.

• Machine Components	42
• Power Source	50
• Ground Fault Interrupter	53
• Energy Saver Mode	54
• Control Panel	56
• About the [Services Home] Screen.....	64
• Entering Text	68

Machine Components

This following describes machine components and their functions.


■ Main unit and HCF2 (2000 sheets) (optional)

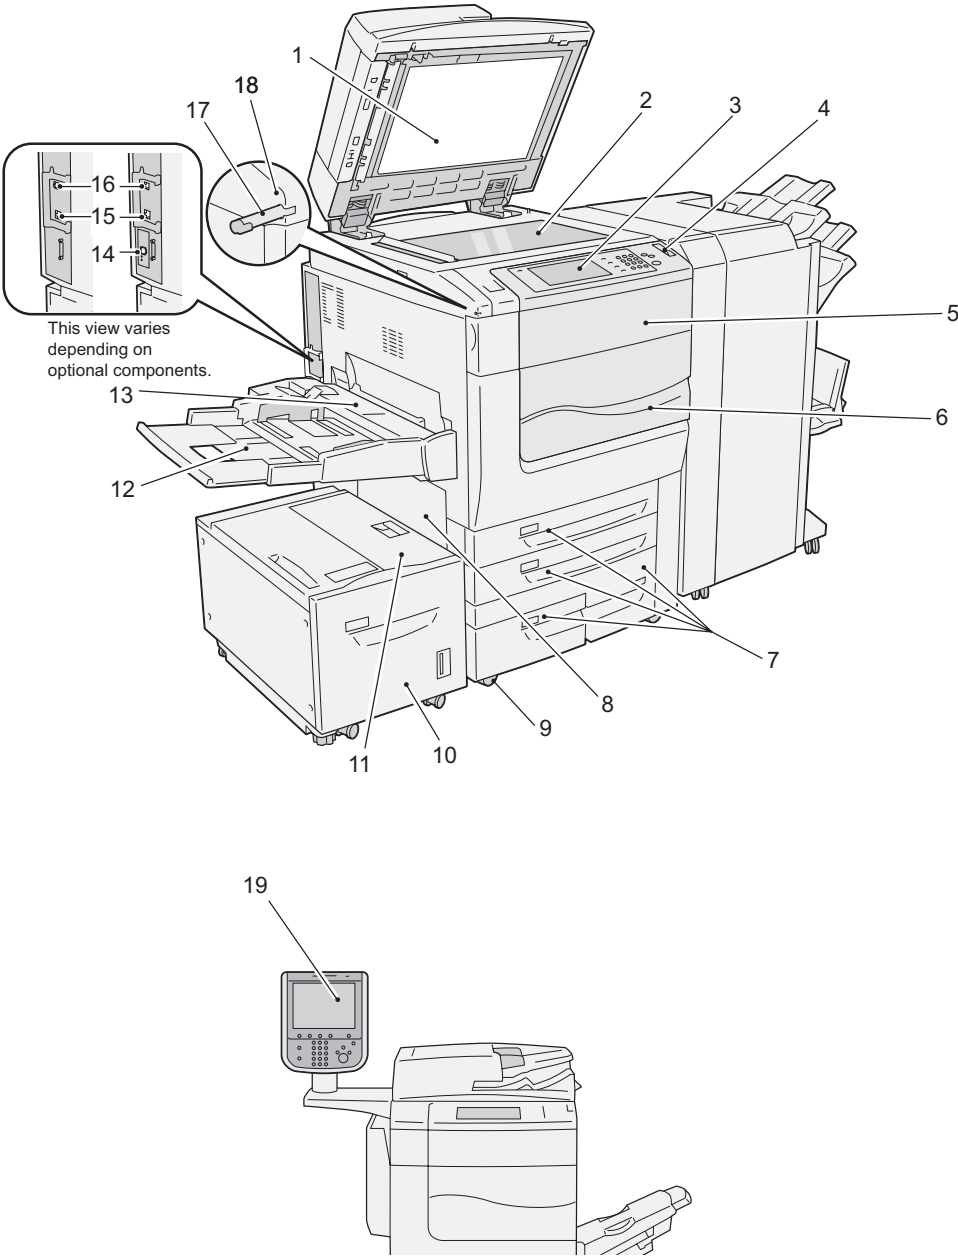

No.	Component	Function
1	Document cover	Holds a document in place.
2	Document glass	Load a document here.
3	Control panel (Middle size Color UI)	Consists of operation buttons, LED indicators, and a touch screen. Refer to "Control Panel" (P.56).
4	Power switch	Switches the power of the machine on and off. Refer to "Power Source" (P.50).


No.	Component	Function
5	Toner cover	Open this cover to replace toner cartridges.
6	Front cover	Open this cover to access the insides of the machine to clear paper jams or replace consumables.
7	Tray 1, 2, 3, 4	Load paper here.
8	Bottom left cover	Open this cover to access the insides of the machine to clear paper jams. If the Tray 6 (HCF2 (2000 sheets)) is installed in the machine, move the Tray 6 (HCF2 (2000 sheets)) to the left first.
9	Locking casters	Used for locking the wheels of the machine. Lock these casters after moving the machine to its installation site.
10	Tray 6 (optional)	Load paper here.
11	Tray 6 top cover	Move the Tray 6 (HCF2 (2000 sheets)) to the left and then open this top cover to clear paper jams.
12	Tray 5 (Bypass)	Used for loading non-standard paper (thick-stock paper, and other special media) that cannot be loaded in the Trays 1 to 4, and 6.
13	Tray 5 (Bypass) top cover	Open the top cover to clear paper jams.
14	Gigabit Ethernet Board (optional)	Connected to a network cable.
15	10BASE-T / 100BASE-TX connector	Connected to a network cable. This connector is not available when the Gigabit Ethernet Board (optional) is installed.
16	USB 2.0 interface connector (optional)	Connected to a USB cable.
17	Stylus pen	Used for touching the touch screen on the control panel to configure settings. Note • You can directly touch the touch screen not only with the stylus pen but also with a finger.
18	Stylus pen holder	Stores the stylus pen.
19	Control Panel (Large size UI)	Provides operation buttons, LED indicators, and a touch screen. For details, refer to "Large Size UI" (P.60).

■ Inside and right views of the machine

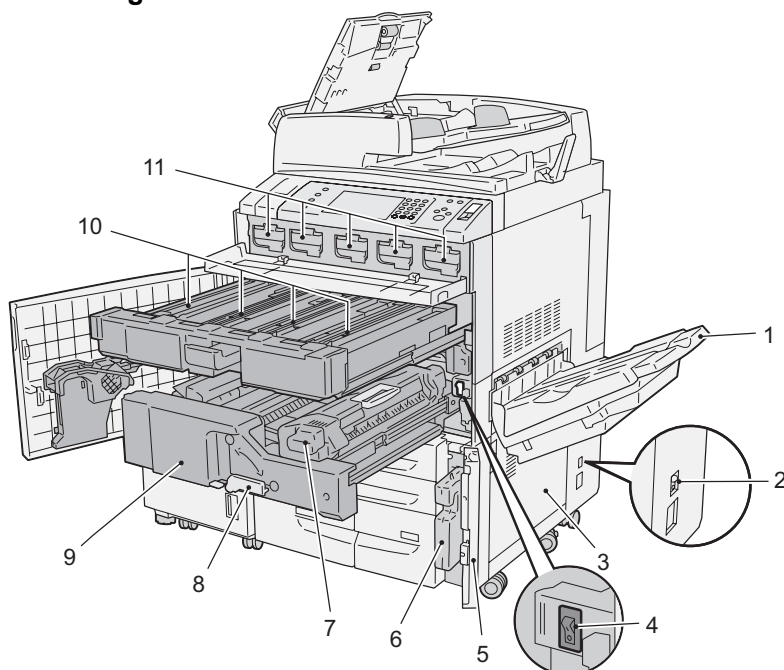

No.	Component	Function
1	Output tray	Receives output paper. Two types of trays are available: a normal output tray and an optional offset stacking tray. When the optional offset stacking tray is attached and A4 or smaller size paper is to be output, do not use the extension flap.
2	Ground fault interrupter	Automatically turns the machine off when a current leakage is detected.
3	Lower-right cover	Open this cover to clear paper jams. When a finisher is attached, open the front cover of the finisher first, and then open this lower-right cover.
4	Main power switch	Switches the main power of the machine on and off. Always follow the instructions of the system administrator. Important • Always switch the power off before switching the main power off. For details, refer to "Power Source" (P.50)
5	Waste toner bottle cover	Open this cover to access the insides of the machine to replace the waste toner bottle.
6	Waste toner bottle	Used to collect waste toner.
7	Fusing unit	Fuses toner on paper. Important • Do not touch this unit as it is extremely hot.
8	Lever	Used to draw out the transfer unit.
9	Transfer unit	Transfers toner images on the drum to paper. Open this cover to access the insides of the machine to clear paper jams.
10	Drum cartridges	Contain photoconductors. R1, R2, R3, and R4 are installed from the left.
11	Toner cartridges	Contain Black (K1 and K2), Cyan (C), Magenta (M), and Yellow (Y) toner (image forming powder).


■Duplex automatic document feeder

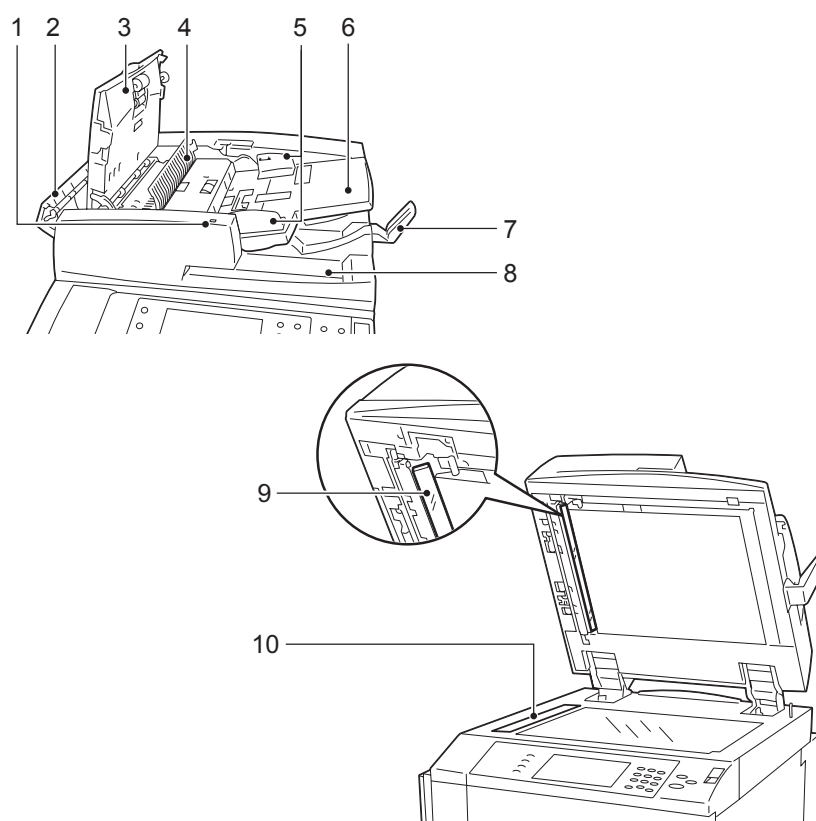

No.	Component	Function
1	Confirmation indicator	Lights up when a document is loaded correctly.
2	Left cover	The left cover slightly opens when the top cover is opened. Open this cover widely to clear paper jams.
3	Top cover	Open this cover to access the insides of the machine to clear paper jams.
4	Inner cover	Open this cover to clear paper jams.
5	Document guides	Use these guides to align the edges of documents.
6	Document feeder tray	Load documents here.
7	Document stopper	Used when copying or scanning large size documents such as A3. Open the stopper rightward when using it.
8	Document output tray	Scanned documents are delivered here.
9	Optical glass	Scans the backside of a loaded document.
10	Constant velocity transport glass	Scans a loaded document.

Note • In this guide, the duplex automatic document feeder is referred to as the “document feeder” or “DADF”.

■Telephone line connectors

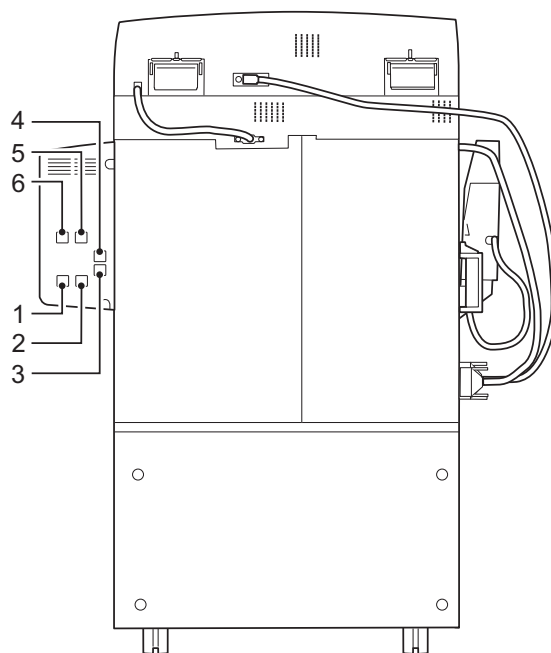


Connector No.	Name marked on the cover of the machine	Name displayed on the touch screen	Function
1	-	-	Not available.
2	-	-	Not available.
3	TEL	-	Used to connect your telephone.
4	LINE1	Line 1	Use this connector to connect to a telephone line.
5	LINE2	Line 2	Use this connector to connect to a telephone line.
6	LINE3	Line 3	Use this connector to connect to a telephone line.

Note

- The Fax feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
- LINE2 and LINE3 are optional.
- Connector 3 normally has a cover on it. When you connect your telephone to the machine, contact our Customer Support Center.
- Only the line connected to the LINE1 connector is available when you make a phone call using the telephone connected to connector 3. (LINE2 and LINE3 are not available.)


■Finisher C2 (optional) and Finisher C2 with Booklet Maker (optional)

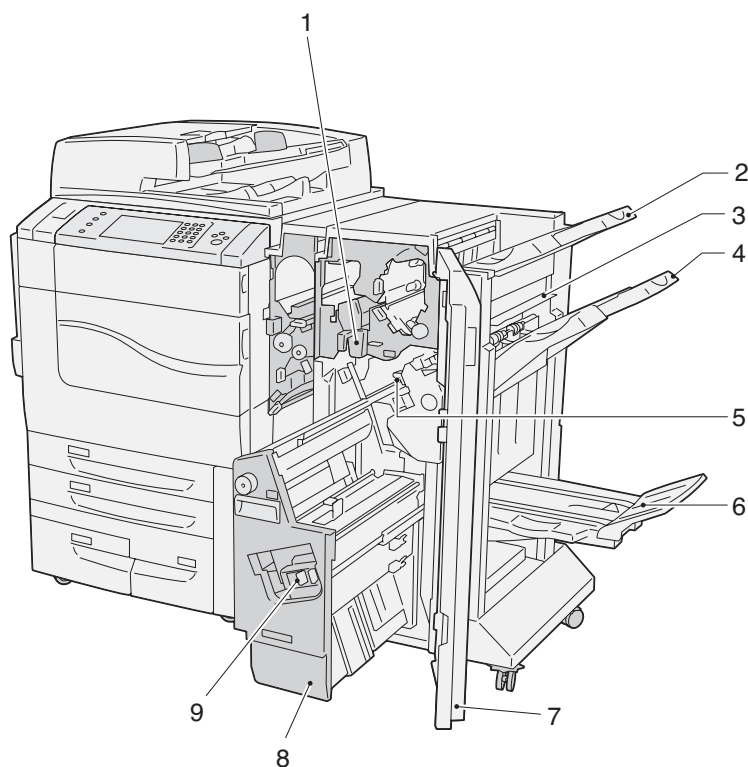

No.	Component	Function
1	Punch scrap container	Receives punch scraps from the puncher. Draw out the box when throwing the scraps away.
2	Output tray	Receives documents.
3	Exit cover	Open this cover to access the insides of the machine to clear paper jams.
4	Finisher tray	Receives documents.
5	Staple cartridge	Contains staples. Pull out the cartridge to clear staple jams, or to replace with a new cartridge.
6	Booklet tray (Finisher C2 with Booklet Maker only)	Documents are delivered here when Folding is selected in the booklet creation function.
7	Front cover	Open this cover to access the insides of the machine to clear paper or staple jams, replace staples, or throw punch dust away.
8	Booklet unit (Finisher C2 with Booklet Maker only)	Folds documents in half and staples the folded documents.
9	Booklet staple cartridges	Two staple cartridges for booklet creation (gutter). Take the cartridges out when clearing staple jams, or when replacing them with new ones.

Note • The Finisher C2 and the Finisher C2 with Booklet Maker are optional. In some sections of this guide, they are referred to as "finisher".

■Finisher D2-P with Booklet Maker (optional)

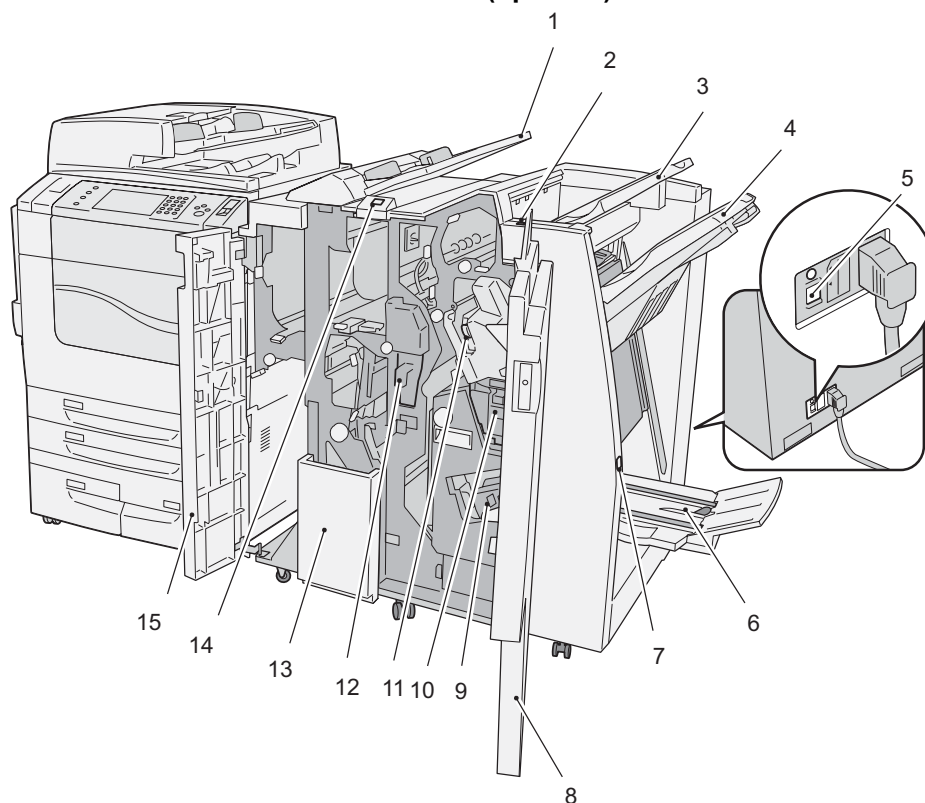


No.	Component	Function
1	Tray 8 (Insertor)	Load paper for covers or separators. Paper loaded here is not used for copying or printing.
2	De-curl button	Press this button to decurl copies.
3	Output tray	Receives copies when you select [Hole Punch], [Z Fold Half Sheet], [Auto], [Collated], or [Uncollated].
4	Finisher tray	Receives stapled, punched and Z-folded copies.
5	Ground fault interrupter	Automatically turns the machine off when a current leakage is detected.
6	Booklet output tray	Receives copies when you select [Single Fold] or [Fold & Staple].
7	Booklet output tray button	Press this button to deliver booklets to retrieval position.
8	Right cover	Open this cover to clear paper jams, replace a staple cartridge, or remove jammed staples or punch scraps.
9	Staple cartridges for booklet	Two staple cartridges for booklet. Remove these cartridges when replacing them with new ones, or when clearing staple jams.
10	Staple scrap container	Receives scraps from the stapler. Take this container out when replacing it with a new one.
11	Staple cartridge	Contains staples. Take this cartridge out when replacing the cartridge with a new one, or when clearing staple jams.
12	Punch scrap container	Holds punch scraps. Take this container out when removing scraps.
13	Folder Output Tray (Only available when the D2 Folder Unit is installed.)	Receives copies when you select [Z Fold] or [C Fold].

No.	Component	Function
14	Folder Output Tray button (Only available when the D2 Folder Unit is installed.)	Press this button to open the Folder Output Tray.
15	Left cover	Open this cover to access the inside of the machine to clear paper jams.

Note

- The Finisher D2-P with Booklet Maker is optional. In this guide, the Finisher D2-P with Booklet Maker is referred to as the "finisher".

■HCF B1-S (optional)

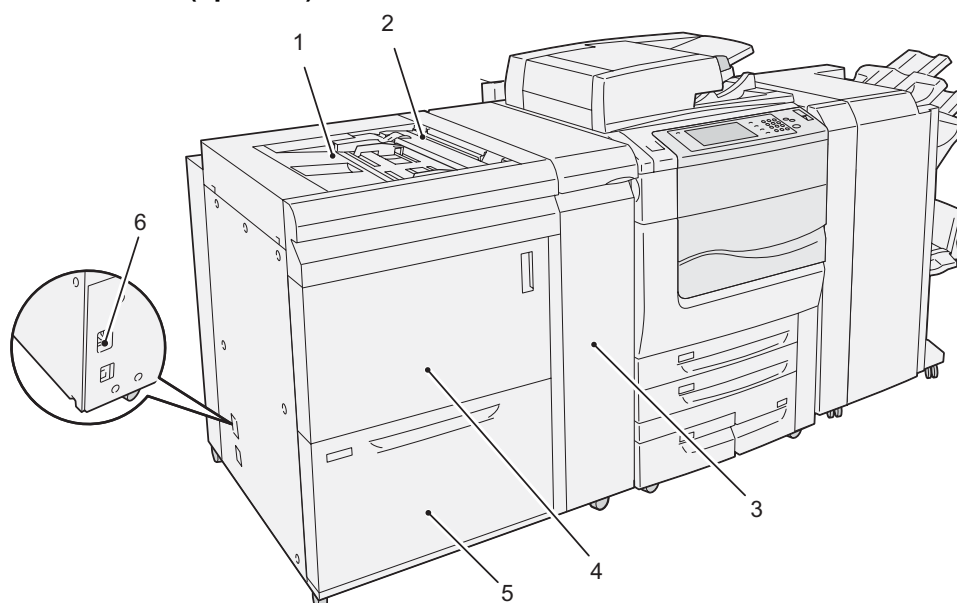

No.	Component	Function
1	Tray 5 (Bypass)	Used for loading non-standard paper (thick-stock paper, and other special media) that cannot be loaded in the Trays 1 to 4, and 6.
2	Tray 5 (Bypass) top cover	Open the top cover to clear paper jams.
3	Paper feed section cover	Open the cover to clear paper jams. This unit conveys papers supplied from the tray 6 or the tray 5 (bypass) to the machine.
4	Consumable storage space	Store consumables and paper here.
5	Paper tray 6	Load paper here.
6	Ground fault interrupter	Automatically turns the machine off when a current leakage is detected.

Power Source


The machine is provided with the power switch and the main power switch.

■Power switch

To use the machine, press the power switch to the [|] position to switch its power on. You can start operations after the machine warms up.

■Main power switch

Press the main power switch to the [○] position. The <Main Power> indicator goes out on the right side of the control panel, and the machine powers off. Do not switch the main power off except when you connect a cable to the machine or clean the machine. Switching off the main power may erase the data in the memory when using the Fax service.

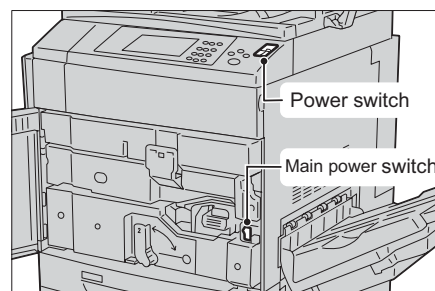


Switching the Main Power On

The following describes how to switch the main power on.


Important • Do not switch off the main power immediately after switching on the main power. This may damage the hard disk and the memory or cause a machine malfunction.

- 1 Make sure that the power cord is plugged in correctly.
- 2 Open the front cover.

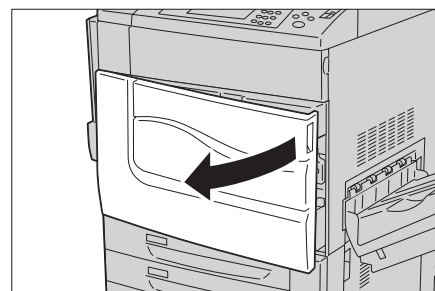

- 3 Press the main power switch to the [|] position to switch the main power on.

The <Main Power> indicator lights up on the control panel.

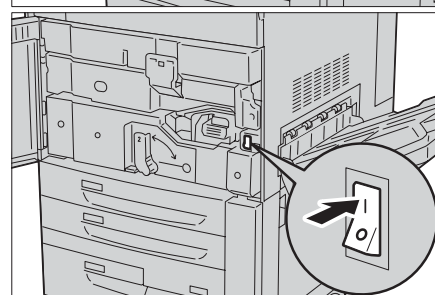

- 4 Close the front cover.

Switching the Power On

The following describes how to switch the power on.

The machine takes approximately 90 seconds to warm up and to be ready to copy or print after switching the power on. This may take more time depending on your machine configuration.

Switch the power off at the end of the day or when not using the machine for an extended period of time.


Use also the Energy Saver feature to save power consumption while the machine is not in use.

For information on the Energy Saver feature, refer to "Energy Saver Mode" (P.54).

Important • If the power is switched off, all the services of the machine will stop. When using the machine throughout the day for jobs such as receiving fax, do not switch the power off.

- 1 Press the power switch to the [|] position to switch the power on.

- Note**
- The "Please wait..." message indicates that the machine is warming up. The machine is not available during warming up.
 - If the machine is not powered on, check the following:
 - The power cord is plugged in.
 - The main power is switched on.
 - The <RESET> button is in the depressed position.

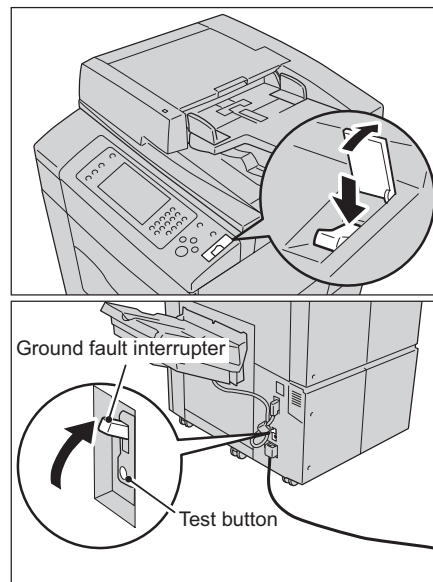

Switching the Power Off

The following describes how to switch the power off.


- 1 Before switching the power off, make sure that the machine has completed all copy or print jobs. Then, make sure that the <Data> indicator does not light up.

- Important** • Do not switch the power off in the following situations. If the power is switched off, the processing data may be erased.
- While data is being received
 - While a job is being printed
 - While a job is being copied
 - While a job is being scanned
 - When switching the power off, wait 5 seconds after outputs have been delivered.

- 2 Press the power switch to the [⏻] position.

- Important** • Power off processing is performed internally on the machine for a while after the power is switched off. Therefore, do not switch the main power off immediately after switching the power off.

- Note** • When powering the machine on after it has been switched off, wait 15 seconds after the touch screen has gone dark.

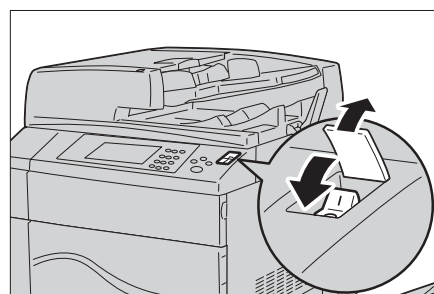


Switching the Main Power Off


The following describes how to switch the main power off.

- Important**
- Do not switch the main power off while the touch screen displays a screen or the <Energy Saver> button blinks. Switching off the main power may damage the hard disk and the memory or cause a machine malfunction.
 - Switch the main power off first when unplugging the power cord. Unplugging the power cord with the main power on may damage the hard disk and the memory or cause a machine malfunction.

- 1 Make sure that the power is switched off.
- 2 Make sure that the touch screen is blank and the <Energy Saver> button does not light up.
- 3 Open the front cover.

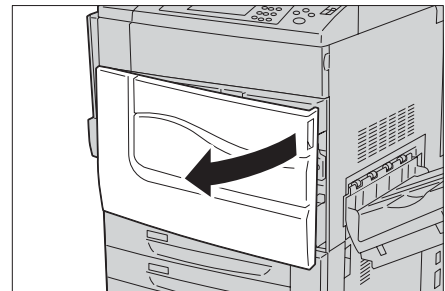


- 4 Press the main power switch to the [O] position to switch the main power off.
The <Main Power> indicator goes out on the control panel.

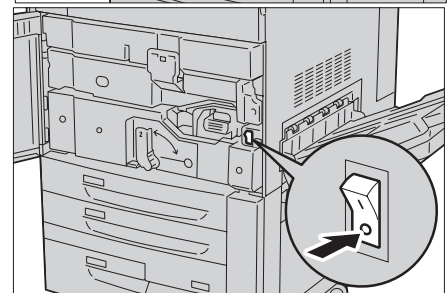


- 5 Close the front cover.

Ground Fault Interrupter


The machine is provided with a ground fault interrupter.

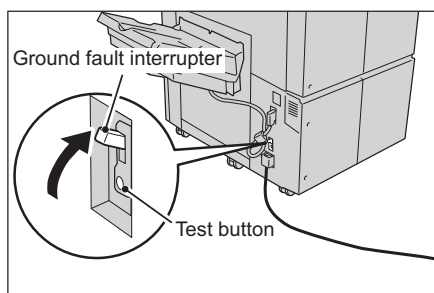

The main unit

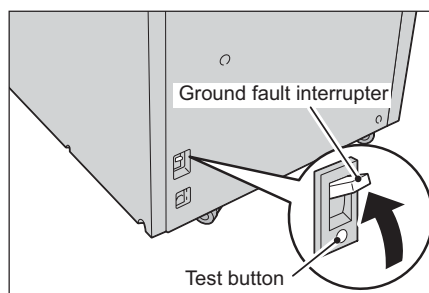

HCF B1-S

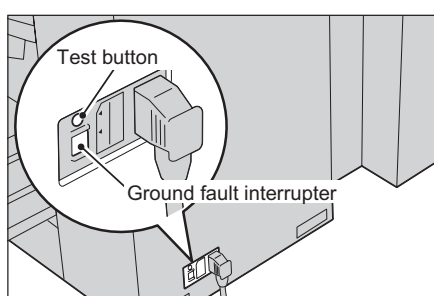

Finisher D2-P with Booklet Maker

In the event of a current leakage, the ground fault interrupter will automatically cut off the power circuit to prevent any leakage or fire from occurring.

The ground fault interrupter is normally pressed to the upper side, as shown in the figure on the right.

If the ground fault interrupter is pressed to the lower side, unusual conditions may occur. Please contact our Customer Support Center.

For information on how to check if the ground fault interrupter is working, refer to "Safety Notes" (P.19)

Energy Saver Mode

The machine is equipped with the Energy Saver mode that reduces the power consumption by saving the electricity to the machine when no copy or print data is received for a specified time.

The Energy Saver feature has two modes: Low Power mode and Sleep mode.

The machine enters the Low Power mode after the preset time has elapsed if the machine is left unused for a fixed period of time.

The machine then enters the Sleep mode if a further preset time elapses.

To enter the Energy Saver mode, press the <Energy Saver> button on the control panel.

■Low Power Mode

In this mode, the power to the control panel is lowered to save power.

The touch screen goes out, and the <Energy Saver> button on the control panel lights up. To use the machine, press the <Energy Saver> button. The <Energy Saver> button goes out to indicate that the Low Power mode is exited.

■Sleep Mode

In this mode, the power supply to devices such as hard disk drive is suspended and the power is lowered more than in the Low Power mode.

The touch screen goes out, and the <Energy Saver> button on the control panel lights up. To use the machine, press the <Energy Saver> button. The <Energy Saver> button goes out to indicate that the Sleep mode is exited.

The Sleep mode requires more time for the machine to exit and to be ready for use than the Low Power mode.

- Note**
- When you press the <Energy Saver> button during the Energy Saver mode, the touch screen lights up. At this point, the document scanning unit and the output devices remain in the Energy Saver mode. Afterwards, by operations such as using the touch screen and opening or closing of the document cover, you can make the devices necessary to activate the machine exit the Energy Saver mode and make the machine ready to start exiting the Energy Saver mode.
 - When you make the machine exit Energy Saver mode by pressing the <Energy Saver> button, the machine does not immediately identify the movements such as opening or closing of the front cover. To make the machine identify these operations, operate the control panel before opening the front cover.
 - If you replace toner cartridges or supply paper during the Energy Saver mode, the machine does not identify these changes. Before performing these operations, exit the Energy Saver mode by first pressing the <Energy Saver> button on the control panel and then pressing the <Machine Status> button.
 - The Energy Saver mode is not exited by the following operations:
 - Secure print
 - Fax using Folder Receive
 - Direct fax
 - Accessing a folder of the machine using CentreWare Internet Services
 - When the following device is connected to the machine and a user performs the following operation, the Low Power mode can be deactivated without pressing the <Energy Saver> button. If the machine is in the Sleep mode, however, the Sleep mode will not be deactivated by the operation. By setting longer time to elapse until the machine enters the Sleep mode, you can make the machine exit the Energy Saver mode without pressing the <Energy Saver> button. For more information on how to change the time to elapse until the machine enters the Sleep mode, refer to "1 Before Using the Machine"> "Energy Saver Mode" > "Changing the Interval for Entering Energy Saver Mode" in the Administrator Guide.
 - Touch the card to IC Card Reader (optional)
 - When the machine enters the Low Power mode while a user is authenticated, the machine exits the authentication mode.


Entering the Energy Saver Mode

The following describes how to enter the Energy Saver mode.

- Note**
- To enter the Energy Saver mode by pressing the <Energy Saver> button, specify a longer time period in [From Last Operation to Sleep Mode] than in [From Last Operation to Low Power Mode] under [Energy Saver Timers]. For information on [Energy Saver Timers], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Energy Saver Timers" in the Administrator Guide.

1 Press the <Energy Saver> button.

- Note**
- The machine will not enter the Energy Saver mode while a job is being processed. Press the <Energy Saver> button after the job is completed.
 - The machine will not enter the Energy Saver mode when [Skip Blank Pages] is enabled. For information on [Skip Blank Pages], refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.

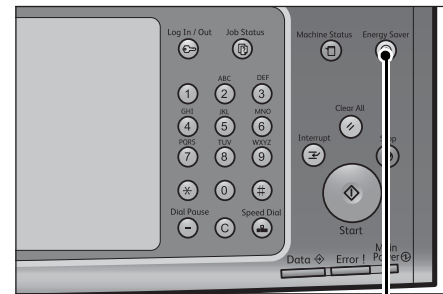

<Energy Saver> button


Exiting the Energy Saver Mode

The following describes how to exit the Energy Saver mode.

The Energy Saver mode is exited in the following instances:

- Pressing the <Energy Saver> button
- Receiving a job
- Selecting [Apply] in CentreWare Internet Services

1 Press the <Energy Saver> button.

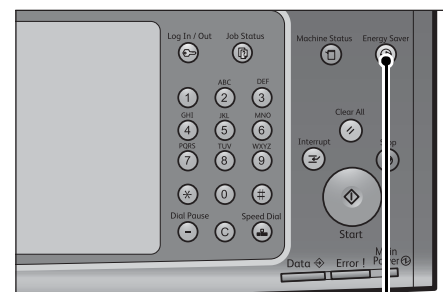


<Energy Saver> button

Control Panel

Middle Size Color UI

The following describes the names and functions of components on the control panel.

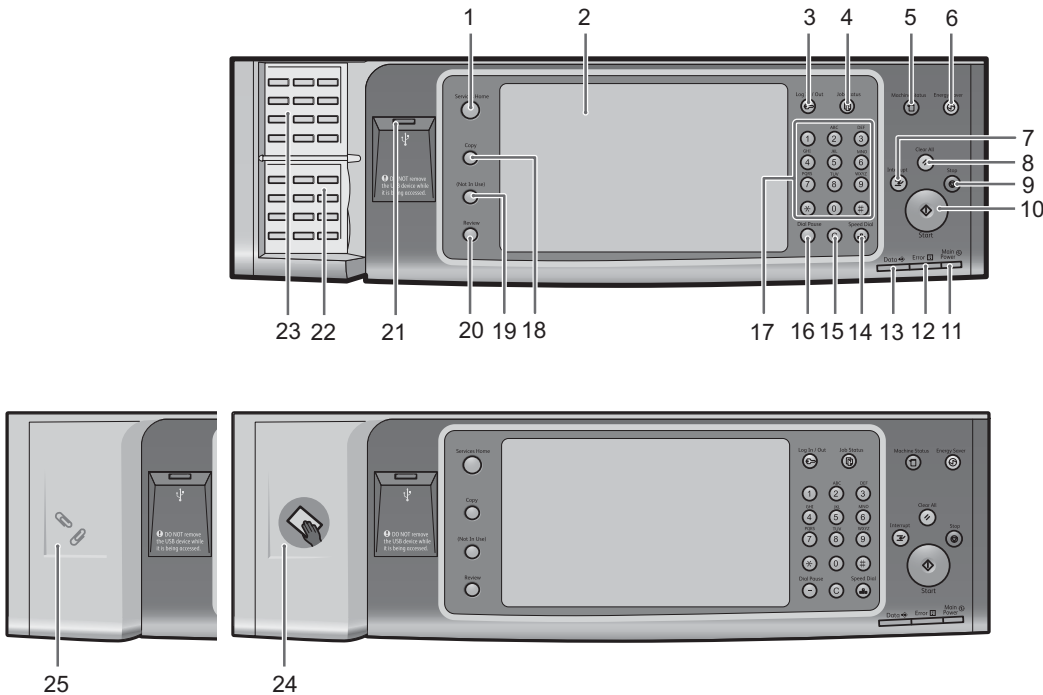

No.	Component	Function
1	<Services Home> button	Press this button to display the [Services Home] screen. You can change the services displayed on the [Services Home] screen. For more information, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Customizing the Button Layout" > "Services Home" in the Administrator Guide.
2	Touch screen	Displays messages required for operation, and buttons for various features. You can directly touch the touch screen to instruct operations and set features.
3	<Log In/Out> button	Lights up when a user is authenticated in the System Administration mode, the Authentication mode, or the Accounting mode. Displays the User ID entry screen for entering the System Administration mode, the Authentication mode, or the Accounting mode. Press this button to exit these modes.
4	<Job Status> button	Press this button to check or cancel the current job, to check or print stored jobs, or to check completed jobs.
5	<Machine Status> button	Press this button to check the machine status and meters, to check the status of consumables, and to print reports. Note By pressing the <Machine Status> button when you exchange consumables, you can make the output device exit the Energy Saver Mode and check the latest status of consumables.

No.	Component	Function
6	<Energy Saver> button	When the machine is not used for a while, it enters the Energy Saver mode to reduce power consumption. When the Energy Saver mode is active, the <Energy Saver> button lights up. Press this button to enter or exit the Energy Saver mode.
7	<Interrupt> button	Press this button to suspend a copy or print job in progress to have the machine process another job. During the Interrupt mode, the <Interrupt> button lights up. Pressing the <Interrupt> button again exits the Interrupt mode and resumes the suspended job. Some types of jobs cannot be executed in the Interrupt mode. Refer to "16 Appendix" > "Notes and Restrictions" > "Notes and Restrictions on the Interrupt Mode" in the Administrator Guide.
8	<Clear All> button	Returns the settings you made to the default values. The machine returns to the same state as when it is powered on.
9	<Stop> button	Press this button to pause the current copy job or communications.
10	<Start> button	Press this button to start scanning a document.
11	<Main Power> indicator	Lights up when the main power is switched on. Note • If the main power is not switched on, the machine will not be powered on even when the power is switched on.
12	<Error> indicator	Blinks if a system error occurs. This indicator lights up when a problem other than a system error occurs with the machine, including paper jams and running out of paper. If the <Error> indicator blinks, contact our Customer Support Center. For information on the remedies for paper jams and running out of paper, refer to "15 Problem Solving" in the Administrator Guide.
13	<Data> indicator	Blinks when the machine is sending or receiving data to or from a client. This indicator lights up when data is stored in the machine's memory, when received faxes are waiting to be printed, or when faxes are stored in a folder. You can check stored scan files in a Folder List. For information on the Folder List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Folder List" in the Administrator Guide. You can check stored fax files in a Stored File List. For information on the Stored File List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Job Status/Activity Report" > "Stored File List" in the Administrator Guide. You can change the lighting pattern of the <Data> indicator. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Data Indicator" in the Administrator Guide.
14	<Speed Dial> button	Press this button to specify a recipient with an address number when sending a fax or e-mail.
15	<C (Clear)> button	Press this button to cancel a numerical value you have entered with the numeric keypad.
16	<Dial Pause> button	Press this button to insert a pause into a destination number.
17	Numeric keypad	Use the numeric buttons on the keypad to enter the number of copies, passcodes, and other numerical values.
18	<Custom 1> (Copy) button	"Copy" is assigned to this button by default. Press this button to display the [Copy] screen. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the <Custom> Buttons" in the Administrator Guide.

No.	Component	Function
19	<Custom 2> (Not in Use) button	Press this button to call its associated service. To the button, you can assign [Language] or any service displayed on the [Services Home] screen. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the <Custom> Buttons" in the Administrator Guide.
20	<Custom 3> (Review) button	"Review" is assigned to this button by default. On the [Review] screen, you can check a list of the status of Copy, Fax, and Scan services whose settings have been changed from the defaults. You can also check the details of fax and e-mail recipients. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the <Custom> Buttons" in the Administrator Guide.
21	USB memory slot	Insert a USB 2.0 memory device here. Note This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
22	One touch panels (Only available for machines with the Fax service)	Contains one touch buttons. Turn over the panels to display buttons 1 - 72. There are two ways in which address numbers and stored programs are assigned to the one touch buttons. Select either of the following: [Type 1] The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons 71 and 72 are used for stored programs and they correspond to the registered stored programs 1 and 2. [Type 2] The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 72 are used for stored programs and they correspond to the registered stored programs 1 to 12. Note - By default, [Type 1] is selected. - This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center. For information on how to change the settings registered to the one touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.


No.	Component	Function
23	One touch buttons (Only available for machines with the Fax service)	Allows you to specify a recipient with the simple press of a button. You can use the buttons for fax and Internet fax jobs. Turn over the panels to display buttons 1 - 72. There are two ways in which address numbers and stored programs are assigned to the one touch buttons. Select either of the following: • [Type 1] The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons 71 and 72 are used for stored programs and they correspond to the registered stored programs 1 and 2. • [Type 2] The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 72 are used for stored programs and they correspond to the registered stored programs 1 to 12. Note • By default, [Type 1] is selected. • This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center. For information on how to change the settings registered to the one touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.
24	Embedded IC Card Reader (optional)	Used to authenticate a user using a smart card. When you touch the smart card to the IC Card Reader, the machine reads the user information registered on the smart card and authenticates the user. Note • An optional component is required to use this feature. For more information, contact our Customer Support Center. • When the machine is in the Energy Saver mode, touching the smart card to the IC Card Reader deactivates the Energy Saver mode. However, this operation does not deactivate the Sleep mode. For more information, refer to "Exiting the Energy Saver Mode" (P.55).
25	Paper clip tray	Used for placing paper clips and staples.

Large Size UI

The installation of the Large Size UI (optional) allows you to lay out where to locate the touch screen.

The following describes the names and functions on the Large Size UI.

Note • As the Large Size UI does not support the one touch panels, you cannot specify recipients with the one touch buttons.

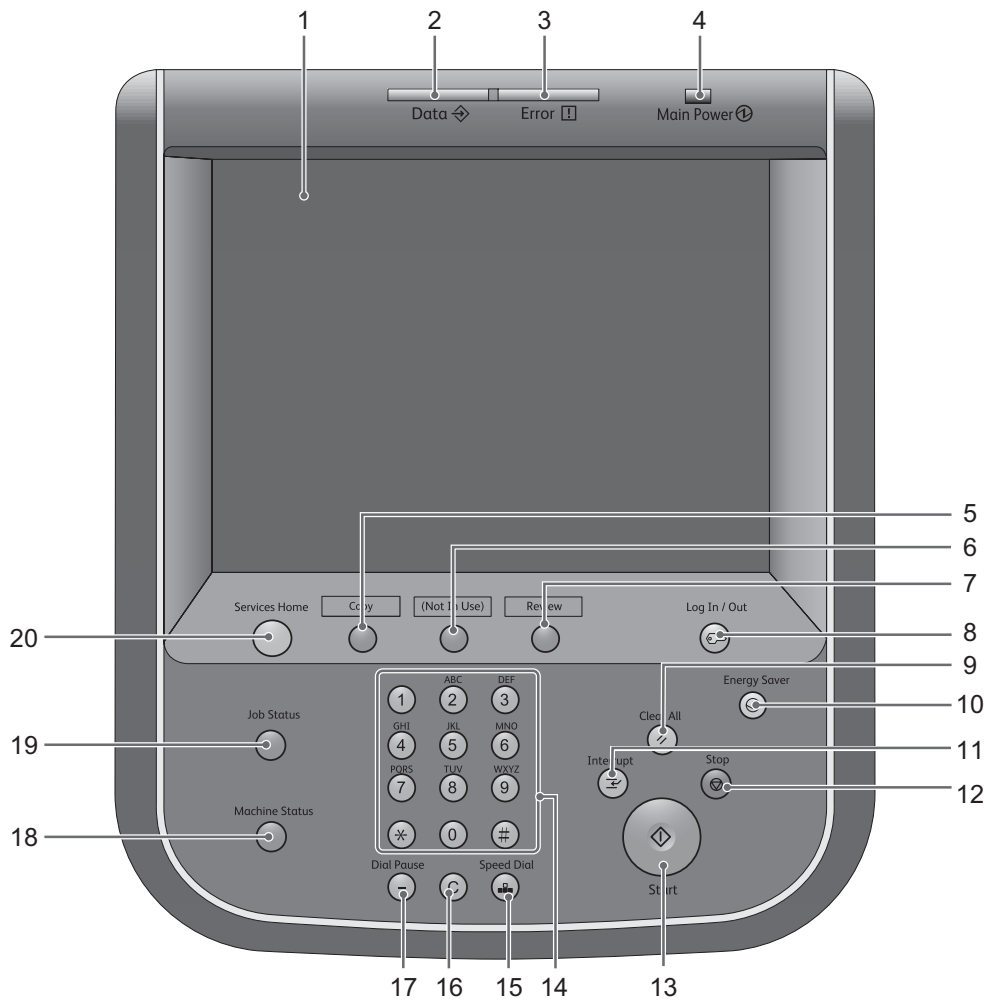

No.	Component	Function
1	Touch screen	Displays messages required for operation and buttons for various features. You can directly touch the touch screen to instruct operations and set features.

No.	Component	Function
2	<Data> indicator	Blinks when the machine is sending or receiving data to or from a client. This indicator lights up when data is stored in the machine's memory, when received faxes are waiting to be printed, or when faxes are stored in a folder. You can check stored scan files in a Folder List. For information on the Folder List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Folder List" in the Administrator Guide. You can check stored fax files in a Stored File List. For information on the Stored File List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Job Status/Activity Report" > "Stored File List" in the Administrator Guide. You can change the lighting pattern of the <Data> indicator. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Data Indicator" in the Administrator Guide.
3	<Error> indicator	Blinks if a system error occurs. This indicator lights up when a problem other than a system error occurs with the machine, including paper jams and running out of paper. If the <Error> indicator blinks, contact our Customer Support Center. For information on the remedies for paper jams and running out of paper, refer to "15 Problem Solving" in the Administrator Guide.
4	<Main Power> indicator	Lights up when the main power is switched on. Note • If the main power is not switched on, the machine will not be powered on even when the power is switched on.
5	<Custom 1> (Copy) button	"Copy" is assigned to this button by default. Press this button to display the [Copy] screen. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the <Custom> Buttons" in the Administrator Guide.
6	<Custom 2> (Not In Use) button	Press this button to call its associated service. To the button, you can assign [Language] or any service displayed on the [Services Home] screen. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the <Custom> Buttons" in the Administrator Guide.
7	<Custom 3> (Review) button	"Review" is assigned to this button by default. On the [Review] screen, you can check a list of the status of Copy, Fax, and Scan services whose settings have been changed from the defaults. You can also check the details of fax and e-mail recipients. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the <Custom> Buttons" in the Administrator Guide.
8	<Log In/Out> button	Lights up when a user is authenticated in the System Administration mode, the Authentication mode, or the Accounting mode. Displays the User ID entry screen for entering the System Administration mode, the Authentication mode, or the Accounting mode. Press this button to exit these modes.
9	<Clear All> button	Returns the settings you made to the default values. The machine returns to the same state as when it is powered on.
10	<Energy Saver> button	When the machine is not used for a while, it enters the Energy Saver mode to reduce power consumption. When the Energy Saver mode is active, the <Energy Saver> button lights up. Press this button to enter or exit the Energy Saver mode.

No.	Component	Function
11	<Interrupt> button	Press this button to suspend a copy or print job in progress to have the machine process another job. During the Interrupt mode, the <Interrupt> button lights up. Pressing the <Interrupt> button again exits the Interrupt mode and resumes the suspended job. Some types of jobs cannot be executed in the Interrupt mode. Refer to "16 Appendix" > "Notes and Restrictions" > "Notes and Restrictions on the Interrupt Mode" in the Administrator Guide.
12	<Stop> button	Press this button to pause the current copy job or communications.
13	<Start> button	Press this button to start scanning a document.
14	Numeric keypad	Use the numeric buttons on the keypad to enter the number of copies, passwords, and other numerical values.
15	<Speed Dial> button	Press this button to specify a recipient with an address number when sending a fax or e-mail.
16	<C (Clear)> button	Press this button to cancel a numerical value you have entered with the numeric keypad.
17	<Dial Pause> button	Press this button to insert a pause into a destination number.
18	<Machine Status> button	Press this button to check the machine status and meters, to check the status of consumables, and to print reports.
19	<Job Status> button	Press this button to check or cancel the current job, to check or print stored jobs, or to check completed jobs.
20	<Services Home> button	Press this button to display the [Services Home] screen. You can change the services displayed on the [Services Home] screen. For more information, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Customizing the Button Layout" > "Services Home" in the Administrator Guide.

Screens and Buttons Displayed

You can register or change the services and buttons displayed on the touch screen.

- Note**
- The following screens and buttons may have been changed by the system administrator. Use the machine according to the changes being made.

Setting the Initial Screen

You can set the screen displayed after switching the power on or exiting the Energy Saver mode.

Setting the Screen Displayed after Auto Clear

You can select [Last Selection Screen] or [Services Home] for the screen to be displayed after Auto Clear.

Assigning Services to the <Custom> Buttons

You can assign services to the <Custom> buttons on the control panel: Custom 1 to Custom 3.

By assigning frequently-used services to the <Custom> buttons, you can switch to the services without returning to the [Services Home] screen.

- Note**
- By default, "Copy" is assigned to the <Custom 1> button, and "Review" is assigned to the <Custom 3> button. No service is assigned to the <Custom 2> button.


Customizing the [Services Home] Screen

You can customize the layout of services and buttons on the [Services Home] screen that is displayed when you press the <Services Home> button on the control panel.

For information on how to customize the [Services Home] screen, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Customizing the Button Layout" > "Services Home" in the Administrator Guide.

About the [Services Home] Screen

This section describes the fields and buttons on the [Services Home] screen which is displayed by pressing the <Services Home> button.

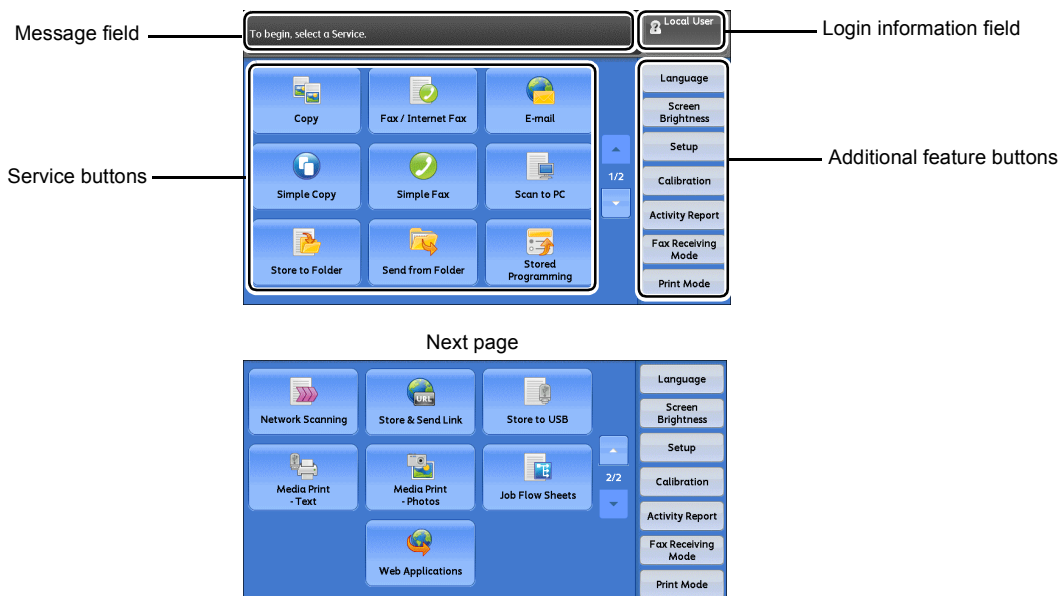

Message Field

Displays a message.

Login Information Field

Select this field in the upper right corner of the touch screen to display the User ID entry screen for entering the System Administration mode, the Authentication mode, or the Accounting mode.

When a user is authenticated, the login information is displayed in this field.

- Note**
- You can also press the <Log In/Out> button on the control panel to enter the Authentication mode.
 - To exit the Authentication mode, press the <Log In/Out> button on the control panel. You can also select the login information field in the upper right corner of the touch screen.

For information on the Authentication or Accounting mode, refer to "14 Authentication and Accounting Features" in the Administrator Guide.

Service Buttons

Allows you to set the features for each service.

■Copy

You can set the features for the Copy service.

For more information, refer to "Copy" (P.69).

■Fax/Internet Fax

You can set the features for the Fax service.

For more information, refer to "Fax" (P.165).

■E-mail

You can scan documents and send the scanned data as an e-mail attachment.

For more information, refer to "E-mail" (P.267).

■Simple Copy

You can set the features for the Copy service. Selecting [Simple Copy] allows you to easily specify the basic copy features on a single screen.

For more information, refer to "Simple Copy" (P.79).

■Simple Fax

You can set the features for the Fax service. Selecting [Simple Fax] allows you to easily specify the basic fax features on a single screen.

Note • This service does not appear on the screen when the Server Fax service is enabled.

For more information, refer to "Simple Fax" (P.191).

■Scan to PC

You can scan documents and send the scanned data to a network computer via the FTP or SMB protocol.

For more information, refer to "Scan to PC" (P.289).

■Store to Folder

You can scan documents and save the scanned data in a folder of the machine.

For more information, refer to "Store to Folder" (P.295).

■Send from Folder

You can operate files stored in a folder of the machine.

For more information, refer to "Send from Folder" (P.325).

■Stored Programming

You can operate stored programs.

Stored Programming is a service that allows you to store settings that you expect to use frequently and call them with a single button operation.

For more information, refer to "Stored Programming" (P.347).

■Network Scanning (ApeosPort series only)

You can scan documents after specifying a file (job template) saving scanning conditions, information on the forwarding destination server, and others.

For more information, refer to "Network Scanning" (P.287).

■Store & Send Link

After you scan documents, the machine temporarily saves the scanned data and sends you e-mail attached with two URLs: one is for the location to retrieve the scanned data, and the other is for the location to delete the data.

For more information, refer to "Store & Send Link" (P.301).

Note • This service appears on the screen when the Authentication feature is enabled.

For information on how to display [Store & Send Link] on the [Services Home] screen, refer to "1 Before Using the Machine" > "Customizing the Control Panel" in the Administrator Guide.

■Store to USB

You can scan documents and save the scanned data to a USB memory device.

For more information, refer to "Store to USB" (P.297).

Note • This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

■Media Print - Text

You can print document files (PDF, TIFF, and XML Paper Specification (XPS)) after retrieving the files from a CompactFlash card or a USB memory device. You can also print the scan data stored with the Store to USB service.

For more information, refer to "Media Print - Text" (P.370).

Note • This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

■Media Print - Photos

You can print image data (DCF1.0) taken with a digital camera. You can retrieve the data only from a CompactFlash card.

For more information, refer to "Media Print - Photos" (P.369).

Note • This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

■Job Flow Sheets

You can scan documents using a job flow sheet.

Job Flow Sheets is a service that allows you to set a flow of transfer settings of scan data for the efficient routine transfer.

For more information, refer to "Job Flow Sheets" (P.341).

■Web Applications (ApeosPort series only)

You can access to web applications via a network using the browser on the machine in order to display and store data.

For more information, refer to "Web Applications" (P.357).

Note • This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

Additional Feature Buttons

Allows you to set the additional features that are not related to jobs.

■Language

You can select the language to be displayed on the touch screen.

The language selected here will be invalid when the power is switched off and on.

Important • When you select [English], only ASCII characters can be used.

- When you set [Language] to [English] on the [Services Home] screen and an address book entry or contents of [Details] of Job Flow Sheets is entered in double-byte characters, the characters may not be displayed properly.

- When you use CentreWare Internet Services to import a CSV file* including double-byte characters other than a selected language, the characters in the file may be garbled or the import may fail.

*: CSV (Comma Separated Values) is a file format that is often used for saving data by spreadsheets and database programs.

Note • Under [Default Language] in the System Administration mode, you can select the standard language displayed on the touch screen when the power is switched on. For more information on how to set [Default Language], refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" > "Default Language" in the Administrator Guide.

■Screen Brightness

You can adjust the screen brightness of the touch screen.

■Lock Out Printer/Release Printer

You can set the machine to temporarily enable printing during the printer lockout period or to temporarily disable printing while [Release Printer] is displayed.

Note

- You can assign this button when [Printer Lockout] is set to [On] under [Tools] > [Common Service Settings] > [Machine Clock/Timers] and the [Allow User to Lock Out] check box is selected. For information on how to assign the feature to the button, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

■Setup

You can create or update folders, job flows, and the Address Book.

For more information, refer to "5 Tools" > "Setup" in the Administrator Guide.

■Calibration

The machine can automatically calibrate colors when the reproducibility of density or color in copies and prints deteriorates.

For more information, refer to "3 Maintenance" > "Executing Calibration" in the Administrator Guide.

■Activity Report

You can print an Activity Report to check if a transmission is successfully completed.

For information on the contents listed in the Activity Report, refer to "16 Appendix" > "Activity Report" in the Administrator Guide.

■Fax Receiving Mode

You can specify a mode for receiving faxes.

For more information, refer to "4 Machine Status" > "Machine Information" > "Fax Receiving Mode" in the Administrator Guide.


■Print Mode

You can register a print mode and change its settings.

For more information, refer to "4 Machine Status" > "Machine Information" > "Print Mode" in the Administrator Guide.

Entering Text

During operations, a screen for entering text sometimes appears. The following describes how to enter text.

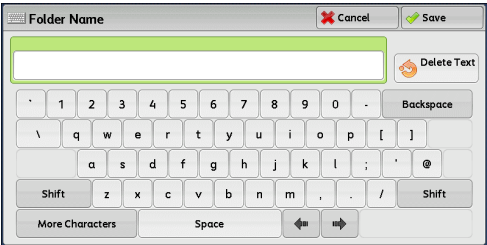

You can enter the following characters: numerals, alphabets, and symbols.

Item	Description
Entering alphabets and numerals	To enter uppercase letters, select [Shift]. To return to the lowercase letters, select [Shift] again.
Entering symbols	Select [More Characters]. Note • Depending on the keyboard, you can select a symbol from the pull-up options displayed on the bottom left of the screen.
Entering a space	Select [Space].
Deleting characters	Select [Backspace] to delete one character at a time.

3 Copy

This chapter describes the basic operation and features for the Copy service.

• Copying Procedure	70
• Operations during Copying	76
• Simple Copy	79
• Copy	85
• Image Quality.....	98
• Layout Adjustment.....	106
• Output Format.....	120
• Job Assembly	155

Copying Procedure

This section describes the basic copy procedures. The following shows the reference section for each procedure.

Step 1 Loading Documents	70
Step 2 Selecting Features	72
Step 3 Entering a Quantity	73
Step 4 Starting the Copy Job	74
Step 5 Confirming the Copy Job in Job Status	75

Step 1 Loading Documents

The following two methods are available to load documents:

■ Document Feeder

- Single sheet
- Multiple sheets

■ Document Glass

- Single sheet
- Bound documents, such as books

Document Feeder

■ Document Feeder

The document feeder supports single and multiple sheet documents with sizes from 139.7 x 139.7 mm (Standard size: A5, A5 $\square$, 5.5 x 8.5", 5.5 x 8.5" $\square$) to 297 x 432 mm (Standard size: A3, 11 x 17").

The document feeder automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying the Scan Size for the Document)" (P.111).

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

The document feeder accepts the following number of sheets.

Weight	Number of Sheets
38 - 80 gsm	250 sheets
81 - 128 gsm	150 sheets
129 - 200 gsm	100 sheets

Important • To avoid paper jams, use the document glass for folded or wrinkled documents, cut-and-pasted documents, curled paper, or back carbon paper.

- 2-sided scanning of lightweight paper (38 - 49 gsm) is not supported.

For information on how to copy mixed sized documents, refer to "Mixed Size Originals (Scanning Different Size Documents Simultaneously)" (P.112).

- 1 Remove any paper clips and staples before loading a document.

- 2 Adjust the document guides to match the size of the document loaded.



Note

- When loading a large size document such as A3, lift up the document feeder tray, and open the document stopper rightward.

- 3 Load the document face up (when the document is 2-sided, load the front side up) in the center of the document feeder.

Note

- The Confirmation indicator lights up when the document is loaded correctly.
- When the document is loaded in the document feeder, the document feeder tray lifts up. You can set the timing of the lift. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Document Feeder Tray Elevation" in the Administrator Guide.

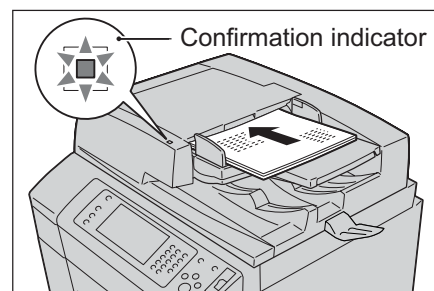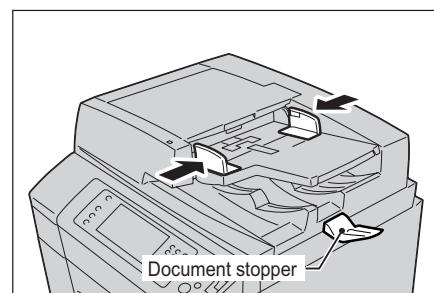

Document Glass

The document glass supports a single sheet, a book, or other similar documents with sizes from 15 x 15 mm to 297 x 432 mm (Standard size: A3, 11 x 17").

Important • Always close the document cover after using the document glass.

The document glass automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying the Scan Size for the Document)" (P.111).


The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on the paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

⚠ CAUTION


Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

- 1 Open the document cover.

Important • Ensure that the touch screen is active, and then load a document. Otherwise, the machine may not properly detect the document size.

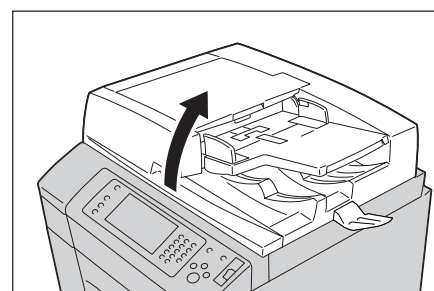

- 2** Load the document face down, and align it against the top left corner of the document glass.

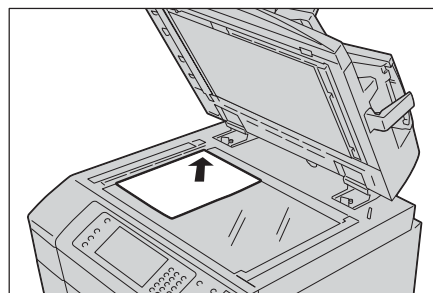

- 3** Close the document cover.

Note

- When a standard size document is loaded on the document glass, the size of the document is displayed in the message field.

Step 2 Selecting Features

The following two services are available to copy documents.

■ Simple Copy

Allows you to only select basic features to copy documents.

■ Copy

Allows you to make detailed settings to copy documents.


The following procedure uses [Copy] to describe how to select features.

For information on Simple Copy, refer to "Simple Copy" (P.79).

Note


- The features displayed on the screen depend on your machine configuration.
- When the Authentication or Accounting feature is enabled, a user ID and passcode may be required. Ask your system administrator for the user ID and passcode.

- 1** Press the <Services Home> button.

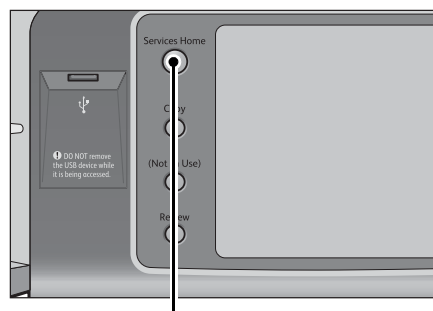


<Services Home> button

- 2** Select [Copy].

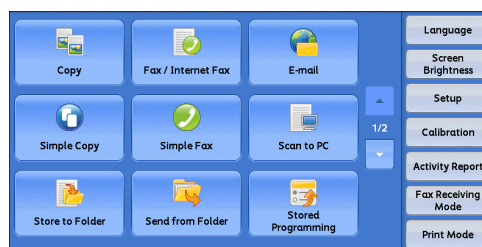


- 3 If the previous settings still remain, press the <Clear All> button.

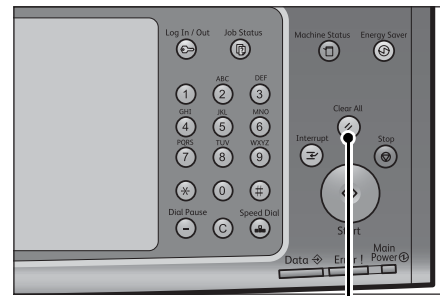

<Clear All> button

- 4 Select each tab, and configure features as necessary.

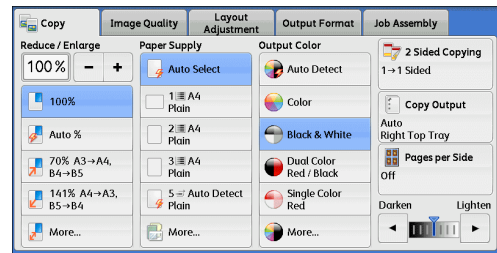

The following shows the reference section for each tab.

"Copy" (P.85)

"Image Quality" (P.98)

"Layout Adjustment" (P.106)


"Output Format" (P.120)

"Job Assembly" (P.155)

Step 3 Entering a Quantity


The following describes how to enter the number of copy sets. You can enter up to 9999 sets.

- 1 Enter the number of copies using the numeric keypad.
The number of copies entered appears on the upper right of the touch screen.

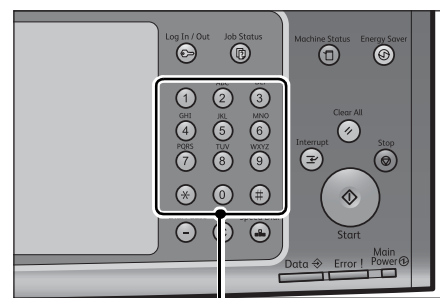

Numeric keypad

- 2 If you have entered an incorrect value, press the <C (Clear)> button and then enter the correct value.

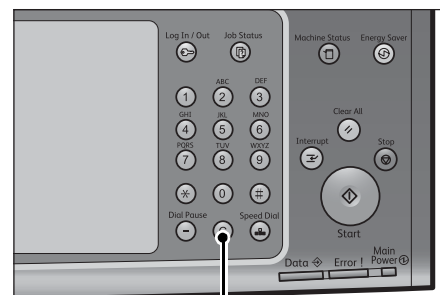

<C (Clear)> button

Step 4 Starting the Copy Job

The following describes how to start a copy job.


1 Press the <Start> button.

Important • If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.

- Copies cannot be made if a copy protection code is detected. For information on a copy protection code, refer to "Secure Watermark (Managing Document Security)" (P.138).

Note • If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.

- You can set the next job during copying.

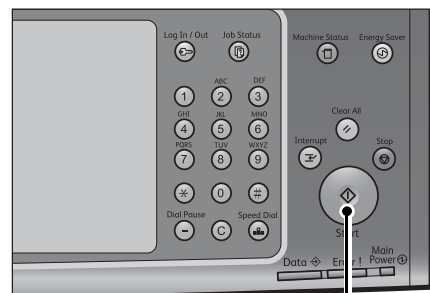

<Start> button


■If you have more documents

If you have more documents to copy, select [Next Original] on the touch screen while the current document is being scanned. This allows you to scan the documents as a single set of data.


2 Select [Next Original] while scanning is in progress.

Note • When using the document feeder, load the next document after the machine has finished scanning the first document.

- When [Next Original] is displayed on the screen shown on the right and no operation is performed for a certain period of time, the machine automatically assumes that there are no more documents.
- You can change the number of copies by selecting [Change Quantity] that is displayed after selecting [Delete].

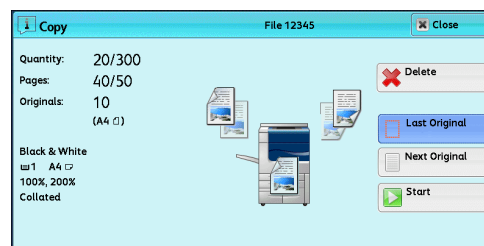


3 Load the next document.

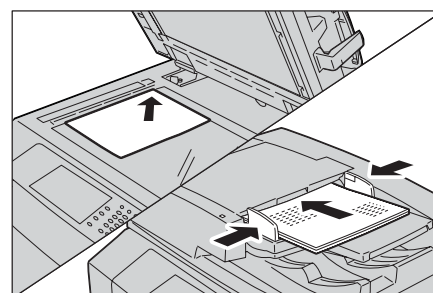

4 Press the <Start> button.

If you have more documents, repeat steps 3 and 4.


- 5 When all documents have been scanned, select [Last Original].

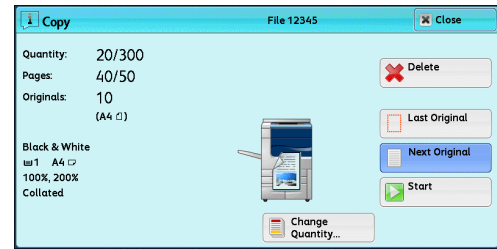

Step 5 Confirming the Copy Job in Job Status

If copies are not output after you start the copy job, the job may be in pending status. Use the following procedure to confirm the job status.

- 1 Press the <Job Status> button.

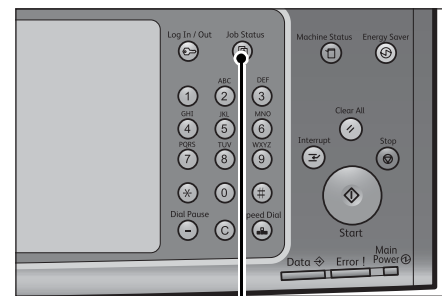

<Job Status> button

- 2 Confirm the job status.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen

Active Jobs

Completed Jobs

Secure Print Jobs & More

Print Waiting Jobs

Close

 All Jobs

Display Time

File / Job Type	Remote Terminal	Status	Progress	
00111 - Print	A:B	Printing	11/22	▲
02222 - Copy	11x22mm:3%	Copying	55/66	
Get Information				
Get Information				
Get Information XXXXXX				▼

Operations during Copying


This section describes available operations during copying. The following shows the reference section for each operation.

Stopping the Copy Job	76
Changing the Number of Copies.....	77
Interrupting the Copy Job	78


Stopping the Copy Job

To cancel a copy job in progress, use the following procedure.


- 1 Press either the <Stop> button on the control panel or [Delete] on the touch screen.

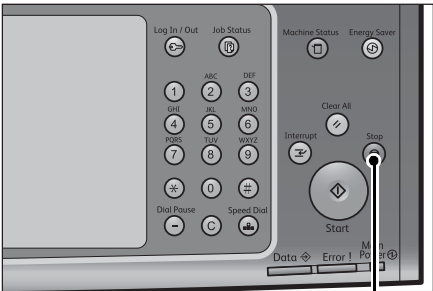

<Stop> button

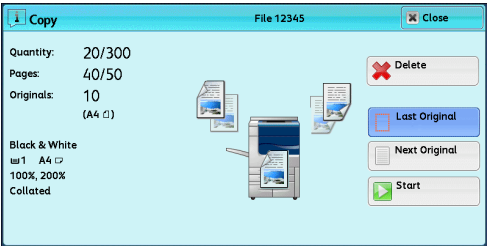


- 2 Select [Delete].

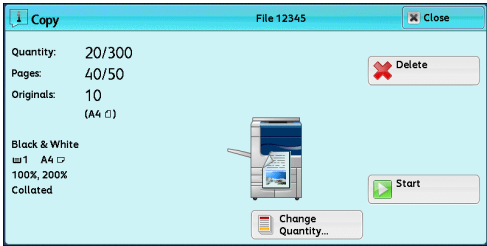

■If [Delete] does not appear on the screen:


- 1 Press the <Job Status> button.

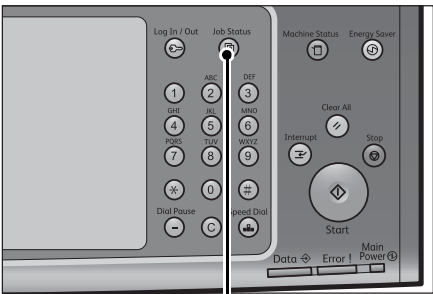


<Job Status> button

2 Select the job to cancel.


Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

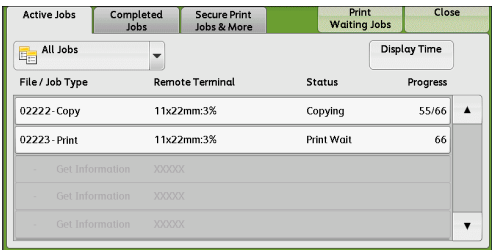

3 Select [Delete].

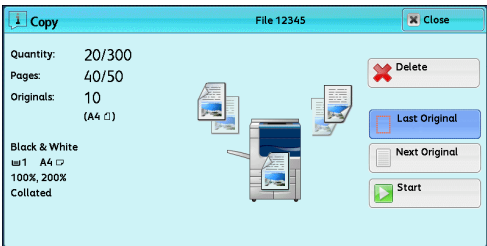

4 Select [Delete].

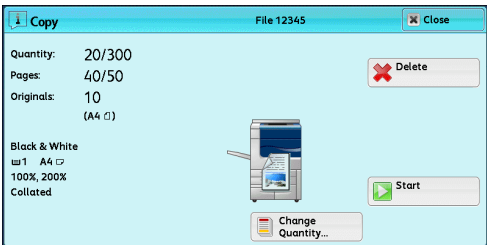


Copy
3


Changing the Number of Copies

To change the number of copy sets during scanning or copying, use the following procedure.


1 Press either the <Stop> button on the control panel or [Delete] on the touch screen.

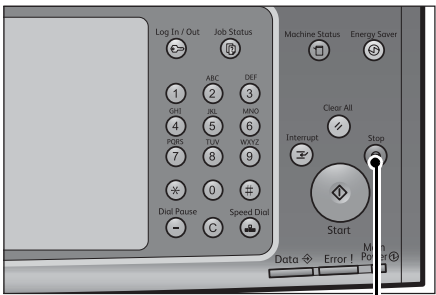

<Stop> button

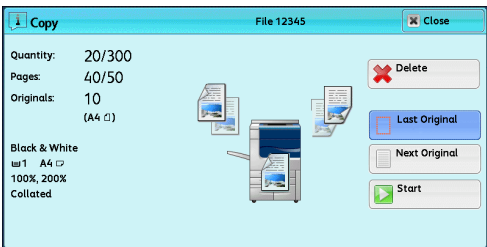

2 Select [Change Quantity].

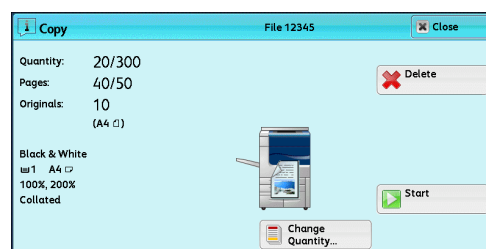

3 Specify the number of copy sets with the numeric keypad. The new quantity must include the number of copies that have already been printed. You cannot enter a number less than the number of copies that have already been printed.

4 Press the <Start> button.


Note • If you enter the same value as the number of copies that have already been printed, the machine will not execute a copy job even when you press the <Start> button.

Interrupting the Copy Job

You can temporarily stop the copy job to have the machine process another job.

Important • Press the <Interrupt> button only after all the documents have been scanned. The machine does not accept another job while it is scanning the documents, or [Next Original] has been selected.

1 Press the <Interrupt> button. The <Interrupt> button lights up to indicate that the machine is in the Interrupt mode.

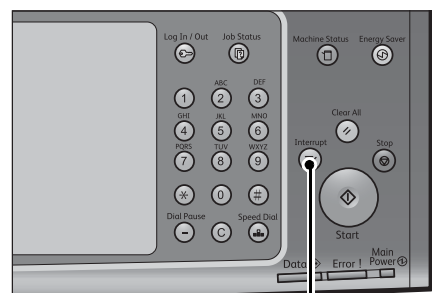

<Interrupt> button

2 Load a document and set features if necessary.

3 Specify the number of copy sets with the numeric keypad.

4 Press the <Start> button.

5 After you have finished making the interrupt copy, press the <Interrupt> button.

The <Interrupt> button goes out to indicate that the Interrupt mode is exited.

Note • If you used the document glass to copy the document, remove the document from the document glass.

6 Press the <Start> button.

The suspended copy job is resumed.


Simple Copy

You can select [Copy] or [Simple Copy] on the [Services Home] screen to set the features for the Copy service.


This section describes the features you can select on the [Simple Copy] screen. [Simple Copy] allows you to use only basic features to easily copy documents. The following shows the reference section for each feature.

Paper Supply (Selecting the Paper for Copying)	79
Reduce/Enlarge (Making Enlarged/Reduced Copies).....	80
2 Sided Copying (Making 2 Sided Copies).....	81
Black & White/Color (Selecting the Color for Copying)	81
Lighten/Darken (Adjusting the Copy Density)	82
2 Pages per Side (Copying Two Pages onto One Sheet).....	82
1 Staple.....	82

- 1 Select [Simple Copy] on the [Services Home] screen.

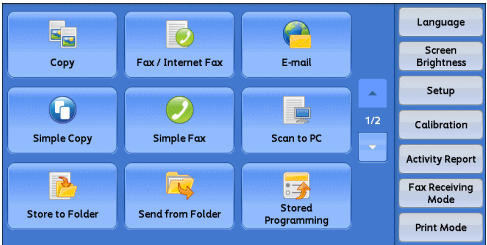


- 2 Select a feature on the [Simple Copy] screen.

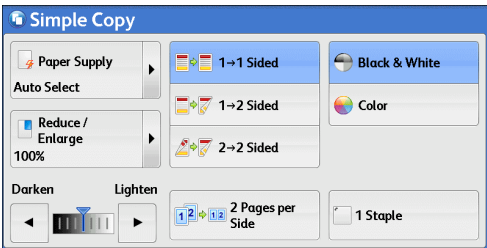


Paper Supply (Selecting the Paper for Copying)

This feature allows you to select the paper tray for copying.

- 1 Select [Paper Supply].

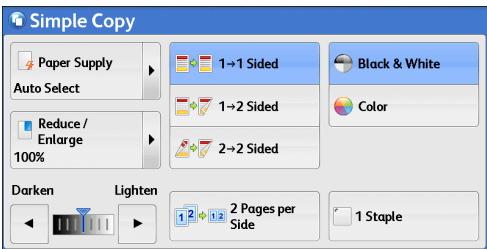

- 2 Select a paper tray to be used.

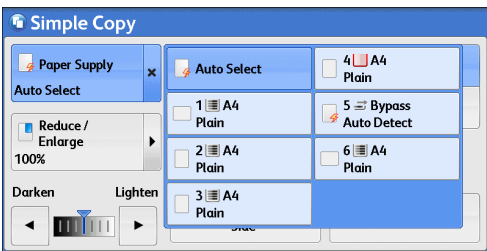

■Auto Select

Automatically determines the tray holding the appropriate paper, based on the document size and the specified copy ratio.

Note • If you select [Auto Select], an option other than [Auto %] is selected in [Reduce/Enlarge].

■Trays 1 to 4, and Tray 6 (optional)


Allows you to directly select the desired tray.

■Tray 5 Bypass Auto Detect

Automatically detects the size of paper loaded in the bypass tray.

Checking the Remaining Amount of Paper in a Tray

The icons displayed in a tray allows you to check the remaining amount of paper loaded in the tray.

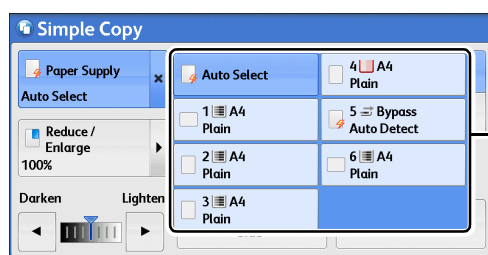

You can view the icons to check the remaining amount of paper in a tray.



: Indicates that the remaining amount of paper is 25 to 100%.



: Indicates that the remaining amount of paper is 25% or less.




: Indicates that the tray has run out of paper, or no paper is loaded in the tray.


Reduce/Enlarge (Making Enlarged/Reduced Copies)

This feature allows you to select a copy ratio to enlarge or reduce the size of copies.

- 1 Select [Reduce/Enlarge].

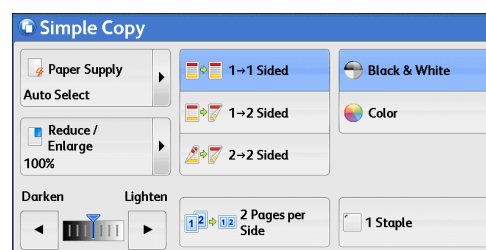

- 2 Select a copy ratio.

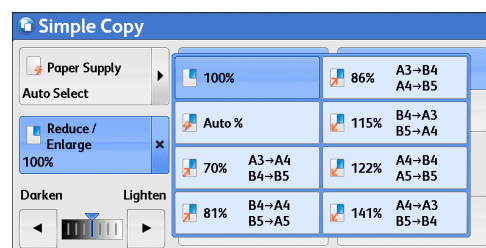

■100%

Copies at the same image size as the original document.

■Auto %

Automatically determines the copy ratio based on the document size and the paper size specified in [Paper Supply], and copies the document to fit into the paper.

Note • If you select [Auto %], an option other than [Auto Select] is selected in [Paper Supply].


■Ratios

Allows you to select from preset copy ratios.

2 Sided Copying (Making 2 Sided Copies)

This feature allows you to copy 1-sided and 2-sided documents on one side or both sides of paper.

- 1 Select any option.

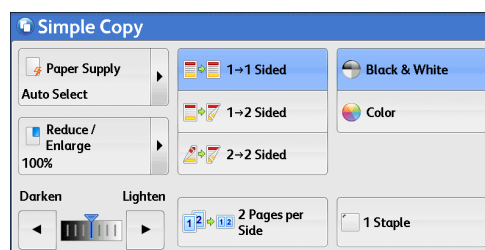**■1 → 1 Sided**

Makes a copy of a 1-sided document on one side of the paper.

■1 → 2 Sided

Makes a copy of a 1-sided document on both sides of the paper.


■2 → 2 Sided

Makes a copy of a 2-sided document on both sides of the paper.

Black & White/Color (Selecting the Color for Copying)

This feature allows you to select a color mode.

- 1 Select [Black & White] or [Color].

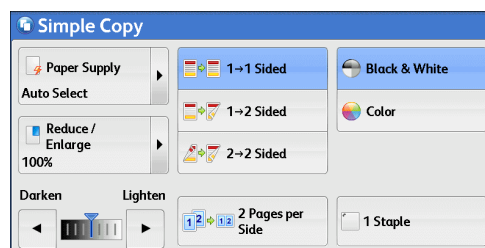**■Black & White**

Copies in black and white regardless of the colors in the original document.

■Color


Copies in full color.

Note • If the use of certain colors is not allowed, the available colors will be restricted. For more information, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" > "Account Limit" in the Administrator Guide.

Lighten/Darken (Adjusting the Copy Density)

This feature allows you to select a copy-density level from seven levels. The copy becomes darker when you move [▼] to the left, and lighter when you move it to the right.

- 1 Use [◀] and [▶] to set the density level.

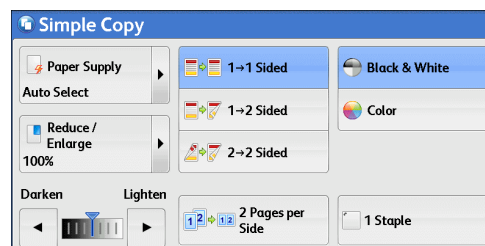

2 Pages per Side (Copying Two Pages onto One Sheet)


This feature allows you to copy two pages of a document together onto a single sheet of paper.

When you select [2 Pages per Side], [Auto %] is automatically selected in [Reduce/Enlarge]. The machine automatically sets the copy ratio and makes copies of the images so that they fit on the selected paper.

- Note**
- When you deselect [Auto %] in [Reduce/Enlarge] (when you select another copy ratio), image loss may occur depending on the image size of the document.
 - Select a tray other than [Auto Select] in [Paper Supply]. When you select [Auto Select], the tray containing A4 paper is selected. If no tray contains A4 paper, the machine select a tray based on the [Auto Paper Off] setting. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Auto Paper Off" in the Administrator Guide.

For information on how to copy four or eight pages of a document together onto a single sheet of paper, refer to "Pages per Side (Copying Multiple Pages onto One Sheet)" (P.125).

- 1 Select [2 Pages per Side].

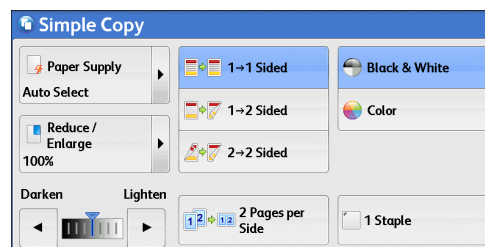

1 Staple

This feature allows you to select whether to staple copied outputs at the top left corner.

The number of sheets that can be stapled is 2 - 50 (when 80 gsm paper is used) with Finisher C2 or Finisher C2 with Booklet Maker, and 2 - 100 (when 80 gsm paper is used) with Finisher D2-P with Booklet Maker. Available paper types are as follows.

- Finisher C2 or Finisher C2 with Booklet Maker

- | | |
|-----------------------------------|-----------------------------------|
| - Plain (64 - 79 gsm) | - Plain (80 - 90 gsm) |
| - Plain (91 - 105 gsm) | - Heavyweight (106 - 128 gsm) |
| - Heavyweight (129 - 150 gsm) | - Heavyweight (151 - 176 gsm) |
| - Extra-HW (177 - 220 gsm) | - Plain Reload (64 - 79 gsm) |
| - Plain Reload (80 - 90 gsm) | - Plain Reload (91 - 105 gsm) |
| - HW Reload (106 - 128 gsm) | - HW Reload (129 - 150 gsm) |
| - HW Reload (151 - 176 gsm) | - Extra HW Reload (177 - 220 gsm) |
| - Punched (64 - 79 gsm) | - Punched (80 - 90 gsm) |
| - Punched (91 - 105 gsm) | - Punched HW 1 (106 - 128 gsm) |
| - Punched HW 1 (129 - 150 gsm) | - Punched HW 1 (151 - 176 gsm) |
| - Punched HW 2 (177 - 220 gsm) | - Tab Stock (106 - 128 gsm) |
| - Tab Stock (129 - 150 gsm) | - Tab Stock (151 - 176 gsm) |
| - HW Tab Stock (177 - 220 gsm) | - Recycled (64 - 79 gsm) |
| - Recycled (80 - 90 gsm) | - Recycled (91 - 105 gsm) |
| - Gloss (106 - 128 gsm) | - Gloss (129 - 150 gsm) |
| - HW Gloss (151 - 176 gsm) | - HW Gloss (177 - 220 gsm) |
| - Gloss Reload (106 - 128 gsm) | - Gloss Reload (129 - 150 gsm) |
| - HW Gloss Reload (151 - 176 gsm) | - HW Gloss Reload (177 - 220 gsm) |


- Finisher D2-P with Booklet Maker

- | | |
|-------------------------------------|-----------------------------------|
| - Plain (64 - 79 gsm) | - Plain (80 - 90 gsm) |
| - Plain (91 - 105 gsm) | - Heavyweight (106 - 128 gsm) |
| - Heavyweight (129 - 150 gsm) | - Heavyweight (151 - 176 gsm) |
| - Extra-HW (177 - 220 gsm) | - Extra-HW Plus (221 - 256 gsm) |
| - X-HW Plus 2 (257 - 300 gsm) | - Plain Reload (64 - 79 gsm) |
| - Plain Reload (80 - 90 gsm) | - Plain Reload (91 - 105 gsm) |
| - HW Reload (106 - 128 gsm) | - HW Reload (129 - 150 gsm) |
| - HW Reload (151 - 176 gsm) | - Recycled (64 - 79 gsm) |
| - Recycled (80 - 90 gsm) | - Recycled (80 - 90 gsm) |
| - Recycled (91 - 105 gsm) | - Gloss (106 - 128 gsm) |
| - Gloss (129 - 150 gsm) | - Gloss (151 - 176 gsm) |
| - HW Gloss (177 - 220 gsm) | - X-HW Gloss (221 - 256 gsm) |
| - Gloss Reload (106 - 128 gsm) | - Gloss Reload (129 - 150 gsm) |
| - HW Gloss Reload (151 - 176 gsm) | - HW Gloss Reload (177 - 220 gsm) |
| - X-HW Gloss Reload (221 - 256 gsm) | - Tab Stock (106 - 128 gsm) |
| - Tab Stock (129 - 150 gsm) | - Tab Stock (151 - 176 gsm) |
| - HW Tab Stock (177 - 220 gsm) | - X-HW Tab Stock (221 - 256 gsm) |
| - X-HW Tab Stock (257 - 300 gsm) | |

Finisher D2-P with Booklet Maker cuts the staple nails depending on the number of sheets. The stapled nails may be bent depending on the type of paper used.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [1 Staple].

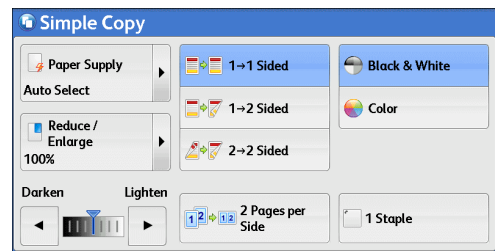

Copy


You can select [Copy] or [Simple Copy] on the [Services Home] screen to set the features for the Copy service.

This section describes the features you can select on the [Copy] screen. The following shows the reference section for each feature.


Reduce/Enlarge (Making Enlarged/Reduced Copies).....	85
Paper Supply (Selecting the Paper for Copying)	89
Output Color (Selecting the Color for Copying).....	92
2 Sided Copying (Making 2 Sided Copies).....	96
Copy Output (Specifying Finishing Options)	96
Pages per Side (Copying Multiple Pages onto One Sheet)	97
Lighten/Darken (Adjusting the Copy Density)	97

You can customize the layout of the features displayed on the [Copy] screen. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Tab - Features Allocation" in the Administrator Guide.

- 1 Select [Copy] on the [Services Home] screen.

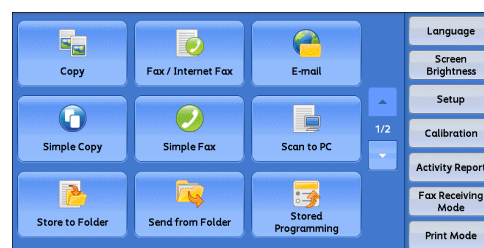


- 2 Select a feature on the [Copy] screen.

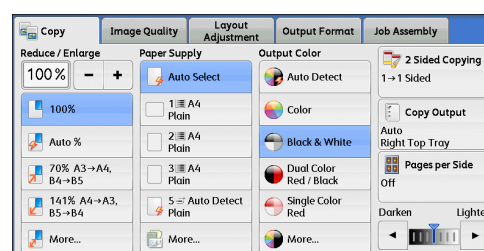

Reduce/Enlarge (Making Enlarged/Reduced Copies)

This feature allows you to select a copy ratio to enlarge or reduce the size of copies.

- 1 Specify a copy ratio. You can use the numeric keypad to specify a value, or [+] and [-] to specify reduction/enlargement ratios directly.

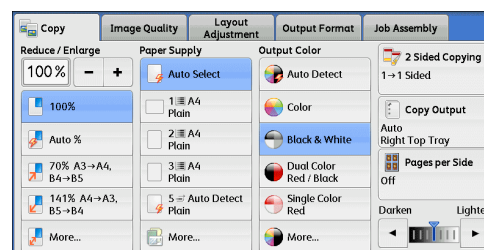

■100%

Copies at the same image size as the original document.

■Auto %

Automatically determines the copy ratio based on the document size and the paper size specified in [Paper Supply], and copies the document to fit into the paper.

Note • If you select [Auto %], an option other than [Auto Select] is selected in [Paper Supply].

■ Ratios (3rd and 4th buttons)

Displays preset copy ratios.

You can change the copy ratio associated with each button. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Preset Buttons" > "Reduce/Enlarge - Button" in the Administrator Guide.

■ More


Displays the [Reduce/Enlarge] screen on which you can set [Proportional %], [Independent X - Y%], and [Calculator %].

For information on the settings on the [Reduce/Enlarge] screen, refer to "When [Proportional %] is Selected" (P.86), "When [Independent X - Y%] is Selected" (P.87), or "When [Calculator %] is Selected" (P.88).

When [Proportional %] is Selected

You can select a ratio from the standard copy ratios, or can enter a ratio directly.

- 1 Select a copy ratio, or specify a value.

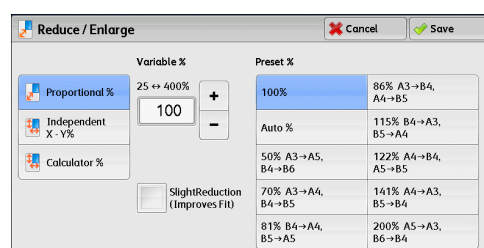

■ Variable %

Specify a ratio in the range from 25 to 400% in 1% increments. To specify a value, use the numeric keypad or [+] and [-]. Specifying "100 %" allows you to make copies at the same image size as the original document.

When you make enlarged/reduced copies from standard sized documents on standard sized paper, the following copy ratios will be applied.

Copy Original	A6	B6	A5	B5	A4	B4	A3
A6	100%	122%	141%	173%	200%	245%	283%
B6	82%	100%	116%	142%	164%	200%	232%
A5	71%	86%	100%	122%	141%	174%	200%
B5	58%	70%	81%	100%	115%	141%	163%
A4	50%	61%	70%	86%	100%	122%	141%
B4	41%	50%	58%	70%	81%	100%	115%
A3	35%	43%	50%	61%	70%	86%	100%

How to load a document depends on the size and orientation of a document. For more information, refer to "Step 1 Loading Documents" (P.70).

For information on paper that can be loaded, refer to "2 Paper and Other Media" > "Paper Types" in the Administrator Guide.

■Preset %

Select a copy ratio from the following options.

- 100%

Copies at the same image size as the original document.

- Auto %

Automatically determines the copy ratio based on the document size and the paper size specified in [Paper Supply], and copies the document to fit into the paper.

Note • If you select [Auto %], an option other than [Auto Select] is selected in [Paper Supply].

- Preset ratios

Select from the preset ratios.

You can change the copy ratio associated with each button. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Reduce/Enlarge Presets" in the Administrator Guide.

■Slight Reduction (Improves Fit)


Select this check box to slightly reduce the specified copy ratio to copy the complete image onto the paper.

Important • If you select [Slight Reduction (Improves Fit)] and you do not want to erase the edges of the document, set the amount of edge erase to 0 mm. Note that if the amount is set to 0 mm, the edges of the copied document may get dirty. You can set [Edge Erase] on the [Layout Adjustment] screen. For more information, refer to "Edge Erase (Erasing Edges and Margin Shadows of the Document)" (P.113).

When [Independent X - Y%] is Selected

You can specify reduction/enlargement ratios for the width and length individually.

- 1 Select any option.

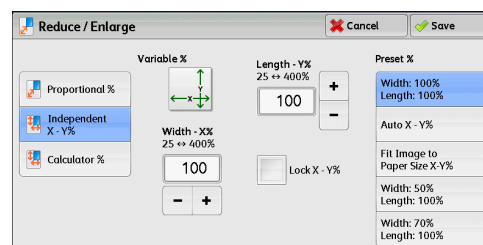

■Variable %

- Width - X%, Length -Y%

Allows you to specify reduction/enlargement ratios for the width and length in the range from 25 to 400% in 1% increments. Use [+] and [-] or the numeric keypad to specify a ratio.

■Lock X - Y%

Allows you to make the same ratio adjustment for the width and length at the same time.

■Preset %

- Width: 100% /Length: 100%

Copies at the same image size as the original document.

- Auto X - Y%

Automatically determines the reduction/enlargement ratios for the width and length so that the document image fits in the paper.

- Fit Image to Paper Size X - Y%

Automatically determines the reduction/enlargement ratios for the width and length so that the document image fits in the paper, and then slightly reduces the ratios so that the complete image is copied onto the paper.

- Width: XX% Length: XX%

Allows you to specify the preset reduction/enlargement ratios.

When [Calculator %] is Selected


You can specify values for the length and width individually.

If you specify both the original document size and the desired copy size, the copy ratios for the length and width are calculated automatically in the range from 25 to 400% according to the values that you entered.

Important • Selecting [Calculator %] allows you to set copy ratios. The values entered in [Original Size] and [Copy Size] are used to calculate ratios, and do not reflect a scan size for the document or the paper size. Be sure to specify a scan size for the document. Also, select a paper tray if necessary.

For information on how to specify a scan size for the document, refer to "Original Size (Specifying the Scan Size for the Document)" (P.111). For information on how to select a paper tray, refer to "Paper Supply (Selecting the Paper for Copying)" (P.89).

- 1 Enter the width of the original document in [Original Size] of [Width X%] using the numeric keypad.

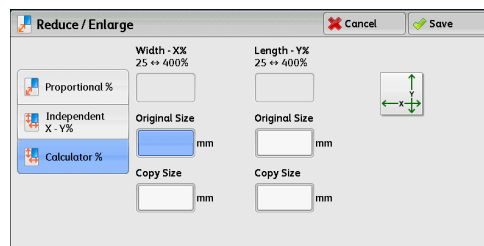

- 2 Enter the width of the output copy in [Copy Size] of [Width X%] using the numeric keypad.
- 3 In the same way, enter the length for [Original Size] and [Copy Size] of [Length Y%].

■Width X% / Length Y%

Displays the ratios that are automatically calculated using the values set in [Original Size] and [Copy Size].

■Original Size

Allows you to enter the width and length of the original document, in the range from 1 to 999 mm in 1 mm increments.


■Copy Size

Allows you to enter the width and length of output copies, in the range from 1 to 999 mm in 1 mm increments.

Paper Supply (Selecting the Paper for Copying)

This feature allows you to select the tray that holds the paper you want to use.

1 Select a paper tray.

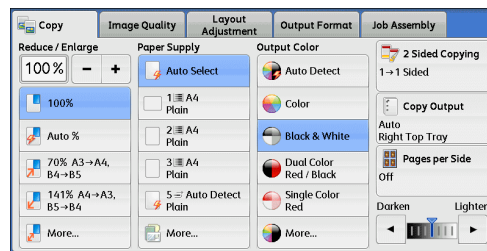

■Auto Select

Automatically determines the tray holding the appropriate paper, based on the document size and the specified copy ratio.

Note • If you select [Auto Select], an option other than [Auto %] is selected in [Reduce/Enlarge].

■Trays (2nd to 5th buttons)

Allows you to directly select the desired tray.

You can change the paper tray associated with each button on the [Copy] screen. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Preset Buttons" > "Paper Supply - Button" in the Administrator Guide.


■More

Displays the [Paper Supply] screen.

Refer to "[Paper Supply] Screen" (P.90).

Checking the Remaining Amount of Paper in a Tray

The icons displayed in a tray allows you to check the remaining amount of paper loaded in the tray.

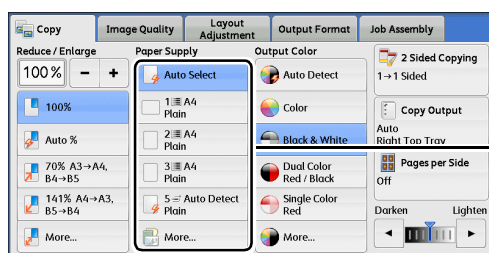

You can view the icons to check the remaining amount of paper in a tray.



: Indicates that the remaining amount of paper is 25 to 100%.



: Indicates that the remaining amount of paper is 25% or less.




: Indicates that the tray has run out of paper, or no paper is loaded in the tray.

[Paper Supply] Screen

This screen allows you to select a paper tray from all trays available on the machine.

- 1 Select a paper tray.

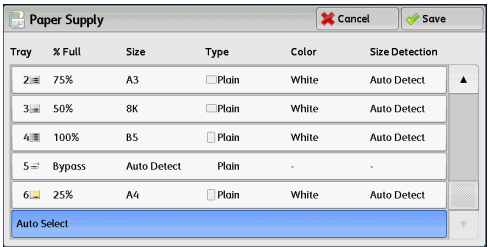

■Tray

Allows you to select a paper tray. When [Bypass] is selected, the [Tray 5] screen is displayed where you can specify a paper type other than plain paper, and non-standard size paper.

For more information, refer to "[Tray 5] Screen" (P.90).

Note • Tray 6 is optional.

■% Full

Displays the remaining amounts of paper loaded in trays.

■Size

Displays paper sizes.

■Type

Displays paper types.

■Color

Displays paper colors.

For information on how to set [Paper Color], refer to "5 Tools" > "Common Service Settings" > "Paper Tray Settings" > "Paper Tray Attributes" in the Administrator Guide.

■Size Detection

Displays how the machine detects a paper size.

For information on how to set [Size Detection], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.


[Tray 5] Screen

Set the paper loaded in Tray 5.

For information on paper that can be loaded in Tray 5, refer to "2 Paper and Other Media" > "Paper Types" in the Administrator Guide.

- 1 Select a paper size and a paper type.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.
• [Auto Detect] is available only when standard sized paper is loaded.

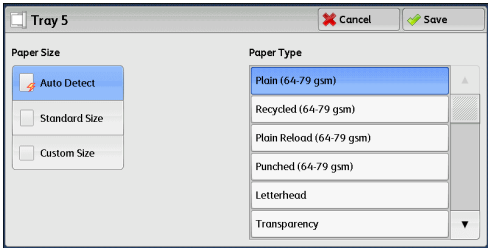

■Paper Size

Select from [Auto Detect], [Standard Size], and [Custom Size].

When you select [Auto Detect], the paper size is identified automatically.

When you select [Standard Size] or [Custom Size], refer to "When [Standard Size] is Selected" (P.91) or "When [Custom Size] is Selected" (P.91), respectively.

■Paper Type


Select a paper type.

When [Standard Size] is Selected

Select [Standard Size], and from the lists displayed, select a paper size and then a paper type.

- 1 Select a paper size and a paper type.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

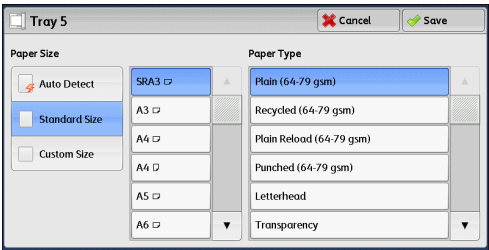


When [Custom Size] is Selected

Enter the width and length of the original document on the fields displayed after selecting [Custom Size].

Specify the X (width) in the range from 148 to 488mm, and the Y (length) in the range from 100 to 330 mm in 1 mm increments.

Important • If the X (width) of non-standard size paper is less than 140 mm, documents may not be copied properly.
• When copying on both sides of non-standard size paper, specify the size in the range from 140 to 483 mm for the X (width) direction and from 128 to 320 mm for the Y (length) direction.

- 1 Enter a paper size using [+] and [-] or the numeric keypad.

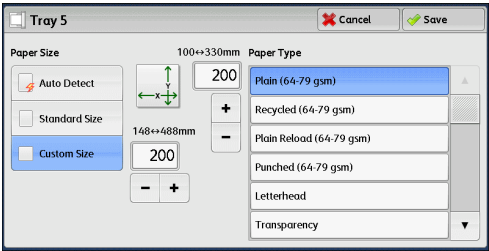

- 2 Select a paper type.


Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

Output Color (Selecting the Color for Copying)

This feature allows you to select copy colors.

Note • If the use of certain colors is not allowed, the available colors will be restricted. For more information, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" > "Account Limit" in the Administrator Guide.

1 Select a color mode.

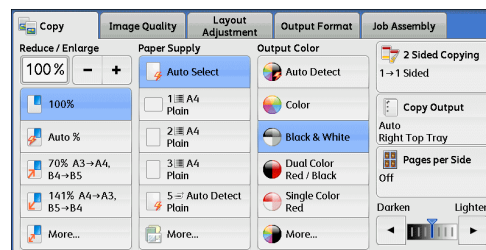

■Auto Detect

The machine automatically determines the colors of the original document and makes copies in full color if the original document is colored, and in single color (black) if the document is black-and-white.

Note • If a color document is in one of the following conditions, the machine may copy the document in black and white.

- The colored area is too small.
- The colors are too light.

In that case, change a level from the five levels which is used for the machine to recognize color. For more information, refer to "5 Tools" > "Common Service Settings" > "Image Quality Adjustment" > "Image Quality" > "Output Color Recognition" in the Administrator Guide.

■Color

Copies in full color.

■Black & White

Copies in black and white regardless of the colors in the original document.

■Dual Color Red/Black

Copies color documents using two colors.

You can change the two colors. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Defaults" > "Dual Color - Target Area Color" and "Dual Color - Non-target Area Color" in the Administrator Guide.

■Single Color Red

Copies color documents using one color.

You can change the red color to another one on the screen displayed after selecting [More] > [Single Color] > [Color]. For more information, refer to "5 Tools" > "Copy Service Setting" > "Copy Defaults" > "Single Color" in the Administrator Guide.

■More


Displays the [Output Color] screen.

For more information, refer to "[Output Color] Screen" (P.93).


[Output Color] Screen

This screen allows you to make settings for full color, dual color, and single color.

- 1 Select [More].

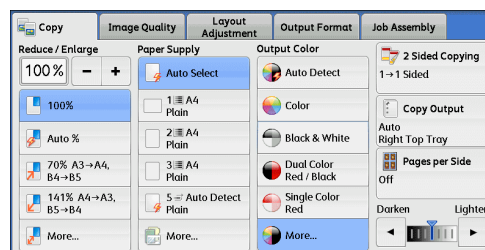

- 2 Select the desired output color mode.

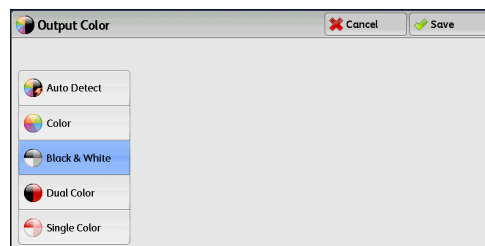

■Auto Detect

Automatically determines the color of the original document and makes copies in full color if the original document is colored, or in single color (black) if the document is black-and-white.

■Color

Copies in full color using all the four colors of toner: yellow, magenta, cyan, and black.

■Black & White

Copies in black and white regardless of the colors in the original document.

■Dual Color

Separates the colors of your document into the source colors and the other colors, and then copies the document using two colors. Selecting [Dual Color] allows you to set the following:

- Source Color

Displays the [Source Color] screen on which you can select one or more colors from your document to define them as source colors.

Refer to "[Source Color] Screen" (P.94).

- Target Area Color

Displays the [Target Area Color] screen on which you can select the target color to be used in place of the selected source colors.

Refer to "[Target Area Color] Screen" (P.94).

- Non-target Area Color

Displays the [Non-target Area Color] screen on which you can select the color to be used in place of the colors other than the selected source colors.

Refer to "[Non-target Area Color] Screen" (P.95).

■Single Color

Copies in one specified color regardless of the color of the document.


Selecting this option displays [Color] on the screen. Select a color on the [Output Color - Color] screen which is displayed after selecting [Color].

Refer to "[Output Color - Color] Screen" (P.96).


[Source Color] Screen

This screen allows you to select one or more colors from your document to define them as source colors.


1 Select [Dual Color].

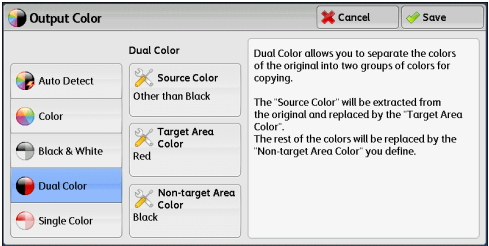

2 Select [Source Color].

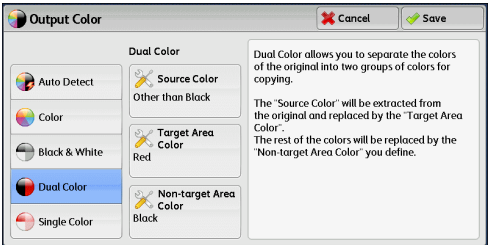

3 Select [Other than Black] or [Color].

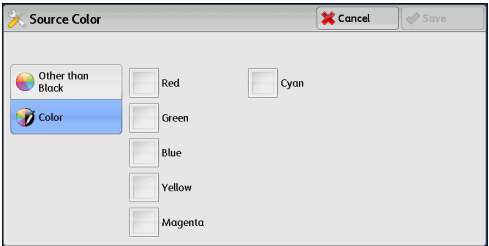

■Other than Black

The colors other than black will be the source colors.

■Color


Allows you to select one or more source colors from six preset options.

[Target Area Color] Screen

This screen allows you to select the target color to be used in place of the source colors specified in [Source Color]. You can select one color from seven preset and six custom options.

For information on how to set custom colors, refer to "5 Tools" > "Copy Service Settings" > "Custom Colors" in the Administrator Guide.


1 Select [Dual Color].

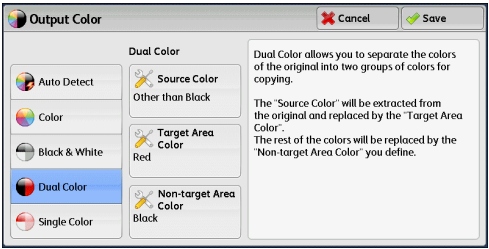

2 Select [Target Area Color].



3 Select any color.

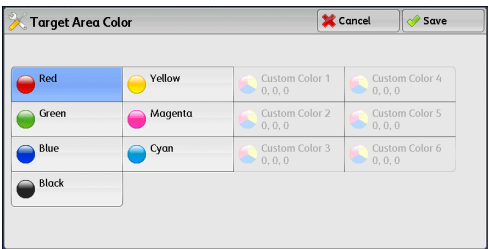


[Non-target Area Color] Screen


This screen allows you to select the color to be used in place of the colors other than the selected source colors. You can select one color from seven preset and six custom options.

For information on how to set custom colors, refer to "5 Tools" > "Copy Service Settings" > "Custom Colors" in the Administrator Guide.


1 Select [Dual Color].

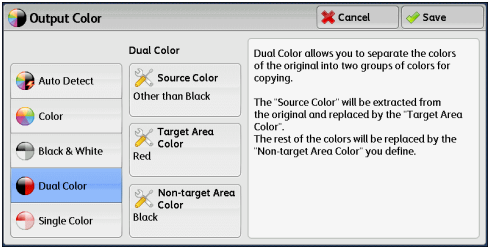

2 Select [Non-target Area Color].

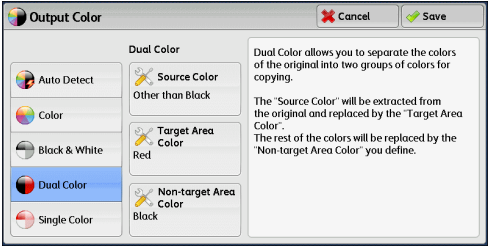

3 Select any color.

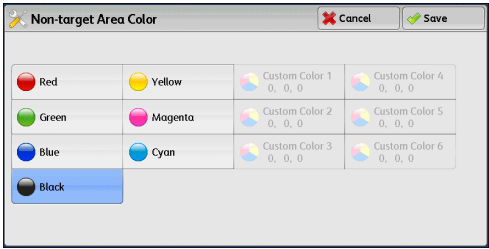


[Output Color - Color] Screen


This screen allows you to specify the color to be used for single-color copying regardless of the colors in the original document.

You can select one color from six preset and six custom options for [Single Color].
For information on how to set custom colors, refer to "5 Tools" > "Copy Service Settings" > "Custom Colors" in the Administrator Guide.


1 Select [Single Color].

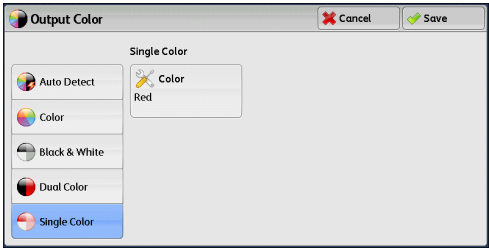

2 Select [Color].

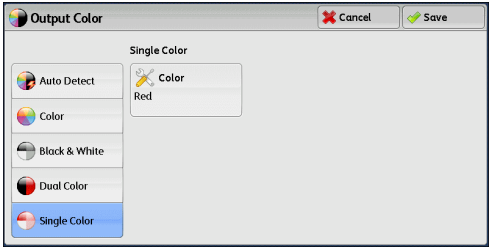

3 Select any color.

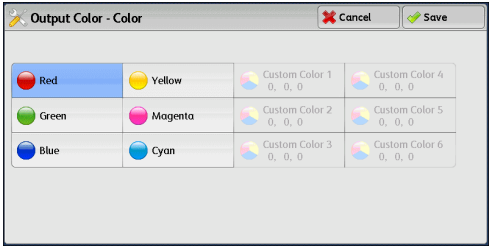

2 Sided Copying (Making 2 Sided Copies)

This feature is the same as [2 Sided Copying] on the [Layout Adjustment] screen. For more information, refer to "2 Sided Copying (Making 2 Sided Copies)" (P.106).

Copy Output (Specifying Finishing Options)

This feature is the same as [Copy Output] on the [Output Format] screen. For more information, refer to "Copy Output (Specifying Finishing Options)" (P.146).

Pages per Side (Copying Multiple Pages onto One Sheet)

This feature is the same as [Pages per Side] on the [Output Format] screen. For more information, refer to "Pages per Side (Copying Multiple Pages onto One Sheet)" (P.125).

Lighten/Darken (Adjusting the Copy Density)

This feature allows you to select a copy-density level from seven levels. The copy becomes darker when you move [▼] to the left, and lighter when you move it to the right.

Note • [Lighten/Darken] on the [Copy], [Image Quality] and [Simple Copy] screens is the same.

- 1 Use [◀] and [▶] to select from seven density levels.


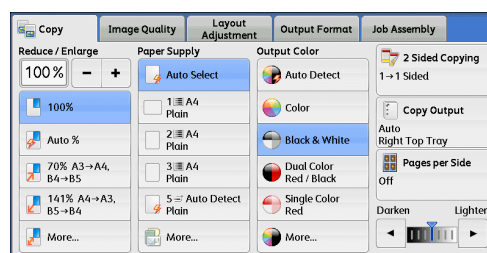


Image Quality


The section describes the features you can select on the [Image Quality] screen. The following shows the reference section for each feature.

Original Type (Selecting the Document Type).....	98
Image Options (Adjusting Copy Density/Sharpness/Saturation of Images).....	99
Image Enhancement (Erasing the Background Color of Documents/Adjusting Contrast)	100
Color Effects (Selecting an Image Quality).....	101
Color Balance (Adjusting Color Balance)	102
Color Shift (Adjusting the Color Tone)	104
Gloss Level (Enhancing Gloss of the Document).....	105

1 Select [Copy] on the [Services Home] screen.

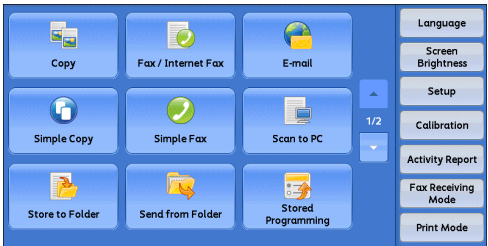

2 Select a feature on the [Image Quality] screen.

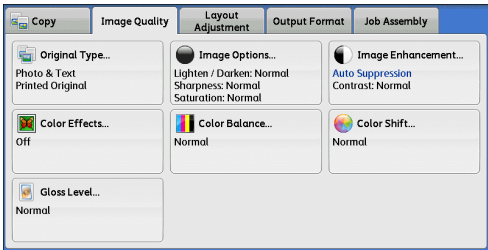


Note • If the color reproduction is unsatisfactory, perform calibration. For information on calibration, refer to "3 Maintenance" > "Executing Calibration" in the Administrator Guide.


Original Type (Selecting the Document Type)

This feature allows you to select the type of documents, such as text and photos. By selecting a document type, you can make copies at optimum image quality.

1 Select [Original Type].

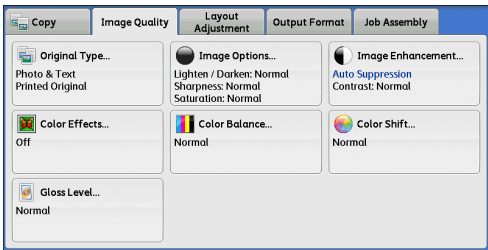

2 Select any option.

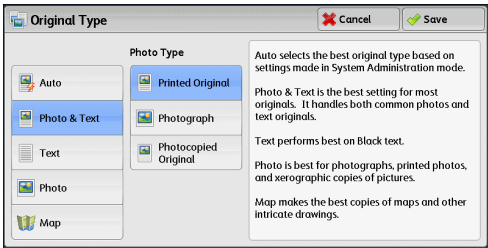

■Auto

Automatically sets the document type based on the setting made in the System Administration mode and the setting made in [Output Color] on the [Copy] screen.

■Photo & Text

Select this option when the document contains both text and photos. The machine automatically distinguishes the text and photo areas of the document and sets the appropriate image quality for each area. To process photo areas, select the photo type from [Printed Original], [Photograph], and [Photocopied Original].

- Printed Original

Select this option when the document contains printed photos, such as a brochure.

- Photograph

Select this option when the document contains pasted photos. This option prevents the copy from being reproduced bluish.

- Photocopied Original

Select this option when the document is a copy or print made with a color copier such as this machine. This option prevents the copy from being reproduced faintly.

■Text

Select this option to copy text areas of the document sharply. This option is suitable for graphs and illustrations.

- Normal Text

Select this option for printed documents, or for documents written with ink.

- Light Text

Select this option for text that requires enhancement, such as handwritten pencil text.

- Text on See-Through Paper

Select this option to reduce blurs of tracing-paper documents or to suppress background shadows of lightweight documents.

[Text on See-Through Paper] may not be displayed depending on the setting in the System Administration mode. For information on how to display [Text on See-Through Paper], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Original Type - See-Through Paper" in the Administrator Guide.

■Photo

Select this option to make copies of photos. Select the photo type from the same options as [Photo & Text]: [Printed Original], [Photograph], and [Photocopied Original].

■Map


Select this option to make copies of documents that have text placed on color backgrounds, such as maps.

Image Options (Adjusting Copy Density/Sharpness/Saturation of Images)


This feature allows you to adjust the copy density, sharpness, and saturation levels.

- Note**
- [Lighten/Darken] under [Image Options] is the same as [Lighten/Darken] on the [Copy] screen.
 - If [Lighten/Darken], [Sharpness], or [Saturation] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.

1 Select [Image Options].

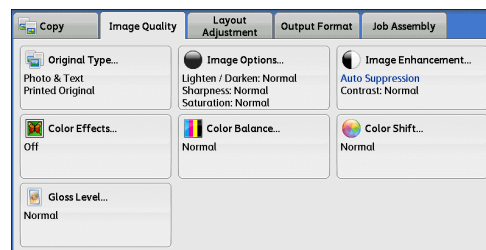

2 Adjust options.

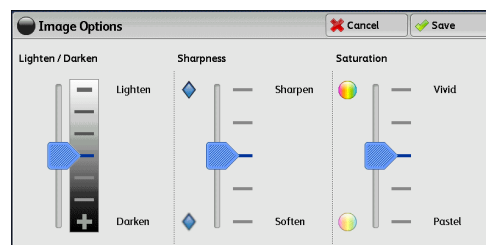

■Lighten/Darken

Allows you to select from seven copy density levels between [Lighten] and [Darken].

Selecting an upper cell on the bar makes the copy density lighter, and selecting a lower cell makes darker.

■Sharpness

Allows you to select from five sharpness levels between [Sharpen] and [Soften].

Selecting an upper cell on the bar makes the contours of images sharper, and selecting a lower cell makes softer.

■Saturation

Allows you to select from five saturation levels between [Vivid] and [Pastel].


Selecting an upper cell on the bar makes colors brighter, and selecting a lower cell makes less bright.

Image Enhancement (Erasing the Background Color of Documents/ Adjusting Contrast)


This feature allows you to suppress the background color of documents, such as newspaper and colored paper. You can also adjust the contrast.

- Note**
- [Image Enhancement] is not available when [Original Type] is set to [Photo].
 - If [Suppress Background] or [Contrast] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.

1 Select [Image Enhancement].

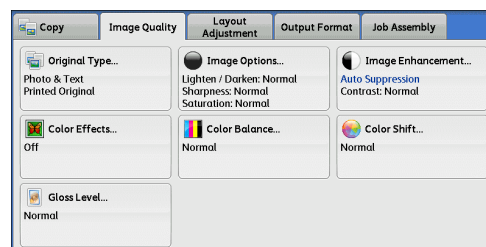

2 Set [Suppress Background] and [Contrast].

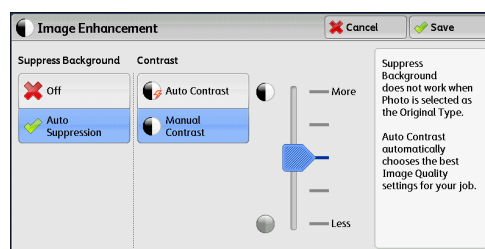

■ Suppress Background

- Off

Scans document backgrounds with no filtering.

- Auto Suppression

When [Output Color] is set to [Black & White], the background of a document printed on colored paper, such as newspaper, will be suppressed.

When [Output Color] is set to [Color], [Dual Color], or [Single Color], the background of a document printed on white-color paper will be suppressed.

- Note**
- When [Output Color] is set to [Color], you can change the level of background suppression. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Background Suppression (Photo & Text)" and "Background Suppression Level (Text)" in the Administrator Guide.

■ Contrast

- Auto Contrast

Automatically adjusts the brightness and hue of the original document to sharpen the image.

- Note**
- [Auto Contrast] is not available when you use the document feeder.

- Manual Contrast

Allows you to select from the five levels between [More] and [Less].

Selecting an upper cell on the bar makes the difference between light and dark areas greater; light areas become lighter and dark areas darker. In contrast, selecting a lower cell on the bar makes the difference between light and dark areas smaller.


Color Effects (Selecting an Image Quality)

If you set this feature, the [Image Options], [Image Enhancement], [Color Balance], and [Color Shift] settings are automatically adjusted and copies are made at the specified quality.


Important • When the Color Effects feature is used, [Auto Contrast] is not available.

- Note**
- If other image-quality settings are made after you set [Color Effects], the setting made in [Color Effects] will be cleared.

1 Select [Color Effects].

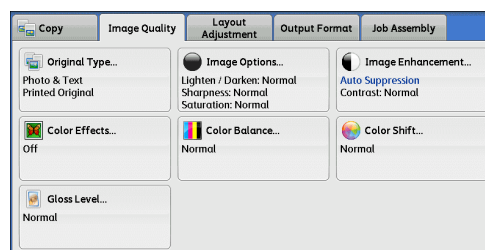

2 Select any option.

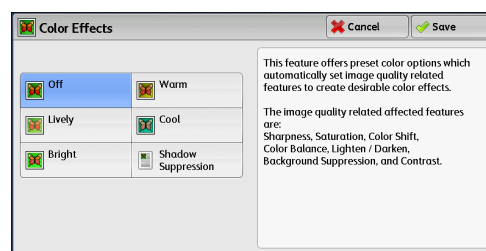

■Off

Copies with the [Image Options], [Image Enhancement], [Color Balance], and [Color Shift] settings at their defaults.

■Lively

Reproduces fresher, livelier images with increased color saturation.

■Bright

Reproduces brighter images with enhanced contrast. This option is suitable for documents that are intended to attract people's attention, such as posters.

■Warm

Reproduces brighter, warmer, more reddish images. This option is suitable when skin tones are to be reproduced more pinkish or when subdued images are to be reproduced more warmly.

■Cool

Reproduces clearer blue colors. This option is suitable for water and sky images, and is also suitable when smoky blue colors are to be reproduced more clearly.

■Shadow Suppression

Suppresses the colors on the reverse side of the original document from being reproduced in the copy.


Color Balance (Adjusting Color Balance)

This feature allows you to adjust the color balance of the four CMYK toner colors (cyan, magenta, yellow and black). You can select from seven levels for each density level: Highlights, Midtones, and Shadows.


The Color Balance feature finely adjusts the density level for each toner color to fine-tune the color balance, such as a reddish or bluish tint, while the Lighten/Darken feature adjusts the overall density level of the four colors.

Note • If [Color Balance] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.

1 Select [Color Balance].

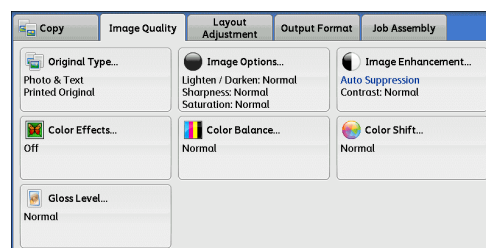

2 Select any option.

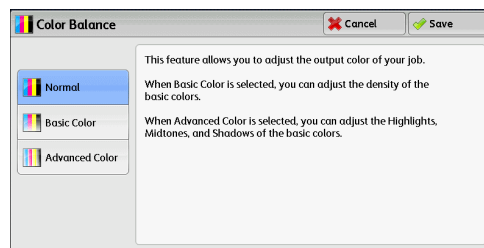


■Normal

Always copies a document with the density balance set to "0" for the four toner colors: - yellow, magenta, cyan, and black.


■Basic Color

Allows you to adjust the density level for each toner color: yellow, magenta, cyan, black.

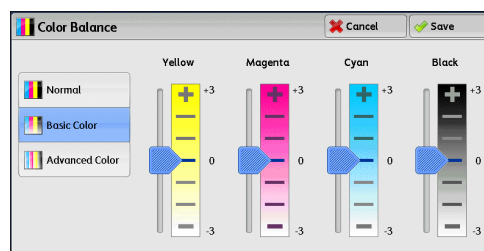

■Advanced Color

Allows you to adjust the density level for each toner color (yellow, magenta, cyan, black) which is divided to [Highlights], [Midtones], and [Shadows].

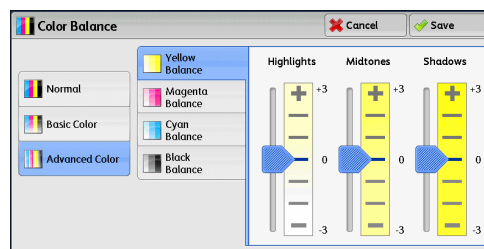

■Highlights

Allows you to adjust the color strength of low-density areas.

Example:

If low-density yellow is printed darker, adjust the color strength in the minus (-) direction under [Yellow Balance] > [Highlights].

■Midtones

Allows you to adjust the color strength of medium-density areas.

Example:

If medium-density yellow is printed lighter, adjust the color strength in the plus (+) direction under [Yellow Balance] > [Midtones].

■Shadows

Allows you to adjust the color strength of high-density areas.

Example:

If high-density yellow is printed lighter, adjust the color strength in the plus (+) direction under [Yellow Balance] > [Shadows].

Color Shift (Adjusting the Color Tone)

This feature allows you to adjust the tone of the colors to be reproduced in copies, by a maximum of two levels in two directions.


On the screen, the [Original Color] slider represents the color tone of the original document, and the [Copy Color] slider represents the color tone of output copies. Selecting a button on the screen moves the [Original Color] slider to adjust the tone of the colors.

When the [Original Color] slider is moved to the left, the Y (yellow) cell on the [Original Color] slider becomes closer to the R (red) cell on the [Copy Color] slider, and thus a yellow fruit appears more reddish and riper-looking. At the same time, the tone of all the other colors changes. The red color appears more magentish, and the green color appears more yellowish.


Conversely, when the [Original Color] slider is moved to the right, the Y (yellow) cell on the [Original Color] slider becomes closer to the G (green) cell on the [Copy Color] slider, and thus a yellow fruit appears more greenish. At the same time, the tone of all the other colors changes. The magenta color appears more reddish, and the red color appears more yellowish.

- Note**
- Ensure that [Output Color] is set to [Color] on the [Copy] screen. [Color Shift] is not available when [Output Color] is set to [Black & White].
 - If [Color Shift] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.

1 Select [Color Shift].

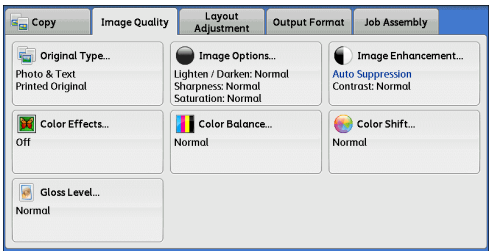

2 Select a button to adjust the color tone.

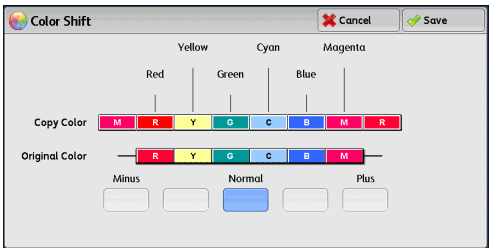

Gloss Level (Enhancing Gloss of the Document)

This feature allows you to change the gloss level of an output by lowering the speed.

- The following paper types are available for this feature:

- Plain (80 - 90 gsm)	- Plain (91 - 105 gsm)
- Recycled (80 - 90 gsm)	- Recycled (91 - 105 gsm)
- Plain Reload (80 - 90 gsm)	- Plain Reload (91 - 105 gsm)
- Punched (80 - 90 gsm)	- Punched (91 - 105 gsm)
- Heavyweight (106 - 128 gsm)	- Heavyweight (129 - 150 gsm)
- Heavyweight (151 - 176 gsm)	- HW Reload (106 - 128 gsm)
- HW Reload (129 - 150 gsm)	- HW Reload (151 - 176 gsm)
- Extra-HW (177 - 220 gsm)	- Extra HW Reload (170 - 220 gsm)
- Extra-HW Plus (221 - 256 gsm)	- X-HW Plus Reload (221 - 256 gsm)
- X-HW Plus 2 (257 - 300 gsm)	- X-HW Plus 2 RL (257 - 300 gsm)
- Punched HW 1 (106 - 128 gsm)	- Punched HW 1 (129 - 150 gsm)
- Punched HW 1 (151 - 176 gsm)	- Punched HW 2 (177 - 220 gsm)
- Punched HW 3 (221 - 256 gsm)	- Punched HW 4 (257 - 300 gsm)


Important • When using ApeosPort-IV C5580 or DocuCentre-IV C5580, this feature is not available for paper with weight of less than 105 gsm.

- The effect of this feature is not applied to Plain (64 - 79 gsm), Recycled (64 - 79 gsm), Plain Reload (64 - 79 gsm), and Punched (64 - 79 gsm) although they are displayed as options.
- Setting by a customer engineer is required to apply the effect of this feature to Gloss (106 - 128 gsm), Gloss Reload (106 - 128 gsm), Gloss (129 - 150 gsm), Gloss Reload (129 - 150 gsm), HW Gloss (151 - 176 gsm), HW Gloss Reload (151 - 176 gsm), X-HW Gloss (221 - 256 gsm), X-HW Gloss Reload (221 - 256 gsm), and Postcard. To use these options, contact our Customer Support Center.
- The effect of this feature is applied only when [Color] is selected in [Output Color].


Note • To display [Gloss Level] on the [Image Quality] screen, a prior setting is required in the System Administration mode. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Gloss Level" in the Administrator Guide.

• When using the Build Job feature, you can independently specify the gloss level for each copy set. In this case, the copy job may be suspended each time the machine adjusts the settings. In addition, the copies are divided into chapters at the positions where the gloss level changes.

1 Select [Gloss Level].

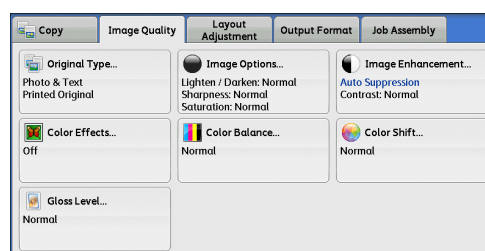

2 Select [Normal] or [Enhanced].

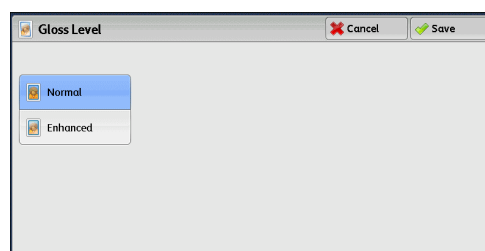


Layout Adjustment

This section describes the features you can select on the [Layout Adjustment] screen. The following shows the reference section for each feature.



2 Sided Copying (Making 2 Sided Copies)	106
Book Copying (Copying Facing Pages onto Separate Sheets)	108
2 Sided Book Copying (Making 2 Sided Copies of Facing Pages)	109
Original Size (Specifying the Scan Size for the Document)	111
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	112
Edge Erase (Erasing Edges and Margin Shadows of the Document)	113
Image Shift (Adjusting the Image Position)	114
Invert Image (Making Reversed Copies of Images)	117
Original Orientation (Specifying the Orientation of Loaded Documents)	118
Image Rotation (Changing the Orientation of Images)	118

- 1 Select [Copy] on the [Services Home] screen.

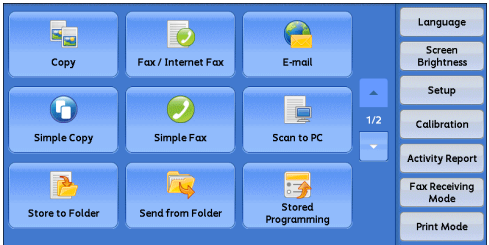

- 2 Select a feature on the [Layout Adjustment] screen.


Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

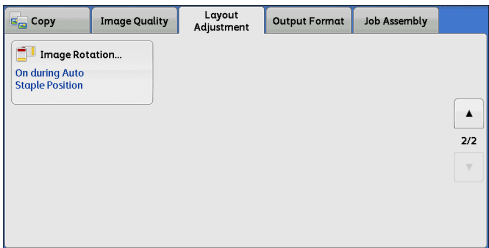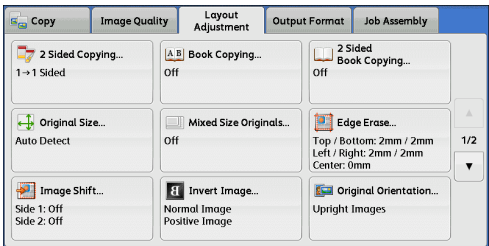


2 Sided Copying (Making 2 Sided Copies)

This feature allows you to make copies of 1-sided and 2-sided documents on one side or both sides of paper.

- 1 Select [2 Sided Copying].

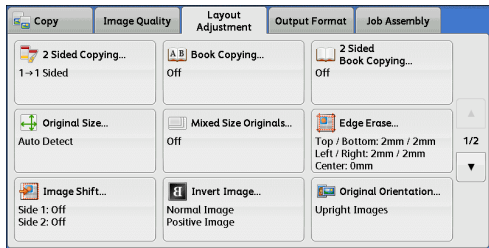

2 Select any option.

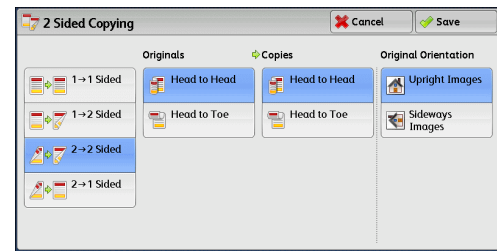

■ 1 → 1 Sided

Makes a copy of a 1-sided document on one side of paper.

■ 1 → 2 Sided

Makes a copy of a 1-sided document on both sides of paper.

Select this option when you copy 1-sided documents on both sides of paper.

■ 2 → 2 Sided

Makes a copy of a 2-sided document on both sides of paper.

■ 2 → 1 Sided

Makes a copy of a 2-sided document on one side of paper.

■ Originals

This option is displayed when you select [2 → 2 Sided] or [2 → 1 Sided].

- Head to Head

Select this option when the front and back sides of the document are in the same orientation.

- Head to Toe

Select this option when the front and back sides of the document are in opposite orientations.

■ Copies

This option is displayed when you select [1 → 2 Sided] or [2 → 2 Sided].

- Head to Head

Select this option when you want the orientation of the front and back sides of the copy to be the same as that of the document.

- Head to Toe

Select this option when you want the orientation of the front and back sides of the copy to be the opposite of that of the document.

■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

- If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.


- Sideways Images
Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

Book Copying (Copying Facing Pages onto Separate Sheets)


This feature allows you to copy facing pages of a document on separate sheets of paper in page order.
This is useful when you need to make separate copies of facing pages of a bound document such as a booklet.

- Note**
- You cannot use the document feeder with this feature.
 - A non-standard size document or undetectable-size document may not be separated into two accurately.

1 Select [Book Copying].

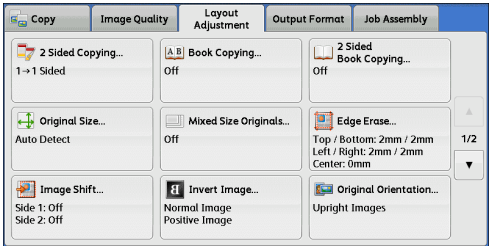


2 Select any option.

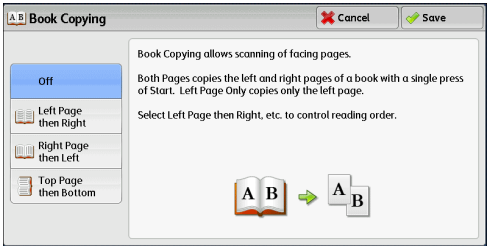


- Off
- Does not copy as a bound document.

- Left Page then Right
- Copies the left page and then the right page of facing pages.

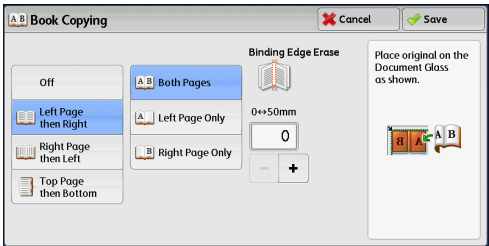


- Right Page then Left
- Copies the right page and then the left page of facing pages.

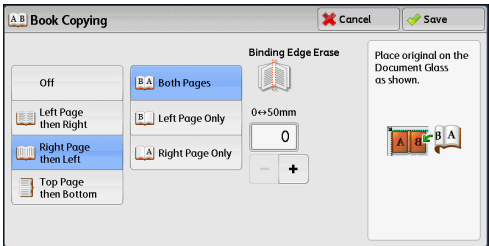

■Top Page then Bottom

Copies the top page and then the bottom page of facing pages.

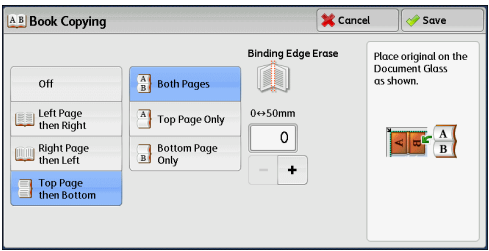

■Both Pages

Copies both pages in page order.

■Left Page Only

Copies the left page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

■Right Page Only

Copies the right page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

■Top Page Only

Copies the top page only. You can select this option when [Top Page then Bottom] is selected.

■Bottom Page Only

Copies the bottom page only. You can select this option when [Top Page then Bottom] is selected.

■Binding Edge Erase


Erases the shadow from the center section of the document. You can set the binding erase width in the range from 0 to 50 mm in 1 mm increments.

2 Sided Book Copying (Making 2 Sided Copies of Facing Pages)


This feature allows you to assign pages when making copies of facing pages in a bound document such as a booklet so that pages face each other in the same way as the document. You can also specify the starting and ending pages from the left and right of facing pages.

- Note**
- A non-standard size document or undetectable-size document will not be separated into two accurately.
 - Use the document glass to load a document.

1 Select [2 Sided Book Copying].

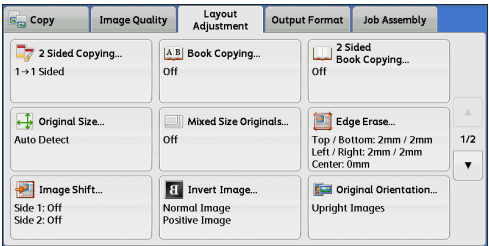

2 Select any option.

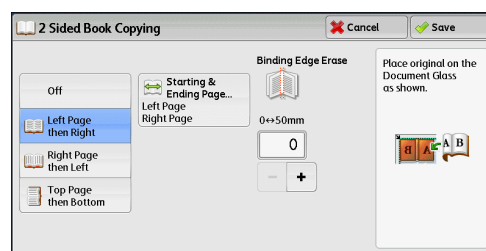

■Off

Disables this feature.

■Left Page then Right

Scans the left page and then the right page of facing pages, to make 2-sided copies.

■Right Page then Left

Scans the right page and then the left page of facing pages, to make 2-sided copies.

■Top Page then Bottom

Scans the top page and then the bottom page of facing pages, to make 2-sided copies.

■Starting & Ending Page

Displays the [Starting & Ending Page] screen.

Refer to "[Starting & Ending Page] Screen" (P.110).


■Binding Edge Erase

Erases the shadow from the center section of the document. You can set the binding erase width in the range from 0 to 50 mm in 1 mm increments.

[Starting & Ending Page] Screen

This screen allows you to set the starting and ending pages to be copied.

1 Set [Starting Page] and [Ending Page].

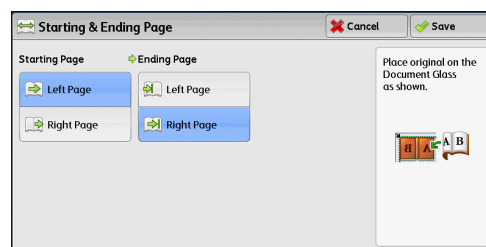

■Starting Page

- [Left Page] / [Right Page]

You can select these options when [Left Page then Right] or [Right Page then Left] is selected.

- [Top Page] / [Bottom Page]

You can select these options when [Top Page then Bottom] is selected.

■Ending Page

- [Left Page] / [Right Page]

You can select these options when [Left Page then Right] or [Right Page then Left] is selected.

- [Top Page] / [Bottom Page]


You can select these options when [Top Page then Bottom] is selected.

Original Size (Specifying the Scan Size for the Document)


This feature allows you to specify the scan size for a document.

Use this feature when a document is a non-standard size, or when you want to copy a document at a size different from the original size. You can also add margins, or delete unnecessary margins using this feature.

1 Select [Original Size].

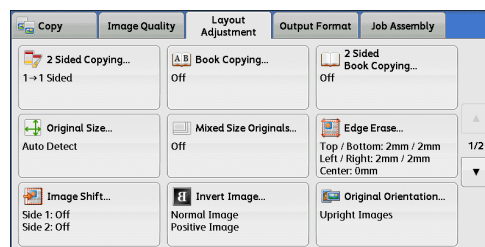

2 Select the size of the document. If you select a non-standard size, specify values for the X and Y directions.

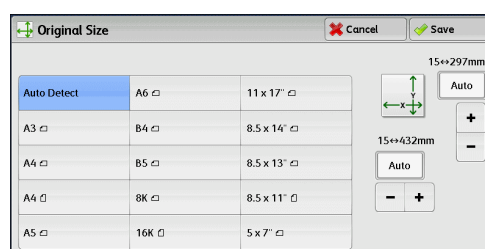

■Auto Detect

Detects the document size automatically. The following table shows the document sizes that can be detected automatically.

	Document Feeder	Document Glass
Auto-detectable Document Sizes	B5, B5□, B4, A5, A5□, A4, A4□, A3, 8.5 x 11", 8.5 x 11"□, 11 x 17", 16K□, 8K	B6, B6□, B5, B5□, B4, A6, A5, A5□, A4, A4□, A3

Note • If the document size cannot be detected automatically, a screen to enter the document size appears.

The document sizes that can be automatically detected depend on [Paper Size Settings] in the System Administration mode. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

■Standard Size

Select a document size from preset options.

You can change the sizes displayed on the screen. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Original Size Defaults" in the Administrator Guide.

■Variable Size

Enter the desired scan size when scanning a non-standard size document or when making copies at a size different from the original document size. You can specify a value in the range from 15 to 432 mm for the width (X), and a value in the range from 15 to 297 mm for the length (Y), in 1 mm increments. To help you specify values, use the scales attached on the upper and left edges of the document glass.


Important • When the document is loaded in the document feeder, the base point in the Y (length) direction is the center of the edge. If you specify 100 mm, the scan length will be from 50 mm above to 50 mm below the center of the document.

Mixed Size Originals (Scanning Different Size Documents Simultaneously)


You can scan documents of various sizes simultaneously and make copies on each size or a single size of paper. To use this feature, load the documents in the document feeder.

- Important**
- Load documents in landscape orientation. However, always load A5 documents in portrait orientation.
 - When loading B5 documents together with A3 documents loaded in landscape orientation or A4 documents loaded in portrait orientation, load B5 documents in portrait orientation.
 - If the top left corners of the documents are not aligned properly, the documents may not be scanned correctly.
 - The recommended document size combinations are A4 portrait and A3 landscape, or B5 portrait and B4 landscape. If another combination of document sizes is used, the documents can be fed at an angle and may not be copied properly.
- Note**
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Mixed Size Originals].

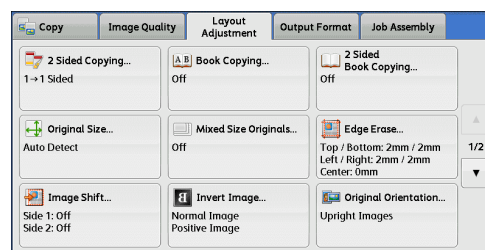

2 Select [On].

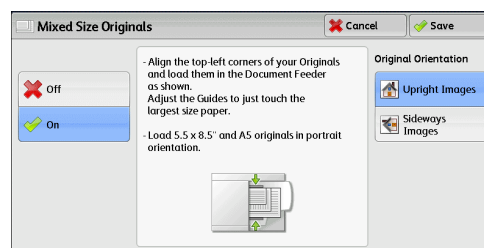

■Off

Select this option when copying documents of the same size.

■On

When documents of different sizes are copied, the machine automatically detects the size of each document.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

- Note**
- The [Original Orientation] setting is based on the orientation of the first page of a document. Load the second and subsequent pages of the document based on this setting.
 - If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.
- **Upright Images**
Select this option when placing the top edge of the document against the top side of the document glass or document feeder.
 - **Sideways Images**
Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).


Edge Erase (Erasing Edges and Margin Shadows of the Document)

When you copy a document with the document cover open or when you copy a book, the edges and center margin of the document may be printed as black shadows. The Edge Erase feature allows you to erase such shadows.


- Note**
- For 2-sided originals, the same edge erase amounts are set for the front and back sides.
 - If you set [Reduce/Enlarge], the edge erase amounts will be reduced or enlarged in proportion to the ratio you specified.
 - The binding shift specified in [Booklet Creation] will not affect the edge erase amounts.
 - If original is placed on the document glass and [1→2 Sided] is selected when using 2 Sided Copying feature, symmetrical edge erase amounts on both sides are not applied to output even if [Individual Edges] is specified and [Mirror Side 1] is selected as [2 Sided Original - Side 2] option. To apply symmetrical edge erase amounts on both sides, select [2→2 Sided] for 2 Sided Copying operation.

Even when the edge erase amount is set to 0 mm, full page copying cannot be made. For information on the areas that can actually be printed, refer to "16 Appendix" > "Printable Area" in the Administrator Guide.

1 Select [Edge Erase].

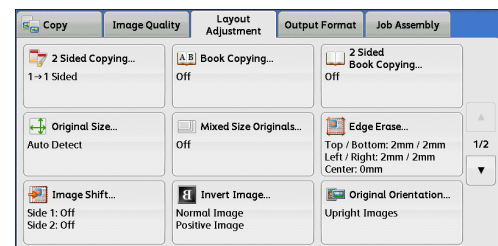

2 Select any option.

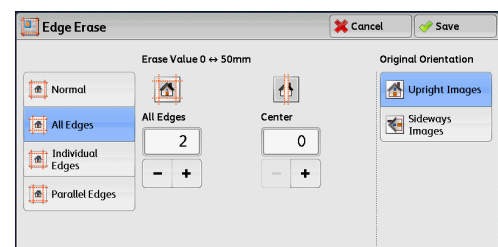

■Normal

The edge width to erase is set to 2 mm for the top and bottom, and left and right edges.

■All Edges

Erases the shadows of the four edges of a document, as well as the shadow in the center of the document if it is a bound document or a booklet. You can specify values for [All Edges] and [Center] individually.

■Individual Edges

Erases the shadows of the top, bottom, left, and right edges of a document, as well as the shadow in the center of the document if it is a bound document or a booklet. You can specify values for [Top], [Bottom], [Left], [Right], and [Center] individually.

■Parallel Edges

Erases the shadows of the top and bottom edges, and left and right edges of a document, as well as the shadow in the center of the document if it is a bound document or a booklet. You can specify values for [Top & Bottom], [Left & Right], and [Center] individually.

■Erase Value

Allows you to specify values to erase the edges of a document.

- All Edges

Erases the shadows of the four edges of the document according to the orientation of the loaded document. You can specify the edge width you want to erase in the range from 0 to 50 mm in 1 mm increments.

- Top & Bottom (Top/Bottom)

Erases the shadows of top and bottom edges of the document according to the orientation of the loaded document. You can specify the edge width you want to erase in the range from 0 to 50 mm in 1 mm increments.

- Left & Right (Left/Right)

Erases the shadows of left and right edges of the document according to the orientation of the loaded document. You can specify the edge width you want to erase in the range from 0 to 50 mm in 1 mm increments.

- Center

Erases the shadow in the center of facing pages of a bound document or a booklet. You can set the binding erase width in the range from 0 to 50 mm in 1 mm increments.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

- Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

■2 Sided Original - Side 2

You can select this option when [Individual Edges] is selected. Set whether the same value is set to the edge erase amount of Side 1 and Side 2.

- Same as Side 1

The same value is set to the edge erase amount of Side 1 and Side 2.

- Mirror Side 1


The edge erase amounts of Side 1 and Side 2 are set symmetrically.

Image Shift (Adjusting the Image Position)


This feature allows you to shift the position of document images so that the images are placed on the left, right, top, bottom, or center of paper. You can also adjust the amounts of the left, right, top, and bottom margins. If you make 2-sided copies, you can adjust the image positions for Side 1 and Side 2 individually.

Note • The image shift amount is set in accordance with the paper, and does not affect the setting made in [Reduce/Enlarge].

1 Select [Image Shift].

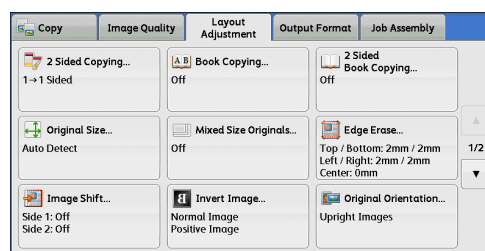

2 Select any option.

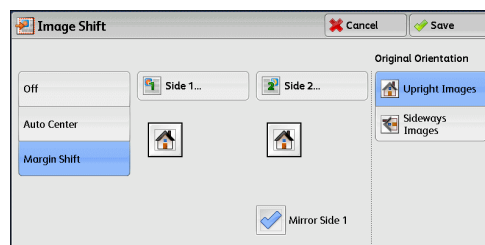

■Off

Does not shift the position of document images.

■Auto Center

Shifts document images so that they are placed in the center of paper.

■Margin Shift

Allows you to specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

• Side 1

Displays the [Image Shift - Side 1] screen.

Refer to "[Image Shift - Side 1] Screen" (P.116).

• Side 2

Displays the [Image Shift - Side 2] screen.

Refer to "[Image Shift - Side 2] Screen" (P.116).

• Mirror Side 1

Select this check box when you want the positioning of Side 2 to match the positioning of Side 1.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

• Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.


• Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

[Image Shift - Side 1] Screen

This screen allows you to set the image shift for Side 1.

- 1 Select any option.

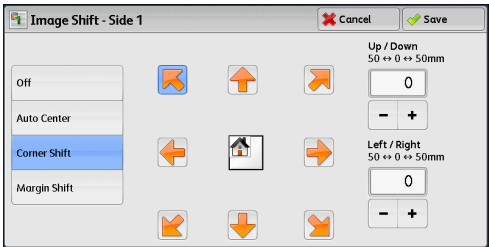

■Off

Does not shift the position of document image.

■Auto Center

Shifts document images so that they are placed in the center of paper.
Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

■Corner Shift

Shifts document images so that they are placed at an edge or corner of paper. You can select from 8 shift directions.
Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.


■Margin Shift

Allows you to specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

[Image Shift - Side 2] Screen

This screen allows you to set the image shift for Side 2.

- 1 Select any option.

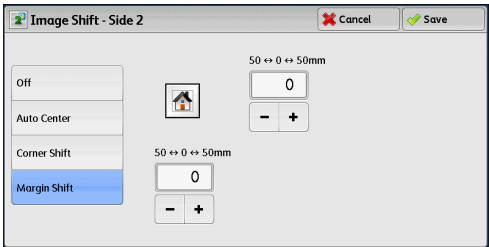

■Off

Does not shift the position of document image.

■Auto Center

Shifts document images so that they are placed in the center of paper.
Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

■Corner Shift

Shifts document images so that they are placed at an edge or corner of paper. You can select from 8 shift directions.

Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

■Margin Shift


Allows you to specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

Invert Image (Making Reversed Copies of Images)


This feature allows you to reverse the left and right sides of the document image or to create a negative image of the document when making copies.

- Note**
- When [Output Color] is set to [Black & White] or [Single Color], the black color on the document is inverted to white, and the white color to black.
 - When [Output Color] is set to [Color], the colors are inverted to their complementary colors.
 - When [Negative Image] and [Edge Erase] are set simultaneously, the edge erase area turns to white.

1 Select [Invert Image].

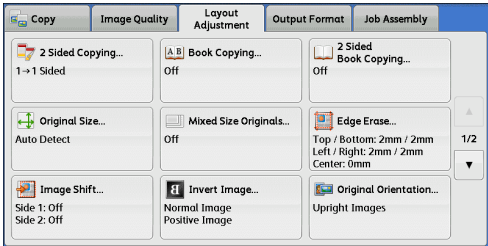

2 Select any option.

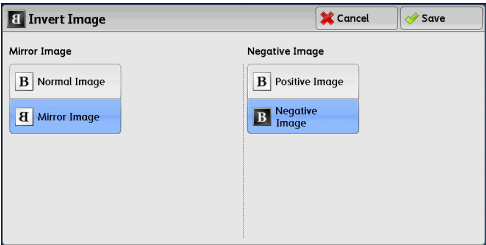

■Mirror Image

Reverses the left and right sides of the document image.

■Negative Image


Creates a negative image of the document.

Original Orientation (Specifying the Orientation of Loaded Documents)


This feature allows you to specify the orientation of a document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

1 Select [Original Orientation].

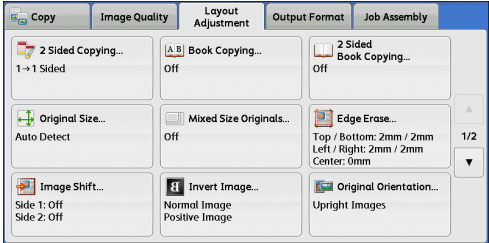

2 Select [Upright Images] or [Sideways Images] according to the orientation of the document loaded.

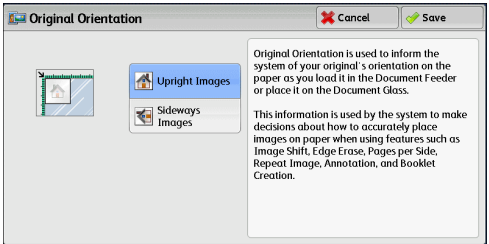

■Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

■Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

Image Rotation (Changing the Orientation of Images)


If the orientation of the paper currently loaded in the tray differs from that of the document loaded, the machine automatically rotates the document image so that the orientation of the image matches that of the paper. You can also select a reference position for image rotation if documents are of mixed orientations.

This feature is available only when you make copies on A4, 8.5 x 11", or smaller size paper.

1 Select [Image Rotation].



2 Select any option.

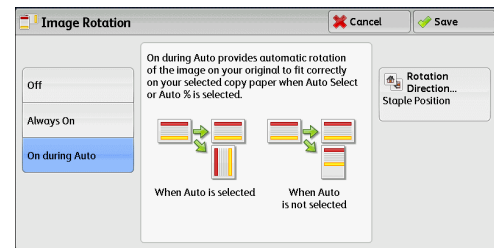

■Off

Copies documents as they are, even if the orientation of the images does not match that of the paper.

■Always On

Automatically rotates document images so that the orientation of the images matches that of the paper.

■On during Auto

Automatically rotates document images so that the orientation of the images matches that of the paper only when [Auto %] is selected in [Reduce/Enlarge], or when [Auto Select] is selected in [Paper Supply].

■Rotation Direction


Displays the [Image Rotation - Rotation Direction] screen.

Refer to "[Image Rotation - Rotation Direction] Screen" (P.119).

[Image Rotation - Rotation Direction] Screen

This screen allows you to set the reference position for rotation.

1 Select any option.

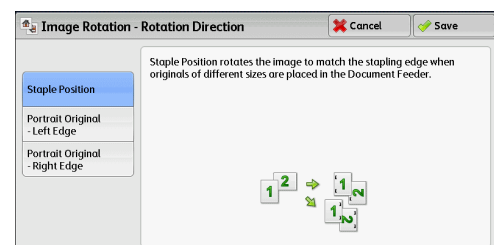

■Staple Position

This option is displayed when the finisher is installed. If documents are of mixed orientations, the images will be rotated to match the stapling edge specified in the settings of the Staple feature.

■Portrait Original - Left Edge

If documents are of mixed orientations, the images will be rotated so that the top edge of landscape documents is aligned with the left edge of portrait documents.

■Portrait Original - Right Edge


If documents are of mixed orientations, the images will be rotated so that the top edge of landscape documents is aligned with the right edge of portrait documents.

Output Format

This section describes the features you can select on the [Output Format] screen. The following shows the reference section for each feature.



2 Sided Copying (Making 2 Sided Copies)	120
Booklet Creation (Creating a Booklet)	121
Covers (Attaching Covers to Copies)	124
Pages per Side (Copying Multiple Pages onto One Sheet).....	125
Poster (Making Enlarged Copies Spread over Multiple Sheets).....	127
Repeat Image (Making Multiple Copies on One Sheet)	128
Annotations (Adding a Comment/a Date/Page Numbers to Copies).....	129
Watermark (Printing Control Numbers on the Background of Copies)	135
Secure Watermark (Managing Document Security).....	138
Tab Margin Shift (Copying on Tab Stock Paper)	141
Face Up/Down Output (Specifying Face Up or Down).....	142
Folding (Outputting Bi-Folded/Tri-Folded Paper)	142
Preset Repeat Image (Making Multiple Copies on a Single Sheet).....	143
Transparency Options (Inserting Blank Sheets between Transparencies).....	144
Copy Output (Specifying Finishing Options)	146
ID Card Copy (Copying Both Sides of an ID Card)	153

1 Select [Copy] on the [Services Home] screen.

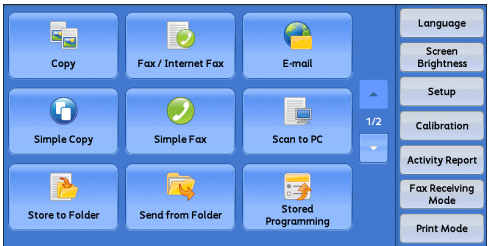

2 Select a feature on the [Output Format] screen.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen

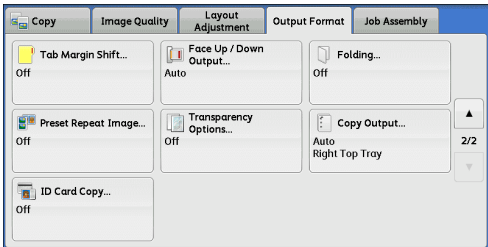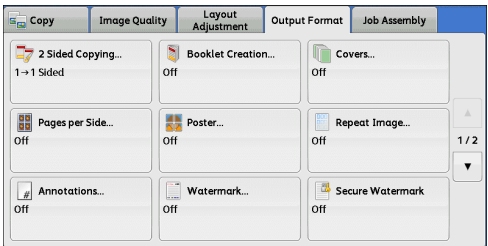

2 Sided Copying (Making 2 Sided Copies)

This feature is the same as [2 Sided Copying] on the [Layout Adjustment] screen. For more information, refer to "2 Sided Copying (Making 2 Sided Copies)" (P.106).

Booklet Creation (Creating a Booklet)

This feature lays out pages so that booklets are formed when the output sheets are folded in half. You can also set the binding shift and attach a cover when making booklets.

When the Finisher C2 with Booklet Maker (optional) or the Finisher D2-P with Booklet Maker (optional) is installed, you can also fold the output sheets in half, or staple the folded output sheets.


Important • Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.

Note • The machine copies four pages of the document onto one sheet of paper. If the number of pages in the booklet is not a multiple of four, the remaining pages will be output as blank pages.


• If [Auto Select] is selected in [Paper Supply], a tray specified in [Auto Paper Off] is automatically selected. Change the setting if necessary. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" in the Administrator Guide.

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.


- 1 Specify the orientation of the document in [Original Orientation] on the [Layout Adjustment] screen.

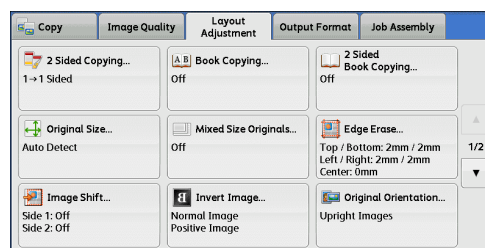

- 2 Select [Booklet Creation] on the [Output Format] screen.

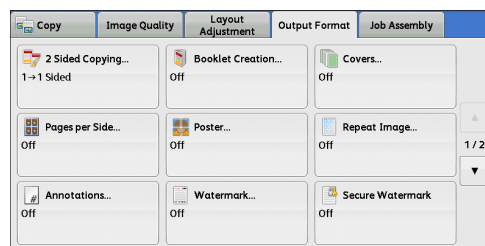

- 3 Select any option.

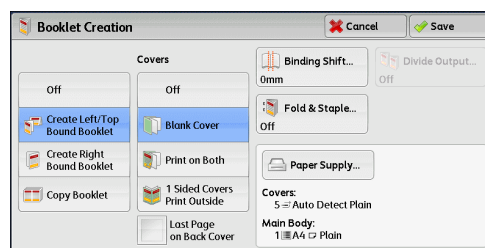

■Off

Disables this feature.

■Create Left/Top Bound Booklet

Copies are made to enable left binding or top binding.

■Create Right Bound Booklet

Copies are made to enable right binding.

■Copy Booklet

You can output the copies of scanned documents as they are by specifying [Fold & Staple]. Select this option when you do not need a document to be copied in booklet page order.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

■Covers

You can attach covers to a booklet.

- Off

No cover is attached.

- Blank Cover

A blank sheet of paper is attached as the cover.

- Print on Both

The first and second pages of the document are copied on both sides of the cover.

- 1 Sided Covers Print Outside

The first and the last pages of the document is copied on the front side of the cover.

- Last Page on Back Cover

Select this check box to copy the image of the last document page onto the last page of the copy sheets as a back cover. When you use [Divide Output] to divide a booklet into subsets, the image of the last document page will be copied onto the last page of the last subset.

Note • Depending on the number of pages in the original document, a blank page may be inserted before the last page of a booklet.

■Binding Shift

Displays the [Booklet Creation - Binding Shift] screen.

Refer to "[Booklet Creation - Binding Shift] Screen" (P.123).

■Divide Output

Displays the [Booklet Creation - Divide Output] screen.

Refer to "[Booklet Creation - Divide Output] Screen" (P.123).

■Fold & Staple

Displays the [Booklet Creation - Fold & Staple] screen.

Refer to "[Booklet Creation - Fold & Staple] Screen" (P.123).

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

■Paper Supply

Displays the [Booklet Creation - Paper Supply] screen.


Select the tray to be used for body pages from [Main Body Tray], and the tray for cover pages from [Cover Tray]. Select the same size of paper for [Main Body Tray] and [Cover Tray], and also select the trays with paper loaded in landscape orientation (□).

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

[Booklet Creation - Binding Shift] Screen

This screen allows you to specify the binding shift value in the range from 0 to 50 mm in 1 mm increments.

- 1 Use [+] and [-] or the numeric keypad to specify a binding shift value.

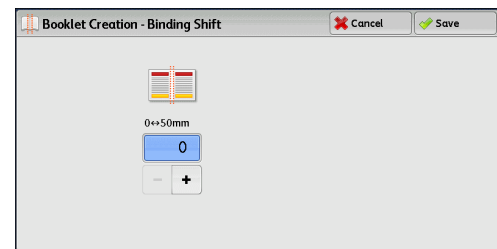


[Booklet Creation - Divide Output] Screen

When you have a large number of originals, the originals are divided to create subsets to reduce the thickness of each booklet. The machine folds copies in half, and piles them up to form a booklet.

You can specify the number of sheets in the range from 1 to 50 in 1 sheet increments.

Note • When you specify the folding feature, specify the dividing number of sheets in the range from 1 to 15.

- 1 Select [On].

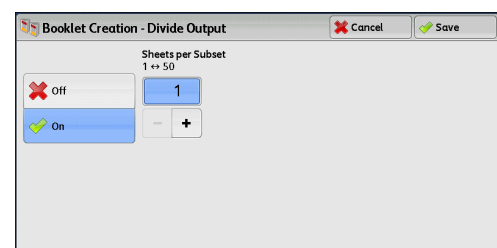


- 2 Specify the number of sheets using [+] and [-] or the numeric keypad.

[Booklet Creation - Fold & Staple] Screen

When the Finisher C2 with Booklet Maker (optional) or the Finisher D2-P with Booklet Maker (optional) is installed, [Fold Only] and [Fold & Staple] become available.

- 1 Select any option.

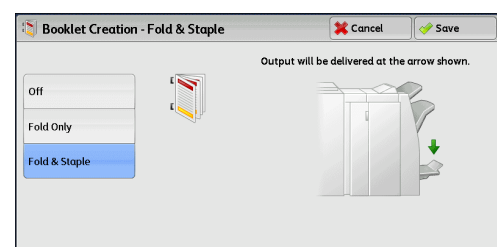

■Off

No finishing is carried out.

■Fold Only

The copies are folded in half. The number of copies that can be folded is up to 5. When the number is more than 5, the document is divided by every 5 sheet.

■Fold & Staple

The copies are folded in half and stapled at the center. The number of copies that can be folded and stapled is 2 to 15 when the Finisher C2 (optional) or the Finisher C2 with Booklet Maker (optional) is installed and 2 to 20 when the Finisher D2-P with Booklet Maker (optional) is installed.


Covers (Attaching Covers to Copies)

This feature allows you to attach covers to copies.


You can use different types of paper (such as colored paper and heavyweight paper) as the front and back covers of copies.

Important • When you select this feature, if the number of pages scanned by the machine exceeds the maximum, the machine will not print the already-scanned data. In that case, follow the instructions of the message displayed on the screen to cancel the job. The maximum number of pages that the machine can scan is 999 pages per job.

- 1 Select [Covers].

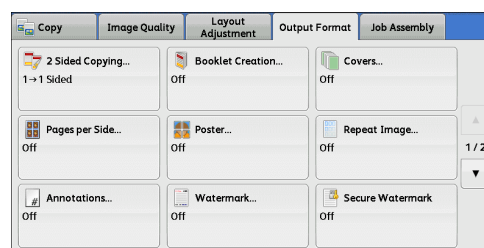

- 2 Select any option.

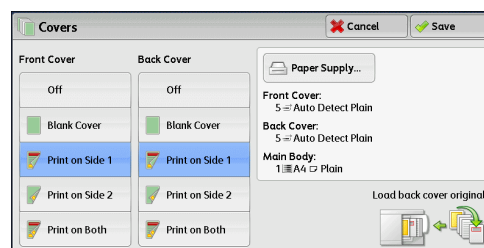

■Front Cover

Attaches a front cover to the copies.

- Off
No front cover is attached.
- Blank Cover
Blank sheets of paper are attached as front covers.
- Print on Side 1
The first page of the document is copied on the front side of the front cover.
- Print on Side 2
The first page of the document is copied on the back side of the front cover.
- Print on Both
The first and second pages of the document are copied on the front and back sides of the front cover.

■Back Cover

Attaches a back cover to the copies.

- Off

No back cover is attached.

- Blank Cover

Blank sheets of paper are attached as back covers.

- Print on Side 1

The first page of the document is copied on the front side of the back cover.

- Print on Side 2

The first page of the document is copied on the back side of the back cover.

- Print on Both

The first and second pages of the document are copied on the front and back sides of the back cover.

■Paper Supply

Displays the [Covers - Paper Supply] screen.

Select a tray to be used.

- Front Cover Tray

Select the tray used for front covers.

- Back Cover Tray

Select the tray used for back covers.

- Main Body Tray

Select the tray used for the body pages of the document.

When you use the bypass tray, select [Bypass] on the [Covers - Paper Supply] screen. When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

Note • If [Covers] is set, [Auto Detect] cannot be selected in [Tray 5].

■Front Cover Quantity

This option is displayed when you select [Blank Covers] in [Front Cover]. Specify the number of blank sheets to be used as front covers.

■Back Cover Quantity

This option is displayed when you select [Blank Covers] in [Back Cover]. Specify the number of blank sheets to be used as back covers.

Pages per Side (Copying Multiple Pages onto One Sheet)


This feature allows you to copy two, four, or eight pages of a document together onto a single sheet of paper.

When you set [Pages per Side], [Auto %] is automatically selected in [Reduce/Enlarge]. The machine automatically sets the copy ratio and makes copies of the images so that they fit on the selected paper.


- Note**
- When you deselect [Auto %] in [Reduce/Enlarge] (when you select another copy ratio), image loss may occur depending on the image size of the document.
 - When [Image Shift] is set, the image shift amounts are applied to the whole document. For this reason, image loss may occur depending on the image size of the document.
 - When [Edge Erase] is set, the edge erase amounts are applied to each document page.

- Select a tray other than [Auto Select] in [Paper Supply] on the [Copy] screen. If [Auto Select] is selected in [Paper Supply], a tray specified in [Auto Paper Off] is automatically selected. Change the setting as necessary. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Auto Paper Off" in the Administrator Guide.

1 Select [Pages per Side].

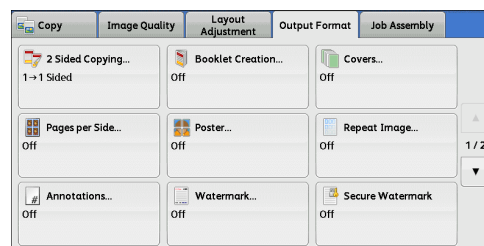

2 Select any option.

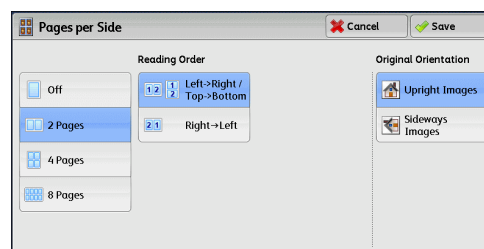

■ Off

Disables this feature.

■ 2 Pages

Copies two document pages onto one side of a single sheet of paper.

■ 4 Pages

Copies four document pages onto one side of a single sheet of paper.

■ 8 Pages

Copies eight document pages onto one side of a single sheet of paper.

■ Reading Order

Allows you to select how to layout images on a page.

■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

• Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

• Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

Poster (Making Enlarged Copies Spread over Multiple Sheets)


An enlarged copy of a document can be made spread over multiple sheets.

This feature allows you to create a large poster by pasting together the copies spread over multiple sheets. Copied sheets are provided with a paste margin so that they can be pasted together. The paste margin is fixed to 10 mm.


Important • Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.

Note • You cannot use the document feeder with this feature.

1 Select [Poster].

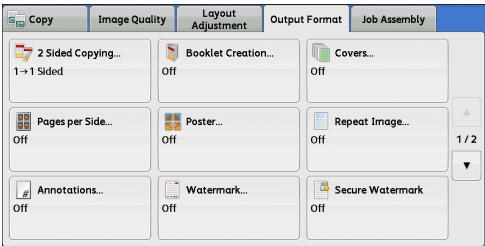

2 Select any option.

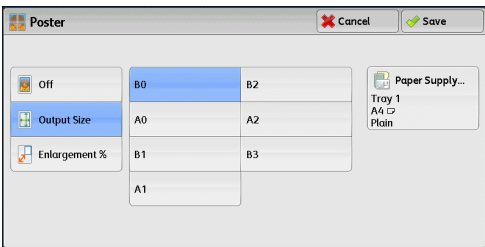

■Off

No enlarged copies are made.

■Output Size

Allows you to select the paper size.

■Enlargement %

Refer to "When [Enlargement %] is Selected" (P.127).

■Paper Supply

Displays the [Paper Supply] screen.

Select the paper tray to be used.


Note • When you use the bypass tray, select [Bypass] on the [Paper Supply] screen.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

When [Enlargement %] is Selected

This screen allows you to specify a different ratio for the width and length.

1 Use [+] and [-] to specify the copy ratios for the width and length.

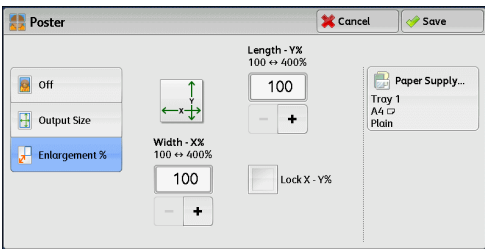

■Width - X% / Length - Y%

Allows you to specify the copy ratios for the width and length in the range from 100 to 400% in 1% increments.

■Lock X - Y%

Allows you to make the same ratio adjustment for the width and length at the same time.


Repeat Image (Making Multiple Copies on One Sheet)

This feature allows you to copy a document image on one sheet of paper repeatedly for a specified number of times.


When [Reduce/Enlarge] is set to [Auto %], the repeated copies of the image are reduced to fit on the selected paper. You can also specify how the repeated copies of the image are arranged.

- Note**
- When making copies at the same size as the document image, the number of repeats is specified so that the copies fit on the paper.
 - If [Auto Select] is selected in [Paper Supply], a tray specified in [Auto Paper Off] is automatically selected. Change the setting if necessary. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Auto Paper Off" in the Administrator Guide.

1 Select [Repeat Image].

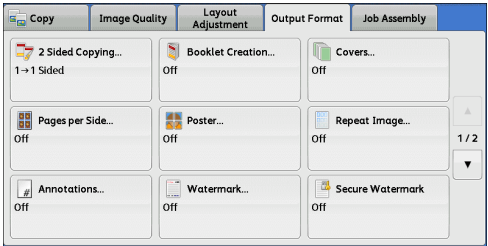

2 Select any option.

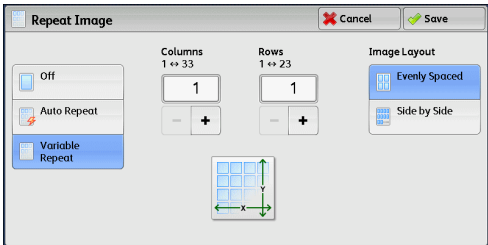

■Off

Disables this feature.

■Auto Repeat

Automatically determines the number of the repeated copies according to the document size, paper size, and copy ratio, and then repeatedly copies the document image onto the paper.

- Note**
- Copies cannot be made when the document image is larger than the specified paper size.

■Variable Repeat

Allows you to specify how many copies to place along each of the long and short edges of paper. You can specify a value between 1 and 33 in the X direction, and a value between 1 and 23 in the Y direction.

■Image Layout


- Evenly Spaced
The specified number of images are evenly arranged on the paper.
- Side by Side
The specified number of images are arranged with no space on the paper.

Annotations (Adding a Comment/a Date/Page Numbers to Copies)


This feature allows you to add a comment, date, and page numbers onto copies. You can select a comment, date, and page numbers, and their print positions from preset formats.

- Important** • When you select this feature, if the number of pages scanned by the machine exceeds the maximum, the machine will not print the already-scanned data. In that case, follow the instructions of the message displayed on the screen to cancel the job. The maximum number of pages that the machine can scan is 999 pages per job.
- Note** • The setting in [Reduce/Enlarge] does not affect the annotation image and text sizes.
• If you specify a comment, date, and page numbers together, make sure that their print positions do not overlap before making copies.
• When [Pages per Side] is set, an annotation is added to the combined image.
• When [Repeat Image] or [Booklet Creation] is set, an annotation is added to each copy image.
• If a layout template is specified in [Apply Layout Template to Copy/Print Jobs] under [Force Annotation] in the System Administration mode, the comment, date, and page number specified here are overlapped with the text on the layout template when printed. For information on [Force Annotation], refer to "5 Tools" > "Common Service Settings" > "Force Annotation" in the Administrator Guide.
• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Annotations].

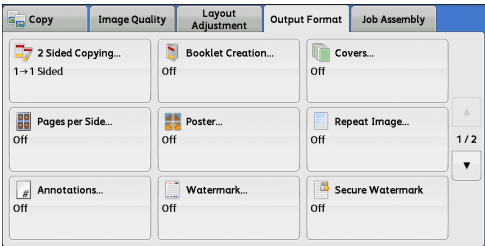

2 Select any option.

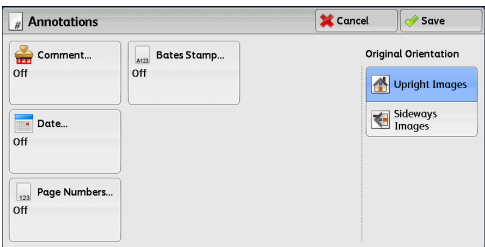

■Comment

Displays the [Comment] screen.
Refer to "[Comment] Screen" (P.130).

■Date

Displays the [Date] screen.
Refer to "[Date] Screen" (P.131).

■Page Numbers

Displays the [Page Numbers] screen.

Refer to "[Page Numbers] Screen" (P.132).

■Bates Stamp

Displays the [Bates Stamp] screen.

Refer to "[Bates Stamp] Screen" (P.134).

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.


- Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

[Comment] Screen

This screen allows you to select a comment style and its position.

1 Select any option.

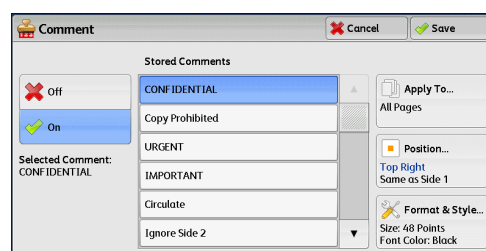

■Off

No comment is added.

■On

A comment is added.

■Stored Comments

Allows you to select comment text from eight preset options, or text set in the System Administration mode.

For information on how to register text, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Custom Watermark 1 to 3" in the Administrator Guide.

■Apply To

Displays the [Apply Comment To] screen.

You can select whether to add a comment onto the first copy page only, or onto each copy page.

■Position

Displays the [Comment - Position] screen.

You can select a comment position from nine options.

For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

■Format & Style

Displays the [Comment - Format & Style] screen.

You can select a comment size from three options, or can directly specify the size in the range from 6 to 64 points in 1 point increments. You can also select a comment color from seven options.

Note • When both [Date] and [Page Numbers] are set, or when [Force Annotation] is set, the comment color is set to [Black].

[Date] Screen

This screen allows you to add a date onto copies. The date shows when you started copying the document.

You can change the date format. For more information, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Date Format" in the Administrator Guide.

1 Select any option.



■Off

No date is added.

■On

A date is added.

■Apply To

Displays the [Apply Date To] screen.

You can select whether to add a date onto the first copy page only, or onto each copy page.

■Position

Displays the [Date - Position] screen.

You can select a date position from six options.

For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

■Font Size


Displays the [Date - Font Size] screen.

You can select a date size from three options, or can directly specify a size in the range from 6 to 24 points in 1 point increments.

[Page Numbers] Screen

This screen allows you to select a page-number style and its position.

1 Select any option.

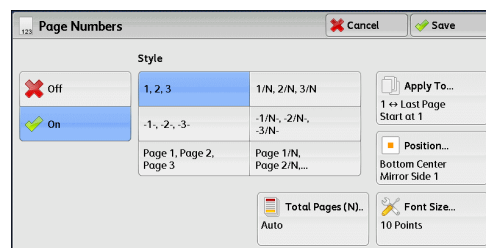

■Off

No page number is added.

■On

Page numbers are add onto copies.

■Style

- 1, 2, 3
Adds page numbers only.
- -1-, -2-, -3-
Adds page numbers, and hyphens before and after each page number.
(Example: -1-, -2-)
- Page 1, Page 2, Page 3
Adds page numbers, and the text "Page" before each page number.
(Example: Page 1, Page 2)
- 1/N, 2/N, 3/N
Adds page numbers, and the total number of pages to the right of each page number.
(Example: 1/50, 2/50)
When you select [1/N, 2/N, 3/N], the value specified in [Total Page (N)] is used.
- -1/N-, -2/N-, -3/N-
Adds page numbers followed by the total number of pages, and hyphens before and after the numbers.
(Example: -1/50-, -2/50-)
When you select [-1/N-, -2/N-, -3/N-], the value specified in [Total Page (N)] is used.
- Page 1/N, Page 2/N
Adds page numbers followed by the total number of pages, and the text "Page" before each page number.
When you select [Page 1/N, Page 2/N], the value specified in [Total Page (N)] is used.
- Total Pages (N)
Displays the [Total Pages (N)] screen.
 - Auto
Automatically calculates the total number of pages.
 - Enter Number
Allows you to specify the total number of pages in the range from 1 to 999.

■Apply To

Displays the [Apply Page Numbers To] screen.

Refer to "[Apply Page Numbers To] Screen" (P.133).

■Position

Displays the [Page Numbers - Position] screen.

You can select a page-number position from six options.

For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

■Font Size


Displays the [Page Numbers - Font Size] screen.

You can select a page-number size from three options, or can directly specify a size in the range from 6 to 24 points in 1 point increments.

[Apply Page Numbers To] Screen

This screen allows you to specify a page range to add page numbers.

- 1 Select any option.

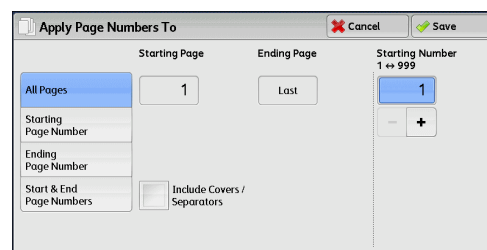**■All Pages**

Adds page numbers to all copy pages.

■Starting Page Number

Allows you to specify the start page to add a page number, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the start page number.

■Ending Page Number

Allows you to specify the end page to add a page number, in the range from 1 to 999. The start page is fixed to "1".

Note • Use [+] and [-], or the numeric keypad to enter the end page number.

■Start & End Page Numbers

Allows you to specify the start and end pages to add page numbers, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the start and end page numbers.

■Include Covers/Separators

This option is available when you select [All Pages]. Select this check box to include covers and separators.

■Starting Number


Allows you to specify a starting page number to add page numbers, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter a starting page number.

[Bates Stamp] Screen

This screen allows you to add prefix text and page numbers onto copies.

- 1 Select any option.

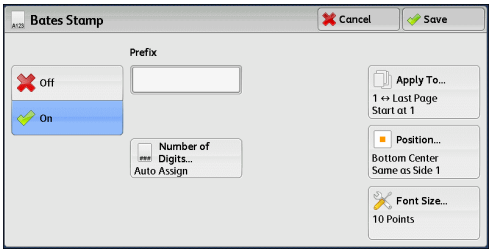

■Off

Does not add prefix text and page numbers onto copies.

■On

Adds prefix text and page numbers onto copies.

■Prefix

Allows you to enter prefix text with up to 16 characters, using the displayed keyboard.

■Number of Digits

Displays the [Bates Stamp - Number of Digits] screen.

You can select [Auto Assign] or [Manual Assign]. When you select [Manual Assign], you can specify the number of digits to be used for page numbers in the range from 1 to 9 in 1 digit increments.

■Apply To

Displays the [Apply Bates Stamp To] screen.
Refer to "[Apply Bates Stamp To] Screen" (P.134).

■Position

Displays the [Bates Stamp - Position] screen.
You can select a prefix and page-number position from six options.
For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].


■Font Size

Displays the [Bates Stamp - Font Size] screen.
You can select a prefix and page-number size from three options, or can directly specify a size in the range from 6 to 24 points in 1 point increments.

[Apply Bates Stamp To] Screen

This screen allows you to specify a page range to add prefix text and page numbers.

- 1 Select any option.

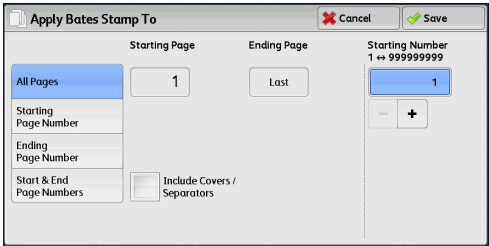

■All Pages

Adds prefix text and page numbers to all pages.

■Starting Page Number

Allows you to specify the start page to add prefix text and a page number, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the start page number.

■Ending Page Number

Allows you to specify the end page to add prefix text and a page number, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the end page number.

■Start & End Page Numbers

Allows you to specify the start and end pages to add prefix text and page numbers, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the start and end page numbers.

■Include Covers/Separators

This option is available when you select [All Pages]. Select this check box to include covers and separators.

■Starting Number

You can specify a starting page number in the range from 1 to 999999999 when you do not set [Number of Digits], or can specify a starting page number of up to the allowable number of digits specified in [Number of Digits].

Note • Use [+] and [-], or the numeric keypad to enter the end page number.

Important • If the page number exceeds the specified value (999999999 when [Number of Digits] is not set) during copying, the copy job will be canceled.

Watermark (Printing Control Numbers on the Background of Copies)

This feature allows you to faintly print a sequential control number in the background of each copy page.

If you set "1" as the starting number, "1" is printed on each page of the first copy set and "2" is printed on each page of the second set.

To prevent, for instance, the duplication of confidential documents that are to be distributed at a conference, you can use this feature to add sequential numbers to the copies, and associate the numbers with the conference members.


Important • When you select this feature, if the number of pages scanned by the machine exceeds the maximum, the machine will not print the already-scanned data. In that case, follow the instructions of the message displayed on the screen to cancel the job. The maximum number of pages that the machine can scan is 999 pages per job.

Note • If a layout template is specified in [Apply Layout Template to Copy/Print Jobs] under [Force Annotation] in the System Administration mode, the watermark specified here is overlapped with the text on the layout template when printed. For information on [Force Annotation], refer to "5 Tools" > "Common Service Settings" > "Force Annotation" in the Administrator Guide.


• When [Force Watermark - Copy] is set to [On], [Watermark] is fixed to [On], which cannot be changed. For more information on Watermark, refer to "5 Tools" > "Common Service Settings" > "Watermark" in the Administrator Guide.

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Watermark].

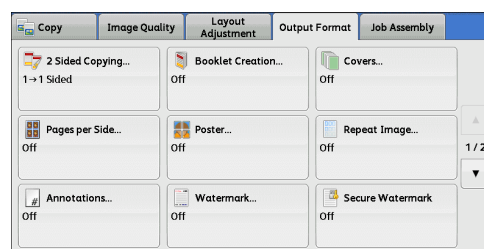

2 Select any option.

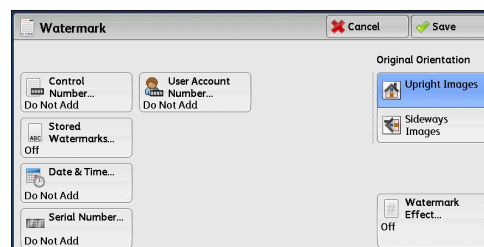

■Control Number

- Do Not Add

No control number is printed.

- Add

A control number is printed. Enter the starting number of the control number. You can specify a value in the range from 1 to 9999, using [+] and [-] or the numeric keypad.

■Stored Watermarks

Displays the [Stored Watermarks] screen.

Refer to "[Stored Watermarks] Screen" (P.137).

■Date & Time

Allows you to select whether to print the date and time when the copy job started.

For information on the date format, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Date Format" in the Administrator Guide.

■Serial Number

Allows you to select whether to print the serial number of the machine.

■User Account Number

Allows you to select whether to print a user account number when the Authentication or Accounting feature is enabled. However, if a user is not authenticated, the account number will not be printed.

- Note**
- [User Account Number] is the No. (User Administration Number) registered by users with the Authentication and Accounting feature.
 - You can see if a user is authenticated by checking that the <Log In/Out> button lights up.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

- Note**
- If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

- Sideways Images
Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

■Watermark Effect


Displays the [Watermark Effect] screen.
Refer to "[Watermark Effect] Screen" (P.137).

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

[Stored Watermarks] Screen

This screen allows you to select text to print on copies.

1 Select [On].

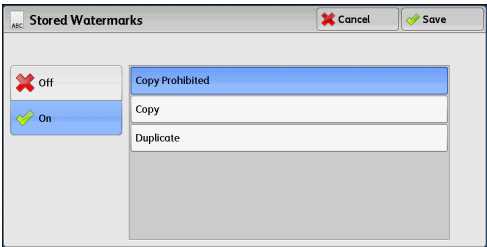

2 Select any text.

■Off

No text is printed.

■On

Text is printed. Select the text to be used for watermark. You can specify text from three preset options, or text registered in the System Administration mode.
For information on how to register text, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Custom Watermark 1 to 3" in the Administrator Guide.


[Watermark Effect] Screen

This screen allows you to set the Watermark Effect feature.

If you enable the Watermark Effect feature, the text strings specified in [Control Number], [Stored Watermarks], [Date & Time], [Serial Number], and [User Account Number] on the [Watermark] screen are embedded in the background of each copy. When you copy a document that has been copied with Watermark Effect, the text embedded in the background is printed as embossed or outline text depending on the option you select on the [Watermark Effect] screen.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select any option.

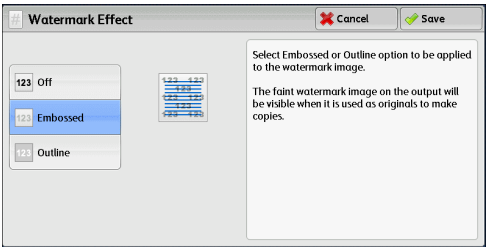

■Off

Prints the text specified in [Stored Watermarks] as it is.

■Embossed

When you copy a document that has been copied with Watermark Effect, the text embedded in the background of the copy is printed as embossed text.

■Outline

When you copy a document that has been copied with Watermark Effect, the text embedded in the background of the copy is printed as outline text.

You can specify the size, density, and other settings for the text to be printed with Watermark in the System Administration mode. For more information, refer to "5 Tools" > "Common Service Settings" > "Watermark" in the Administrator Guide.


Secure Watermark (Managing Document Security)

Secure Watermark is a security management feature to embed a copy protection digital code into a document, to restrict the document to be duplicated. The digital code enables you to analyze "when", "from which machine", and "by whom" the document was output.


- Important**
- This feature is only supported on Fuji Xerox manufactured machines that are compatible to Secure Watermark.
 - The copy protection of a document, the analysis function of digital codes, and the restrictive effect of hidden text using the Secure Watermark feature is not warranted to always function. The feature may not function depending on the document or settings. For more information, contact our Customer Support Center.
 - We assume no responsibility for a damage caused by using or not being able to use the Secure Watermark feature.
 - Using the Secure Watermark feature may degrade print quality as follows:
 - Colors may become darker.
 - Text in documents may become hard to read.
 - Dots such as decimal characters and periods may become hard to read.
 - The Secure Watermark feature may not work properly for a document if its size is smaller than A5, if its background color is not white, or if the Watermark or Secure Watermark feature has already been used for the document.
 - In some cases, a document may not be printed even if the Secure Watermark feature has not been used for the document. This happens because the machine incorrectly detects a copy protection code from the document. In that case, ask the system administrator to temporarily disable [Secure Watermark Detection] for copy protection codes.
 - If a layout template is specified in [Apply Layout Template to Copy/Print Jobs] under [Force Annotation] in the System Administration mode, an embedded copy protection code is overlapped with the text on the layout template. For information on [Force Annotation], refer to "5 Tools" > "Common Service Settings" > "Force Annotation" in the Administrator Guide.
 - Analyzing output paper allows the system administrator to grasp the identification information of the user who requested the job. Note that we assume no responsibility for a privacy issue of the user caused by using the Secure Watermark feature.
 - If you use the Secure Watermark feature to a document that a protection code of the Secure Watermark feature (including the Copy Management Expansion Kit (optional)) has already been embedded, the copy protection of a document, the analysis function of digital codes, and the restrictive effect of hidden text will be ineffective.
 - When [Secure Watermark Detection] is set to [On], it takes longer time for the first page of a document to be copied than usual as the machine detects a copy protection code.
 - The following settings for the Secure Watermark Effect of the Secure Watermark Kit (optional) are set to fixed and cannot be changed: print density, embedded text display (outline), and the font size.
 - The Watermark and Secure Watermark features cannot be used simultaneously.

- Note**
- To analyze digital codes, an application, ApeosWare Secure Watermark Analyzer (sold separately), is required. For information on how to use ApeosWare Secure Watermark Analyzer, refer to the documentation provided with the application.
 - This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Secure Watermark].

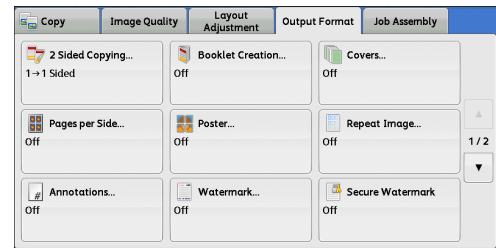

2 Select any option.

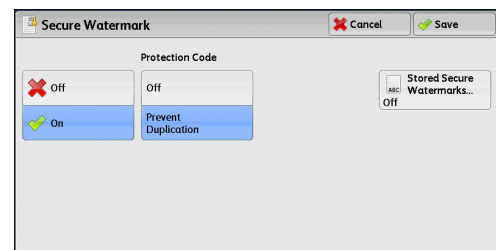

■ **Off**

Does not manage document security.

■ **On**

Manages document security. Specify any option if necessary.

■ **Protection Code**

- **Off**
Does not prevent document duplication. A digital code is embedded into copies.
- **Prevent Duplication**
Prevents document duplication. Any documents with a digital code cannot be copied.

Important • This setting also affects scan operation.

■ **Stored Secure Watermarks**

Displays the [Stored Secure Watermarks] screen.


Refer to "[Stored Secure Watermarks] Screen" (P.140).

[Stored Secure Watermarks] Screen

This screen allows you to embed hidden text into documents.
With this hidden text feature, the specified text is embedded in the entire sheet.

When you copy a document that has been copied with this hidden text feature, the embedded text on the output appears in white regardless of whether or not the Secure Watermark Kit (optional) is installed.

- 1 Select any option.

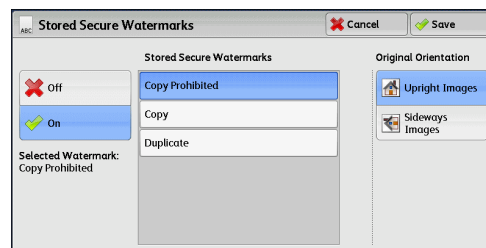

■Off

Does not print hidden text.

■On

Prints hidden text.

Allows you to specify text from three preset texts, or text registered in the System Settings.

For information on how to register text, refer to "5 Tools" > "Common Service Settings" > "Secure Watermark" > "Secure Watermark Effect" > "Custom Secure Watermark 1 to 3" in the Administrator Guide.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

• Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

• Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).


Tab Margin Shift (Copying on Tab Stock Paper)

This feature allows you to adjust the position of your document image to copy the image onto tab stock paper.


Available sizes of tab stock paper are A4 and 8.5 x 11.

Available paper tray is Tray 1, Tray 2, Tray 5 (Bypass), and Tray 6 (HCF B1-S). Load tab stock paper face up, with the edge opposite to the tab to be fed first.

- 1 Select [Tab Margin Shift].

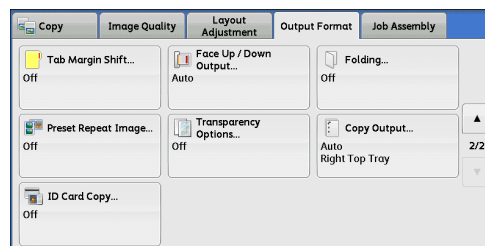

- 2 Select any option.

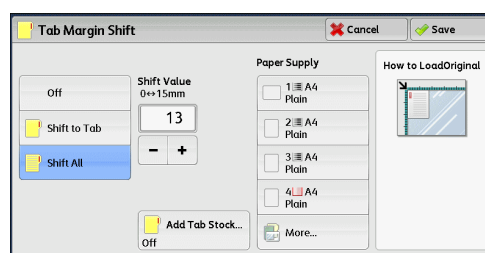

■Off

Disables this feature.

■Shift to Tab

Copies the image located on the edge of the document onto the tab area of tab stock paper.

Enter a value in [Shift Value] to adjust the position of the tab image so that it is correctly copied onto the tab area. Only the shifted image is copied, which means that the rest of the image on the document is not copied.

■Shift All

Copies the whole image of the document onto tab stock paper.

Specify a value in [Shift Value] to shift the position of the image located on the edge of the document so that the image can be copied onto the tab area.

■Shift Value

Allows you to specify how much the image needs to be shifted in the range from 0 to 15 mm in 1 mm increments.

■Add Tab Stock

Allows you to specify the number of sheets of tab stock paper.


■Paper Supply

Allows you to select a tray to be used for tab stock paper.

Face Up/Down Output (Specifying Face Up or Down)


This feature allows you to select whether to output copies facing up or down.

- 1 Select [Face Up/Down Output].

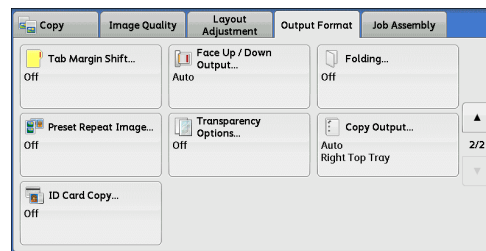

- 2 Select any option.

- Note**
- To display [Face Up (Reverse Order)] on the [Face Up/Down Output] screen, a prior setting is required in the System Administration mode.

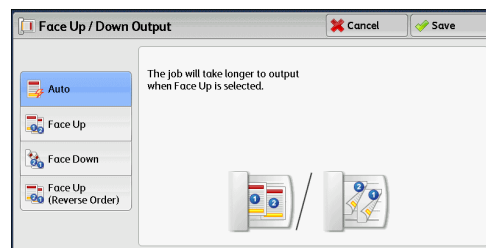

■Auto

Automatically determines whether copies are output facing up or down.

■Face Up

Copies are output facing up and delivered from the last page.

■Face Down

Copies are output facing down and delivered from the last page.

■Face Up (Reverse Order)

Copies are output facing up and delivered from the first page.

Folding (Outputting Bi-Folded/Tri-Folded Paper)


This feature allows you to fold copies in half or in three.

When the Finisher C2 (optional) or the Finisher C2 with Booklet Maker (optional) is installed, [Single Fold] is available.


When the Finisher D2-P with Booklet Maker (optional) is installed, [Z Fold], [C fold], and [Single Fold] are available.

- Note**
- The supported paper orientation is only . Select the tray whose orientation is set to .
 - [Z Fold] and [C Fold] can only be applied to A4 and 8.5 x 11" paper.
 - This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

- 1 Select [Folding].

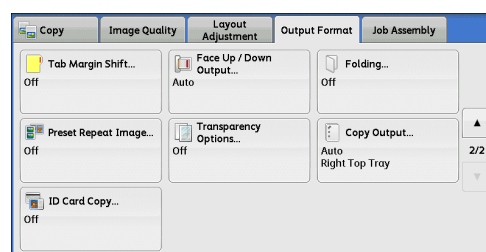

2 Select any option.

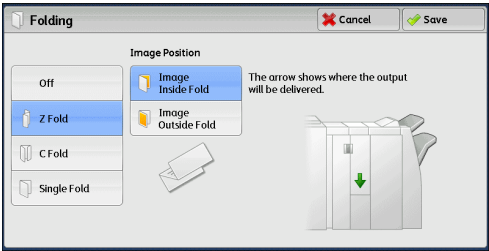


■Off

Does not fold copies.


■Z Fold

 Folds copies in three with the printed side inside or outside.



■C Fold

 Folds copies in three with the printed side inside or outside.



■Single Fold

Folds copies in half.

■Image Inside Fold

Folds copies so that the image is printed inside.


■Image Outside Fold

Folds copies so that the image is printed outside.

Preset Repeat Image (Making Multiple Copies on a Single Sheet)


This feature allows you to repeatedly copy one original onto equally divided areas according to the specified number of copies.

You can select the number of times the original is copied onto one sheet from [2 Times], [4 Times], or [8 Times].

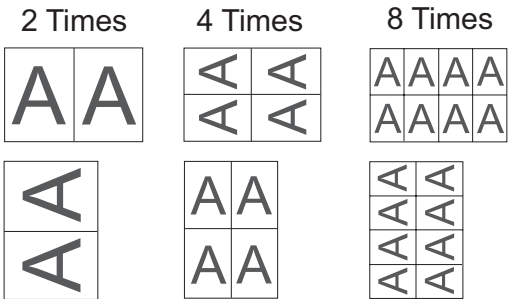


Note • When you select an option other than [Auto %] in [Reduce/Enlarge], image loss may occur depending on the image size of the document.

1 Select [Preset Repeat Image].

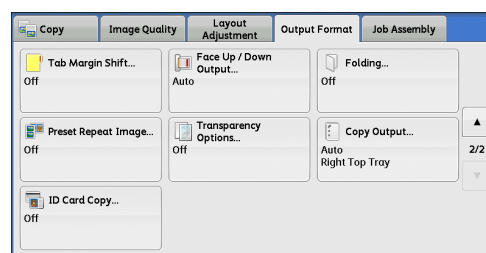

2 Select any option.

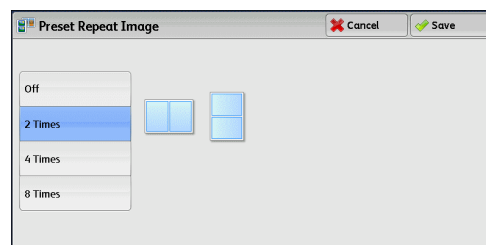

■ Off

Disables this feature.

■ 2 Times

Makes two copies of the document image on a single sheet of paper.

■ 4 Times

Makes four copies of the document image on a single sheet of paper.

■ 8 Times

Makes eight copies of the document image on a single sheet of paper.


Transparency Options (Inserting Blank Sheets between Transparencies)

This feature allows you to insert blank separators between output transparency sheets. At the same time, you can make copies for handouts.


Important • Using transparency sheets for color (with white border) may cause a malfunction or paper jam.

- Note**
- When loading A4 size transparencies on Tray 5 (Bypass), we recommend that you load them in portrait orientation.
 - Load transparency sheets in a tray in the same orientation as the paper to be used for handouts and separators.

1 Select [Transparency Options].

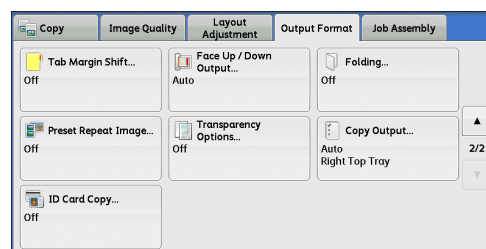

2 Select any option.

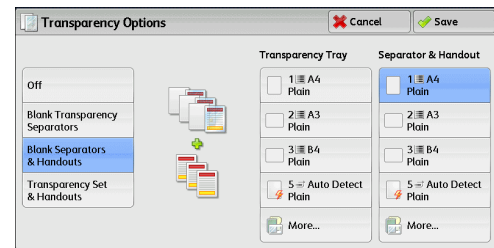

■Off

Does not insert separators.

■Blank Transparency Separators

Inserts a separator each time a transparency is copied. Only one set of copies can be made.

■Blank Separators & Handouts

Inserts a separator each time a transparency is copied. At the same time, the required number of copies is made for handouts.

■Transparency Set & Handouts

Makes copies on transparencies. At the same time, the required number of copies is made for handouts.

■Transparency Tray

Allows you to select the paper tray to be used for the transparencies.

Select [More] to display the [Paper Supply - Transparency] screen on which you can select a tray.

Note • When you use the bypass tray, select [Bypass] on the [Paper Supply - Transparency] screen.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

■Separator Tray

Allows you to select the paper tray to be used for the separators.

Select [More] to display the [Paper Supply - Separator] screen on which you can select a tray.

Note • When you use the bypass tray, select [Bypass] on the [Paper Supply - Separator] screen.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

■Separator & Handout

Allows you to select the paper tray to be used for the separators and handouts.

Select [More] to display the [Paper Supply - Separator & Handout] screen on which you can select a tray.

Note • When you use the bypass tray, select [Bypass] on the [Paper Supply - Separator & Handout] screen.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

■Handout Tray

Allows you to select the paper tray to be used for the handouts.
Select [More] to display the [Paper Supply - Handout] screen on which you can select a tray.

Note • When you use the bypass tray, select [Bypass] on the [Paper Supply - Handout] screen.
When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

Copy Output (Specifying Finishing Options)

This feature allows you to select finishing options.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

If the offset stacking module is installed, the output position of copies is offset alternately to separate each set of copies.


If the finisher is installed, each set of copies can be stapled, and then output.

The output destination is automatically selected depending on the selected feature. Outputs are delivered to the output tray when [Auto] is selected, while outputs are delivered to the finisher tray when [Collated] or [Uncollated] is selected. For the machine with the Finisher C2 with Booklet Maker or the Finisher D2-P with Booklet Maker, when [Fold & Staple] for [Booklet Creation] or [Single Fold] for [Folding] is selected, outputs are delivered to the booklet tray.


 **CAUTION**

- Waste staples may come out with output paper. Be careful not to get injured by the staples.
- Do not staple punched holes of paper. Sharp points of a staple may cause injuries.

1 Select [Copy Output].

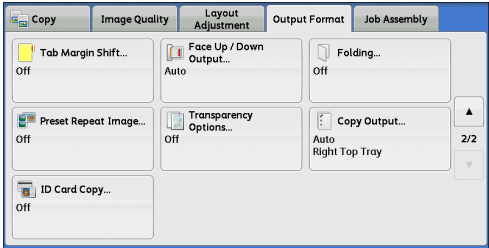

2 Select any option.

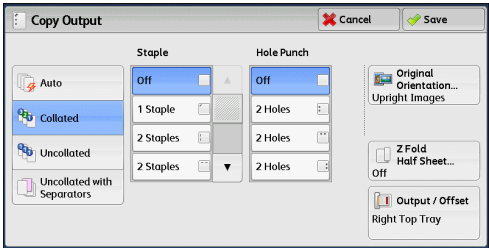

■Auto

Copies are collated when the originals are loaded in the document feeder.
Copies are also collated when originals are loaded on the document glass and any of the following features is used: 2 Sided Book Copying, Covers, [Blank Separators & Handouts] or [Transparency Set & Handouts] of Transparency Options, Booklet Creation, Stapling, Build Job, Sample Set, and Combine Original Sets.

■Collated

The machine outputs sheets sorted into sets that are arranged in page order.

■Uncollated

The machine outputs the specified number of copies and sorts sheets by page.

■Uncollated with Separators

The machine outputs copies with inserting blank sheets as a separator and sorts sheets by page.

■Separator Tray

When you select [Uncollated with Separators], select the paper tray to be used for the separators.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

■Staple

Specify the position for stapling. The Finisher C2 and the Finisher C2 with Booklet Maker are capable of stapling 2 - 50 sheets of paper (when 80 gsm paper is used). The Finisher D2-P with Booklet Maker is capable of stapling 2 - 100 sheets of paper (when 80 gsm paper is used). Available paper types are as follows.

- Finisher C2 or Finisher C2 with Booklet Maker
 - Plain (64 - 79 gsm)
 - Plain (91 - 105 gsm)
 - Heavyweight (129 - 150 gsm)
 - Extra-HW (177 - 220 gsm)
 - Plain Reload (80 - 90 gsm)
 - HW Reload (106 - 128 gsm)
 - HW Reload (151 - 176 gsm)
 - Punched (64 - 79 gsm)
 - Punched (91 - 105 gsm)
 - Punched HW 1 (129 - 150 gsm)
 - Punched HW 2 (177 - 220 gsm)
 - Tab Stock (129 - 150 gsm)
 - HW Tab Stock (177 - 220 gsm)
 - Recycled (80 - 90 gsm)
 - Gloss (106 - 128 gsm)
 - HW Gloss (151 - 176 gsm)
 - Gloss Reload (106 - 128 gsm)
 - HW Gloss Reload (151 - 176 gsm)
 - Plain (80 - 90 gsm)
 - Heavyweight (106 - 128 gsm)
 - Heavyweight (151 - 176 gsm)
 - Plain Reload (64 - 79 gsm)
 - Plain Reload (91 - 105 gsm)
 - HW Reload (129 - 150 gsm)
 - Extra HW Reload (177 - 220 gsm)
 - Punched (80 - 90 gsm)
 - Punched HW 1 (106 - 128 gsm)
 - Punched HW 1 (151 - 176 gsm)
 - Tab Stock (106 - 128 gsm)
 - Tab Stock (151 - 176 gsm)
 - Recycled (64 - 79 gsm)
 - Recycled (91 - 105 gsm)
 - Gloss (129 - 150 gsm)
 - HW Gloss (177 - 220 gsm)
 - Gloss Reload (129 - 150 gsm)
 - HW Gloss Reload (177 - 220 gsm)

- Finisher D2-P with Booklet Maker

- | | |
|-----------------------------------|-------------------------------------|
| - Plain (64 - 79 gsm) | - Plain (80 - 90 gsm) |
| - Plain (91 - 105 gsm) | - Heavyweight (106 - 128 gsm) |
| - Heavyweight (129 - 150 gsm) | - Heavyweight (151 - 176 gsm) |
| - Extra-HW (177 - 220 gsm) | - Extra-HW Plus (221 - 256 gsm) |
| - X-HW Plus 2 (257 - 300 gsm) | - Plain Reload (64 - 79 gsm) |
| - Plain Reload (80 - 90 gsm) | - Plain Reload (91 - 105 gsm) |
| - HW Reload (106 - 128 gsm) | - HW Reload (129 - 150 gsm) |
| - HW Reload (151 - 176 gsm) | - Recycled (64 - 79 gsm) |
| - Recycled (80 - 90 gsm) | - Recycled (91 - 105 gsm) |
| - Gloss (106 - 128 gsm) | - Gloss (129 - 150 gsm) |
| - Gloss (151 - 176 gsm) | - HW Gloss (177 - 220 gsm) |
| - X-HW Gloss (221 - 256 gsm) | - Gloss Reload (106 - 128 gsm) |
| - Gloss Reload (129 - 150 gsm) | - HW Gloss Reload (151 - 176 gsm) |
| - HW Gloss Reload (177 - 220 gsm) | - X-HW Gloss Reload (221 - 256 gsm) |
| - Tab Stock (106 - 128 gsm) | - Tab Stock (129 - 150 gsm) |
| - Tab Stock (151 - 176 gsm) | - HW Tab Stock (177 - 220 gsm) |
| - X-HW Tab Stock (221 - 256 gsm) | - X-HW Tab Stock (257 - 300 gsm) |

The Finisher D2-P with Booklet Maker cuts the staple nails depending on the number of sheets. The stapled nails may be bent depending on the type of paper used.

- Important**
- Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.
 - In the following cases, the actual stapling position differs from the stapling position displayed on the screen:
 - When [Original Orientation] is set to [Upright Images], and [Staple] is set to one position at the right side.
 - When [Original Orientation] is set to [Sideways Images], and [Staple] is set to one position at the left side.

■Hole Punch

Sets the position for punching.

The positions for punching vary depending on a finisher installed.

- Important**
- Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

- Note**
- If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

- Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

■Z Fold Half Sheet

The machine folds the output copies in Z fold. Z fold can be applied to B4, A3, 11 x 17". If you have mixed sized documents, the width (vertical direction) of the paper must be the same, such as a combination of A4 (portrait) and A3 (landscape), and a combination of B5 (portrait) and B4 (landscape). For example, if you have a combination of A4 (portrait) and A3 (landscape), the Z fold is only applied to A3.

■Output Destination/Offset

Allows you to select the output destination tray and offset operation.

- Offset Stacking

This option is displayed if you select [Right Middle Tray] for the output destination.

The offset is a function for slightly offsetting and outputting each paper stack to allow you to distinguish the separations.

You can specify by set, job, specified number of pages, or specified number of copies for a paper stack.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

Paper Size and Stapling Position


- Finisher C2/Finisher C2 with Booklet Maker

	1 Staple	1 Top Right	2 Staples	2 Top	2 Right
A4 □, B5 □, 8 x 10" □, 8.5 x 11" □, 16K □					
A4, 8 x 10", 8.5 x 11", 8.5 x 13", 8.5 x 14"	 	 * 			
A3, B4, 11 x 17", 8K	 	 			

* : The staple orientation displayed on the touch screen differs from the actual staple orientation. Outputs are stapled in the orientation shown in the above table.

- Finisher D2-P with Booklet Maker

	1 Staple	1 Top Right	2 Staples	2 Top	2 Right
A4 □					
B5 □, 8 x 10" □, 8.5 x 11" □, 16K □					

 	1 Staple	1 Top Right	2 Staples	2 Top	2 Right
A3					
A4, B4, 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 17", 8K					

	1 Left Center	1 Top Center	1 Right Center
A4 □, B5 □, 8 x 10" □, 8.5 x 11" □, 16K □			
A4, A3, B4, 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 17", 8K			

* : The staple orientation displayed on the touch screen differs from the actual staple orientation. Outputs are stapled in the orientation shown in the above table.

Paper Size and Punching Position

- Finisher C2/Finisher C2 with Booklet Maker
- 2 Holes*

	2 Holes Left	2 Holes Top	2 Holes Right
A4 □, B5 □, 7.25 x 10.5" □, 8 x 10" □, 8.5 x 11" □, 16K □, A4 Cover □, 9 x 11" □			

	2 Holes Left	2 Holes Top	2 Holes Right
A4, A3, B4, 215 x 315 mm, 8 x 10", 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 15", 11 x 17", 8K			

* : The distance between the two holes of Finisher C2/Finisher C2 with Booklet Maker is 80 mm and is 70 mm with the US 2/3 Hole Punch Kit for Finisher C.

- 3 Holes (with US 2/3 Hole Punch Kit for Finisher C or 3 Hole Punch Unit (for C-Finisher))

	3 Holes Left	3 Holes Top	3 Holes Right
A4□, B5□, 7.25 x 10.5"□, 8 x 10"□, 8.5 x 11"□, 16K□, A4 Cover□, 9 x 11"□			
A3, B4, 11 x 15", 11 x 17", 8K			

- 4 Holes

	4 Holes Left	4 Holes Top	4 Holes Right
A4□, 7.25 x 10.5"□, 8.5 x 11"□, 9 x 11"□, A4 Cover□, 16K□			
A3, 11 x 15", 11 x 17", 8K			

- Finisher D2-P with Booklet Maker
 - 2 Holes*

	2 Holes Left	2 Holes Top	2 Holes Right
A4□, B5□, 7.25 x 10.5"□, 8 x 10"□, 8.5 x 11"□, 16K□, A4 Cover□, 9 x 11"□			
A4, A3, B4, 215 x 315 mm, 8 x 10", 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 15", 11 x 17", 8K			

* : The distance between the two holes of Finisher D2-P with Booklet Maker is 80 mm and is 70 mm with the US 2/3 Hole Punch Kit for D2-Finisher.

- 3 Holes (with US 2/3 Hole Punch Kit for D2-Finisher or 3 Hole Punch Unit (for D2-Finisher))


	3 Holes Left	3 Holes Top	3 Holes Right
A4□, B5□, 7.25 x 10.5"□, 8 x 10"□, 8.5 x 11"□, 16K□, A4 Cover□, 9 x 11"□			
A3, B4, 11 x 15", 11 x 17", 8K			

- 4 Holes


	4 Holes Left	4 Holes Top	4 Holes Right
A4, 7.25x10.5, 8.5 x 11", 16K, A4 Cover, 9 x 11"			
A3, 11 x 15", 11 x 17", 8K			

ID Card Copy (Copying Both Sides of an ID Card)

This feature allows you to copy both sides of a small undetectable original, such as an ID card, onto one side of paper.

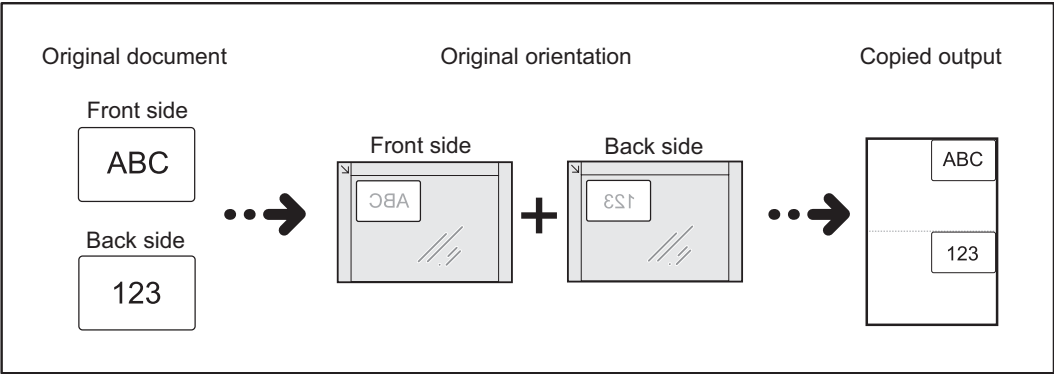

- 1 Specify the orientation of the document in [Original Orientation] on the [Layout Adjustment] screen.

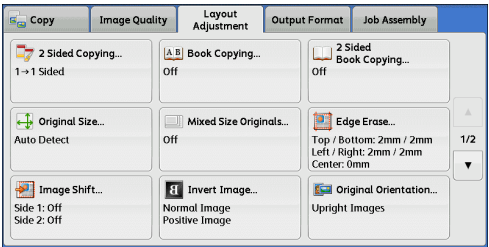


- 2** Place the document slightly away from the top left corner of the document glass, and close the document glass.

Important


- Always use the document glass when copying. You cannot use the document feeder with this feature.
- Specify the orientation of the original document correctly.
- If the edges of the image are missing, slightly move the card inward on the document glass so that the whole image can be scanned.
- When the reduced size is specified to copy an ID card, the machine may copy the ID card in a different orientation from the original orientation depending on the magnification ratio specified. For information on the copy magnification ratio for ID Card Copy, refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "ID Card Copy - Reduce/Enlarge" in the Administrator Guide.

For information on how to specify the orientation of a document, refer to "Original Orientation (Specifying the Orientation of Loaded Documents)" (P.118).

- 3** Select [ID Card Copy] on the [OutputFormat] screen.

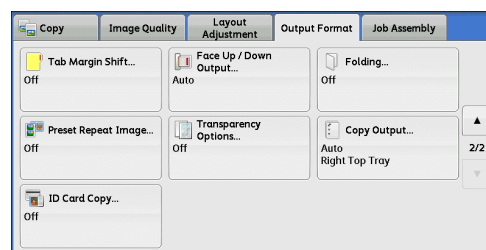

- 4** Select [On].

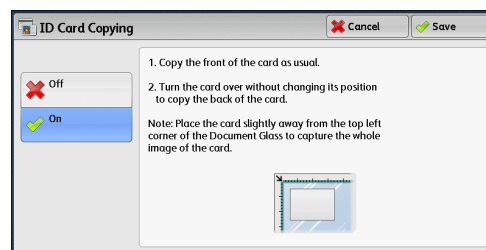

■Off

Disables ID card copying.

■On


Enables ID card copying.

Job Assembly


This section describes the features you can select on the [Job Assembly] screen. The following shows the reference section for each feature.

Build Job (Processing Documents Scanned with Different Settings as One Job)	155
Sample Job (Checking the Finished Output of the Copy).....	160
Combine Original Sets (Adding Originals).....	161
Delete Outside/Delete Inside (Deleting Outside or Inside of the Selected Area)	162
Stored Programming (Calling a Stored Program for Build Job).....	164

- 1 Select [Copy] on the [Services Home] screen.

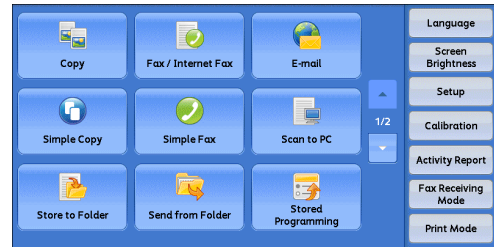


- 2 Select a feature on the [Job Assembly] screen.

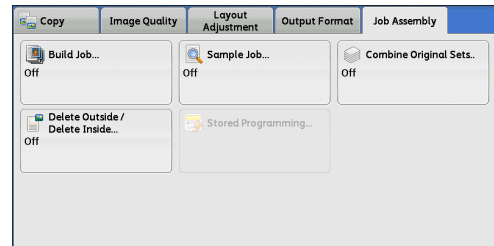


Build Job (Processing Documents Scanned with Different Settings as One Job)

This feature allows you to apply different copy settings to each document page or each document stack, and then output the copies as one job.

- 1 Select [Build Job].

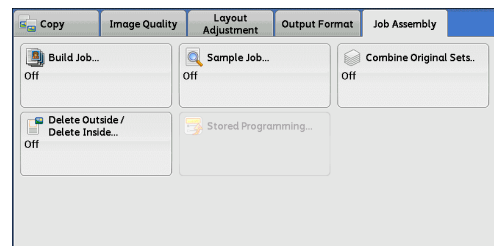

- 2 Select [On].

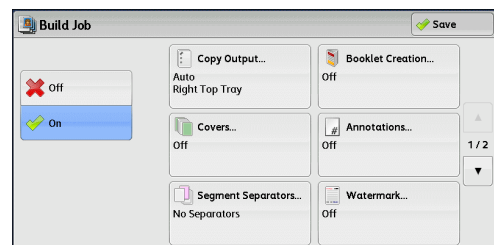

- 3 Select any option.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

■Off

Build Job is not applied.

■On

Build Job is applied. The feature buttons appear. Specify any option if necessary.

Important • The features selected here cannot be canceled or changed while the machine executes a copy job.

For information on features available in Build Job, refer to "Features that can be set in Build Job" (P.156).

Features that can be set in Build Job

■Copy Output

For more information, refer to "Copy Output (Specifying Finishing Options)" (P.146).

■Booklet Creation

For more information, refer to "Booklet Creation (Creating a Booklet)" (P.121).

■Covers

Important • The machine does not copy on a cover when using the Build Job feature.

For more information, refer to "Covers (Attaching Covers to Copies)" (P.124).

■Annotations

For more information, refer to "Annotations (Adding a Comment/a Date/Page Numbers to Copies)" (P.129).

■Segment Separators

For more information, refer to "[Segment Separators] Screen" (P.158).

■Watermark

For more information, refer to "Watermark (Printing Control Numbers on the Background of Copies)" (P.135).

■Secure Watermark


For more information, refer to "Secure Watermark (Managing Document Security)" (P.138).

■Face Up/Down Output

For more information, refer to "Face Up/Down Output (Specifying Face Up or Down)" (P.142).

[Copy] Screen When Build Job is in Progress

The following describes the screen that appears while the Build Job is being executed.

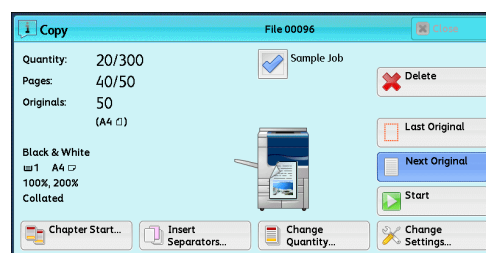

■Chapter Start

Displays the [Build Job - Chapter Start] screen.

Refer to "[Build Job - Chapter Start] Screen" (P.158).

■Insert Separators

Displays the [Segment Separators] screen.

Refer to "[Segment Separators] Screen" (P.158).

■Change Quantity

Displays the [Change Quantity] screen on which you can change the number of copy sets using the numeric keypad.

■Change Settings

Displays the [Copy] screen on which you can change the settings for the next document. After changing the settings, press the <Start> button on the control panel to start scanning of the document. To return to the previous screen, press the < # > button.

When using a stored program for Build Job

While the machine makes copies using the Build Job feature, you can use a stored program.

- 1) Select [Change Settings].
- 2) Select the [Job Assembly] tab.
- 3) Select [Stored Programming].
- 4) Select the number of the stored program that contains the features you want to use.

For information on how to register a stored program, refer to "Registering Stored Programs for Build Job" (P.352).

■Delete

Clears the document data stored by the Build Job feature, and cancels the job.

- Note**
- You can also press the <C (Clear)> or <Clear All> button on the control panel to perform the same operation.
 - While the machine is scanning the loaded document, [Delete] is displayed. Select [Delete] to pause scanning. Select [Start] on the touch screen, or press the <Start> button on the control panel to resume scanning.

■Last Original

Select this button to end scanning of documents. The build job starts.

■Next Original

Select this button when you have another document. This button is always selected when you use the Build Job feature.

■Start

After loading the next document, select this button to scan the next document.

- Note**
- You can also press the <Start> button on the control panel to perform the same operation.


■Sample Job

When making multiple sets of copies, you can print a sample set to check the finished output and then print the remaining copy sets. You can select to continue or cancel the job after the confirmation.

[Build Job - Chapter Start] Screen

This screen allows you to set the chapter start.

1 Select any option.

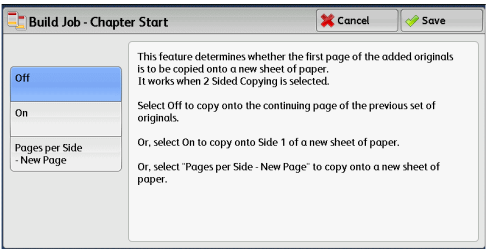

■Off

The next stack of documents is copied after the previous stack.

■On

The next stack of documents is copied from Side 1 of a new sheet of paper.

■Pages per side - New Page


When [Pages per Side] is set, even if all documents are divided for every chapter before all of them are assembled in the Page Per Side feature, the next stack of document is copied from Side 2 of the paper.

[Segment Separators] Screen

This screen allows you to insert a sheet of paper as a separator in between each stack of documents. You can specify the number of separators to insert in the range from 1 to 99 as necessary.

Note • You can specify different settings for each stack of documents. If you do not specify particular settings for each stack of documents, the previously specified settings are applied.

1 Select any option.

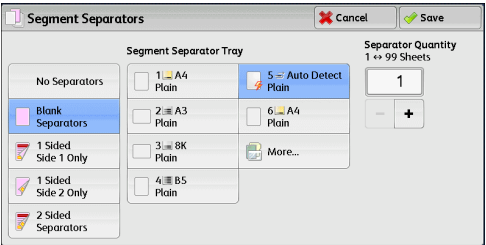

2 Select any option.

■No Separators

Does not insert any separators.

■Blank Separators

Inserts blank separators.

If you select this option, load documents, and press the <Start> button, the blank separators are inserted before the copies of the documents.

■1 Sided Side 1 Only

A first page of the loaded documents is copied on the front side of a separator, and the rest of the pages are copied on the paper other than a separator.

When [Pages per Side] is set, the number of pages (2 pages, 4 pages, or 8 pages) that you selected to copy onto one side of a single sheet, starting from the first page of the loaded documents, are copied onto the front page of a separator.

When you load a single sheet document, the document is copied onto a separator.

■1 Sided Side 2 Only

A first page of the loaded documents is copied on the back side of a separator, and the rest of the pages are copied on the paper other than a separator.

When [Pages per Side] is set, the number of pages (2 pages, 4 pages, 8 pages) that you selected to copy onto one side of a single sheet, starting from the first page of the loaded documents, are copied onto the back side of a separator.

When you load a single sheet document, the document is copied onto a separator.

■2 Sided Separators

First two pages of the loaded documents are copied onto each side of a separator, and the rest of the pages starting from the third page are copied onto the paper other than a separator.

When [Pages per Side] is set, the number of pages (2 pages, 4 pages, 8 pages) that you selected to copy onto one side of a single sheet, starting from the first page of the loaded documents, are copied onto each side of a separator.

When you load two-sheet documents, both sheets are copied onto each side of a separator.

- Note**
- When you have two separate documents, a single sheet document and multiple sheet documents, if you want to copy this single sheet document and the first page of the multiple sheet documents onto each side of a separator, when loading the multiple sheet documents, select [No Separator] in [Build Job - Separators]. If you do not select [No Separator], the machine processes these two documents separately under different separator settings, the single-sheet document is copied onto a separator, and the first page (or first two pages) of the multiple sheet documents is copied onto another separator.

■Segment Separator Tray

Allows you to select the tray, which is loaded with paper to be used as a separator.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.90).

■Separator Quantity


This option is available when you select [Blank Separators]. You can specify the number of separators in the range from 1 to 99.

Sample Job (Checking the Finished Output of the Copy)


When making multiple sets of copies, you can print a sample set to check the finished output and then print the remaining copy sets. You can select whether to continue or cancel the job after the confirmation. This feature also allows you to change the number of copy sets. The sample copy is included in the total number of copy sets.

Note • After a sample set is output, the machine automatically outputs the data remained if the machine is left uninstructed for the period specified in [Auto Job Release]. For more information on [Auto Job Release], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Job Release" in the Administrator Guide.

1 Select [Sample Job].

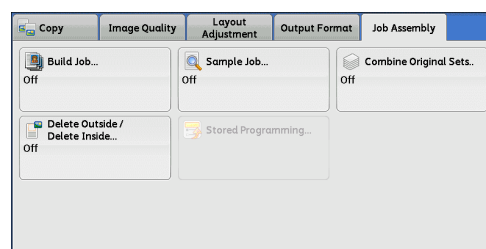

2 Select [On].

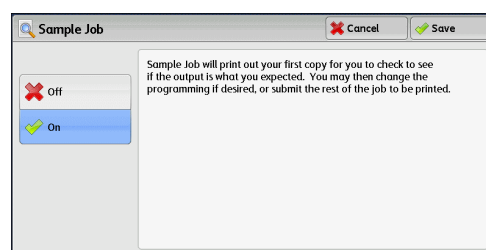

■Off


No sample set is made.

■On

A sample set is made.

[Copy] Screen When Sample Job is in Progress

After the sample set is copied, the machine pauses the job and displays the [Copy] screen.

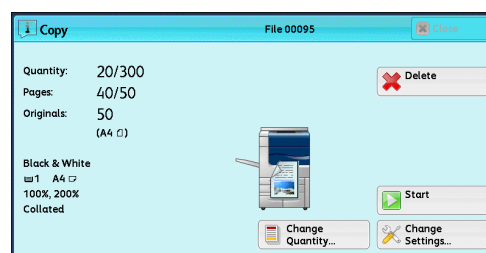

■Change Quantity

Displays the [Change Quantity] screen on which you can change the number of copies entered before. Enter a new quantity using the numeric keypad. The new value must include the number of the sample set that has already been printed. When reducing the quantity, specify a value between 1 (sample set) and the number of copies entered before.

Note • If you specify "1" as a new quantity and then press the <Start> button, the machine will not process the job.

■Change Settings

Displays the [Change Settings] screen. To cancel the settings you have made, deselect the check box for the feature you want to cancel.

■Delete

The remaining copies are canceled.

■Start

The remaining copies are made.

Note • You can also press the <Start> button on the control panel to perform the same operation.

Combine Original Sets (Adding Originals)

Use this feature when you copy a document that has too many pages to be loaded in the document feeder at one time, or when you scan each document page using the document glass and have the machine process the pages as one job.


When you use this feature, [Next Original] is always selected on the screen during scanning documents with the document feeder or the document glass.

If [Copy Output] is set to [Auto], the output is automatically sorted.


When all documents have been scanned, select [Last Original].

Note • After the first original set is copied, the machine automatically outputs the data remained if the machine is left unused for the period specified in [Auto Clear]. For more information on [Auto Clear], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Clear" in the Administrator Guide.

1 Select [Combine Original Sets].

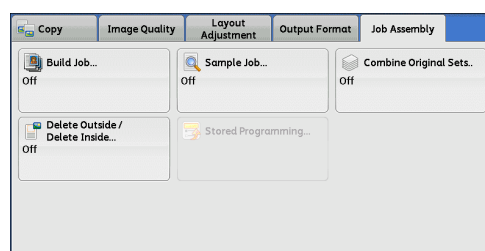

2 Select [On].

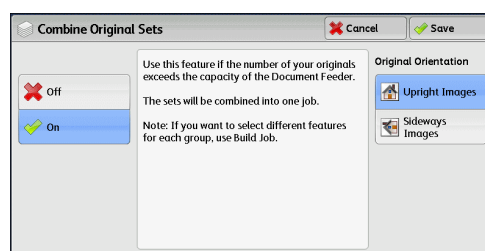**■Off**

Disables this feature.

■On

Enables this feature.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images


Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

- Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

[Copy] Screen When Combine Original Sets is in Progress

The [Copy] screen is displayed when copying starts.

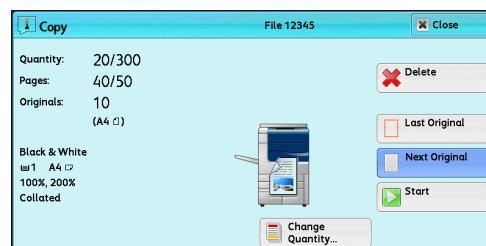

■Delete

Clears the document data stored with the Combine Original Sets feature, and cancels copying.

Note • You can also press the <C (Clear)> or <Clear All> button on the control panel to perform the same operation.

■Last Original

Select this button to end scanning documents.

■Next Original

Select this button when you have more documents to copy. This button is always selected when the Combine Original Sets feature is used.

■Start


After loading the next document, select this button to scan the next document.

Note • You can also press the <Start> button on the control panel to perform the same operation.


Delete Outside/Delete Inside (Deleting Outside or Inside of the Selected Area)

This feature allows you specify the areas to be deleted from a document image. Up to three areas can be specified.

- 1 Select [Delete Outside/Delete Inside].

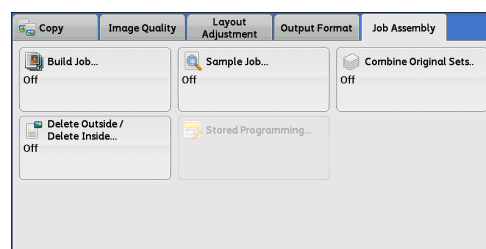

2 Select any option.

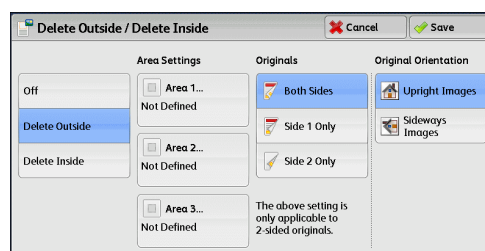

■Off

No area is deleted.

■Delete Outside

Deletes the outside of the selected area.

■Delete Inside

Deletes the inside of the selected area.

■Area Settings

Displays the [Delete Outside/Delete Inside - Area 1 (Area 2 or Area 3)] screen. You can specify up to three areas.

Refer to "[Delete Outside/Delete Inside - Area 1 (Area 2 or Area 3)] Screen" (P.164).

■Originals

When the original document is a 2-sided document, specify from which side the specified area is to be deleted.

- Both Sides
Applies the settings to both sides of the document.
- Side 1 Only
Applies the settings to Side 1 of the document.
- Side 2 Only
Applies the settings to Side 2 of the document.

■Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images
Select this option when placing the top edge of the document against the top side of the document glass or document feeder.
- Sideways Images
Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).


[Delete Outside/Delete Inside - Area 1 (Area 2 or Area 3)] Screen

This screen allows you to specify the area to be deleted. The area is defined by the rectangle formed between the points X1,Y1 and X2,Y2. The origin point is the top right corner of a document.

You can specify a value in the range from 0 to 432 mm for the width (X) and the length (Y) in 1 mm increments.

- Note**
- Specify the 2 coordinates from the top right corner of the document.
 - When specifying multiple areas, the specified areas can overlap each other.
 - When [Reduce/Enlarge] is set, the specified area will be reduced or enlarged accordingly.

- 1 Select [Area 1], [Area 2], or [Area 3].

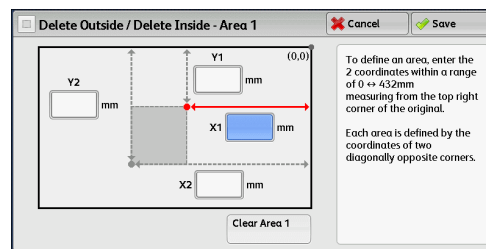

- 2 Enter the value for X1 using the numeric keypad.
- 3 Select the text box for [Y1], and enter the value for Y1 using the numeric keypad.
- 4 Select the text box for [X2], and enter the value for X2 using the numeric keypad
- 5 Select the text box for [Y2], and enter the value for Y2 using the numeric keypad.

- Note**
- If all of [X1], [Y1], [X2], and [Y2] are set to [0], the area will be invalid. If no other area is specified, the Delete Outside/Delete Inside feature cannot be used.
 - Pressing the <C (Clear)> button clears the value you have entered.

■Clear Area 1 (Area 2 or Area 3)

Clears all the values set for Area 1 (Area 2 or Area 3).

Stored Programming (Calling a Stored Program for Build Job)

This feature allows you to call a stored program for Build Job.

This feature is the same as "8 Stored Programming" > "Calling a Stored Program" > "Calling a Stored Program for Build Job". For more information, refer to "Calling a Stored Program for Build Job" (P.356).

4 Fax

This chapter describes the basic operations and features for the Fax services.

• Fax Procedure	166
• Operations during Faxing	173
• About Internet Fax	176
• About IP Fax (SIP).....	184
• About Server Fax.....	189
• Simple Fax.....	191
• Fax/Internet Fax.....	197
• Layout Adjustment	209
• Fax/Internet Fax Options	214
• More Options	235
• Broadcast.....	241
• Receiving Faxes	249
• Facsimile Information Services.....	252

- Note**
- LINE2, LINE3, and SIP are optional.
 - The Fax services are not available for some models. An optional component is required. For more information, contact our Customer Support Center.

Fax Procedure

This section describes the basic fax procedures. The following shows the reference section for each procedure.

Step 1 Loading Documents	166
Step 2 Selecting Features	168
Step 3 Specifying Destinations	169
Step 4 Starting the Fax Job	171
Step 5 Confirming the Fax Job in Job Status	172

Step 1 Loading Documents

The following two methods are available to load documents:

■ Document Feeder

- Single sheet
- Multiple sheets

■ Document Glass

- Single sheet
- Bound documents, such as books

Document Feeder

The document feeder supports single and multiple sheet documents with sizes from 139.7 x 139.7mm (Standard size: A5, A5 $\square$, 5.5 x 8.5", 5.5 x 8.5" $\square$) to 297 x 600 mm (long) (Standard size: A3, 11 x 17").

The document feeder automatically detects documents of standard-size widths.

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide

The sizes on the left are detected as the sizes shown on the right as follows.

Original Document Size	Document Size Detected by the Document Feeder
8-inch width document	B5 width document
10-inch width document	B4 width document

The document feeder accepts the following number of sheets

Weight	Number of Sheets
38 - 80 gsm	250 sheets
81 - 128 gsm	150 sheets
129 - 200 gsm	100 sheets

Important • To avoid paper jams, use the document glass for folded or wrinkled documents, cut-and-pasted documents, curled paper, or back carbon paper.

- 2-sided scanning of lightweight paper (38 - 49 gsm) is not supported.


For information on how to fax mixed sized documents, refer to "Mixed Size Originals (Scanning Different Size Documents Simultaneously)" (P.210).

- 1 Remove any paper clips and staples before loading a document.

- 2 Adjust the document guides to match the size of the document loaded.

Note


- When loading a large size document such as A3, lift up the document feeder tray, and open the document stopper rightward.

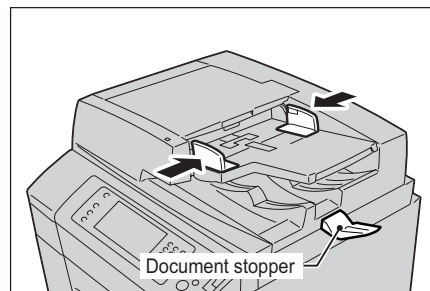

- 3 Load the document (the front side of 2-sided document) face up in the center of the document feeder.

Note

- The Confirmation indicator lights up when the document is loaded correctly.
- When the document is loaded in the document feeder, the document feeder tray lifts up. You can set the timing of the lift. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Document Feeder Tray Elevation" in the Administrator Guide.

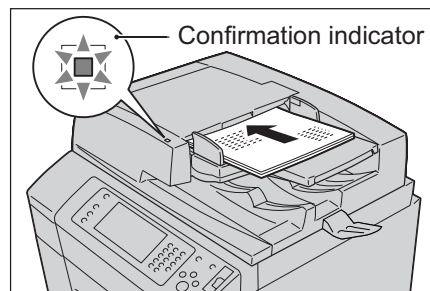

Document Glass

The document glass supports a single sheet, a book, or other similar documents with sizes from 15 x 15 mm to 297 x 432 mm (Standard size: A3, 11 x 17").

Important • Always close the document cover after using the document glass.

The document glass automatically detects standard size documents.


The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

CAUTION

Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

- 1 Open the document cover.


Important • Ensure that the touch screen is active, and then load a document. Otherwise, the machine may not properly detect the document size.

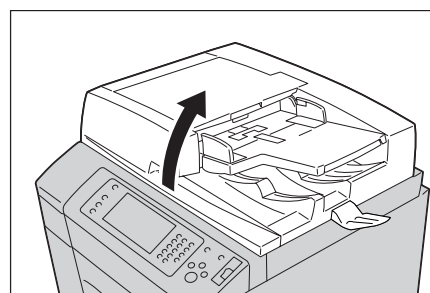

- 2** Load the document face down, and align it against the top left corner of the document glass.

Note

- When you load a A5, B5 or A4 document on the document glass in portrait orientation, the scanned image is transmitted with 180 degrees rotated.

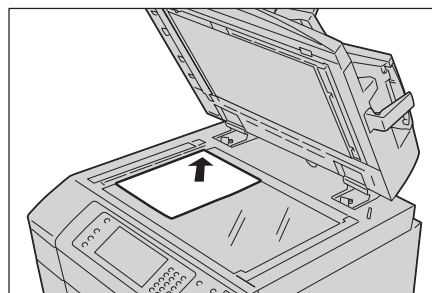

- 3** Close the document cover.

Note

- When a standard size document is loaded on the document glass, the size of the document is displayed in the message field.

Step 2 Selecting Features

The following two services are available to send faxes.

■ Simple Fax

Allows you to only select basic features to send faxes.

■ Fax/Internet Fax

Allows you to make detailed settings to send faxes.

The following procedure uses [Fax/Internet Fax] to describe how to select features.

You can select the Fax or Internet Fax service, or the Server Fax service on the [Services Home] screen.


For information on the Simple Fax feature, refer to "Simple Fax" (P.191).

Important • The Fax and Internet Fax services are not available while the Server Fax service is enabled.

Note


- The features displayed on the screen depend on your machine configuration.
- When the Authentication or Accounting feature is enabled, a user ID and passcode may be required. Ask your system administrator for the user ID and passcode.

- 1** Press the <Services Home> button.

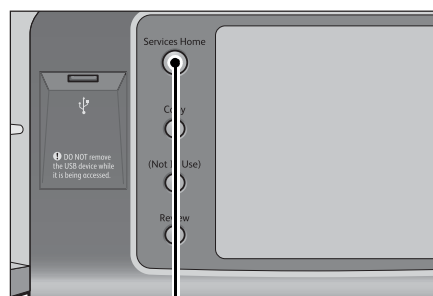


<Services Home> button

- 2** Select [Fax/Internet Fax].

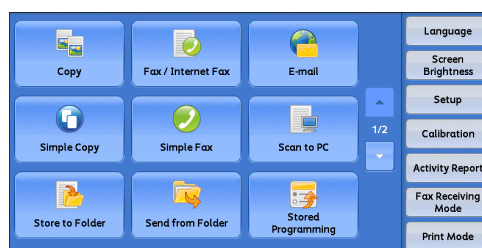


- 3 If the previous settings still remain, press the <Clear All> button.

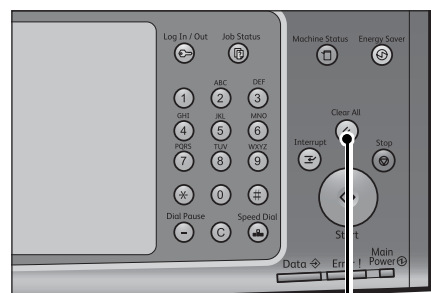

<Clear All> button

- 4 Select each tab, and select a feature as necessary.

When you press the <Energy Saver> button while configuring the features, you can select whether to enable the 2 Sided (Skip Blank Pages) feature. For more information on [2 Sided (Skip Blank Pages)], refer to "2 Sided (Skip Blank Pages)" (P.206).

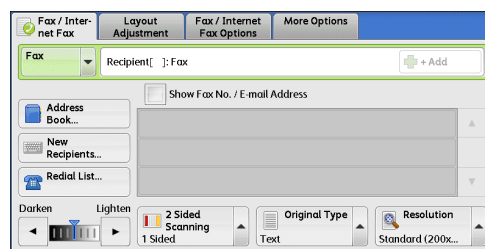

The following shows the reference section for each tab.

- "Fax/Internet Fax" (P.197)
- "Layout Adjustment" (P.209)
- "Fax/Internet Fax Options" (P.214)
- "More Options" (P.235)

Step 3 Specifying Destinations

Three methods are available to specify recipients: by phone number, by address number, and by group dial number. The following shows input methods supported by each method.

	Numeric Keypad	One Touch buttons	Address Book
Phone Number	O	X	X
Address Number (Speed Dialing)	4 digits (0001 to 2000)	2 digits (1 to 70) or (1 to 60)*	From the list tab and index
	3 digits + * (nnn0 to nnn9) 2 digits + * (nn00 to nn99)		
Group Dial Number	# + 2 digits	X	O

- O Available
X Not available

*: There two ways in which address numbers and stored programs are assigned to the one touch buttons. Select either of the following:

[Type 1] The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons 71 and 72 are used for stored programs and they correspond to the registered stored programs 1 and 2.

[Type 2] The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 72 are used for stored programs and they correspond to the registered stored programs 1 to 12.

By default, [Type 1] is selected. For information on how to change the settings registered to the one touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

Important • When using the Server Fax service, you cannot specify address numbers using the numeric keypad or use one touch buttons.

You can specify multiple recipients (Broadcast Send) using the above methods. You can also use a combination of the methods.

If the same recipient was specified for several pending documents, you can send the documents with a single phone call. This feature is called Batch Send. Note that you cannot use Batch Send with Broadcast Send, Relay Broadcast, Remote Folder, and Delay Start when prior to the specified time. When using a redial, resend, or delayed start send transmission job, or authentication feature, to send to the same address from different users, then Batch Send is not possible.


Important • Confirm recipients before sending a fax.

For information on Broadcast Send, refer to "Broadcast Send (Transmitting to Multiple Recipients)" (P.241).

To specify a line to send a fax when the Additional G3 Port 2 (optional) is installed, refer to "Specifying a Line (Port)" (P.203).

The following describes how to enter a phone number with the numeric keypad as an example.

- 1 Enter a fax number using the numeric keypad.

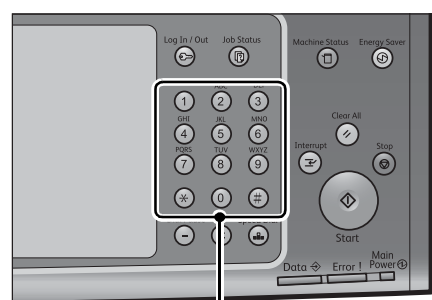


Numeric keypad

- 2 To specify multiple recipients, select [+ Add] on the touch screen.

Note

- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.
- Depending on the settings, a screen to re-enter the recipient may be displayed after you specify the recipient and then select [+ Add]. In such case, re-enter the recipient.

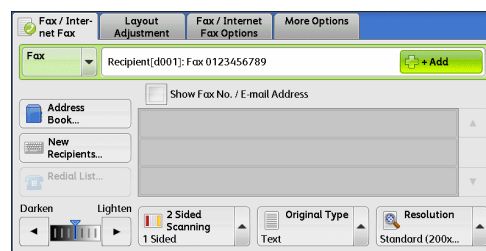

For information how to specify a fax number using the Address Book, refer to "Specifying a Destination Using the Address Book" (P.199).

For information how to specify a fax number using the speed dialing, refer to "Speed Dialing (Specifying a Destination Using an Address Number)" (P.200).

For information how to specify a fax number using one touch buttons, refer to "Specifying a Destination Using a One Touch Button" (P.201).

For information on the Internet Fax, refer to "About Internet Fax" (P.176).

For information on the IP Fax (SIP), refer to "Internet Fax/Fax/IP Fax (SIP) (Selecting Internet Fax/Fax)" (P.197)

Step 4 Starting the Fax Job

The following describes how to start a fax job.


1 Press the <Start> button.

Important • If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.

- Fax cannot be sent if a copy protection code is detected

Note • Depending on the settings, the screen to re-enter the recipient may be displayed after pressing the <Start> button. In this case, re-enter the recipient.

- If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.

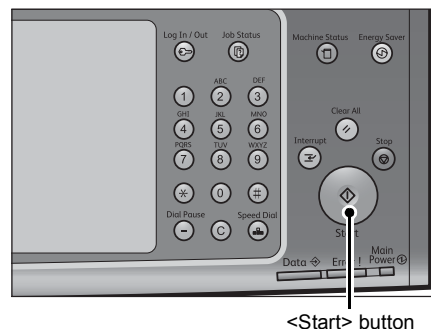


■If you have more documents

If you have more documents to fax, select [Next Original] on the touch screen while the current document is being scanned. This allows you to send the documents as one set of data.


2 While documents are being scanned, select [Next Original].

Note • When using the document feeder, load the next document after the machine has finished scanning the first document.

- When [Next Original] is displayed on the screen shown on the right and no operation is performed during a certain period of time, the machine automatically assumes that there are no more documents.
- You can change the scan settings of the next document by selecting [Resolution], [Original Size], and [Lighten/Darken] that are displayed after selecting [Next Original].

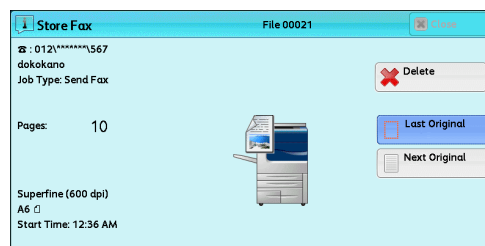


3 Load the next document.

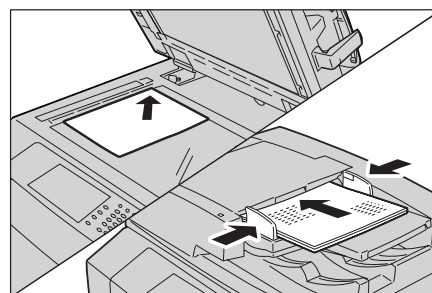

4 Press the <Start> button.

If you have more documents, repeat steps 3 and 4.


5 When all documents have been scanned, select [Last Original].

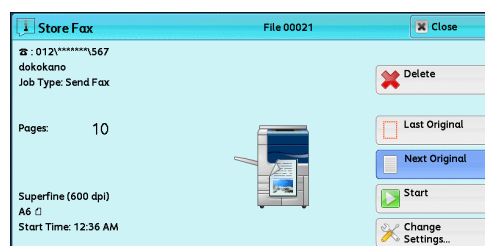

Step 5 Confirming the Fax Job in Job Status

The following describes how to confirm the status of a fax job.


- 1** Press the <Job Status> button.

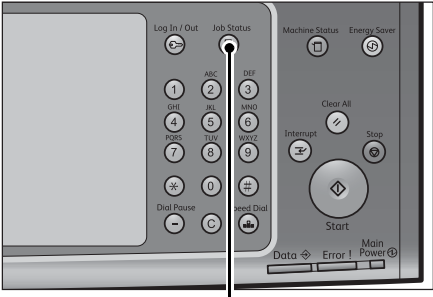

<Job Status> button

- 2** Confirm the job status.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - From the drop-down menu, you can select [Scan, Fax, & Internet Fax Jobs] and display the desired job.

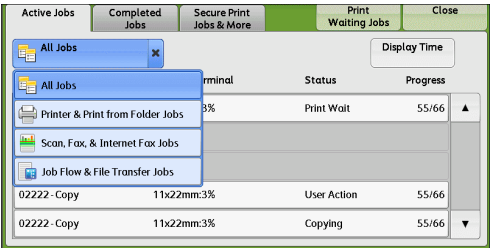

■If undelivered faxes exist

You can confirm undelivered faxes on the [Job Status] screen or in an Activity Report.
For information on how to resend or delete undelivered faxes, refer to "Job Status" (P.373).

Operations during Faxing


This section describes the available operations during faxing. The following shows the reference section for each operation.

Stopping the Fax Job	173
Changing the Scan Settings	174


Stopping the Fax Job

To cancel scanning a fax document, use the following procedure.


- 1 Press either the <Stop> button on the control panel or [Delete] on the touch screen.

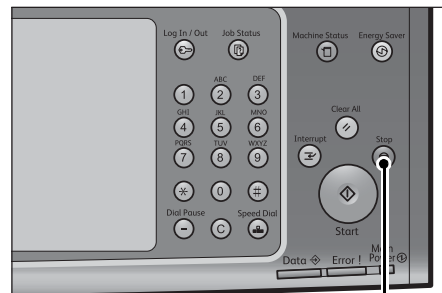

<Stop> button

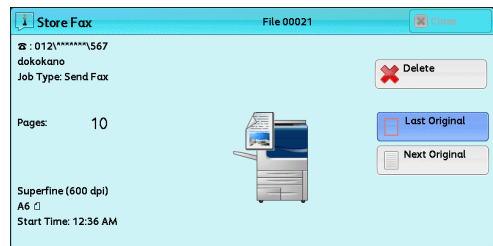


- 2 Select [Delete].

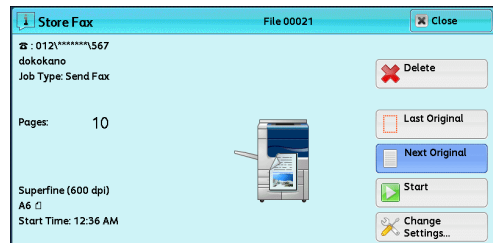

■If [Delete] does not appear on the screen:


- 1 Press the <Job Status> button.

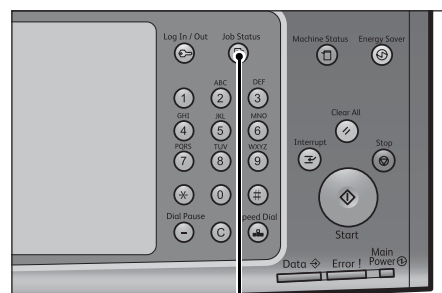


<Job Status> button

2 Select the job to cancel.


Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

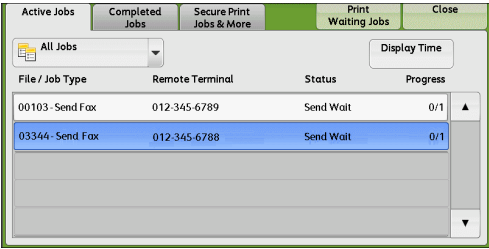

3 Select [Delete].

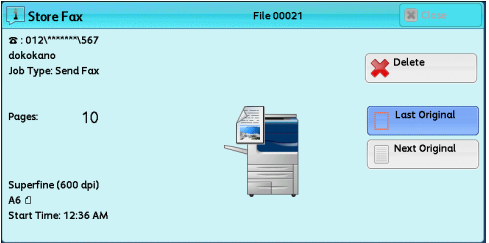


4 Select [Delete].

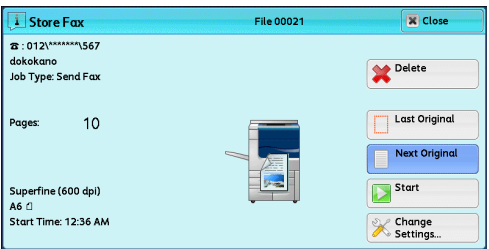


Changing the Scan Settings

You can change the scan settings while scanning a document.

1 Select [Next Original].

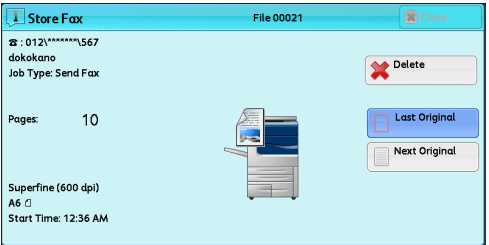


2 Select [Change Settings].

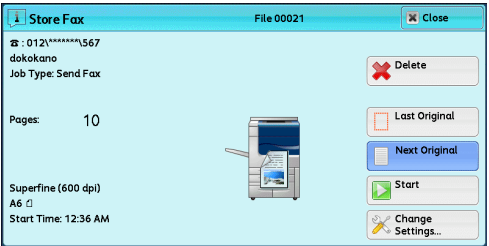


3 Set [Resolution], [Original Size], and use [◀] and [▶] to set the fax density.

For each setting, refer to "Resolution (Specifying the Scanning Resolution)" (P.208), "Original Size (Specifying the Scan Size for the Original)" (P.209), or "Lighten/Darken (Adjusting Fax Density)" (P.205).

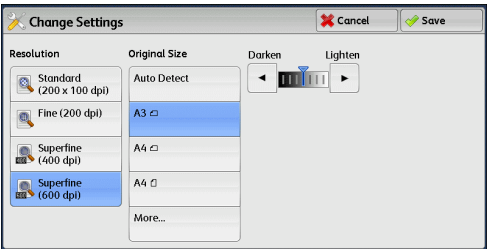

4 Select [Save].

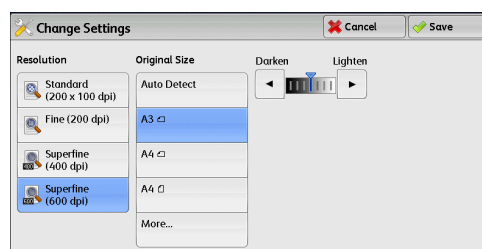

5 Press the <Start> button.

About Internet Fax

Unlike general fax communications using public phone lines, Internet Fax uses corporate intranets and the Internet to send or receive scanned documents as e-mail attachments.

Because Internet Fax uses existing corporate intranets and the Internet, the transmission is less expensive than general fax transmission.

- Note**
- This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
 - To use Internet Fax, various settings are required to display [Internet Fax] from the drop-down menu on the [Fax/Internet Fax] screen. For more information, consult your system administrator.
 - Internet Fax does not support color documents. If the machine receives color documents for Internet Fax (Profile: TIFF-C), the documents are converted to black-and-white documents and printed. To send and receive color documents, use the E-mail service.

For information on how to connect the machine to a network and how to set the network environment, refer to "5 Tools" > "Connectivity & Network Setup" in the Administrator Guide, and the manual included in the Driver CD Kit.

Internet Fax Features

The following describes the Internet Fax features of the machine.

Sending Internet Fax

The Internet Fax service allows you to send documents scanned by the machine as TIFF-format attachments to Internet Fax-compatible machines.

- Important**
- The TIFF file profiles that can be processed differ depending on the Internet Fax-compatible machine of the recipient. Confirm the profile that can be processed by the recipient's Internet Fax-compatible machine before specifying a profile. For more information, refer to "Sending Internet Fax" (P.178). For information on profiles, refer to "Internet Fax Profile (Specifying Internet Fax Profiles)" (P.232).
 - If a document is sent to a computer using the Internet Fax service, it cannot be opened in some cases. When you send a document to a computer, use the E-mail service.

■Using Direct Internet Fax feature

You can send an Internet fax directly to the Internet Fax-compatible machines without going through the SMTP server.

- Note**
- You can switch between Internet Fax and Direct Internet Fax in the System Administration mode. These two features cannot be enabled simultaneously. For information on how to switch them, refer to "5 Tools" > "Fax Service Settings" > "Internet Fax Control" > "Internet Fax Path" in the Administrator Guide.

■Registering e-mail addresses in address numbers

Once you register a recipient's e-mail address in an address number, you do not need to enter the e-mail address each time you send Internet Fax to the recipient.

- Note**
- To address numbers, you can also register the Internet Fax profile and other settings required for transmission.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

■Using the Broadcast Send feature

You can send an Internet fax to multiple destinations by specifying multiple e-mail addresses. Also, you can mix regular fax recipients and Internet Fax recipients to send a broadcast transmission for fax and Internet Fax.

Note • Up to three broadcast transmissions can be performed. The subsequent jobs will be sent in the sequential order after the former jobs are finished.

For information on how to specify recipients, refer to "Step 3 Specifying Destinations" (P.169) and "Specifying a Destination Using the Address Book" (P.199).

■Forwarding files stored in folders

By enabling the forwarding feature and registering a forwarding e-mail address for a folder in advance, the faxes stored in the folder are automatically forwarded to the specified computer, as e-mail attachments. The user, therefore, does not need to walk up to the machine to pick up the faxes.

For more information, refer to "Forwarding Files Stored in a Folder" (P.182).

■Sending Internet Fax to regular fax machines via a relay station

By specifying e-mail addresses in a specific format, you can send faxes from the machine on the network via an Internet Fax-compatible machine (fax gateway) to fax machines that do not support the Internet Fax service.

Important • This feature is available only when the e-mail reception method on the fax gateway is set to SMTP.

For information on the fax gateway feature, refer to "Sending Internet Fax to regular fax machines via a relay station" (P.182).

■Precautions when sending Internet Fax

The message "Files Sent" displayed on the [Job Status] screen of the machine, a Job History Report, and a Transmission Report indicates that the transmission to the SMTP server configured on the machine has been successful. The Internet Fax transmission to the recipient may not complete if there is a problem on the Internet. In such case, the machine will not be notified of such transmission error. After sending an important e-mail, we suggest that you confirm it is received, such as by calling the recipient.

You can receive an e-mail of the transmission result if you set Read Receipts and Delivery Receipt when transmitting. For more information, refer to "Acknowledgement Report (Confirming Transmission Results)" (P.214).

Receiving Internet Fax (Printing Internet Fax)

The machine automatically prints Internet Fax documents that are sent by e-mail from an Internet Fax-compatible machine.

Note • The following TIFF file formats and profiles are available for e-mail reception.
File format: TIFF-FX (RFC2301) Profile: TIFF-S, TIFF-F, TIFF-J, and TIFF-C. If an unsupported profile is received, the machine may not be able to print the file. For more information, refer to "Receiving Internet Fax" (P.179).

Restrictions on the E-mail Server

Depending on the system environment, such as restrictions on the e-mail server, large-size e-mails cannot be sent or received. Before you set the data-split feature, therefore, check the system environments of the sending and receiving ends.

If data is split into multiple data but each data size is still too large, change the image quality or resolution of each data to make its size even smaller.

Features Unavailable for Sending Internet Fax

The following features are available for regular fax transmission, but are not available for Internet Fax transmission.

- Starting Rate
- Priority Send
- Delay Start
- Cover Page
- Recipient Print Sets
- F Code
- Remote Folder
- Remote Polling
- Manual Send
- Relay Broadcast
- Sorting received faxes by folder (Folder Selector)
- Direct Fax

If you are using the fax gateway feature, you can set Starting Rate and F Code. For more information on the fax gateway feature, refer to "Sending Internet Fax to regular fax machines via a relay station" (P.182).


Sending Internet Fax

The following describes how to send Internet Fax.


Important • The Cc, Bcc, and Reply To features are not available for Internet Fax.

Note • The machine converts documents to the TIFF format and then sends them as e-mail attachments.


1 Select [Internet Fax].

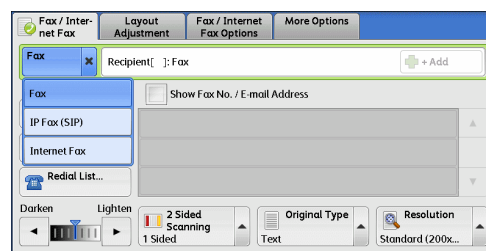

2 Select [New Recipients].

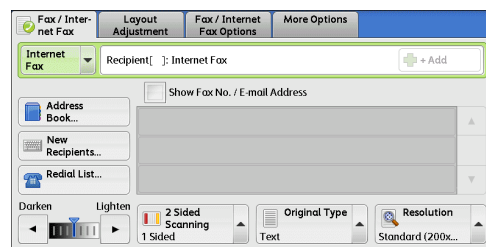

- 3** Specify a recipient with up to 128 characters using the keyboard displayed on the touch screen.

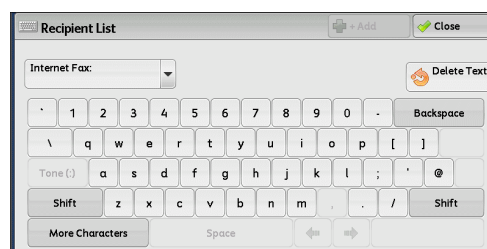

Important • If you specify a fax number, the data will not be sent.

- To specify an e-mail address for Direct Internet Fax, use the following format:
 - When specifying a host name, enter FQDN to the right of the @ symbol.
Example: local-part@device.domain.com
 - When specifying an IP address, enter the IP address with brackets ("[" , "]") to the right of the @ symbol.
Example: local-part@[192.168.0.101]

Note • You can use address numbers, one touch buttons, group dial numbers, or the Address Book to specify e-mail addresses. For more information, refer to "Speed Dialing (Specifying a Destination Using an Address Number)" (P.200), "Specifying a Destination Using a One Touch Button" (P.201), and "Specifying a Destination Using the Address Book" (P.199).

- 4** Enter a subject and message if necessary.

For information on how to enter the subject, refer to "Internet Fax Subject (Specifying the Internet Fax Subject)" (P.222). For information on how to enter the message, refer to "Internet Fax Message (Editing the Internet Fax Mail Contents)" (P.222).

- Note**
- If the hard disk of the machine becomes full during scanning of a document, a screen appears to prompt you to select whether to send the job up to the stored pages or to cancel the job. Select one of the processes.
 - If the hard disk of the machine becomes full during Internet Fax transmission, the transmission is canceled and the document data is deleted.
 - If TIFF-J is specified for the profile, the recipient's computer may not be able to display the attached TIFF file properly. In this case, specify the TIFF-S or TIFF-F profile.
 - If the Internet Fax-compatible machine of a recipient is not the same model as this machine, it may not print data received from this machine. Confirm the Internet Fax features supported by the destination machine before sending data to it.
 - When specifying an address from the Address Book for Internet Fax, check if the address contains a domain that is not permitted for use. In this case, the address cannot be used.

Receiving Internet Fax

■ Reception method

When the machine receives e-mail from an Internet Fax-compatible machine, the received document is printed automatically.

The machine also accepts e-mails addressed to folders on the machine, such as "BOX123@myhost.example.com".

For information on folders, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide. For information on job flow sheets, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" in the Administrator Guide.

- Note**
- If domains for receiving e-mail are restricted by CentreWare Internet Services, you will only receive Internet Fax from the permitted domains. For information on the domain filtering, refer to "5 Tools" > "Connectivity & Network Setup" > "Other Settings" > "Domain Filtering" in the Administrator Guide.
 - You can confirm the domain setting status in a Domain Filter List. For information on the Domain Filter List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" in the Administrator Guide.

■Printing size

Internet Fax documents received on the machine are printed at the same size as the original documents of the senders.

Note • When [TIFF-S] is selected for the profile, the printing size will be A4.

When the loaded paper is not the same size as the sent document or when the paper tray used for printing received documents is restricted, the receiving process will be the same as that for regular faxes.

■Receiving e-mail

Each e-mail header and attachment (TIFF file) of received e-mail will be printed.

- Split documents sent by e-mail

If a document scanned by the machine is split into segments according to the [Maximum Number of Pages per Split Send] setting made with CentreWare Internet Services, each segment will be treated as individual e-mail and attached with the details of split data.

- Attachments (TIFF format)

If an unsupported attachment file is received, the file is deleted. You can confirm the error in a Job History Report.

- When the folder number is not registered

If the specified folder is not registered, the received data is deleted. You can confirm the cause of the problem in a Job History Report.

- Folder operations

If the hard disk space of the machine is insufficient while printing e-mail or storing e-mail to the folder, the page being processed will be deleted at the point in time when the machine runs out of hard disk space.

■Restricting incoming e-mail

The machine can be configured to accept or reject e-mails received from specified domains. This feature is called "Domain Filtering". You can register up to 50 domains as permitted or rejected domains.

When receiving an e-mail, the machine checks the Domain Filtering settings. If the domain is registered as a rejected domain, or if the domain is not registered as an accepted domain, the machine will not receive the e-mail. You can confirm the result in the Job History Report. The job history of any rejected e-mail is not stored.

For information on the Domain Filtering, refer to "5 Tools" > "Connectivity & Network Setup" > "Other Settings" > "Domain Filtering" in the Administrator Guide.

Useful Features


Using an E-mail Address to Send Internet Fax to a Folder

By specifying the e-mail address of a folder on this machine, you can send Internet Fax from an Internet Fax-compatible machine to the folder.

When Internet Fax data is received, the machine stores it in the target folder and prints a Folder Report.

This feature is available only when the recipient's machine can receive e-mail via SMTP. To use this feature, the recipient's machine must have a folder that does not have a passcode. For information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

- 1 Select [Internet Fax].

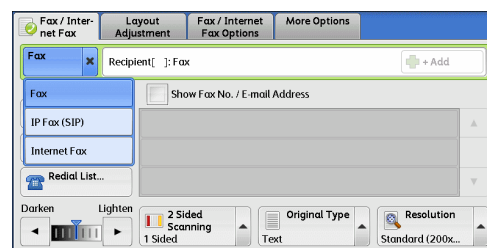

- 2 Select any option.

- 3 Enter the e-mail address of the target folder in the following format:

BOX123 @myhost.example.com

BOX (fixed characters to indicate folder) + folder number

@ + host name of the receiving machine

Domain name of the receiving machine

Example Folder number 123

(Enter the digits of the folder number to match those of the recipient)

Host name of the receiving machine myhost

Domain name of the receiving machine example.com

Important • If the hard disk of the machine becomes full during Internet Fax transmission, the transmission is canceled and the document data is deleted.

Note • If the hard disk of the machine becomes full during scanning of a document, a screen appears to prompt you to select whether to send the job up to the stored pages or to cancel the job. Select one of the processes.

Sending Internet Fax to regular fax machines via a relay station

By specifying e-mail addresses in a specific format, you can send a document to regular fax machines (that do not support the Internet Fax service) via a network.


This feature enables the machine to first send a document to an Internet Fax-compatible machine (fax gateway) by e-mail via the Internet. The e-mail document is then converted to a fax document on the Internet Fax-compatible machine, and is forwarded to its destinations. If you locate the fax gateway and regular fax machines within an area where the same local rate applies, the fax transmission costs can be reduced.

Important • This feature is available only when the fax gateway can receive e-mail via SMTP.

Note

- The e-mail received by the fax gateway is deleted even if the fax was not correctly sent.
- The setting specified in [Starting Rate] on the [Fax/Internet Fax Options] screen is used as the communication mode from the fax gateway to the destination fax machine.
- You can restrict fax forwarding in [Fax Transfer from Address Book] and [Fax Transfer Maximum Data Size] in the System Administration mode.

- 1 Select [Internet Fax].
- 2 Select any option.
- 3 Enter the e-mail address of the receiving machine in the following format:

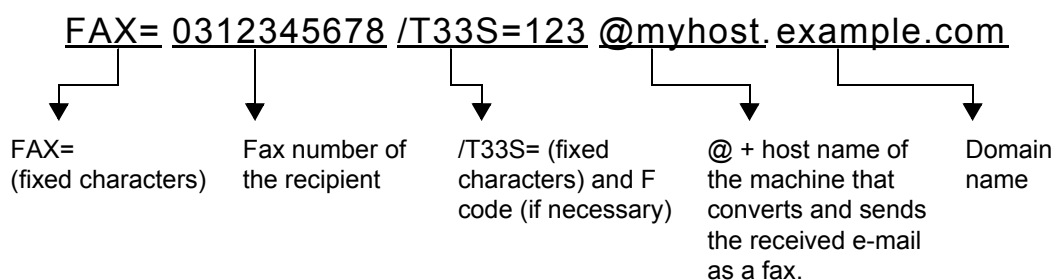

Example Fax number..... 0312345678
 F code (if necessary)..... /T33S=123
 Host name of the receiving machine..... myhost
 Domain name of the receiving machine..... example.com

Important • If the hard disk of the machine becomes full during Internet Fax transmission, the transmission is canceled and the document data is deleted.

Note

- If the hard disk of the machine becomes full during scanning of a document, a screen appears to prompt you to select whether to send the job up to the stored pages or to cancel the job. Select one of the processes.

Forwarding Files Stored in a Folder

You can automatically forward faxes stored in a folder, as e-mail attachments.

Faxes sent to folders using the fax signal method (proprietary communication procedures), F Code method, or DTMF method, and faxes stored in folders by the Folder Selector feature can be forwarded as e-mail attachments.

Important • This feature is available only when the mail receiving protocol is SMTP.

For information on how to forward files in a folder, send files to a folder, use the Folder Selector to receive files in a folder, and print or delete files received in a folder, refer to "Checking/Operating Files in a Folder" (P.329).

For information on how to set the Folder Selector feature, refer to "5 Tools" > "Fax Service Settings" > "Fax Received Options" in the Administrator Guide.

■Forwarding Internet Fax

The machine can automatically forward faxes received in a folder or faxes stored in a folder by using the Folder Selector feature to the forwarding address specified for the folder as e-mail.

With this forwarding feature, you can receive Internet Fax documents on your computer without having to walk up to the machine to pick them up. You can also save paper by displaying the documents on your computer screen.

■How to forward Internet Fax

The following operations are required for using the forwarding feature of Internet Fax.

- On the machine sending a fax

Sending faxes to the folder using the fax signal method (proprietary communication procedure), F Code method, or DTMF method.

For information on the transmission method, refer to "More Options" (P.235).

- On the machine receiving the fax in a folder and forwarding an Internet fax

Creating a job flow sheet to specify a forwarding address and then making a link between the job flow sheet and the folder.

For information on how to create a job flow, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" in the Administrator Guide.

Important • Do not set the address of the machine as the forwarding address.

Note

- You can register up to 100 forwarding addresses.
- [Folder Number] and [Passcode] are required by the sender. Inform the sender of the settings.
- If the fax you received is a JBIG-compressed image, and if the Internet Fax profile of the forwarding destination is set to TIFF-F, the image is converted into MH format when forwarding. Also, if the Internet Fax profile is TIFF-S, the fax image is forwarded as is without changing the size and resolution settings.
- If the hard disk in the machine becomes full while the machine is receiving an Internet fax, the reception is canceled and the partly received file is deleted.
- If there is a problem with the data during Internet Fax forwarding, the forwarding is canceled and the received file is stored in the folder.
- If forwarding using SMTP fails, the received file is stored in the folder.
- You can confirm the forwarding result in a Job History Report.


About IP Fax (SIP)

IP Fax (SIP) refers to the process of sending and receiving faxes using an IP Network in a corporate intranets.

The process is compliant with the T.38, an ITU recommendation. Because IP Fax (SIP) uses existing corporate intranets, the transmission is less expensive than G3 fax transmission using public telephone network.

Note

- The communication between IP Fax (SIP) devices are available for our compatible machines in a corporate intranet. (Able 1407 is not available.) Hereinafter, IP Fax (SIP) device is referred to as our IP Fax (SIP) compatible machine.

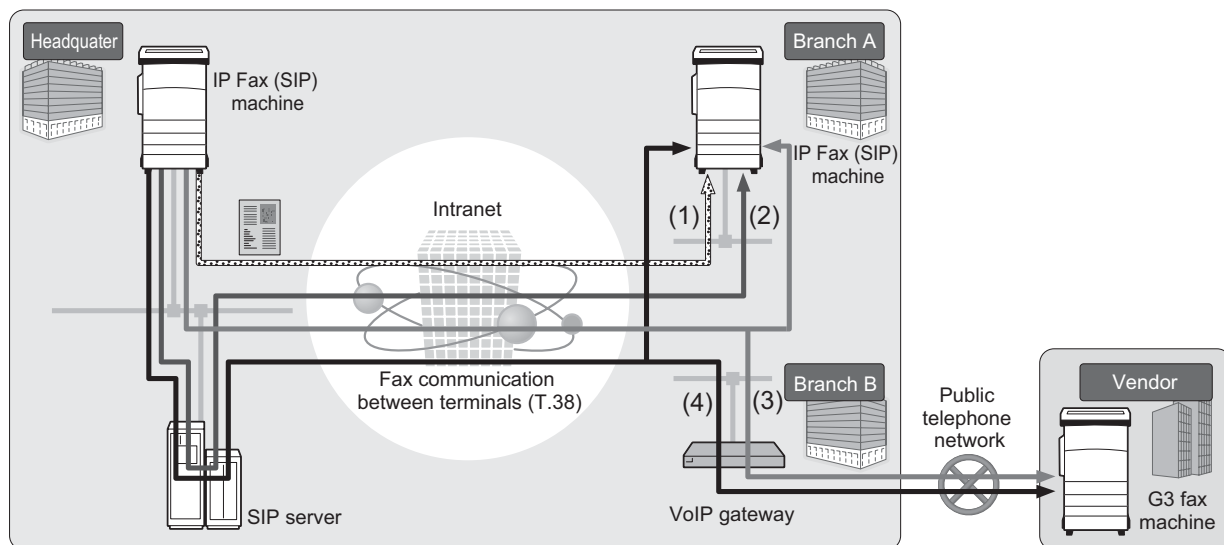

IP Fax (SIP) can be configured with SIP server and VoIP Gateway. The functions of the devices are as follows:

■ SIP Server

Using a SIP Server, IP Fax designation can be designated by SIP user name and telephone number. Main features of a SIP server are:

- Receives address information of the machine in the IP network, and register the address in the database (registrar server).
- Relays request and response from the SIP client (proxy server).

■ VoIP Gateway

VoIP gateway allows the machine to relay fax communications between the IP network and the public telephone network. A VoIP gateway is required for communicating with a G3 Fax device.

- Note**
- Cisco MCS7816H3 (Cisco Unified Communications Manager 6.1 is installed) is validated as a SIP server available for the machine.
 - Cisco CISCO2801-V/K9 (IOS 12.4) is validated as a VoIP Gateway available for the machine.
 - For more information on configuration of SIP server and VoIP gateway, contact our Customer Support Center.
 - The communication mode supported by IP Fax (SIP) is G3.

IP Fax (SIP) can be used in the following four connection configurations:

Method to input IP Fax destination differs depending on the connection configuration.

■IP Fax (SIP) Device Only

IP Fax (SIP) devices communicate with each other directly, using IP network (Intranet). SIP device address of the communication target shall be designated as an IP Fax (SIP) between IP Fax (SIP) devices. For example, 1111@192.168.1.1 (address of SIP device).

■SIP Server Installed

IP Fax (SIP) devices communicate via a SIP server, using an IP network (Intranet). Since SIP server utilizes address translation, IP Fax (SIP) can be sent to IP Fax (SIP) devices by a designated SIP user name or telephone number. For example, 1111 (SIP user name) or 0312345678 (telephone number).

■ VoIP Gateway Installed

In addition to direct communication between IP Fax (SIP) devices in an IP network (Intranet), communication with a G3 Fax device, which does not have IP Fax (SIP) feature, is possible using a VoIP gateway.

IP Fax (SIP) can be sent in the following two methods:

- For IP Fax (SIP) device, designate the SIP device address of the communication target. For example, 1111@192.168.1.1 (SIP device address).
- For G3 Fax device, designate the telephone number. For example, 0312345678 (telephone number)

■SIP Server and VoIP Gateway Installed

In addition to the communication between an IP Fax (SIP) device using a SIP server in an IP network (Intranet), communication with a G3 Fax device, which does not have a IP Fax (SIP) features, is possible using a VoIP gateway.

Since SIP server utilizes address translation, an IP Fax (SIP) can be sent to an IP Fax (SIP) device by designating the SIP user name or telephone number.

For G3 Fax device, IP Fax can be sent by designating telephone number.

For example, 1111 (SIP user name) or 0312345678 (telephone number).

IP Fax (SIP) Features

The following describes the IP Fax (SIP) features.

Operations similar to operating regular fax

By selecting [IP Fax (SIP)] and entering address in appropriate form, you can send and receive fax documents in a similar manner of operating regular fax.

Also, you can use most features available for regular fax such as redial feature, remote folder, and others.

For other available features, refer to "Difference from other fax features".

For operations of fax documents received by using the Remote Folder, please refer to "Fax/Internet Fax" (P.197).

Reduction of telecommunication fee

Within an intranet, communication between IP Fax (SIP) devices requires no telecommunication fee. For this reason, IP Fax (SIP) is suitable for sending and receiving fax documents between head office and branches in an intranet.

By using a VoIP gateway, you can reduce the telecommunication cost for sending fax documents to the outside of the intranet.

Communication with regular fax machines

When a VoIP gateway is installed and configured for IP Fax (SIP), you can have fax communication with G3 fax machines connected to the public telephone network.

For the configuration of a VoIP gateway, check with your network administrator.

The Starting Rate supported in IP Fax (SIP) is G3.

Direct Fax

You can use the Direct Fax feature to fax documents created with your computer applications directly in the same manner as printing.

For the Direct Fax feature, refer to "Sending Fax" (P.402).

Forwarding feature registered in job flow sheet

By registering job flow, you can forward documents in stored folder or scanned documents via IP Fax (SIP).

Registering in the Job Memory

By storing a setting you frequently use in IP Fax (SIP), you can call the setting with a single button operation.

Feature Comparison with Regular Fax

The feature comparison between the IP Fax (SIP) and the regular fax is as follows:

Features	Regular fax ^{*1}	IP Fax (SIP)		
		IP Fax (SIP) only	SIP server	VoIP Gateway
Redial List	O	O	O	O
Relay Broadcast	O	X	X	X ^{*2}
Local Name	O	O	O	X
Starting Rate	O	O	O	O
Priority Send	O	O	O	O
Delay Start	O	O	O	O
Cover Page	O	O	O	O
Recipient Print Sets	O	O	O	X
Remote Folder	O	O ^{*3}	O ^{*3}	X ^{*2}
F Code	O	O	O	O
Remote Polling	O	O ^{*4}	O ^{*4}	O ^{*4}
On-hook	O	X	X	X
Manual Send	O	X	X	X
Manual Receive	O	X	X	X
Direct Fax	O	O	O	O
Folder Selector - Service Setup	O	X	X	X
Folder Selector Setup	O	O	O	O
Output Destination Setup	O	O	O	O

O Available

X Not available

1. Refers to G3 fax machines connected to the public telephone network.

2. Available for the Remote Folder and the Relay Broadcast using F code

3. Available for the Remote Folder using fax signal method. Unavailable for DTMF method.


4. Available for the Remote Polling and the Store for Secure Polling. Unavailable for the On-hook.

Note • The buttons of some unavailable features are not displayed on the control panel.

Sending IP Fax (SIP)

The following describes the procedure of sending IP Fax (SIP).

1 Select [IP Fax (SIP)].

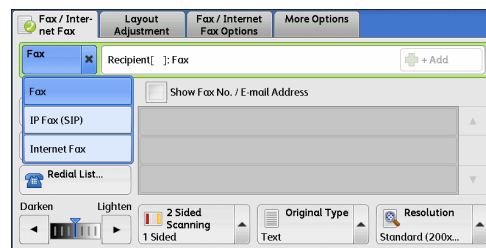

2 Configure features as necessary.


For available features, refer to "Fax/Internet Fax" (P.197)

3 Specify a recipient.

Example: Telephone number: 0312345678

SIP user name: 1111

SIP device address: 1111@192.168.1.1

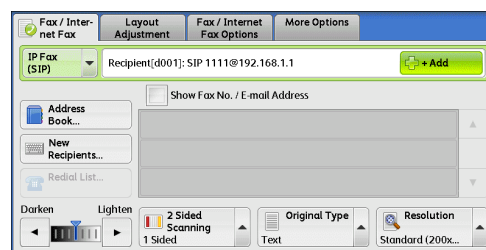

Important • Method to input IP Fax (SIP) destination differs depending on the fax type of a recipient or the connection configuration. For these differences, refer to "About IP Fax (SIP)" (P.184).

• Check the recipient information before sending the fax.

┆ For the method to specify a recipient using keyboard, refer to "Entering Text" (P.68).

┆ For other methods to specify a recipient, refer to "Fax/Internet Fax" (P.197).

┆ For the broadcast sending, refer to "Broadcast" (P.241).


4 Press the <Start> button.

Important • If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.

• Fax cannot be sent if a copy protection code is detected.

Note • Depending on the settings, a screen to reenter the recipient may be displayed after you specify the recipient. In such case, re-enter the recipient.

• If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.

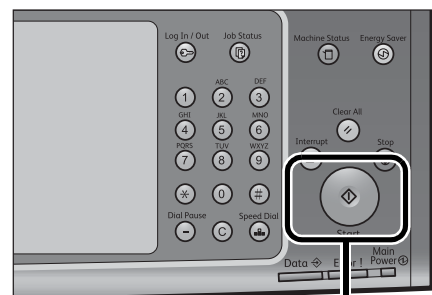

<Start> button

If a fax cannot be sent, refer to "15 Problem Solving"> Fax problem.

For the method to cancel sending fax, refer to "Stopping the Fax Job" (P.173)

Receiving IP Fax (SIP)

Received fax documents are printed automatically in a manner similar to that of a regular fax.

For information on operations of the Remote Folder, refer to "Fax/Internet Fax" (P.197).

About Server Fax

If your machine supports the Scan service, installing the Server Fax Kit (optional) allows you to use the Fax service of a Server Fax server.

When your machine does not support the Fax service and supports the Server Fax service only, the Server Fax service will be enabled automatically.

When your machine supports both the Fax and Server Fax services, manually switch to the Server Fax service in the System Administration mode.

With this Server Fax service, you can transfer image data received by the machine to the Server Fax server and can transfer image data received by the Server Fax server to the machine via a network based on the settings you made.

The Server Fax service supports the SMB, FTP, and SMTP protocols.


For information on how to connect the machine to a network and how to set the network environment, refer to the Administrator Guide, and the manual included in the Driver CD Kit.

Important • While the Server Fax service is enabled, the Fax service is detected as "not installed" even if the Fax Kit 2 is installed on the machine. During that time, therefore, fax transmission and reception are disabled and printed reports show that the machine does not support the Fax service.


Note • The Server Fax service cannot be used together with the Fax or Internet Fax service.
• This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

Sending Server Fax

- 1 Select [Fax] on the [Services Home] screen.

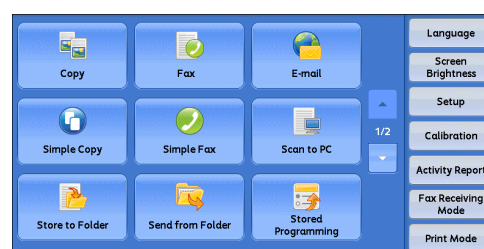

- 2 Use the keyboard to directly enter a destination, or use the Address Book to specify a destination.

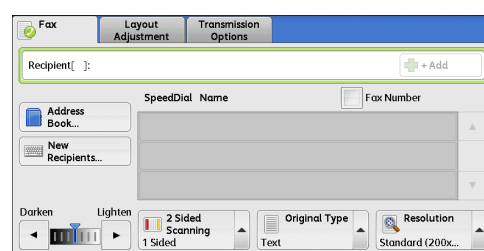

For information on how to use the keyboard, refer to "Specifying a Destination Using the Keyboard Screen" (P.202).

For information on how to use the Address Book, refer to "Specifying a Destination Using the Address Book" (P.199).

Important • When the Server Fax service is used for fax transmission, the attributes other than [Fax Number], [Name], and [Index] are ignored in the Address Book.

Features Unavailable for Sending Server Fax

The following features are available for regular faxes, but are not available for server faxes.

Screen	Features
Fax	Resolution*
Transmission Options	Priority Send
	Cover Page
	Recipient Print Sets
	Remote Folder
	F Code
More Options	Remote Polling
	Store for Polling
	On-hook

* When the SMB or FTP protocol is used, the available options are [Standard (200 x 100 dpi)] and [Fine (200 dpi)], and the resolution of data that is sent to a final destination depends on the resolution setting on the fax server. When the SMTP protocol is used, the available option is [Fine (200 dpi)] only.

You can specify the following settings of the Server Fax service under [Tools] > [System Settings] > [Scan Service Settings] > [Scan Defaults]:

- Background Suppression
- Lighten/Darken
- Sharpness

Features Available for Sending Server Fax (When SMTP is Used)

When the SMTP protocol is used, the Server Fax service is compliant with the E-mail settings configured in the System Administration mode. The following E-mail settings, however, are not available for the Server Fax service:

- Read Receipts
- Reply To

Simple Fax


You can select [Fax/Internet Fax] or [Simple Fax] on the [Services Home] screen to set the features for the Fax service.

This section describes the features you can select on the [Simple Fax] screen. [Simple Fax] allows you to use only basic features to easily send faxes. The following shows the reference section for each feature.


Specifying a Destination Using the Numeric Keypad	192
Speed Dialing (Specifying a Destination Using an Address Number)	192
Specifying a Destination Using a One Touch Button	193
Resolution (Specifying the Scanning Resolution)	194
Original Type (Selecting the Document Type)	195
2 Sided Scanning (Transmitting 2-sided Originals)	196

1 Select [Simple Fax] on the [Services Home] screen.

- Note**
- [Simple Fax] is not displayed on the [Services Home] screen when the Server Fax service is enabled.

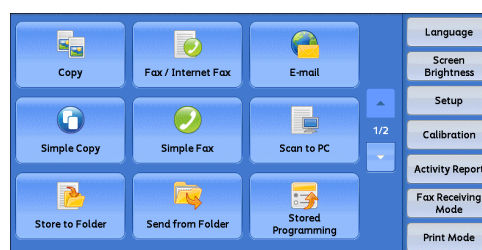

2 Select a feature on the [Simple Fax] screen.

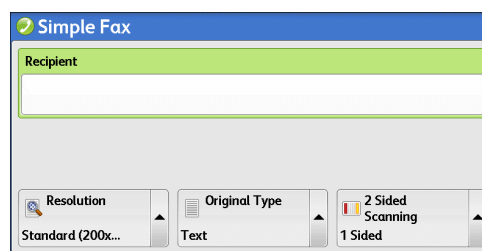

- Note**
- For the Simple Fax service, you can only set [Resolution], [Original Type], and [2 Sided Scanning]. In addition, when you use this service, [Mixed Size Originals] is set to [On], and [Transmission Header Text] is set to [Display Header]. If you want to set the other options, use [Fax/Internet Fax] on the [Services Home] screen to send faxes.
 - You cannot switch between [Fax/Internet Fax] and [Simple Fax]. To switch one to another, you must return to the [Services Home] screen. Once you return to the [Services Home] screen, the settings you have made in [Fax/Internet Fax] or [Simple Fax] will be cleared.


Specifying a Destination Using the Numeric Keypad

Specify a destination using the numeric keypad.


- 1 Enter a fax number using the numeric keypad.

Note


- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.

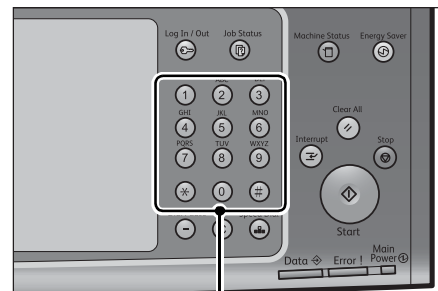

Numeric keypad

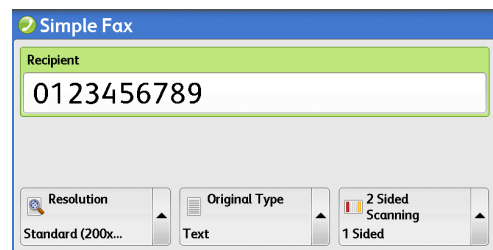

- 2 Press the <Start> button.

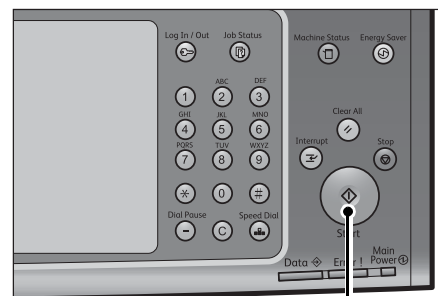

<Start> button

Speed Dialing (Specifying a Destination Using an Address Number)

You can use address numbers to specify recipients. Register the address numbers for speed dialing in advance.

When you specify address numbers, confirm that the corresponding fax numbers are correctly registered on the machine. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


Note

- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.
- You can specify only fax recipients using address numbers for the Simple Fax service. The numbers registered for the Internet Fax service and IP Fax (SIP) cannot be specified.

- 1 Press the <Speed Dial> button, and enter a 4-digit address number.


Note

- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.

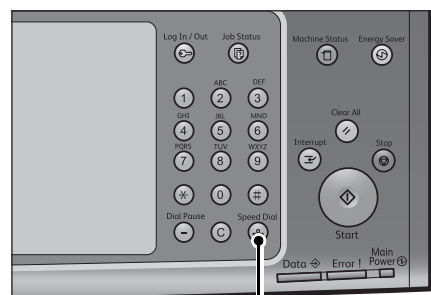

<Speed Dial> button

- 2 Press the <Start> button.

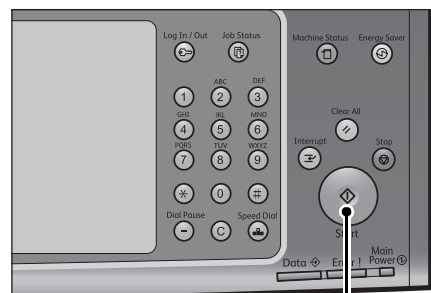

<Start> button

- 3 Confirm the destination displayed on the touch screen, and then select [Yes].


Specifying a Destination Using a One Touch Button

You can use the one touch buttons to specify recipients. One touch buttons correspond to the address numbers from 0001 to 0070, or 0001 to 0060. For example, when the number you want to dial is registered to the address number 0001, press one touch button <1>.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

- Note**
- There are two ways in which address numbers and stored programs are assigned to the one touch buttons. Select either of the following. By default, [Type 1] is selected.
 - [Type 1]
The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons 71 and 72 are used for stored programs and they correspond to the registered stored programs 1 and 2.
 - [Type 2]
The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 72 are used for stored programs and they correspond to the registered stored programs 1 to 12.

- 1 Press a one touch button. Confirm that the recipient (fax number) specified with the one touch button is displayed on the touch screen.

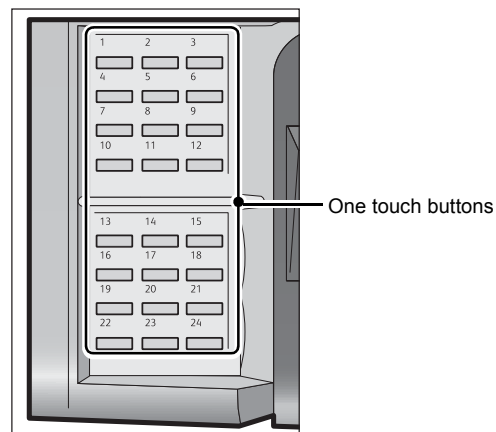


Important • The one touch buttons have a sensor to detect which page of one touch buttons (1 - 24, 25 - 48, 49 - 72) is currently opened. Before pressing a one touch button, turn over the one touch panel completely, and take your hand off from the panel. Do not press the button while you are turning over the panel.

- Do not place any objects near the one touch buttons or spill any liquid over them.

Note • Turn the one touch panel over to press the one touch buttons 25 and above.
• If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.

- 2 Press the <Start> button.

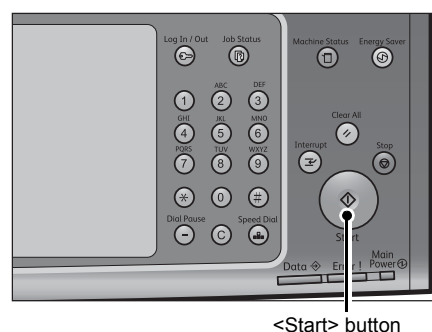

- 3 Confirm the destination displayed on the touch screen, and then select [Yes].


Resolution (Specifying the Scanning Resolution)

You can set the resolution for the documents to be scanned.

- Note**
- The machine scans a document at the specified resolution, but if the recipient's machine does not support the resolution, the machine automatically changes the resolution to one supported by the recipient's machine and there is a corresponding loss in quality.
 - The higher the resolution, the lower the transmission speed. Usually, we recommend that you select [Superfine (400 dpi)] or lower.
 - Only [Fine (200 dpi)] is available for the Server Fax service.

You can specify the resolution for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

1 Select [Resolution].

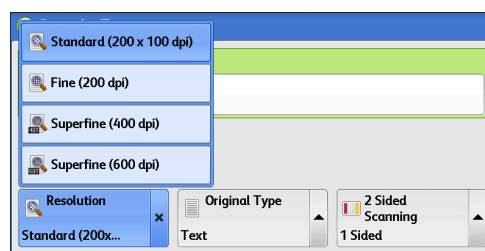

■Standard (200 x 100 dpi)

Select this option when transmitting standard documents.
(200 x 100 pels/25.4 mm)

■Fine (200 dpi)

Select this option when transmitting documents with small text or detailed images.
(200 x 200 pels/25.4 mm)

■Superfine (400 dpi)

Select this option when transmitting documents with fine images.
(400 x 400 pels/25.4 mm)


■Superfine (600 dpi)

Select this option when transmitting documents with extremely fine images.
(600 x 600 pels/25.4 mm)

Original Type (Selecting the Document Type)

You can select the type of the original document, such as text and photo documents.

1 Select [Original Type].

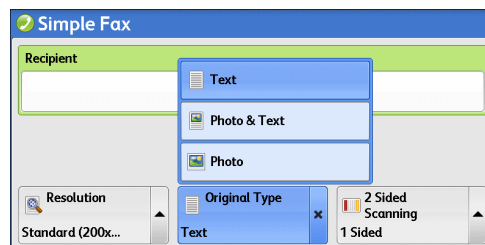

■Text

Select this option when transmitting a document that contains only text.

■Photo & Text

Select this option when transmitting a document that contains both text and photos. The machine automatically distinguishes the text and photo areas and sets the appropriate image quality for each area of the document.

■Photo

Select this option when transmitting a document that contains only photos.


Note • If reduced in size, the scan documents may have stripes in their photo areas.

2 Sided Scanning (Transmitting 2-sided Originals)

You can scan a 1-sided or 2-sided document on one or both sides of paper for fax transmission.

- Note**
- The image on the back side of a 2-sided document is rotated so that it is placed in the same orientation as the image on the front side.

1 Select [2 Sided Scanning].

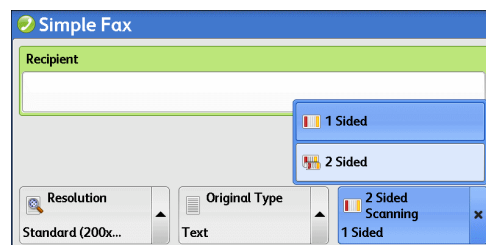

■1 Sided

Select this option to scan one side of the document.

■2 Sided

Select this option to scan both sides of the document.

■2 Sided (Skip Blank Pages)

Select this option to scan only the document pages that are not blank. You do not need to take into account which side is the front when sending documents.

Important

- If you select [2 Sided (Skip Blank Pages)] in [2 Sided Scanning] when the Skip Blank Pages feature is enabled, image loss may occur on the fax document depending on the recipient's machine. For example, when you select [2 Sided (Skip Blank Pages)] to send an A4 fax document, image loss may occur in the area where the edge erase amounts is set when the fax is printed on an A4 document by the recipient's machine.

- When you select [2 Sided (Skip Blank Pages)] on the [Simple Fax] screen, the machine is set to select [100%] in [Reduce/Enlarge] automatically. When you select an option other than [2 Sided (Skip Blank Pages)], the machine is set to select [Auto %] in [Reduce/Enlarge] automatically.

- Note**
- When [2 Sided (Skip Blank Pages)] is selected, the setting of [Original Type] changes to [Text].
 - You can switch whether to enable [2 Sided (Skip Blank Pages)] by pressing the <Energy Saver> button while setting the fax features.
 - The level of accuracy in which the machine determines whether a page is blank or not differs depending on a document. For example, if a blank page has background shadows, the machine may not determine the page as a blank page.

[2 Sided (Skip Blank Pages)] is displayed only when [Skip Blank Pages] is enabled. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.

Fax/Internet Fax


You can select [Fax/Internet Fax] or [Simple Fax] on the [Services Home] screen to set the features for the Fax service.

This section describes the features you can select on the [Fax/Internet Fax] screen. The following shows the reference section for each feature.

Internet Fax/Fax/IP Fax (SIP) (Selecting Internet Fax/Fax)	197
+ Add (Sending Faxes to Multiple Recipients)	198
Specifying a Destination Using the Address Book	199
Speed Dialing (Specifying a Destination Using an Address Number)	200
Specifying a Destination Using a One Touch Button	201
Specifying a Destination Using the Keyboard Screen	202
Specifying a Destination Using the Redial Feature	203
Specifying a Line (Port)	203
Entering Specific Symbols	204
Removing/Confirming a Recipient	205
Lighten/Darken (Adjusting Fax Density)	205
2 Sided Scanning (Transmitting 2-sided Originals)	206
Original Type (Selecting the Document Type)	207
Resolution (Specifying the Scanning Resolution)	208

You can customize the layout of features displayed on the [Fax/Internet Fax] screen. For more information, refer to "5 Tools" > "Fax Service Settings" > "Screen Defaults" in the Administrator Guide.

- 1 Select [Fax/Internet Fax] on the [Services Home] screen.

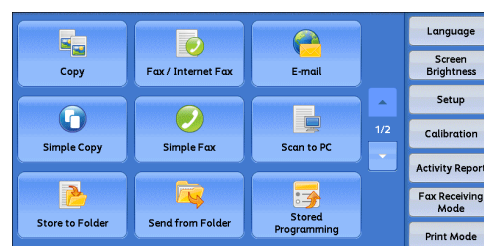


- 2 Select a feature on the [Fax/Internet Fax] screen.

Internet Fax/Fax/IP Fax (SIP) (Selecting Internet Fax/Fax)

You can switch between Internet Fax, Fax, and IP Fax (SIP) as necessary.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

- 1 Select [Fax], [IP Fax (SIP)], or [Internet Fax] from the drop-down menu.

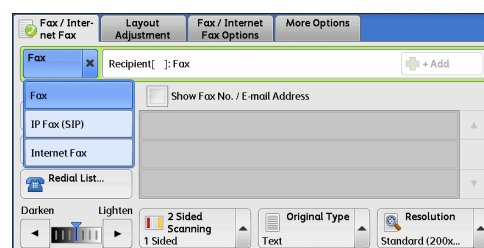

+ Add (Sending Faxes to Multiple Recipients)

The Broadcast Send feature allows you to transmit the same document to multiple recipients in a single operation. There is no need to repeat the same operation for each recipient.

When the Additional G3 Port 2 (optional) is installed, you can use the extra lines to make multiple transmissions simultaneously with Broadcast Send.

If you specify Broadcast Send, the machine prints a Broadcast/Multi-Poll Report after the Broadcast Send operation finishes.

- Note**
- For Fax and Internet Fax, the maximum number of recipients that you can specify at one time is as follows:
Using the numeric keypad only: 200 locations; using address numbers only: 600 locations; and using both the numeric keypad and address numbers: 600 locations.
For Server Fax, the maximum number of recipients that you can specify at one time is 50.
 - The address numbers 0001 - 0070, or 0001 - 0060 correspond to the one touch buttons 1 - 70, or 1 - 60. For more information on the one touch buttons, refer to "Control Panel" (P.56).
 - When using Broadcast Send, the Cover Page and Remote Folder features are not available even if they are enabled on the control panel. If you want to use [Cover Page] and [Remote Folder], set them when registering each recipient in an address number.
 - You cannot specify [Confirmation Options].

■ Show Fax No./E-mail Address


If you select this check box, the recipient's name will not be displayed in the recipient field.

■ Enable Broadcast

To prevent missending a fax to multiple recipients, you can set whether to use Broadcast Send prior to specifying multiple recipients. Select the [Enable Broadcast] check box to specify multiple recipients.

[Enable Broadcast] is displayed only when [Broadcast Checkbox on 1st Tab] is set to [Enabled]. For more information on the setting, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Broadcast Checkbox on 1st Tab" in the Administrator Guide.

1 Select the first recipient.

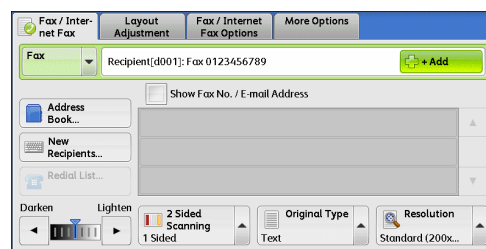

2 Select [+ Add].

- Note**
- Depending on the settings, a screen to re-enter the recipient may be displayed after specifying the recipient and then selecting [+ Add] on the touch screen. In that case, re-enter the recipient.

3 Select the next recipient.

4 Repeat steps 2 and 3.

5 Press the <Start> button.

6 Select [Yes] on the confirmation screen to start transmission.

Specifying a Destination Using the Address Book


The following describes how to use the Address Book to specify recipients.

The Address Book shows the fax numbers registered in the address numbers.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


Important • When the Server Fax service is used for fax transmission, the attributes other than [Fax Number], [Name], and [Index] are ignored in the Address Book.

1 Select [Address Book].

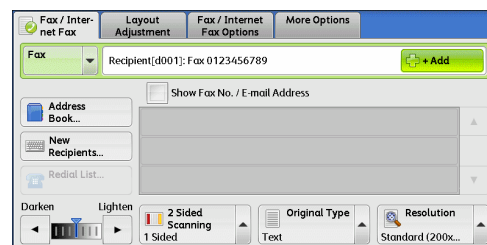

2 Select the item you want to set for a recipient, and select [Add].

- Note**
- To specify multiple recipients, specify the recipients one after another.
 - You can sort recipients in alphabetical order or address number order.
 - To search fax numbers by other methods, select and switch to [List all public entries], [Retrieve fax entries using index], [List all group entries], or [Search Network] from the drop-down menu on the [Fax Address Book] screen. The methods that appear in the drop-down menu depend on the settings in the System Administration mode.
 - Depending on the network settings, [Search Network] may not appear in the drop-down menu. For information on the Network settings, refer to "5 Tools" > "Connectivity & Network Setup" > "Remote Authentication/Directory Service" > "LDAP Server/Directory Service Settings" in the Administration Guide.

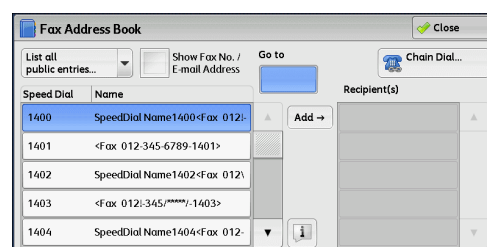

Important • When specifying an address from the Address Book for Internet Fax/IP Fax (SIP), check if the address contains a domain that is not permitted for use. In this case, the address cannot be used.

Using the Address Book

You can search for the fax numbers of recipients using [List all public entries], [Retrieve fax entries using index], [List all group entries], and [Search Network].

You can set the starting numbers of address numbers in the System Administration mode. For information on how to change the settings, refer to "5 Tools" > "Fax Service Settings" > "Screen Defaults" > "Address Book Speed Dial Default" in the Administrator Guide.

■List all public entries

Displays the list of registered recipients.

Select [▲] to return to the previous screen or [▼] to move to the next screen. Select items you want to set for a recipient, and select [Add].

■Retrieve fax entries using index

Allows you to search for the fax numbers or group names of recipients using texts and numbers specified when registering address numbers. Select items you want to set for a recipient, and select [Add].

■List all group entries

Allows you to search for the pre-registered group dial numbers.

Select [▲] to return to the previous screen or [▼] to move to the next screen. Select items that you want to specify for a recipient, and select [Add].

For more information on how to register groups dial numbers, refer to "5 Tools" > "Setup" > "Create Fax Group Recipients" in the Administrator Guide.

■Search Network

Allows you to search for fax numbers not in the local address book but the one registered in a server on a network. Set any items for [Name], [Fax Number], [Custom Item], and select [Search]. Select items you want to specify for a recipient, and select [Add].

■Go to

Enter the desired speed dial number with the numeric keypad. The corresponding address appears at the top of the list.

■[1] button

Select an item of which details you want to check, and select the [1] button.

■Chain Dial

Allows you to combine the fax numbers registered in one touch button, speed dial, and address book respectively and the numbers entered using the numeric keypad to specify as one recipient. You do not use the [+ Add] button.

■Show Fax No./E-mail Address

When you select this check box, the names of recipients will not be displayed in the recipient fields.

Speed Dialing (Specifying a Destination Using an Address Number)

You can use address numbers to specify recipients. Register the address numbers for speed dialing in advance.

You can use wildcards (the <*> button on the numeric keypad or [*] on the keyboard screen) for the last digit or last two digits of address numbers.

The following tables show examples of using the wildcards to specify multiple recipients.

- When using a wildcard for the last digit

How to Enter Wildcard	Target Address Numbers	The Number of Target Addresses
000*	0001 - 0009	9
001*	0010 - 0019	10
010*	0100 - 0109	10
100*	1000 - 1009	10


- When using wildcards for the last two digits

How to Enter Wildcard	Target Address Numbers	The Number of Target Addresses
00**	0001 - 0099	99
01**	0100 - 0199	100
10**	1000 - 1099	100

When you specify address numbers, confirm that the corresponding fax numbers are correctly registered on the machine. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

- Note**
- The maximum number of recipients that you can specify at one time is as follows:
Using address numbers only: 600 locations. Using the numeric keypad in combination with address numbers: 600 locations.
 - An address number is always displayed in four digits. If [Auto Validation of Speed Dial Entry] is set to [Validate entry after a fixed time] in the System Administration mode, and for example when you enter "***", "0" is automatically added to the beginning of the wildcards to display "00***". For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Auto Validation of Speed Dial Entry" in the Administrator Guide.
 - You can use wildcards only for the last digit or last two digits of address numbers. The following is not available: "**100", "***10", and "1*00"

- 1 Press the <Speed Dial> button, and enter a 4-digit address number. Repeat this step for each additional recipient.

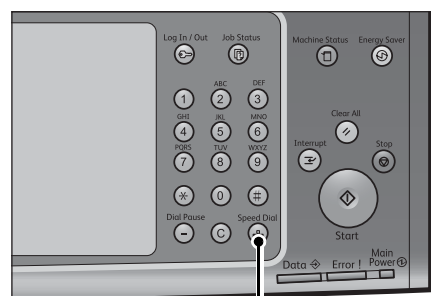

<Speed Dial> button

Specifying a Destination Using a One Touch Button

You can use the one touch buttons to specify recipients.


One touch buttons correspond to the address numbers from 0001 to 0070, or 0001 to 0060.

For example, when the number you want to dial is registered to the address number 0001, press one touch button <1>.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

- Note**
- There are two ways in which address numbers and stored programs are assigned to the one touch buttons. Select either of the following. By default, [Type 1] is selected.
 - [Type 1]
The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons 71 and 72 are used for stored programs and they correspond to the registered stored programs 1 and 2.
 - [Type 2]
The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 72 are used for stored programs and they correspond to the registered stored programs 1 to 12.
 - The Large Size UI (optional) does not support the one touch buttons.

- 1 Press a one touch button. Confirm that the recipient (fax number) specified with the one touch button is displayed on the touch screen.

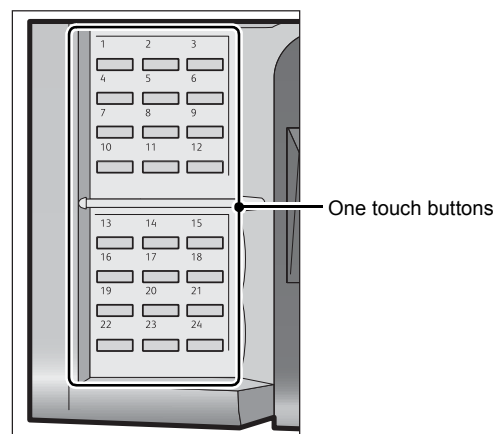

Important • The one touch buttons have a sensor to detect which page of one touch buttons (1 - 24, 25 - 48, or 49 - 72) is currently opened. Before pressing a one touch button, turn over the one touch panel completely, and take off your hand from the panel. Do not press the button while you are turning over the panel.

- Do not place any objects near the one touch buttons, nor spill any liquid over them.


Note • To specify multiple recipients, press the one touch buttons continuously.
• Turn the one touch panel over to press the one touch buttons 25 and above.

Specifying a Destination Using the Keyboard Screen


You can specify recipients using the keyboard screen.

Important • When transmission to a certain recipient is prohibited in the System Administration mode, the [New Recipients] button cannot be used.

- 1 Select [New Recipients].

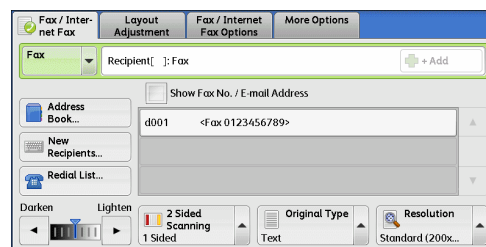

- 2 Specify a recipient with up to 128 characters using the keyboard displayed on the touch screen.

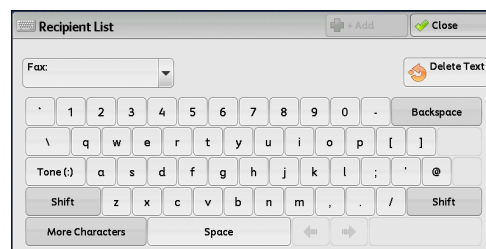

Note • When the Server Fax service is used, a destination must be less than 50 characters long. The available characters are as follows:

- 0 to 9 Numeric characters
- Pause
- # A starting character for a group number
- \ A delimiter for private data. Using this character before and after private data hides the destination string.
- S A character for password verification
- :

DTMF signal


- = A character to wait for dial tones
 - + Available, but ignored
 - (Space) Available, but ignored
- For more information, refer to the documentation provided with the Server Fax Kit.

Specifying a Destination Using the Redial Feature


You can specify recipients using the Redial feature.

Important • When transmission to a certain recipient is prohibited in the System Administration mode, the [Redial list] button cannot be used.

- 1 Select [Redial List].

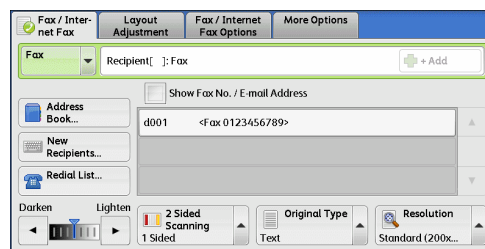

- 2 Select items you want to specify for a recipient, and select [Close].

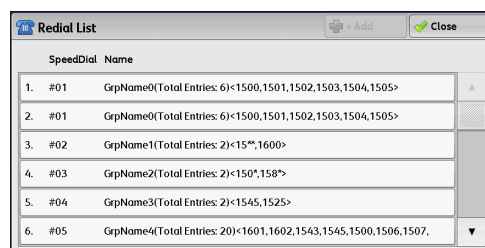


Specifying a Line (Port)

You can specify lines using the keyboard screen. When the Additional G3 Port 2 (optional) is installed, you can specify the line (port) and send faxes. Local terminal information can be registered to each line. You can use each line for a different purpose.

Important • When transmission to a certain recipient is prohibited in the System Administration mode, the [New Recipients] button cannot be used.

For information on how to set [Local Terminal Information], refer to "5 Tools" > "Fax Service Settings" > "Local Terminal Information" in the Administrator Guide.

- 1 Select [New Recipients].

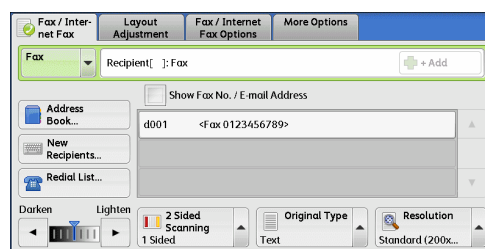

- 2 Select [Shift], and enter in the following format: "<", "port number", ">", "recipient's telephone number"

The following shows the corresponding lines to each port:



<1>: Line 1

<2>: Line 2

<3>: Line 3

Example when using Line 1:

<1>XXXXXXXXXX

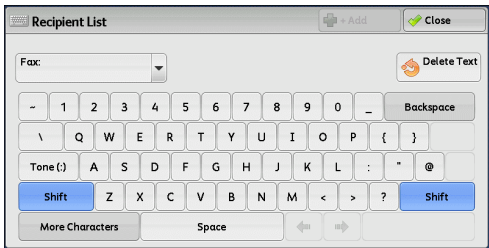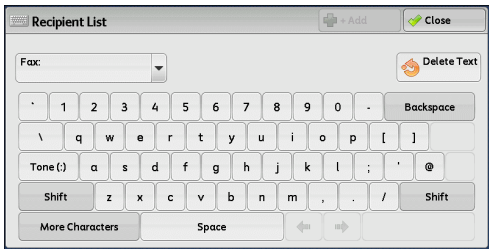

Entering Specific Symbols

When specifying a recipient, you can use the following features to enter specific symbols on the touch screen.


Feature	Button	Function	Input method
Enter pause	- or <Pause> (-)	Used to enter a pause. One pause is 3 seconds. You can enter pauses of 6 seconds, 9 seconds, etc. with additional button presses.	Press the <Pause> button. (Example) 0-123 ... 0--123 ...
Transmit using a password	S	When a password has been set, transmission will start only if the password matches the ID number on the remote terminal.	1. Select [New Recipients] on the [Fax/Internet Fax] screen to display the keyboard. 2. Select [S]. (Example) 0312345678S12345678
Transmit DTMF signal	!	Used to transmit the DTMF signal.	1. Select [New Recipients] on the [Fax/Internet Fax] screen to display the keyboard. 2. Select [More Characters]. 3. Select [!]. (Example) 0311123456!123#

When using the DTMF method, use specific symbols. For information on the DTMF method, refer to "Remote Folder (Using Remote Folder)" (P.225) and "Broadcast" (P.241).

Removing/Confirming a Recipient

You can remove or confirm recipients from the pop-up menu.

- 1 Select the recipient to be removed or confirmed from the selected recipients.

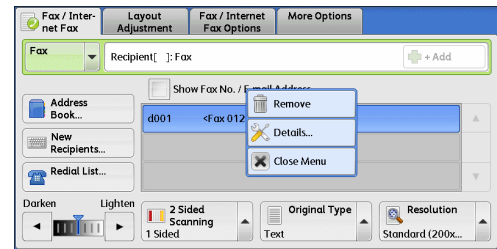

- 2 Select any option from the pop-up menu.

■ Remove

Removes the recipient.

■ Details


Displays the [Details] screen. You can confirm recipients or address numbers.

■ Close Menu

Hides the pop-up menu.

[Details] Screen

This screen allows you to confirm recipients.

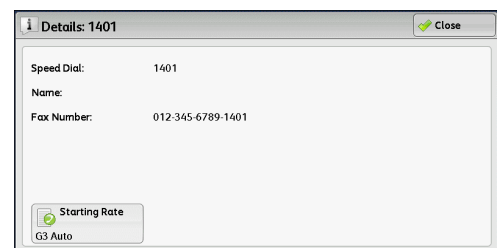


■ Starting Rate

Allows you to select a communication mode according to the features of a recipient's machine.

Lighten/Darken (Adjusting Fax Density)

You can select a fax density from seven levels.

- 1 Use [◀] and [▶] to set the density level.

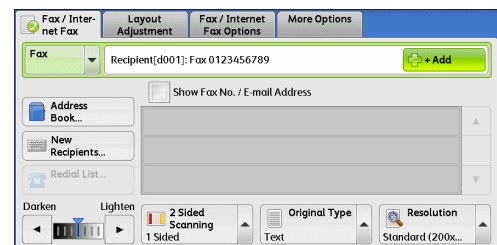


2 Sided Scanning (Transmitting 2-sided Originals)

You can scan a 1-sided or 2-sided document on one or both sides of paper for fax transmission.

Note • The image on the back side of a 2-sided document is rotated so that it is placed in the same orientation as the image on the front side.

1 Select a scan option.

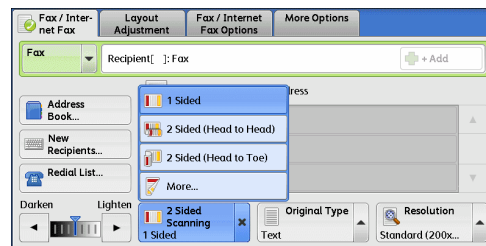

■1 Sided

Select this option to scan one side of the document.

■2 Sided (Head to Head)

Select this option when both sides of the 2-sided document are in the same orientation.

■2 Sided (Head to Toe)

Select this option when both sides of the 2-sided document are in opposite orientations.

■More

Displays the [2 Sided Scanning] screen.

Refer to "[2 Sided Scanning] Screen" (P.206).

[2 Sided Scanning] Screen

1 Select whether the document is one-sided or two-sided. When [2 Sided] or [2 Sided (First Page 1 Sided)] is selected, also select the orientation of the document.



■1 Sided

Select this option to scan one side of the document.

■2 Sided

Select this option to scan both sides of the document.

■2 Sided (First Page 1 Sided)

Select this option to scan the front side of the first page and both sides of the remaining pages. Use this option when the back side of the first page is blank.

■2 Sided (Skip Blank Pages)

Select this option to scan only the document pages that are not blank. You can send documents without concerning for which side is the front.

Important • If you select [2 Sided (Skip Blank Pages)] in [2 Sided Scanning] when the Skip Blank Pages feature is enabled, image loss may occur on the fax document depending on the recipient's machine. For example, when you select [2 Sided (Skip Blank Pages)] to send an A4 fax document, image loss may occur in the area where the edge erase amounts is set when the fax is printed on an A4 document by the recipient's machine.

- Note**
- When [2 Sided (Skip Blank Pages)] is selected, the settings change as follows:
[Original Type]: [Text]
[Lighten / Darken]: [Normal]
[Reduce/Enlarge]: [100%]
 - You can switch whether to enable [2 Sided (Skip Blank Pages)] by pressing the <Energy Saver> button while setting the fax features.
 - The level of accuracy in which the machine determines whether a page is blank or not differs depending on a document. For example, if a blank page has background shadows, the machine may not determine the page as a blank page.

[2 Sided (Skip Blank Pages)] is displayed only when [Skip Blank Pages] is enabled. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.


■Originals

Select [Head to Head] when both sides of the documents are in the same orientation. Select [Head to Toe] when the front and back sides of the documents are in opposite orientations.

Original Type (Selecting the Document Type)

You can select the type of the original document, such as text and photo documents.

- 1 Select the original type.

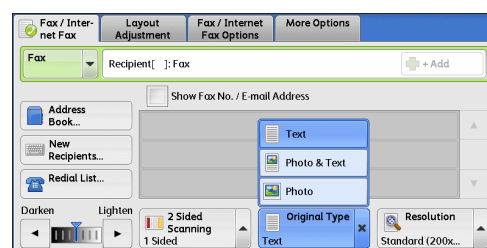

■Text

Select this option when transmitting a document that contains only text.

■Photo & Text

Select this option when transmitting a document that contains both text and photos. The machine automatically distinguishes the text and photo areas and sets the appropriate image quality for each area of the document.

■Photo

Select this option when transmitting a document that contains only photos.

- Note**
- If reduced in size, the scan documents may have stripes in their photo areas.


Resolution (Specifying the Scanning Resolution)

You can set the resolution for the documents to be scanned.

- Note**
- The machine scans a document at the specified resolution, but if the recipient's machine does not support the resolution, the machine automatically changes the resolution to one supported by the recipient's machine and there is a corresponding loss in quality.
 - The higher the resolution, the lower the transmission speed. Usually, we recommend that you select [Superfine (400 dpi)] or lower.
 - Only [Fine (200 dpi)] is available for the Server Fax service.

You can specify the resolution for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

1 Select the resolution.

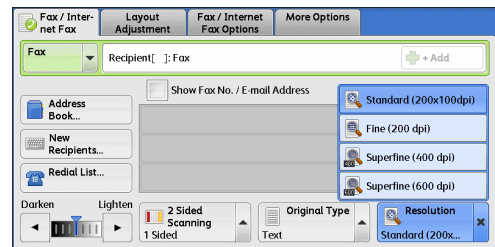

■ Standard (200 x 100dpi)

Select this option when transmitting standard documents.

(Approx. 200 x 100 pels/25.4 mm)

■ Fine (200 dpi)

Select this option when transmitting documents with small text or detailed images.

(Approx. 200 x 200 pels/25.4 mm)

■ Superfine (400 dpi)

Select this option when transmitting documents with fine images.

(400 x 400 pels/25.4 mm)

■ Superfine (600 dpi)

Select this option when transmitting documents with extremely fine images.


(600 x 600 pels/25.4 mm)

Layout Adjustment


This section describes the features you can select on the [Layout Adjustment] screen. The following shows the reference section for each feature.

2 Sided Scanning (Transmitting 2-sided Originals).....	209
Original Size (Specifying the Scan Size for the Original)	209
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	210
Book Faxing (Scanning Facing Pages onto Separate Sheets)	211
Reduce/Enlarge (Specifying a Scan Ratio)	213

- 1 Select [Fax/Internet Fax] on the [Services Home] screen.

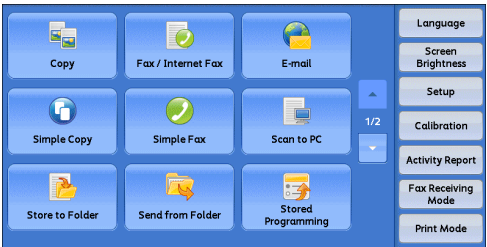

- 2 Select a feature on the [Layout Adjustment] screen.

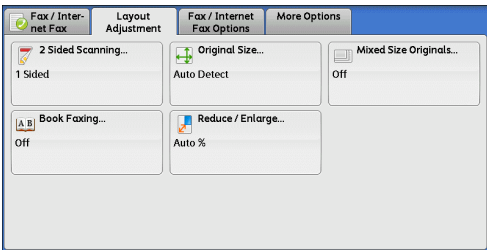


2 Sided Scanning (Transmitting 2-sided Originals)

This feature is the same as [2 Sided Scanning] on the [Fax/Internet Fax] screen. For more information, refer to "2 Sided Scanning (Transmitting 2-sided Originals)" (P.206).


Original Size (Specifying the Scan Size for the Original)

You can specify the scan size for fax transmission.
Use this feature when a document is a non-standard size, or when you want to scan a document at a size different from the original size. You also can add margins, or delete unwanted margins.
You can change the default values for buttons other than [Auto Detect] in the System Administration mode. For information on how to change the default values, refer to "5 Tools" > "Fax Service Settings" > "Original Size Defaults" in the Administrator Guide.

- 1 Select [Original Size].

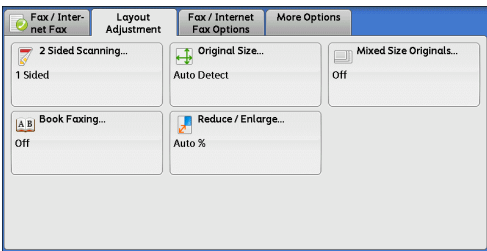

2 Select any option.

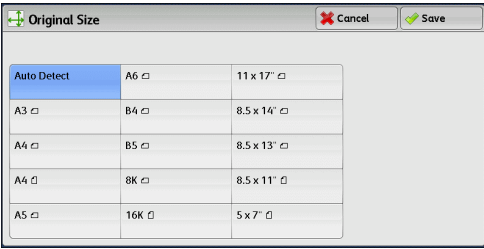

■Auto Detect

Detects the document size automatically.

	Document Feeder	Document Glass
Auto-detectable Document size	B5, B5□, B4, A5, A5□, A4, A4□, A3, 8.5 x 11", 8.5 x 11" □, 11 x 17, 16K□, 8K	B6, B6□, B5, B5□, B4, A6, A5, A5□, A4, A4□, A3

Note • If the document size cannot be detected automatically, a screen to enter the document size appears.

The document sizes that can be automatically detected depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

■Standard Size

Select the original size from preset sizes.

You can change the sizes displayed on the screen. For more information, refer to "5 Tools" > "Fax Service Settings" > "Original Size Defaults" in the Administrator Guide.

Mixed Size Originals (Scanning Different Size Documents Simultaneously)

You can scan documents of various sizes simultaneously and send faxes using each size or a single size of paper. To use this feature, load the documents in the document feeder.


Important • Load documents in landscape orientation. However, always load A5 and B5 documents in portrait orientation so that the machine can detect the size of the documents automatically.

- When loading documents, align the top left corners of the documents properly. Otherwise, a paper jam may occur.
- The recommended document size combinations are A4 portrait and A3 landscape, or B5 portrait and B4 landscape. If another combination of document sizes is used, the documents can be fed at an angle and may not be scanned properly.


Note • Be sure to set [Original Size] to [Auto Detect] on the [Layout Adjustment] screen, when using the Mixed Size Originals feature.

- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.


1 Select [Original Size].

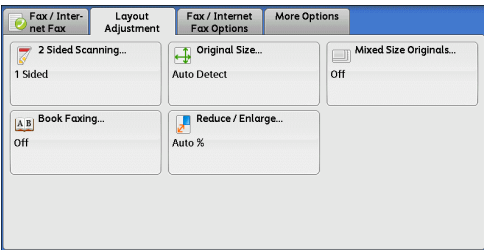


- 2 Confirm that [Auto Detect] is selected, and select [Save]. If [Auto Detect] is not selected, select [Auto Detect] and then [Save].

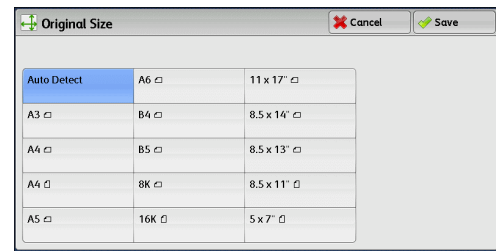

- 3 Select [Mixed Size Originals].

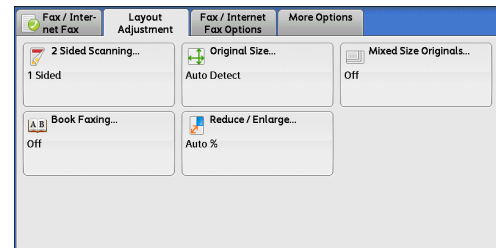

- 4 Select [On].

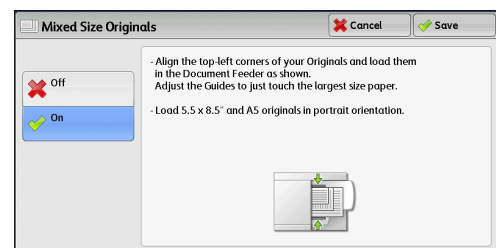

■Off

Select this option when all documents are of the same size.

■On


When scanning documents of different sizes, the machine automatically detects the size of each document.

Book Faxing (Scanning Facing Pages onto Separate Sheets)


You can scan the left and right pages of a bound document separately to fax them. This feature is useful if you want to separately scan facing pages of a bound document.

- Note**
- You cannot use the document feeder with this feature.
 - A non-standard size document or undetectable-size document may not be separated into two accurately.

- 1 Select [Book Faxing].

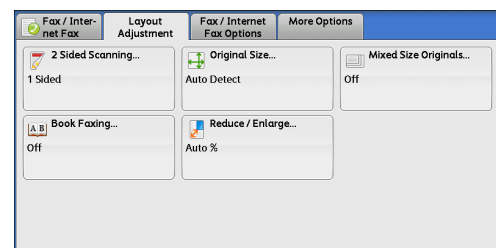

2 Select any option.

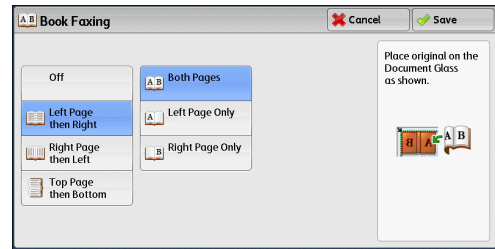

■Off

Does not scan as a bound document.

■Left Page then Right

Scans the left page and then the right page of facing pages.

■Right Page then Left

Scans the right page and then the left page of facing pages.

■Top Page then Bottom

Scans the top page and then the bottom page of facing pages.

■Both Pages

Scans both pages in page order.

■Left Page Only

Scans the left page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

■Right Page Only

Scans the right page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

■Top Page Only

Scans the top page only. You can select this option when [Top Page then Bottom] is selected.

■Bottom Page Only


Scans the bottom page only. You can select this option when [Top Page then Bottom] is selected.

Reduce/Enlarge (Specifying a Scan Ratio)

This feature enlarges or reduces scanned images with a specified ratio.


Important • Some destination machines may not be able to receive faxes at the specified ratio.

1 Select [Reduce/Enlarge].

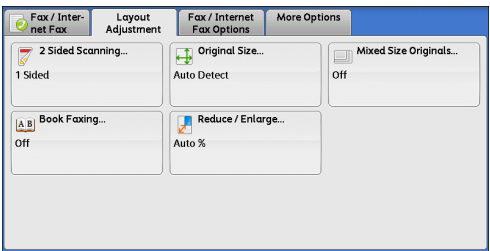

2 Select a preset ratio, or specify a value.

Note • If a magnification is specified in [Reduce/Enlarge], [Rotate 90 degrees] does not function.

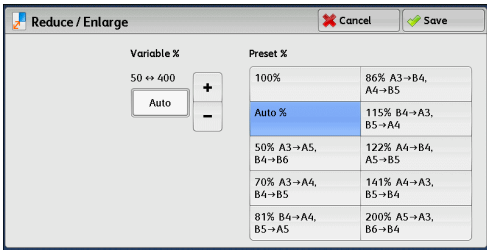

■Variable %

Specify a ratio in the range from 50 to 400% in 1% increments. To specify a value, use the numeric keypad or [+] and [-].

■Preset %

- 100%
Scans at the same size as the original.
- Auto %

If the scan width of the document exceeds the maximum image size, the scanned image is rotated or reduced to fit the maximum size.

When the speed dialing is used, the maximum image size will be the size registered in the Address Number. When speed dialing is not used, the maximum size will be A3.

Note • You can specify whether to rotate documents in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Rotate 90 degrees" in the Administrator Guide.

- Preset ratios
Select from preset scan ratios.


You can change the default values of scan ratios other than [100%] and [Auto %]. For more information, refer to "5 Tools" > "Fax Service Settings" > "Reduce/Enlarge Presets" in the Administrator Guide.

Fax/Internet Fax Options

This section describes the features you can select on the [Fax/Internet Fax Options] screen. The following shows the reference section for each feature.


Acknowledgement Report (Confirming Transmission Results).....	214
Starting Rate (Selecting a Communication Mode)	216
Priority Send/Delay Start (Specifying Send Priority/Send Time)	217
Transmission Header Text (Adding Sender Name and Phone Number to Faxes).....	219
Cover Page (Transmitting Documents With a Cover Page)	220
Internet Fax Subject (Specifying the Internet Fax Subject).....	222
Internet Fax Message (Editing the Internet Fax Mail Contents).....	222
Recipient Print Sets (Printing Multiple Sets at the Remote Machine).....	224
Pages per Side (Combining Multiple Pages into One Sheet).....	224
Remote Folder (Using Remote Folder).....	225
F Code (Using F Code Transmission).....	228
Internet Fax Profile (Specifying Internet Fax Profiles)	232
Encryption (Sending Internet Fax Encrypted by S/MIME)	233
Digital Signature (Sending Internet Fax with a Digital Signature by S/MIME)	234

- 1 Select [Fax/Internet Fax] on the [Services Home] screen.

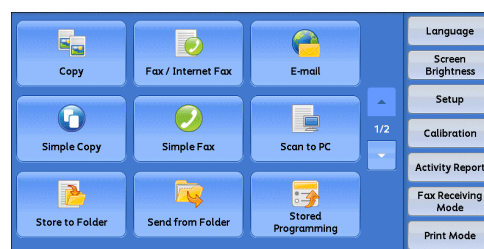

- 2 Select a feature on the [Fax/Internet Fax Options] screen.

Note • Only [Delay Start] is available for the Server Fax service.

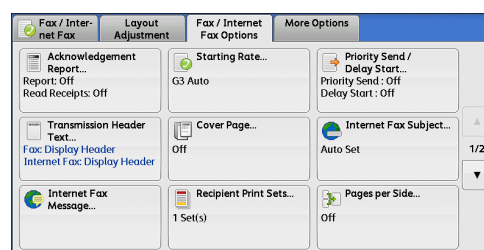

Acknowledgement Report (Confirming Transmission Results)

You can check fax and Internet Fax transmission results.

To receive fax transmission results, select [On] in [Confirmation Options] on the [Acknowledgement Report] screen. By enabling this feature, the machine automatically prints a Transmission Report when fax transmission completes successfully, and prints a Transmission Report - Job Undelivered when fax transmission ends unsuccessfully.

To confirm Internet Fax transmission results, the following two types are available: [Read Receipts] and [Delivery Receipts].

Selecting [Delivery Receipts] allows you to check whether or not the Internet Fax you sent was delivered successfully to the recipient's folder.


Selecting [Read Receipts] allows you to check whether or not the Internet Fax you sent was correctly delivered and the attached files were correctly processed.

Note • The optional component is required to use the Read Receipts and Delivery Receipts features. For information, contact our Customer Support Center.


- Read Receipts (MDN) and Delivery Receipts (DSN) are available when the recipient's machine supports MDN and DSN, respectively.
- You can select either [Read Receipts] or [Delivery Receipts] in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Internet Fax Control" > "Delivery Confirmation Method" in the Administrator Guide.
- You can only use the Delivery Receipts (DSN) feature to check the delivery of e-mail to servers that support this feature. Furthermore, if any of the e-mail servers on the transmission route do not support DSN, you cannot verify the delivery of the e-mail, even if the e-mail has been delivered successfully. For this reason, the result of the Delivery Receipts may differ from the actual delivery status.
- If [Confirmation Options] is set to [On] and the transmission completes unsuccessfully, a Transmission Report - Job Undelivered will be printed.

The following procedure uses the Read Receipts feature as an example. The procedure is the same for the Delivery Receipts feature.

1 Select [Acknowledgement Report].

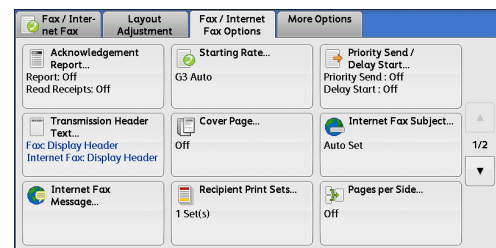

2 Select any option.

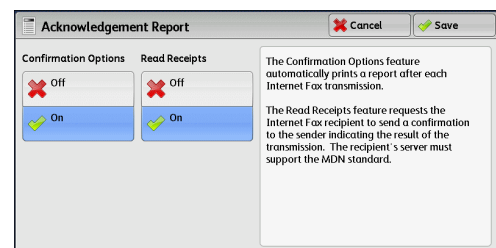

■ Confirmation Options

- Off
No Transmission Report is printed.
- On
A Transmission Report is automatically printed when the transmission completes successfully. If the transmission does not end successfully, a Transmission Report - Job Undelivered is printed.

■ Read Receipts

- Off
Disables the Read Receipts feature.
- On
Enables the Read Receipts feature. You can check whether the Internet Fax you sent was correctly delivered and the attached files were correctly processed.

■ Delivery Receipts


- Off
Disables the Delivery Receipts feature.
- On
Enables the Delivery Receipts feature. You can check whether the Internet Fax you sent was correctly delivered to the destination folder.

Starting Rate (Selecting a Communication Mode)


You can select a communication mode based on the features of the remote machine. G3 is the international standard for facsimile transmissions established by the ITU-T. When you use speed dialing, one touch buttons, group dial number or address book to specify a recipient registered in an address number, the communication mode currently set to the address number is set and cannot be changed. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

You can change the default mode of [Starting Rate] in the System Administration mode. For information on how to change the default mode, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Starting Rate" in the Administrator Guide.

1 Select [Starting Rate].

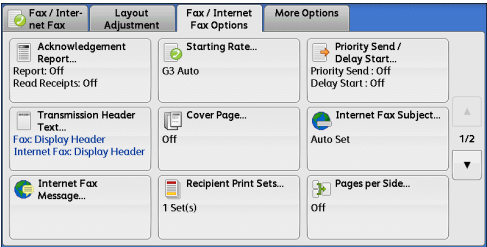

2 Select any option.

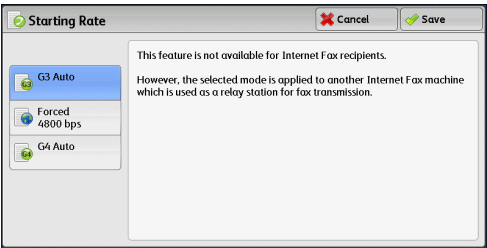

■G3 Auto

Select this mode if the remote machine is G3 compatible. This mode is normally selected.

Depending on the reception capabilities of the remote machine, the machine automatically switches modes in the following order: G3 Unique ECM → G3 Unique → ITU-T G3 ECM → ITU-T G3.

■Forced 4800 bps

Select this mode when transmitting over noisy or poor telephone lines, as can be the case with overseas calls.


Also select this mode when transmitting over noisy or poor telephone lines domestically.

About Forced 4800 bps


You can communicate with faxes overseas via telephone company exchanges, etc.

- Note**
- The international telephone networks are originally designed for voice communications. Noise that does not really affect voice communications causes a problem with fax communications. It may result in the deterioration of images quality, the inability to transmit a fax, or even terminate the transmission. Regardless of whether transmission is successful, you are charged for the call once the line is connected. For information on line trouble and call charges, contact your telephone company.
 - If you select [Forced 4800 bps], the transmission time may be longer because transmission is performed at 4800 bps or less to ensure transmission is successful.

1 Select [Starting Rate].

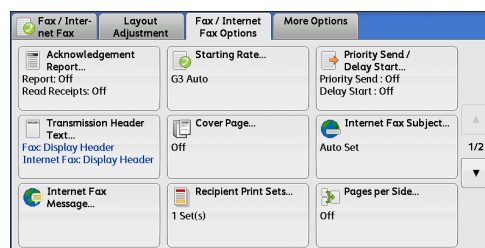

2 Select [Forced 4800 bps], and then select [Save].

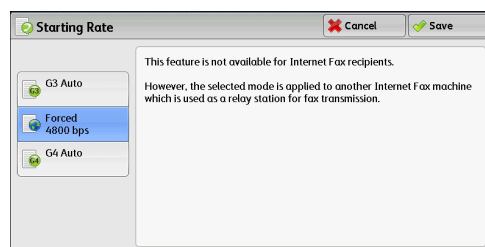

3 Enter the recipient fax number in the same manner as when you make an international call.

The following is an example:

Telephone company ID	0	0	1	1	Country code	Area code	Fax number of the other party
----------------------	---	---	---	---	--------------	-----------	-------------------------------

Important • In some areas, you may need to enter a pause after the telephone company ID number.

Note • For information on the telephone company ID number, contact your telephone company.


Priority Send/Delay Start (Specifying Send Priority/Send Time)

The Priority Send feature allows you to give priority to a fax or polling job over other jobs.


The Delay Start feature allows you to specify when to send your fax. This feature is useful for sending faxes when communication charges are low, such as during night time.

- Note**
- [Priority Send/Delay Start] is not available for Internet Fax.
 - The Priority Send feature is not available for Server Fax.
 - For Server Fax, [Delay Start] is available when the FTP or SMB protocol is used, but not when the SMTP protocol is used.
 - When [Delay Start] is set for Server Fax, this setting applies to transmission from the Server Fax server to a final destination, but not from the machine to the Server Fax server.
 - [Priority Send] can be set in combination with [Delay Start]. If both features are set, Priority Send is performed at the time specified in [Delay Start].

1 Select [Priority Send/Delay Start].

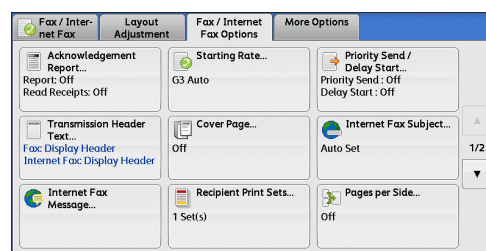

2 Select any option.

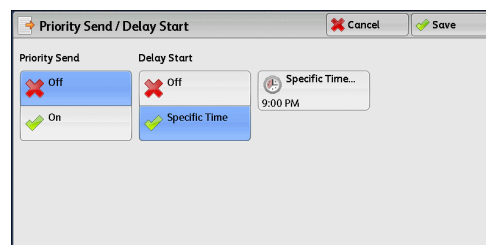

■ Priority Send

- Off
Priority Send is not applied.
- On
Priority Send is applied.

Note

- If the Priority Send feature is selected during transmission, the fax will be sent after the current transmission ends.
- In redial mode, the fax will be resent preferentially after the specified redial interval.
- The Priority Send feature cannot be set separately for each recipient of Broadcast and multi-polling jobs.

You can give priority to a pending job. For more information, refer to "Job Status" (P.373).

■ Delay Start

- Off
Delay Start is not applied.
- Specific Time
Delay Start is applied.

Note

- You can specify a time within 24 hours in 1 minute increments. You cannot specify a date.
- You can set [Delay Start] independently for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.
- If you use address numbers or group dial numbers to specify recipients for the Broadcast Send feature, the [Delay Start] setting specified for each address number is invalid.
- If the fax cannot be sent at the specified time because, for example, the telephone line is busy, it will be sent as soon as the line becomes available.

■ Specific Time

Displays the [Delay Start - Specific Time] screen.


Refer to "[Delay Start - Specific Time] Screen" (P.219).

[Delay Start - Specific Time] Screen

This screen allows you to specify the start time for fax transmission.

- Note**
- You can change the default value of [Specific Time] in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Delay Start - Specific Time" in the Administrator Guide.

1 Select [AM] or [PM].

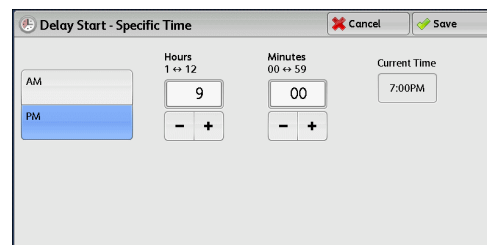

2 Set [Hours] and [Minutes].

- Important**
- If you press the <Start> button after the specified time, the stored document will be sent at the specified time on the following day.

Transmission Header Text (Adding Sender Name and Phone Number to Faxes)

The Transmission Header Text feature adds the start time, sender name, recipient name, G3 ID, and number of pages onto the transmitted document.

This feature enables the recipient to confirm when and from whom the fax was sent.


- Important**
- Header information is printed at the top of the document, so an area of about 3 to 5 mm may not be printed at the top of each page at the remote machine.

- Note**
- If the document is resent, "Resend" is printed at the left of the date and time indication.
 - If this feature is enabled for Broadcast Send, header information is attached to faxes for all the recipients.
 - The start time is printed in the format set on the machine (12 or 24 hour clock). For information on how to set the time, refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" in the Administrator Guide.
 - The recipient name is only added if it has been registered in the address number.
 - If you specify the line to send a fax, the sender name registered for the selected line is printed. If you do not specify a line, the sender name (company logo) of the machine is printed, but not the sender name of the line.


For information on the sender name and G3 ID, refer to "5 Tools" > "Fax Service Settings" > "Local Terminal Information" in the Administrator Guide.

You can change the default value of [Transmission Header Text] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Transmission Header Text" in the Administrator Guide.

1 Select [Transmission Header Text].

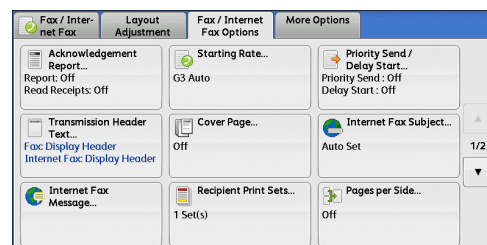

2 Select [Display Header].

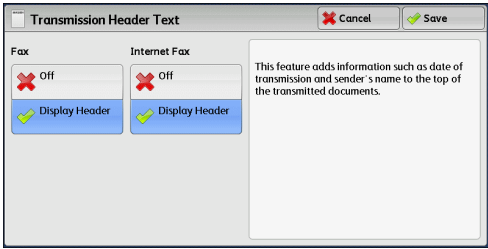

■Off

No header information is attached.

■Display Header

Header information is attached.

Cover Page (Transmitting Documents With a Cover Page)


This feature allows you to attach a cover page to the document.

The cover page includes the recipient name, comment, sender name, machine fax number, number of pages, and date and time of transmission.


You can specify whether to attach a cover page for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

- Note**
- This feature is not available for the Server Fax service.
 - When [Transmission Header Text] is set, the header information is not printed on the cover page.
 - You cannot use the Cover Page feature for Broadcast transmission using the numeric keypad. To use this feature for Broadcast transmission, register recipients to address numbers.
 - The size and resolution of the cover page is based on the first page of the document.

1 Select [Cover Page].

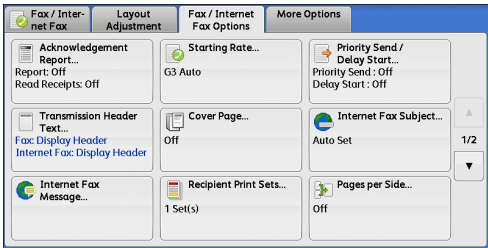

2 Select [Print Cover Page].

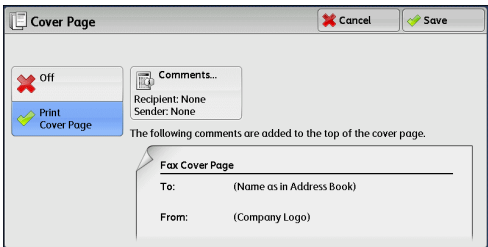

■Off

No cover page is attached.

■Print Cover Page

A cover page is attached.

■Comments

Displays the [Cover Page - Comments] screen.

Refer to "[Cover Page - Comments] Screen" (P.221).

[Cover Page - Comments] Screen

This screen allows you to select comments to be added to the recipient and sender fields.

- 1 Select any option.

Cover Page - Comments	
Recipient's Comment	Sender's Comment
None	None
1. Comment 1	1. Comment 1
2. Comment 2	2. Comment 2
3. Comment 3	3. Comment 3
4. Comment 4	4. Comment 4
5. Comment 5	5. Comment 5

■Recipient's Comment

Displays the registered comments in the recipient field. Select a comment to be used. Select [None] when no comment is added to this field.

■Sender's Comment

Displays the registered comments in the sender field. Select a comment to be used. Select [None] when no comment is added to this field.

For information on how to register comments, refer to "5 Tools" > "Setup" > "Add Fax Comment" in the Administrator Guide.

About the Cover Page**■To**

When an address number is used, the recipient name registered for the address number is printed. This field is blank if no recipient name is registered for the address number.

■Recipient's Comment

Prints the comment selected in [Recipient's Comment].

■From

Prints the registered sender name.

■Sender's Comment

Prints the comment selected in [Sender's Comment].

■Fax Number

Prints the fax number of the machine. For G3 communications, "G3 ID" is printed.

■Number of Pages

Prints the number of pages.

■Send Date and Time

Prints the transmission date and time.

■Remarks


Prints remarks when the document is sent using Broadcast, Folder, Relay Broadcast, or Redial Mode.

Internet Fax Subject (Specifying the Internet Fax Subject)


You can specify an Internet Fax subject. If no subject is specified, the preset subject is automatically entered.

Note • This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Internet Fax Subject].

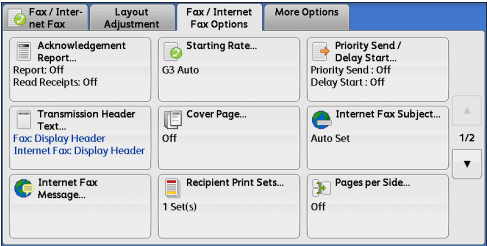

2 Select [Keyboard].

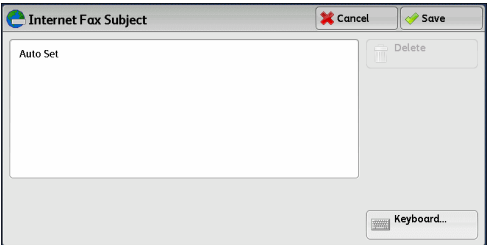

3 Enter a subject with up to 128 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.68).

Note • If no subject is entered, the following will be automatically entered as a subject: [InternetFAX;<From> ; <Send Date and Time>].


Internet Fax Message (Editing the Internet Fax Mail Contents)


You can edit Internet Fax comments. Enter text using the keyboard or use a pre-registered comment.

Note • This feature may not be available for some models. The optional component is required. For more information, contact our Customer Support Center.

For information on how to register comments, refer to "5 Tools" > "Setup" > "Add Fax Comment" in the Administrator Guide.

1 Select [Internet Fax Message].

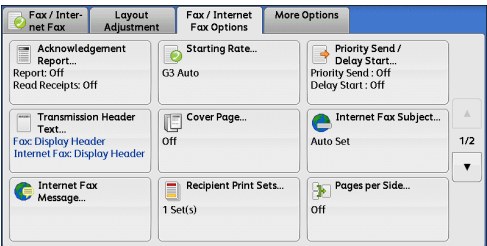

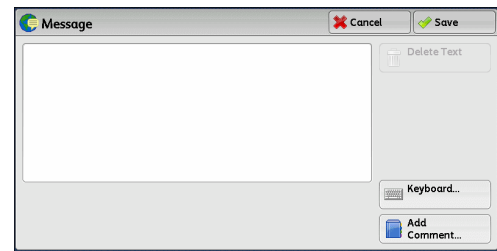2 Select any option.**■Delete Text**

Deletes the comment displayed on the screen.

■Keyboard

Allows you to enter body text using the displayed keyboard. Up to 256 characters can be entered.

You can also select [Add Comment] to select a registered comment and edit it.

For information on how to enter characters, refer to "Entering Text" (P.68).


■Add Comment

Allows you to insert a registered comment. Select this button to display the [Add Comment] screen.

Refer to "[Add Comment] Screen" (P.223).

[Add Comment] Screen

This screen allows you to select a comment to be added.

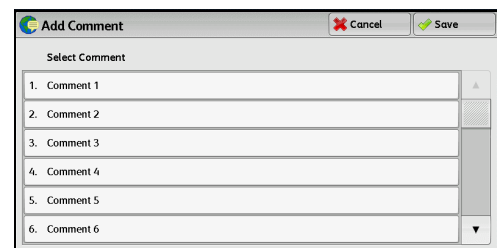1 Select any option.**■Select Comment**

Displays the registered comments.


For information on how to register comments, refer to "5 Tools" > "Setup" > "Add Fax Comment" in the Administrator Guide.

Recipient Print Sets (Printing Multiple Sets at the Remote Machine)


This feature allows you to print multiple sets of a fax document at the remote machine.

Note • This feature is not available for the Server Fax service.

1 Select [Recipient Print Sets].

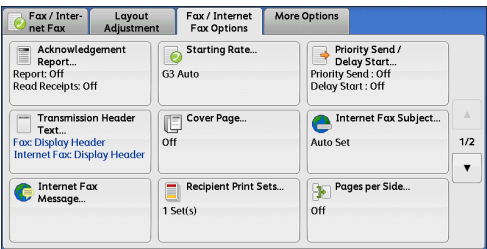

2 Select any option.

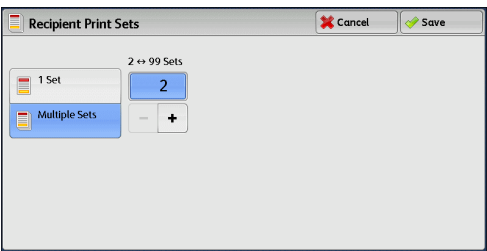

■ 1 Set

The remote machine will output one set of the fax document.

■ Multiple Sets

Allows you to specify the number of print sets the remote machine will output, in the range from 2 to 99 in 1 set increments.

Use [+] and [-] or the numeric keypad to specify the value.

Pages per Side (Combining Multiple Pages into One Sheet)


This feature allows you to send a fax by combining multiple pages of a document into one side of a single sheet of paper. For example, if you have a document of 12 pages, and you specify 3, the machine combines the scan data into 4 pages. You can specify a value for [Pages per Side] in the range from 2 to 9.

Important • If the length of each resultant page is too long, the output data may be split on the recipient's machine.


- If the number of pages of documents is smaller than the specified pages, the scanned number of pages will be only combined and transmitted.

Note • This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Pages per Side].

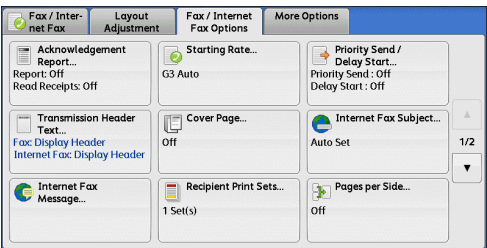

2 Select [On].

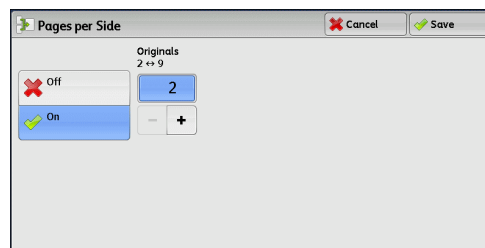

■Off

The Pages per Side feature is not applied.

■On

Allows you to scan multiple pages of a document onto one side of a single sheet of paper for fax transmission. Specify the number of pages in [Originals] to fit onto one sheet.

Use [+/-] and [-/] or the numeric keypad to specify the value.

Remote Folder (Using Remote Folder)

This feature allows you to send or receive confidential documents that you do not want others to see.

- Note**
- This feature is not available for the Server Fax service.
 - Fax signal method and F code method are available in IP Fax (SIP). For the method to use remote folder using F code method, refer to "F Code (Using F Code Transmission)" (P.228).
 - In the IP Fax (SIP) using VoIP Gateway, remote folder using Fax signal method is not available. Only the F code method is available.

■Sending to Folder (Fax Signal Method)

This feature allows you to send a file directly to a folder on the remote machine. The file can be printed on the remote machine. To use this feature, you need the folder number and passcode of the remote folder.

■Secure Polling (Fax Signal Method)

This feature allows you to retrieve a file from a folder on a remote machine by sending a polling request from your machine. To use this feature, you need the folder number and passcode of the remote folder.

The retrieved file is stored in a folder on the machine. When a file is received in a folder, the <Data> indicator lights up and a Folder Report is printed. The Folder Report lists the folder number and name.

Important • You cannot use polling to retrieve files from multiple remote folders simultaneously.

- Note**
- The DTMF method is available for Remote Folder. The supported signals are numerals, "*", and "#" only.

For information on how to print files received in a folder, refer to "Printing Files in a Folder" (P.332).

Files received in folders can be automatically printed depending on the folder settings. For information on the folder settings, refer to "Configuring/Starting Job Flow" (P.335).


Depending on the report print settings, a Folder Report may not be printed even after a file is received in a folder. For information on the Folder Report setting, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Folder Report" in the Administrator Guide.

■Sending to Folder (DTMF Method)


To send a fax to a folder using the DTMF method, you need the folder number of the remote folder. Two DTMF methods are available: Auto and Manual.

Sending to Folder (Fax Signal Method)

- 1 Select [Remote Folder].

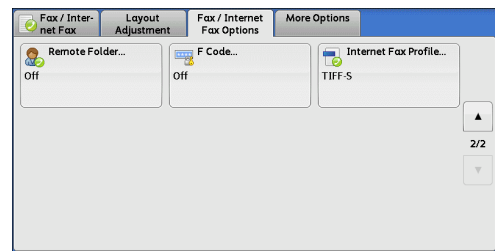

- 2 Select [On].

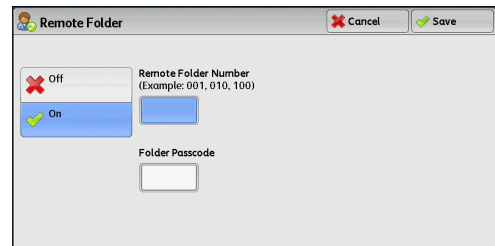

■Off

Disables the Remote Folder feature.

■On

Enables the Remote Folder feature. Enter a folder number in [Remote Folder Number].

■Remote Folder Number


Select the [Remote Folder Number] box, and enter a 3-digit folder number of the remote machine using the numeric keypad.

■Folder Passcode

Select the [Folder Passcode] box, and enter the 4-digit passcode of the remote folder using the numeric keypad. If a passcode is not set, leave this box blank.


Secure Polling (Fax Signal Method)

- 1 Select [More Options] tab to display the [More Options] screen.

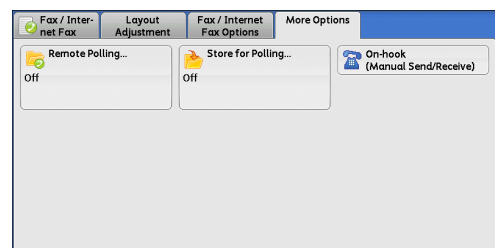


- 2 Select [Remote Polling].

- 3 Select [Poll a Remote Device].

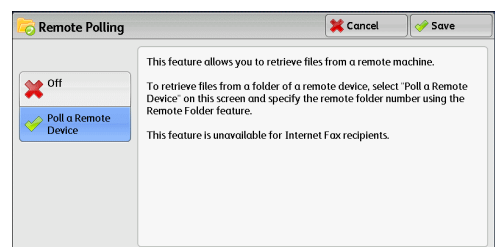


- 4 Select [Save].


- 5 Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen, and select [▼] to display the next page.

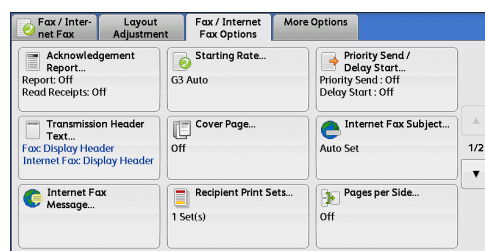

- 6 Select [Remote Folder].

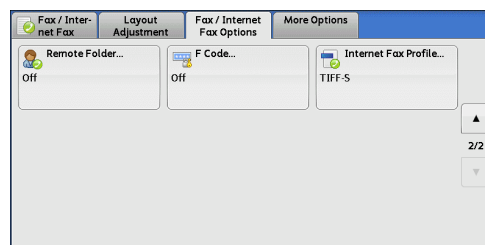

- 7 Select [On].

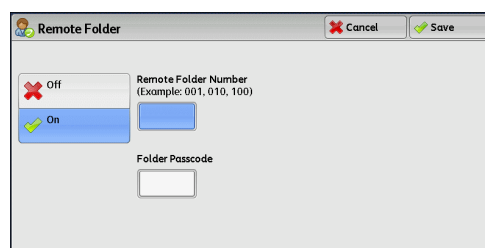

■Off

Disables the Secure Polling feature.

■On

Enables the Secure Polling feature. Enter a folder number in [Remote Folder Number].

■Remote Folder Number

Select the [Remote Folder Number] box, and enter a 3-digit folder number of the remote machine using the numeric keypad.

■Folder Passcode

Select the [Folder Passcode] box, and enter the 4-digit passcode of the remote folder using the numeric keypad. If a passcode is not set, leave this box blank.

Format for Auto Send (DTMF Method)

- 1 Select [New Recipients] on the [Fax/Internet] screen to display the keyboard on the touch screen, and enter the destination and passcode in the following format.

Telephone number of remote machine	!	*	\$	Folder number on remote machine	#	#	\	Passcode of folder on remote machine	\	#	#	\$
--	---	---	----	---------------------------------------	---	---	---	--	---	---	---	----

Format for Manual Send (DTMF Method)

- 1 Select [On-hook (Manual Send/Receive)] on the [More Options] screen to display the keyboard on the touch screen, and enter the destination and passcode in the following format.

Telephone number of remote machine	Facsimile tone	*	Beep!	...
	Folder number on remote machine	#	#	Passcode of folder on remote machine
		#	#	Beep!
				Ready to start

- Note**
- Use the keyboard on the touch screen to enter symbols such as "!" and "*". For information on how to enter characters, refer to "Entering Text" (P.68).
 - Enter a passcode only if necessary.
 - You can specify any machine that supports our DTMF method feature.

By registering destinations in address numbers using the above dialing formats, you can use the address numbers for the Secure Polling feature. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

F Code (Using F Code Transmission)

F Code is the transmission procedure set by the Communications and Information Network Association of Japan and is the T.30 (communication protocol) method for using sub-addresses that was standardized by the ITU-T. The F Code feature enables various features to be used with transmission among F Code-compatible machines regardless of their manufacturers.

When using F Code transmission, use an F Code and password. The F Code, which is also called a sub-address by other companies, must be registered (entered). Set the password if necessary.

- Note**
- This feature is not available for the Server Fax service except when an F code is included in a dialing number.
 - To use the F Code feature, you need to confirm the F Code of the recipient's machine in advance.
 - If you perform Sending to Folder or Secure Polling between machines of this model, we recommend that you use the fax signal method.

You can set the F Code and password for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

You can use the Relay Broadcast and Remote Relay Broadcast features with F Code transmission. For information on Relay Broadcast and Remote Relay Broadcast, refer to "Relay Broadcast (Transmitting Documents Through a Relay Station)" (P.242) and "Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)" (P.245), respectively.

You can use the following features with F Code transmission.

■ Sending to Folder (F Code Method)

When a folder is set on a remote machine, you can send a document directly to the folder by specifying the F code (sub-address) and password (if set up) of the folder.

Obtain the F code (sub-address) and password of the remote folder in advance.

Example of specifying a destination:

F Code (sub-address) : 0 (to designate an F Code transmission) and the folder number of a folder on the remote machine

Password (if set up) : The password of the remote folder

■ Secure Polling (F Code Method)

When a folder is set on a remote machine, you can perform secure polling for the folder by specifying its F code (sub-address) and password (if set up).

If you use your machine to perform secure polling for a folder on a remote machine, obtain the F code (sub-address) and password of the target folder.

If you use a remote machine to perform secure polling for a folder on your machine, give the following information.

F Code (sub-address) : 0 (to designate an F Code transmission) and the folder number of the target folder

Password (if necessary) : The password of the target folder

Note • The DTMF method is available for Remote Folder. The supported signals are numerals, "*", and "#" only.


A file received in the folder can automatically be printed depending on the folder settings. For information on the folder settings, refer to "Configuring/Starting Job Flow" (P.335).

Depending on the report print settings, a Folder Report may not be printed even after a file is received in a folder. For information on the Folder Report setting, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Folder Report" in the Administrator Guide.


For information on how to print files received in a folder, refer to "Printing Files in a Folder" (P.332).

Sending to Folder (F Code Method)

- 1 Select [F Code].

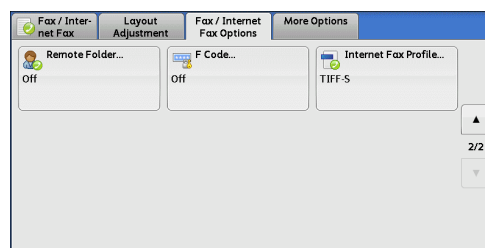

- 2 Select [On].

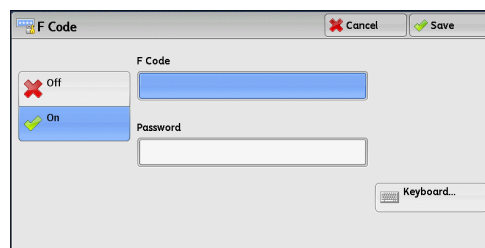

- 3 Select the [F Code] box, and enter an F code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F code.

- 4 If necessary, select the [Password] box, and enter a password using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the password.

■Off

The F code transmission is not used.

■On

The F code transmission is used. Enter the F Code.

■F Code

Select the [F Code] box, and enter the F code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

■Password

Select the [Password] box, and enter the password using the displayed keyboard or the numeric keypad. If a password is not set, leave this box blank.

Note • You can enter up to 20 digits for the password.

■Keyboard


Enter the F code or the password using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.68).

- 5 Specify a destination, and then press the <Start> button.


Secure Polling (F Code Method)

- 1 Select the [More Options] tab to display the [More Options] screen.

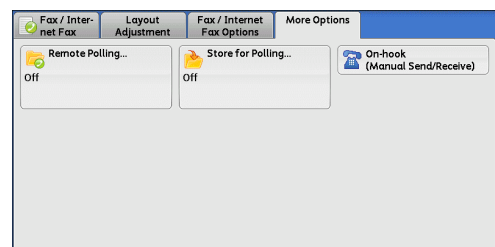


- 2 Select [Remote Polling].

- 3 Select [Poll a Remote Device].

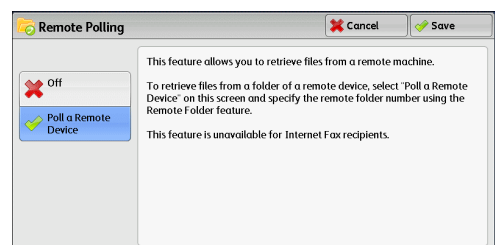


- 4 Select [Save].


- 5 Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen.

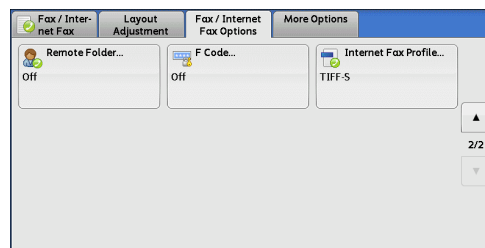

- 6 Select [F Code].

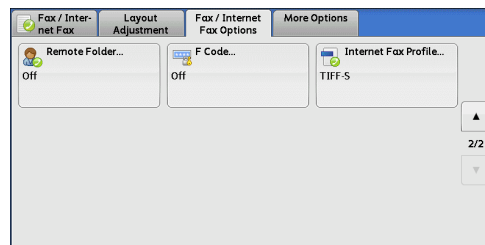

- 7 Select [On].

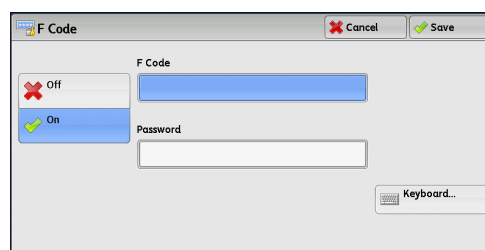

- 8 Select the [F Code] box, and enter the F Code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

- 9 If necessary, select the [Password] box, and enter a password using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the password.

■Off

Disables the Secure Polling feature.

■On

Enables the Secure Polling feature.

■F Code

Select the [F Code] box, and enter the F code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

■Password

Select the [Password] box, and enter the password using the numeric keypad. If a password is not set, leave this box blank.

Note • You can enter up to 20 digits for the password.

■Keyboard

Enter the F code or the password using the displayed keyboard.

• For information on how to enter characters, refer to "Entering Text" (P.68).

- 10 Specify a destination, and then press the <Start> button.

Internet Fax Profile (Specifying Internet Fax Profiles)


A profile is specified to restrict attribute information such as image resolution and paper size for transmissions between Internet Fax-compatible machines.

- Note**
- The profiles that can be processed differ depending on the Internet Fax-compatible machine of the recipient. Before specifying a profile, confirm the profiles the Internet Fax-compatible machine of the recipient can process.
 - If inconsistency occurs between a profile, and stored document size and resolution, priority is given to the settings specified in the profile.
 - If the profile differs for each recipient when using Broadcast Send, the smallest size becomes the maximum image size.
 - This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.


You can set an Internet Fax profile for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

You can change the default value of [Internet Fax Profile] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Internet Fax Profile" in the Administrator Guide.

1 Select [Internet Fax Profile].

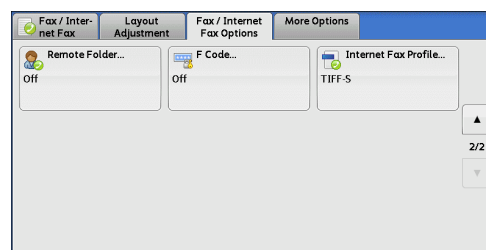

2 Select any option.

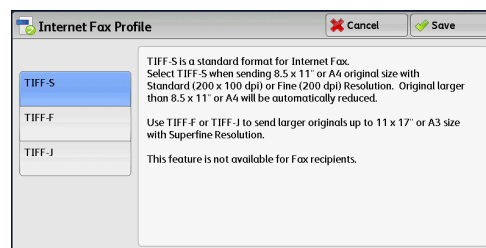

■ TIFF-S

This profile is the Internet Fax standard. For documents that are larger than A4, the size is reduced automatically to A4 for transmission.

- Encoding method : MH
- Stored document size : A4
- Resolution : Standard (200 x 100 dpi), Fine (200 dpi)

- Note**
- [TIFF-S] is not available when [Superfine (400 dpi)] or [Superfine (600 dpi)] is selected in [Resolution] on the [Fax/Internet Fax] screen.

■ TIFF-F

Select this profile when you specify super-fine for the resolution or when you send A3 or B4 documents.

- Encoding method : MMR
- Stored document size : A4, B4, A3
- Resolution : Standard (200 x 100 dpi), Fine (200 dpi), Superfine (400 dpi), Superfine (600 dpi)

- Note**
- When a fax is sent to a machine that does not support TIFF-F, the recipient's machine will not be able to display or print the images.

■TIFF-J

Select this profile for sending documents in JBIG.

- Encoding method : JBIG
- Stored document size : A4, B4, A3
- Resolution : Standard (200 x 100 dpi), Fine (200 dpi), Superfine (400 dpi), Superfine (600 dpi)

Note • When a fax is sent to a machine that does not support TIFF-J, the recipient's machine will not be able to display or print the images.

Encryption (Sending Internet Fax Encrypted by S/MIME)

You can send Internet Fax encrypted by S/MIME.

When sending encrypted Internet Fax, select an e-mail address associated with a certificate that can be encrypted, from the Address Book.

- Note**
- This feature is supported only by the ApeosPort series.
 - To send Internet Fax encrypted by S/MIME, register certificates of the machine and the recipient's machine in advance. For information on certificates, refer to "13 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.
 - You can change the default value of [Internet Fax Encryption] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Internet Fax Encryption" in the Administrator Guide.
 - This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

■Off

Sends Internet Fax without encryption.

■On

Sends encrypted Internet Fax.

Digital Signature (Sending Internet Fax with a Digital Signature by S/MIME)

You can send Internet Fax with a digital signature by S/MIME.

Digital Signature allows a recipient to confirm whether the contents of the Internet Fax are changed, or whether the Internet Fax is sent from the proper sender.

- Note**
- This feature is supported only by the ApeosPort series.
 - To send Internet Fax with a digital signature by S/MIME, register certificates of the machine and the recipient's machine in advance. For information on certificates, refer to "13 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.
 - When [Digital Signature - Outgoing Internet Fax] is set to [Do not add signature] or [Always add signature] in the System Administration mode, depending the selected option, [On] or [Off] is displayed on the [Digital Signature] screen, which cannot be changed. For information on [Digital Signature - Outgoing Internet Fax], refer to "5 Tools" > "Connectivity & Network Setup" > "Security Settings" > "S/MIME Settings" in the Administrator Guide.
 - This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

■Off

Sends Internet Fax without a digital signature.

■On


Sends Internet Fax with a digital signature.

More Options


This section describes the features you can select on the [More Options] screen. The following shows the reference section for each feature.

Remote Polling (Retrieving Files from Remote Machines).....	235
Store for Polling (Storing Files on the Machine that a Remote Machine can Retrieve).....	238
On-hook (Confirming Remote Machine Response Prior to Transmission).....	239

- 1 Select [Fax/Internet Fax] on the [Services Home] screen.

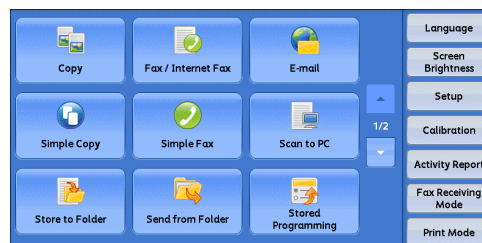

- 2 Select a feature on the [More Options] screen.

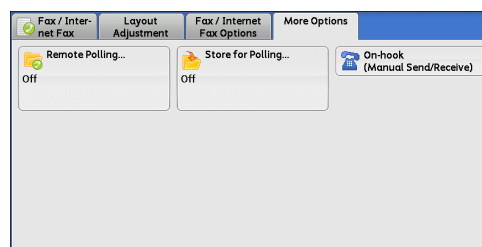

Remote Polling (Retrieving Files from Remote Machines)

Remote Polling is a feature that allows your machine to retrieve a file stored in a remote machine. You are charged for the transmission fee.

This feature is used for Facsimile Information Services.

For information on Facsimile Information Services, refer to "Receiving Faxes" (P.249).

- Note**
- The Remote Polling feature may be not available depending on the remote machine.
 - This feature is not available for the Server Fax service.
 - When you specify polling in combination with [Delay Start] on the [Fax/Internet Fax Options] screen, you can retrieve a file at a specified time.

■Remote Polling

You can retrieve a file stored on a remote machine by sending a polling request from your machine. You can also retrieve files from multiple machines. This is called Multi-Polling.

■Secure Polling (DTMF Method)


You can retrieve a file from a folder on a remote machine by sending a request from your machine. A folder must be created on the remote machine. If the folder is passcode-protected, you can retrieve a file confidentially.

Important • You cannot use polling to retrieve files from multiple remote folders simultaneously.

- Note**
- DTMF method is not available in the IP Fax (SIP).


Remote Polling

- 1 Select [Remote Polling].

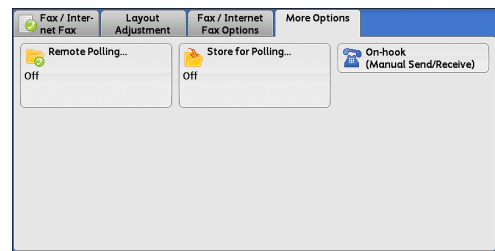

- 2 Select [Poll a Remote Device].

Note • To use Multi-Polling, specify multiple recipients.

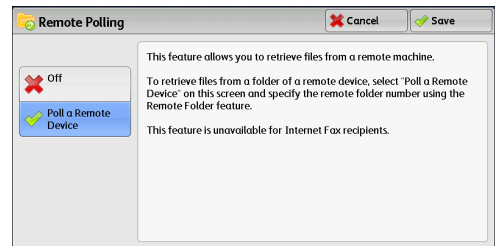

■Off

Disables the Remote Polling feature.


■Poll a Remote Device

Enables the Remote Polling feature.


- 3 Specify a destination, and then press the <Start> button.




Secure Polling (DTMF Method)

- 1 Select [New Recipients] on the [Fax/Internet Fax] screen to display the keyboard on the touch screen.

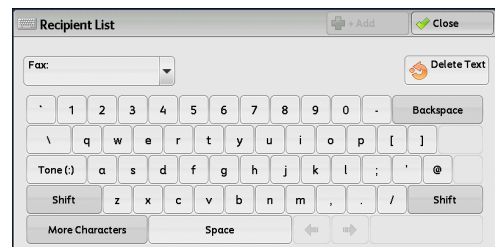

- 2 Enter a format corresponding to Auto Send or Manual Send, and then select [Close].
- 3 Select the [More Options] tab to display the [More Options] screen.

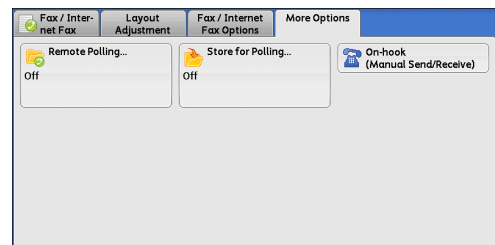

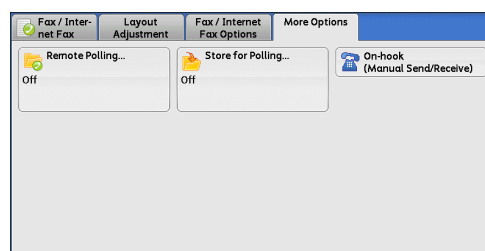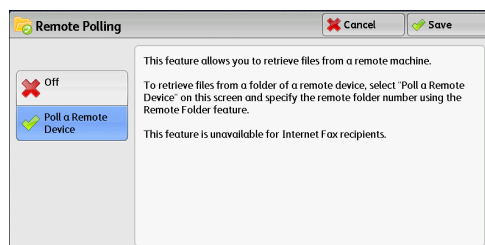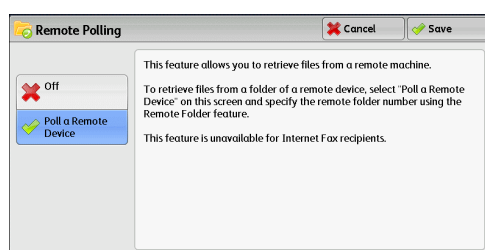4 Select [Remote Polling].**5** Select [Poll a Remote Device].**6** Select [Save].**■Off**

Disables the Secure Polling feature.

■Poll a Remote Device

Enables the Secure Poling feature.

■Format for Auto Send

Telephone number of remote machine	!	*	\$	Folder number on remote machine	*	*	\	Passcode of folder on remote machine	\	#	#	\$
------------------------------------	---	---	----	---------------------------------	---	---	---	--------------------------------------	---	---	---	----

■Format for Manual Send

Telephone number of remote machine	Facsimile tone	*	Beep!	...			
Folder number on remote machine	*	*	Passcode of folder on remote machine	#	#	Beep!	Ready to start

- Note**
- Use the keyboard on the touch screen to enter symbols such as "!" and "*". For information on how to enter characters, refer to "Entering Text" (P.68).
 - Enter a passcode only if necessary.
 - You can specify any machine that supports our DTMF method feature.

By registering destinations in address numbers using the above dialing formats, you can use the address numbers for the Secure Polling feature. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


Store for Polling (Storing Files on the Machine that a Remote Machine can Retrieve)

Store for Polling is a feature that store a file on your machine so that a remote machine can retrieve it from your machine. The following two methods are available for Store for Polling: Store for Free Polling and Store for Secure Polling.


The machine can be set to automatically delete files after they are retrieved with polling. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Polled Files - Auto Delete" in the Administrator Guide.

Note • This feature is not available for the Server Fax service.

1 Select [Store for Polling].

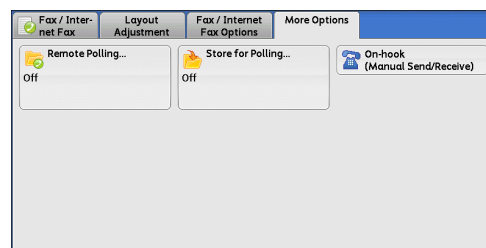

2 Select any option.

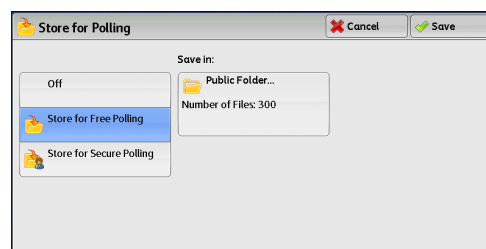

■Off

Disables the Store for Polling feature.

■Store for Free Polling

Stores a file in a public folder on the machine. The file in the public folder can be retrieved by a remote machine.

■Store for Secure Polling

Stores a file in a private folder on the machine. If the folder is passcode-protected, the file can be retrieved by a remote machine confidentially.

You need to create a private folder in advance. For more information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

■Save in:

- When [Store for Free Polling] is selected

The [Public Folder] button is displayed. Selecting this button displays the [Public Folder] screen.

Refer to "[Public Folder] Screen" (P.239).

- When [Store for Secure Polling] is selected

The [Private Folder] button is displayed. Selecting this button displays the [Folder] screen. Select a folder to store files in for Secure Polling.

For information on how to select a folder, refer to "Selecting a Folder" (P.328). For information on how to check files for Secure Polling, refer to "Checking/Operating Files in a Folder" (P.329).

3 Press the <Start> button.


[Public Folder] Screen

This screen allows you to print and delete files stored for Free Polling.

- 1 Select the file to be printed or deleted. You can select either one file or all files.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.

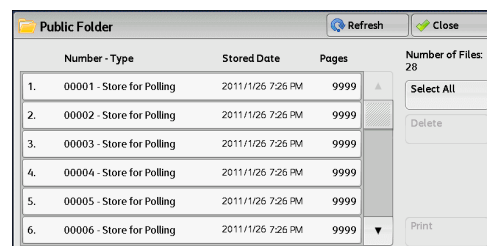

■Refresh

Refreshes the information about files stored in the public folder.

■Select All

Selects all files stored in the public folder.

■Delete

Deletes the selected file. Selecting this button displays a confirmation screen. Select [Delete] on the screen to delete the file.

■Print

Prints the selected file.

On-hook (Confirming Remote Machine Response Prior to Transmission)

Use this feature when using Manual Send.

Manual Send is the transmission method that allows you to send a fax after you make a phone call to a remote machine and then check that the connection is established. This feature can be used with the receiver either off-hook or on-hook.


We recommend that you set the line monitor volume to "Loud".

Note


- If an error occurs during transmission of, for example, the second page, the transmission of the first page may also end abnormally.
- On-hook is not available in the IP Fax (SIP).

You can change the volume of the line monitor in the System Administration mode. For information on how to change the volume, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Line Monitor Volume" in the Administrator Guide.

- 1 Pick up the telephone receiver, or select [On-hook (Manual Send/Receive)].

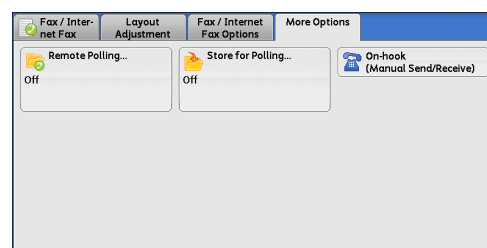

2 Select any option.

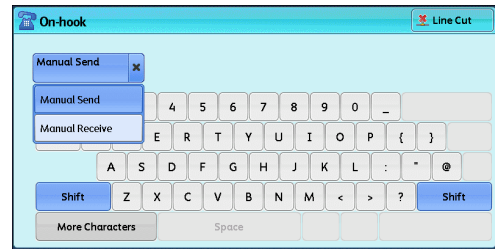

■Manual Receive/Manual Send

Use the drop-down menu to switch between [Manual Receive] and [Manual Send].

- Manual Send : Allows you to check if connection is established before sending a fax.
- Manual Receive : Allows you to receive a fax manually, such as Facsimile Information Services.

■Entering a destination

Use alphanumeric characters to specify a destination.

- Note**
- Some touch-tone services may not be available even if you set your telephone to send tones.
 - When the line type is set to a tone line, [:] (Tone) is not displayed on the screen. If you want to send tones (or to use the touch-tone services) while using a pulse line, select [:] (Tone).

■More Characters

Select this button to display a symbol screen, allowing you to use symbols to specify a destination.

■Line Cut

Cuts the line connected.

Broadcast

This section describes how to set Broadcast Send and Relay Broadcast.

Broadcast Send (Transmitting to Multiple Recipients).....	241
Relay Broadcast (Transmitting Documents Through a Relay Station).....	242
Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations).....	245

Broadcast Send (Transmitting to Multiple Recipients)

The Broadcast Send feature allows you to transmit the same document to multiple recipients in a single operation. There is no need to repeat the same operation for each recipient.


When the Additional G3 Port 2 (optional) is installed, you can use the extra lines to make multiple transmissions simultaneously with Broadcast Send.

If you specify Broadcast Send, the machine prints a Broadcast/Multi-Poll Report after the Broadcast Send operation finishes.

- Note**
- You can use Broadcast Send by specifying recipients from Fax, Internet Fax, and IP Fax (SIP), for a single job. (Mix Broadcast)
 - The maximum number of recipients that you can specify at one time is as follows: Using the numeric keypad: 200 locations; using address numbers: 600 locations; and using the numeric keypad in combination with address numbers: 600 locations.
 - The address numbers 0001 - 0070, or 0001 - 0060 correspond to the one touch buttons 1 - 70, or 1 - 60. For more information on the one touch buttons, refer to "Control Panel" (P.56).
 - When using Broadcast Send, the Cover Page and Remote Folder features are not available even if they are enabled on the control panel. If you want to use [Cover Page] and [Remote Folder], set them when registering each recipient in an address number.
 - [Confirmation Options] is not available. Check a Broadcast/Multi-Poll Report to see transmission results.

1 Select the first recipient.

- Note**
- When you specify recipients from Fax and Internet Fax for a single job (Mix Broadcast), select the fax type for each recipient from the drop-down menu.

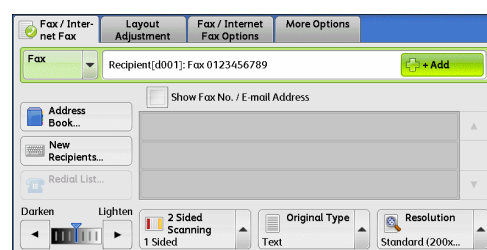

2 Select [+ Add].

3 Select the next recipient.

4 Repeat steps 2 and 3.

5 Press the <Start> button.

6 Select [Yes] on the confirmation screen to start transmission.

Relay Broadcast (Transmitting Documents Through a Relay Station)

The Relay Broadcast feature transmits documents to multiple recipients via other fax machines (relay stations). When a document is to be transmitted over a long distance to multiple recipients, it is first transmitted to one relay station and from there to multiple recipients. When you transmit documents over a long distance to many recipients, using Relay Broadcast can save on transmission cost.

Furthermore, multiple Relay Broadcast operations can be performed simultaneously. This is called Multiple Relay Broadcast.

Note • For IP Fax (SIP), only Relay Broadcast with the F Code method is available.

The following three methods are available for Relay Broadcast:

■Fax Signal Method

This method employs a Fuji Xerox proprietary communication procedure that is only for use with specific machines that have the Relay Broadcast feature.

■DTMF Method

G3 fax machines that support Manual Send can perform Relay Broadcast for the machine.

■F Code Method

This method can be used among machines that support the F Code and the Relay Broadcast features.

Before using the Relay Broadcast Feature

Before using the Relay Broadcast feature, register the following information.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

Where	Contents
Initiating Station	Fax Signal Method Assign the relay station to an address number (0001 to 2000) to set up the Relay Broadcast feature. - Register the last two digits of the address number of the initiating station (which is already registered at a relay station) as a relay station ID for the Relay Broadcast operation. - Register the address numbers or group dial number of the relay recipients (which are registered at a relay station) as broadcast recipients. The wildcard "*" can be used. DTMF Method (G3)/F Code Method - No registration is required. The dialing format can be registered to an address number.

For information on the setting items to be registered in relay stations, refer to the documentation provided with relay stations.

Fax Signal Method

- 1 Select an address number or group dial number to which a relay broadcast is registered, and press the <Start> button.
To perform Multiple Relay Broadcast, repeat this step.

DTMF Method

The following two types are available in the DTMF method: Auto Send and Manual Send.

■Auto Send (Transmitting without picking up the receiver)

- 1 Select [New Recipients] to display the keyboard on the touch screen and enter in the following format.

Relay station telephone number	!	*	\$	#	\	Password	Relay station ID	\	#	Address number	#	Address number	#	...	#	#	\$
--------------------------------------	---	---	----	---	---	----------	------------------------	---	---	-------------------	---	-------------------	---	-----	---	---	----

- Password

A pre-registered 2-digit number

- Note**
- By default, no password is set. For setting a password, contact our Customer Support Center. If a password is not set, you do not need to enter one.

- Relay station ID

The last two digits of the initiating station address number registered at the relay station

- Address number

An address number for the relay recipients registered at the relay station

The wildcard "*" can also be used.

You can register the above dialing format in an address number to send using the address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


- 2 Select [+ Add] to perform Multiple Relay Broadcast.

- Note**
- You can specify up to 20 locations for relay recipients.


- 3 Press the <Start> button.

■Manual Send (Transmitting with picking up the receiver or on-hook)

- 1 Select the [More Options] tab to display the [More Options] screen.
- 2 Pick up the telephone receiver, or select [On-hook (Manual Send/Receive)].

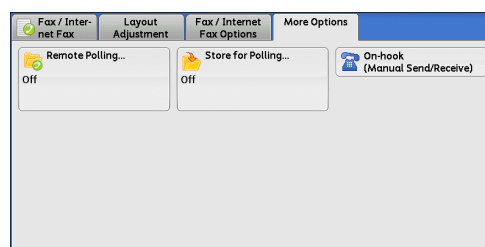

- 3 Select [Manual Send] from the drop-down menu.

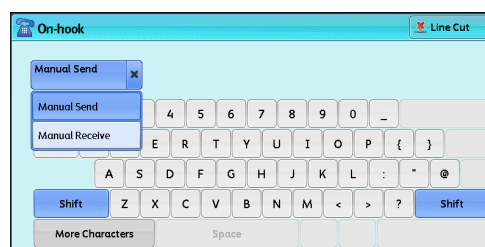

- 4** Use the keyboard displayed on the touch screen to enter numbers in the following format.

Relay station telephone number	Facsimile tone	*	Beep!	#	Password	Relay station ID	#	Address number	#	...	#	#	Beep!
--------------------------------------	----------------	---	-------	---	----------	------------------------	---	-------------------	---	-----	---	---	-------


Note • You can specify up to 20 locations for relay recipients.

F Code Method


You can perform Relay Broadcast by registering the relay station's F code and password (if necessary) to the machine.

- Note**
- When performing Relay Broadcast with the F Code method, you can use a password if you set a receive password for the relay station.
 - When performing Relay Broadcast between Fuji Xerox manufactured machines that can be used as both an initiating station and a relay station, we recommend that you use the fax signal method.
 - Confirm the F code (sub-address) and password of the target relay station.


- 1** Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen.

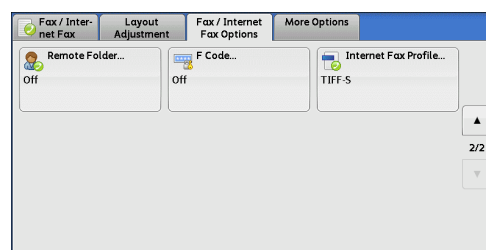

- 2** Select [F Code].

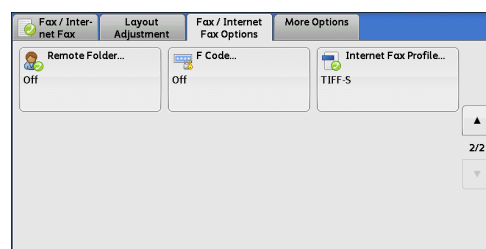

- 3** Select [On].

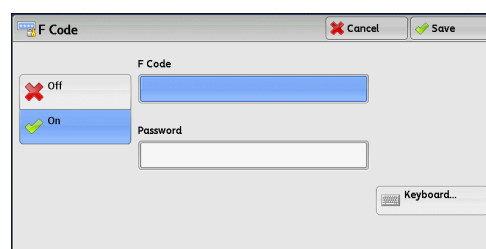

- 4** Select the [F Code] box, and enter the F code with the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

Relay Broadcast	Print Directive	Relay Station ID	Address Number	Address Number	Address Number	
-----------------	--------------------	---------------------	-------------------	-------------------	-------------------	------

Up to 20 digits

- Relay Broadcast

The number of digits of the relay station ID:

- 1: When the relay station IDs and address numbers are two digits
- 2: When the relay station IDs and address numbers are three digits

- Print Directive

Printing/not printing at the relay station

1: Printing at the relay station

0: Not printing at the relay station

- Relay Station ID

An address number for an initiating station registered at the relay station

When the relay station ID is set, the initiating station is notified of the results of a Relay Broadcast.

When the relay station ID is "00" or "000", the initiating station is not notified of the results of a Relay Broadcast.

- Address Number

The address number assigned to the relay recipient

The following shows an example of F Code that indicates printing at the relay station, notifying the initiating station (100) of the results, and performing Relay Broadcast to relay recipients (200, 201, 202, and 203).

F Code example: 21100200201202203

5 If necessary, enter the password using the numeric keypad.

Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)

The Remote Relay Broadcast feature combines two or more Relay Broadcast operations and use Broadcast Send.

This feature is more economical than Relay Broadcast in transmitting documents to multiple remote machines.

Note

- Multiple Relay Broadcast can be performed from a secondary relay station.
- For IP Fax (SIP), only Relay Broadcast with the F Code method is available.

The following three methods are available in Remote Relay Broadcast:

■Fax Signal Method

This method employs a Fuji Xerox proprietary communication procedure that is only for use with specific machines that support the Relay Broadcast feature.

■DTMF Method

G3 fax machines that support Manual Send can perform Remote Relay Broadcast for the machine.

■F Code Method

This method can be used among machines that support the F Code and the Relay Broadcast features.

Fax Signal Method

Register the following information in the address numbers of initiating stations in advance.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

Where	Contents
Initiating Station	Assign the relay station to an address number (0001 to 2000) to set up the Relay Broadcast feature. - Register the last two digits of the address number of the initiating station (which is already registered at a primary relay station) as a relay station ID. - Register the address numbers or group dial number of the secondary relay stations (which are registered at a primary relay station) as broadcast recipients.

For information on the setting items to be registered in a primary relay station and a secondary relay station, refer to the documentations provided with them.

- 1 Select an address number or group dial number to which a remote relay broadcast is registered, and press the <Start> button.

DTMF Method

The following two types are available in the DTMF method: Auto Send and Manual Send.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

For information on the setting items to be registered in a primary relay station and a secondary relay station, refer to the documentations provided with them.

Note • You can specify any machine that supports our DTMF method feature.

■ Auto Send (Transmitting without picking up the receiver)

- 1 Select [New Recipients] to display the keyboard on the touch screen and enter in the following format.

Primary relay station telephone number	!	*	\$	#	\	Password	Relay station ID	\	#	Address number	#	#	\$
---	---	---	----	---	---	----------	---------------------	---	---	-------------------	---	---	----

- Password

A pre-registered 2-digit number

Note • By default, no password is set. For setting a password, contact our Customer Support Center. If a password is not set, you do not need to enter one.

- Relay Station ID

The last two digits of the initiating station address number registered at the primary relay station

- Address Number


The address number for the secondary relay station registered at the primary relay station

You can register the above dialing format in an address number to send using the address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


- 2 Select [+ Add] to perform Multiple Relay Broadcast.

■ Manual Send (Transmitting with picking up the receiver or on-hook)

- 1 Select the [More Options] tab to display the [More Options] screen.
- 2 Pick up the telephone receiver, or select [On-hook (Manual Send/Receive)].

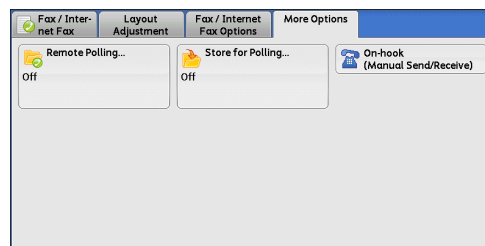

- 3 Select [Manual Send] from the drop-down menu.

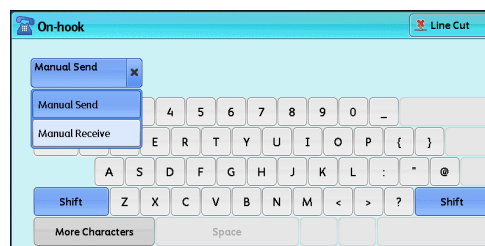

- 4 Use the keyboard displayed on the touch screen to enter numbers in the following format.

Primary relay station telephone number	Facsimile tone	*	Beep!	#	Password	Relay station ID	#	Address number	#	...	#	#	Beep!
--	----------------	---	-------	---	----------	------------------	---	----------------	---	-----	---	---	-------

Note • You can specify up to 20 locations for relay recipients.


F Code Method

When using the machine as the initiating station for performing Remote Relay Broadcast, confirm the F Code and the password (if necessary) for the primary relay station.


Important • When using the F Code method for Remote Relay Broadcast, the primary relay stations and secondary relay stations must support our F Code method and the Relay Broadcast feature.

Note • When performing Relay Broadcast with Fuji Xerox manufactured machines that can be used as both an initiating station and a relay station, we recommend that you use the fax signal method.


- 1 Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen.

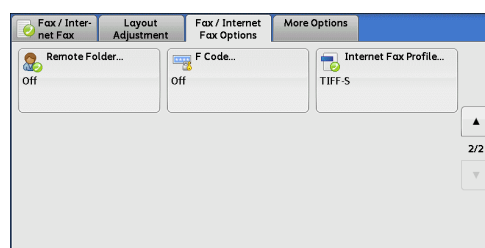

- 2 Select [F Code].

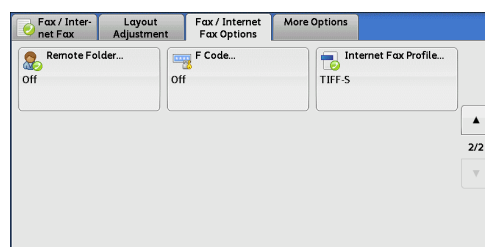

3 Select [On].

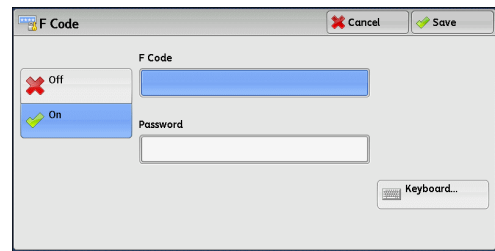

4 Select the [F Code] box, and enter the F Code with the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

Relay Broadcast	Print Directive	Primary Relay Station ID	Address Number	Address Number	
-----------------	-----------------	--------------------------	----------------	----------------	------

Up to 20 digits

- Relay Broadcast

The number of digits of the primary relay station ID:

 - 1: When the primary relay station IDs and address numbers are two digits
 - 2: When the primary relay station IDs and address numbers are three digits
 - Print Directive

Printing/not printing at the primary relay station

 - 1: Printing at the primary relay station
 - 0: No printing at the primary relay station
 - Primary Relay Station ID

The address number for the initiating station registered at the primary relay station

When the primary relay station ID is set, the initiating station is notified of the results of the Remote Relay Broadcast.

When the primary relay station ID is "00" or "000", the initiating station is not notified of the results of a Remote Relay Broadcast.
 - Address Number

The address number assigned to the secondary relay station
- 5** If necessary, enter the password using the numeric keypad.

Receiving Faxes

Two modes are available for receiving faxes: Auto Receive and Manual Receive.

In the Auto Receive mode, reception of a fax from a remote machine begins automatically.

In the Manual Receive mode, reception of a fax from a remote machine is manual. This mode is convenient for confirming the sender or using an external telephone to confirm whether it is a fax before beginning reception.

Using G3-ID allows the machine to reject faxes from specific fax numbers or unknown fax numbers. You can register up to 50 fax numbers as rejected fax numbers.

- Rejecting faxes from specific fax numbers:

The machine rejects faxes when the G3-ID sent from the sender's machine is included in the registered fax numbers to be rejected.

- Rejecting faxes from unknown fax numbers:

The machine rejects faxes when the G3-ID is not sent from the sender's machine.

G3-ID contains a phone number and other information that are registered in the sender's machine.



Note • For IP Fax (SIP), the Manual Receive mode is not available.

You can change the default value of [Fax Receiving Mode] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Fax Receiving Mode" in the Administrator Guide.

For information on how to reject faxes from specific fax numbers or unknown fax numbers, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Block Inbound Faxes" and "Block Unknown Fax Numbers" in the Administrator Guide.

Switching between Auto Receive and Manual Receive

- 1 Press the <Machine Status> button.
- 2 Select [Fax Receiving Mode] on the [Machine Information] screen.
- 3 Select [Manual Receive] or [Auto Receive].

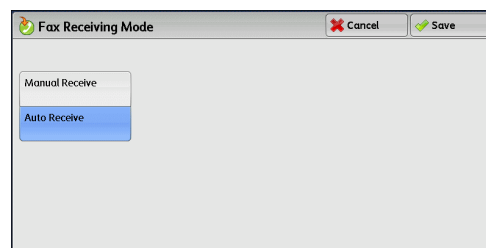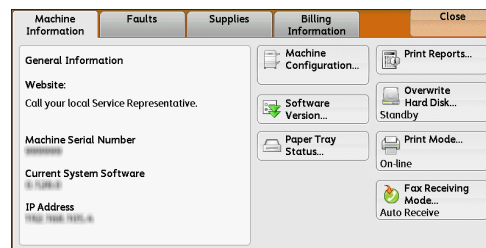

■ Manual Receive

Reception of a fax from a remote machine is manual. This mode is convenient for confirming the sender or using an external telephone to confirm whether it is a fax before beginning reception.

When extra lines are added to the machine, [Fax Receiving Mode] is set to [Auto Receive] even when [Manual Receive] is selected.

■ Auto Receive

Reception of a fax from a remote machine begins automatically.

Using Auto Receive

When [Fax Receiving Mode] is set to [Auto Receive] on the [Machine Information] screen, the following two methods are available to receive a fax:

■ When the machine automatically switches to fax reception

When there is an incoming call, the machine automatically receives a fax after it rings for a certain period of time.

■ When the machine automatically switches between a call and fax reception

When there is an incoming fax, the machine automatically receives a fax. When there is an incoming call, pick up the telephone receiver to talk while the machine is ringing.

Using Manual Receive

When [Fax Receiving Mode] is set to [Manual Receive], and the machine rings to notify of an incoming call, pick up the receiver of the external telephone or select [On-hook] on the screen displayed.

Note • We recommend that you set the monitor volume to [Loud] when using the On-hook feature. For information on how to change the volume of the line monitor, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Line Monitor Volume" in the Administrator Guide.

- 1** When the machine rings, the receiving screen appears.

If there is a telephone, pick the receiver up. If not, select [On-hook] on the receiving screen.

- 2** Confirm whether the call is from a telephone or a fax machine.

If the call is from a telephone, use the receiver to talk.

If the call is from a fax machine, you will hear the sound of a fax machine.

Note • If you select [On-hook], you will hear the sound from the machine speaker. However, you cannot talk to the other party.

- 3** Press the <Start> button.

- 4** If you picked up the receiver, place it back in the cradle when the <Data> indicator lights up on the control panel.

Important • Make sure to place the receiver back in the cradle properly. Otherwise, the line will remain "busy" with the receiver being left off the cradle.

Using Folder Receive

Files received using Folder Receive are stored in a folder. After a file is received in a folder, the <Data> indicator lights up and the machine prints a Folder Report. The Folder Report lists the folder number and folder name.

To receive files in a folder using the F Code method, notify the sender of the following information:

- F Code (sub-address): 0 (to designate F Code transmission) and the folder number to store the file in
- Password (if necessary): the passcode of the folder to store the file in

Note • For IP Fax (SIP), fax signal method and F code method are available.
 • For IP Fax (SIP), in communicating via VoIP gateway, the Sending to Folder with fax signal method is not available. Only the Sending to Folder with F code method is available.
 • The DTMF method is available for Remote Folder. The supported signals are numerals, "*", and "#" only.

Depending on the report print settings, a Folder Report may not be printed even after a file is received in a folder. For more information on the Folder Report settings, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Folder Report" in the Administrator Guide.


For information on how to print a file stored in a folder, refer to "Printing Files in a Folder" (P.332).

Facsimile Information Services

For information on subscriptions and advanced operating procedures, contact the corresponding facsimile information service.

Using the Receiver

- 1 Pick up the telephone receiver.

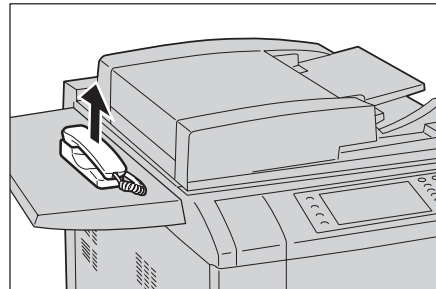


- 2 Select [Manual Receive] from the drop-down menu.
- 3 Specify the fax number of the facsimile information service.
 - You can use the numeric keypad, address numbers, or one touch buttons to specify the call destination, but cannot use the Address Book.
 - You can use the keyboard displayed on the screen to specify the call destination. Selecting [More Characters] on the screen displays symbols.
- Note**
 - When the line type is set to a tone line, [:] (Tone) is not displayed on the screen. If you want to send tones (or to use the touch-tone services) while using a pulse line, select [:] (Tone).
 - Some touch-tone services may not be available even if you set your telephone to send tones.
- 4 When the machine connects to the service, you will hear voice prompts. Follow the voice prompts to enter the required numbers.
- 5 After entering the numbers, press the <Start> button.
 - Note**
 - The <Data> indicator lights up on the control panel, and reception begins.
- 6 Place the receiver back in the cradle.
 - Important**
 - Make sure to place the receiver back in the cradle properly. Otherwise, the line will remain "busy".

When Not Using a Receiver

- 1** Adjust the volume of the line monitor.
We recommend that you set the volume of the line monitor to [Loud] so that you can hear the voice prompts clearly.

For information on how to change the volume of the line monitor, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Line Monitor Volume" in the Administrator Guide.

- 2** Select [On-hook (Manual Send/Receive)] on the [More Options] screen.

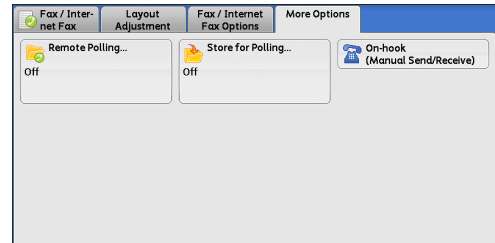

- 3** Select [Manual Receive] from the drop-down menu.
- 4** Specify the fax number of the facsimile information service.
 - You can use the numeric keypad, address numbers, or one touch buttons to specify the call destination, but cannot use the Address Book.
 - You can use the keyboard displayed on the screen to specify the call destination. Selecting [More Characters] on the screen displays symbols.
- Note**
 - When the line type is set to a tone line, [.] (Tone) does not appear. If you want to send tones (or to use the touch-tone services) while using a pulse line, select [.] (Tone).
 - Some touch-tone services may not be available even if you set your telephone to send tones.
- 5** When the machine connects to the service, you will hear voice prompts. Follow the voice prompts to enter the required numbers.
- 6** After entering the numbers, press the <Start> button.

5 Scan

This chapter describes the basic operations and features for the Scan services.

Note • The Scan services are not available for some models. An optional component is required. For more information, contact our Customer Support Center.

To use the Scan services, network settings are required. For information on the network settings, refer to "9 Scanner Environment Settings" in the Administrator Guide.

• Scanning Procedure	256
• Operations during Scanning	264
• E-mail.....	267
• Network Scanning.....	287
• Scan to PC.....	289
• Store to Folder	295
• Store to USB.....	297
• Store & Send Link.....	301
• Advanced Settings.....	304
• Layout Adjustment	309
• E-mail Options/Filing Options	317

Scanning Procedure

This section describes the basic scanning procedure. The following shows the reference section for each procedure.

Step 1 Loading Documents	256
Step 2 Selecting the Features	258
Step 3 Starting the Scan Job.....	261
Step 4 Confirming the Scan Job in Job Status	262
Step 5 Saving the Scanned Data	263

Step 1 Loading Documents

The following two methods are available to load documents:

■ Document Feeder

- Single sheet
- Multiple sheets

■ Document Glass

- Single sheet
- Bound documents, such as books

Document Feeder

The document feeder supports single and multiple sheet documents with sizes from 139.7 x 139.7 mm (Standard size: A5, A5 $\square$, 5.5 x 8.5", 5.5 x 8.5" $\square$) to 297 x 432 mm (Standard size: A3, 11 x 17").

The document feeder automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying a Scan Size)" (P.312).

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

The document feeder accepts the following number of sheets.

Weight	Number of Sheets
38 - 80 gsm	250 sheets
81 - 128 gsm	150 sheets
129 - 200 gsm	100 sheets

Important • To avoid paper jams, use the document glass for folded or wrinkled documents, cut-and-pasted documents, curled paper, or back carbon paper.

- 2-sided scanning of lightweight paper (38 - 49 gsm) is not supported.


For information on how to scan mixed sized documents, refer to "Mixed Size Originals (Scanning Different Size Documents Simultaneously)" (P.313).

1 Remove any paper clips and staples before loading a document.

2 Adjust the document guides to match the size of the document loaded.

Note


- When loading a large size document such as A3, lift up the document feeder tray, and open the document stopper rightward.

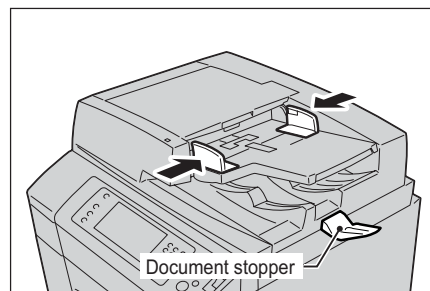

3 Load the document face up (when the document is 2-sided, place the front side up) in the center of the document feeder.

Note

- The Confirmation indicator lights up when the document is loaded correctly.
- When the document is loaded in the document feeder, the document feeder tray lifts up. You can set the timing of the lift. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Document Feeder Tray Elevation" in the Administrator Guide.

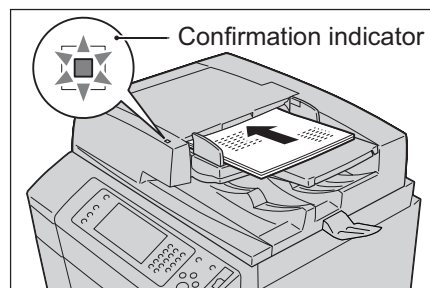

Document Glass

The document glass supports a single sheet, a book, or other similar documents with sizes from 15 x 15 mm to 297 x 432 mm (Standard size: A3, 11 x 17").

Important • Always close the document cover after using the document glass.

The document glass automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying a Scan Size)" (P.312).


The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on the paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

CAUTION


Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

1 Open the document cover.

Important • Ensure that the touch screen is active, and then load a document. Otherwise, the machine may not properly detect the document size.

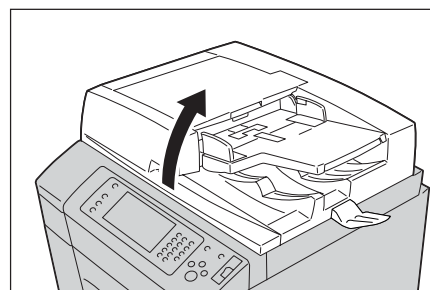

- 2 Load the document face down, and align it against the top left corner of the document glass.

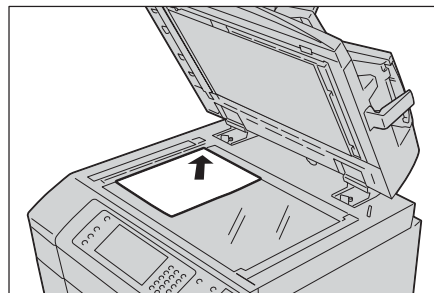

- 3 Close the document cover.

Step 2 Selecting the Features

On the [Services Home] screen, you can select from six Scan services: [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store to USB], and [Store & Send Link]. You can select features for each service.

- Note**
- The features displayed on the screen depend on your machine configuration.
 - When the Accounting feature is enabled, a user ID and passcode may be required. Ask your system administrator for the user ID and passcode.
 - To use the Scan services, network settings are required. For information on the network settings, refer to "9 Scanner Environment Settings" in the Administrator Guide.

■E-mail

Scans a document and sends the scanned data as an e-mail attachment after converting the data to TIFF, JPEG, PDF, DocuWorks, or XPS (XML Paper Specification).

■Store to Folder

Scans a document and saves the scanned data in a folder on the machine.

You need to create a folder in advance. For information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

■Network Scanning

Scans a document using a job template created on CentreWare Internet Services.

When Scan to Home is enabled and the Remote Access feature is available, the scanned data can be transferred to a different destination according to an authenticated user.

For information on how to create a job template, refer to the help of CentreWare Internet Services.

■Scan to PC

Scans a document and sends the scanned data to a network computer via the FTP or SMB protocol.

■Store to USB

Scans a document and saves the scanned data to a USB memory device.

■Store & Send Link

Scans a document and temporarily saves the scanned data on the machine. The user is notified by e-mail of the URL to the location where the scanned data is stored. Then, the user can access the URL to retrieve the scanned data.

The following table shows file formats available for each Scan service.

Scan Service	File Format can be Selected When	File Format				
		PDF	Docu-Works	XPS* ¹	TIFF	JPEG
E-mail	Using the control panel when scanning	O* ²	O* ³	O	O	O
Scan to PC		O* ²	O* ³	O	O	O
Store to USB		O* ²	O* ³	O	O	O
Store & Send Link		O* ²	O* ³	O	O	O
Store to Folder	Using CentreWare Internet Services	O* ²	O* ³	O	O	O
	Using Stored File Manager 3	X	X	X	O	O
	Using DocuWorks* ⁴	X	O* ³	X	X	X
	Using EasyOperator	X	X	X	O	O
	Using Adobe Acrobat* ⁴	O* ²	X	X	X	X
Job Flow Sheet	Creating a job flow	O* ²	O* ³	O	O	O
Network Scanning	Creating a job template	X	X	X	O	O

O Available

X Not available

*¹ XPS stands for XML Paper Specification.

*² Supported on Acrobat 4.0 or later


*³ Supported on DocuWorks Ver.4 or later

*⁴ TWAIN compatible application

Note • If you do not specify a file name for the document to be saved, a file name is automatically assigned to each file or folder based on a particular rule. For example, the file name "img-123123456" indicates that the document was scanned at 12:34:56 on January 23. X, Y, and Z represent October, November, and December, respectively.


The following describes how to store scanned data into a folder as an example.

1 Press the <Services Home> button.

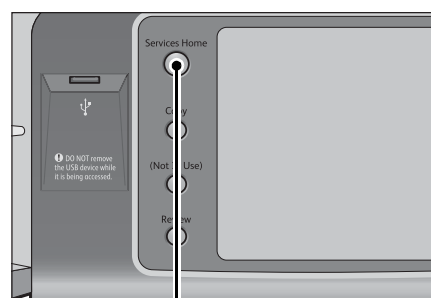


<Services Home> button

2 Select [Store to Folder].

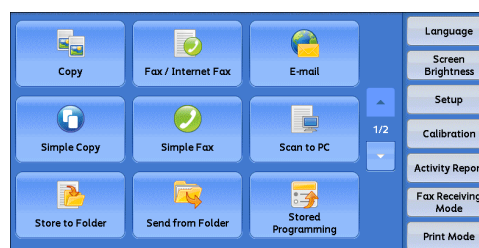


- 3 If the previous settings still remain, press the <Clear All> button.

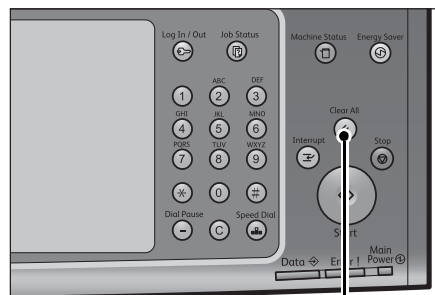


<Clear All> button

- 4 Specify a folder to save the data in.

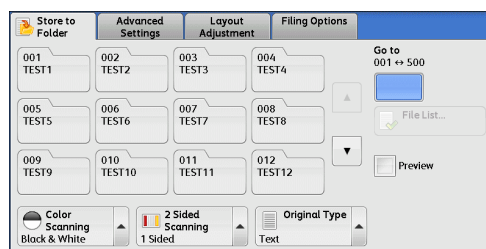

- 5 Select each tab, and configure features as necessary.

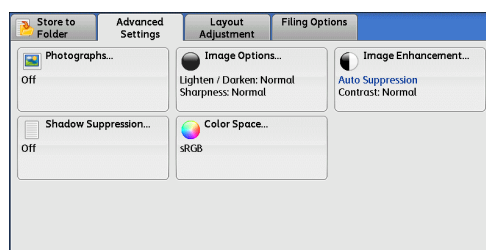

The following shows the reference section for each tab.

"Store to Folder" (P.295)

"Advanced Settings" (P.304)

"Layout Adjustment" (P.309)

"E-mail Options/Filing Options" (P.317)

When you use another Scan service, [Store to Folder] is replaced with [E-mail], [Network Scanning], [Scan to PC], [Store to USB], or [Store & Send Link].

The following shows the reference section for each service.

"E-mail" (P.267)

"Scan to PC" (P.289)

"Store to USB" (P.297)

"Store & Send Link" (P.301)

"Network Scanning" (P.287)


Step 3 Starting the Scan Job

The following describes how to start a scan job.

1 Press the <Start> button.

- Important**
- If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.
 - If a copy protection code is detected, the machine will not scan the document.

- Note**
- If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.
 - You can set the next job during scanning.

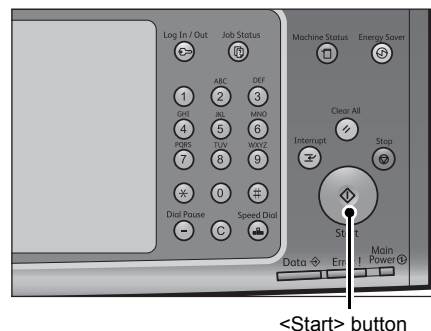

■If you have more documents


If you have more documents to scan, select [Next Original] on the touch screen while the current document is being scanned. This allows you to scan the documents as a single set of data.

Up to 999 pages can be stored.


- Note**
- If the number of pages scanned by the machine exceeds the maximum, the machine stops scanning. Follow the message displayed on the screen, and either abort the operation or save the already-scanned data as a single set of data.

2 While documents are being scanned, select [Next Original].


- Note**
- When using the document feeder, load the next document after the machine has finished scanning the first document.
 - When [Next Original] is displayed on the screen shown on the right and no operation is performed for a certain period of time, the machine automatically assumes that there are no more documents.
 - You can change the scan settings of the next document by selecting [Change Settings] that is displayed after selecting [Next Original].

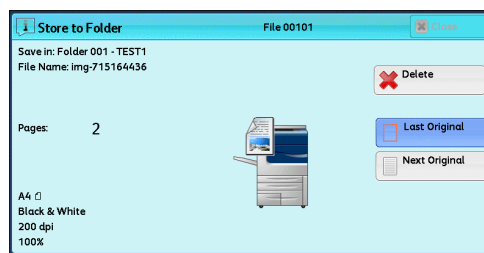

3 Load the next document.

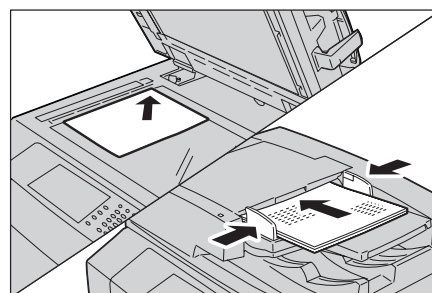


- 4** Press the <Start> button.
If you have more documents, repeat steps 3 and 4.

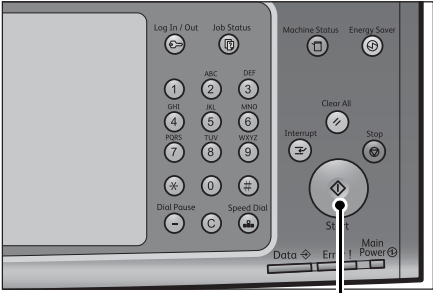

<Start> button


- 5** When all documents have been scanned, select [Last Original].

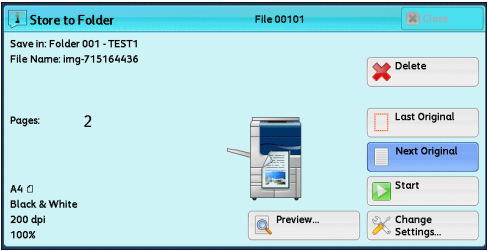

Step 4 Confirming the Scan Job in Job Status


The following describes how to confirm the status of a scan job.

- 1** Press the <Job Status> button.

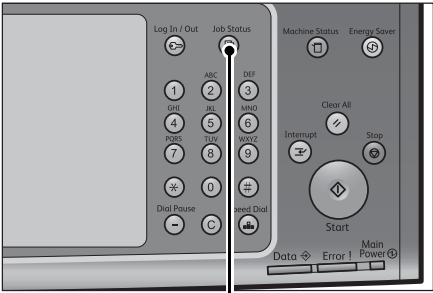

<Job Status> button

- 2** Confirm the job status.
- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - From the drop-down menu, you can select [Scan, Fax, & Internet Fax Jobs] and display the desired job.

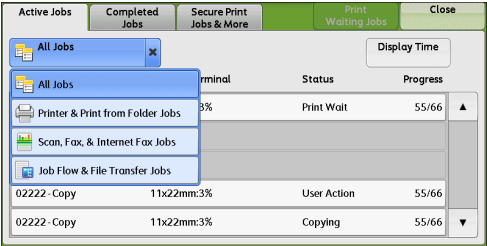

Step 5 Saving the Scanned Data

When you used the Store to Folder service, you can use the following methods to import the file stored in a folder of the machine to your computer:

■ Import using an application

Use Network Scanner Driver.

Refer to "Importing to a TWAIN Compatible Application" (P.404).

■ Import using Stored File Manager 3

Use Stored File Manager 3 (Fuji Xerox application software).

Refer to "Importing Using Stored File Manager 3" (P.406).

■ Import using CentreWare Internet Services

Use CentreWare Internet Services.

Refer to "Importing Using CentreWare Internet Services" (P.409).

■ Import using EasyOperator

Use EasyOperator (Fuji Xerox application software).

Refer to "Importing Using EasyOperator" (P.410).

Operations during Scanning


The following describes the operations available during scanning. The following shows the reference section for each operation.

Stopping the Scan Job	264
Previewing the Scanned Images during a Scan Job	265
Changing Scan Settings	266


Stopping the Scan Job

To cancel scanning a document, use the following procedure.


- 1** Press either the <Stop> button on the control panel or [Delete] on the touch screen.

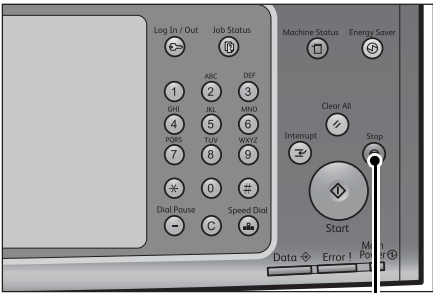

<Stop> button

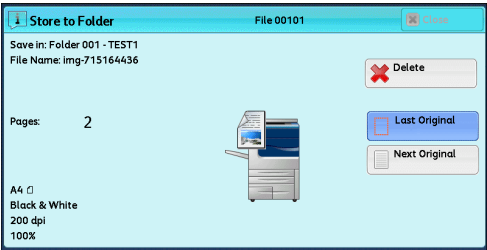


- 2** Select [Delete].

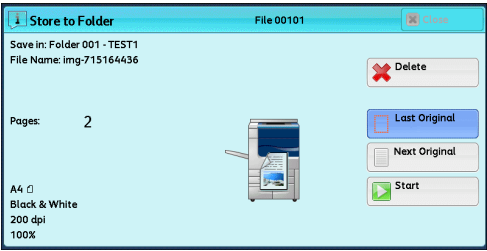


■If [Delete] does not appear on the screen:

- 1** Press the <Job Status> button.

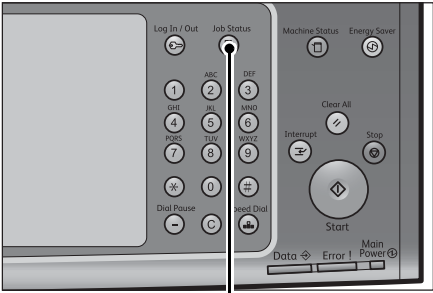


<Job Status> button

- 2 Select the job to cancel.

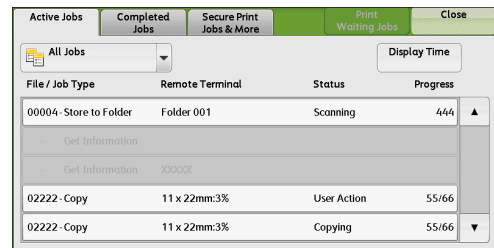


- 3 Select [Delete].

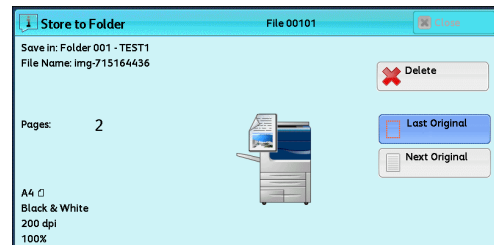

- 4 Select [Delete].

Note • If you cancel the job, the scanned data stored in the folder will also be deleted.

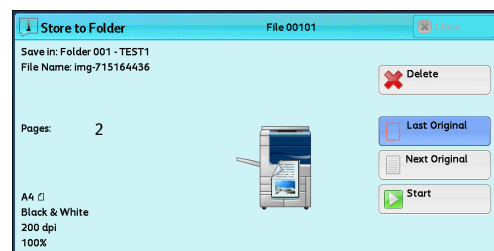


Previewing the Scanned Images during a Scan Job


You can preview the scanned images while scanning the document.

Important • You cannot preview the scanned images when [MRC High Compression] is set to [On] or the [Specific Color] check box is selected on the [File Format] screen.


- 1 Select [Next Original].

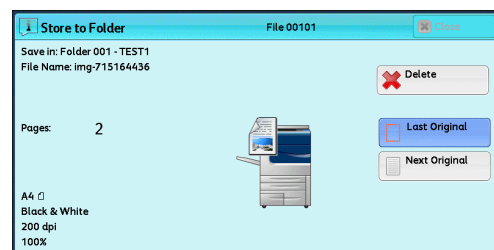

- 2 Select [Preview] to display a preview screen.
The first page of the last scanned document is displayed.

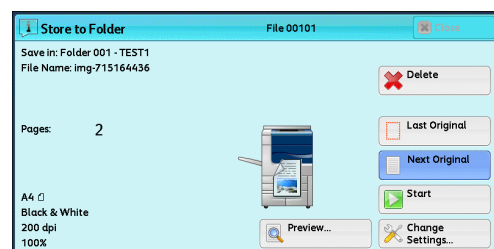

- 3 From the drop-down menu, specify the view size by selecting [Whole Page] or [Enlarge View], and set [Current Page].

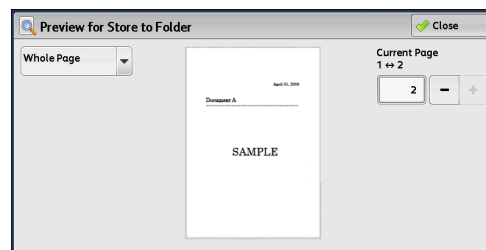


- 4 After the confirmation, select [Close] to close the preview screen.


Changing Scan Settings

You can change scan settings while scanning the document.

- 1 Select [Next Original].

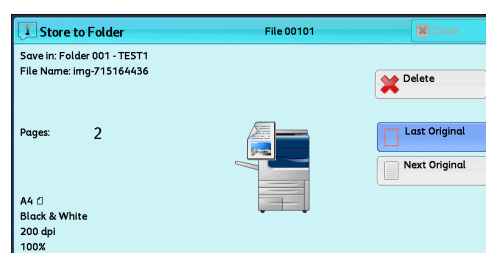

- 2 Select [Change Settings].

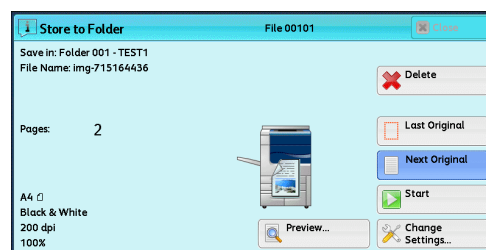

- 3 Set [Color Scanning], [Original Type], [Resolution], [Lighten/Darken], [Original Orientation], [2 Sided Scanning], and [Original size].

The following shows the reference section for each feature.

"Color Scanning (Selecting an Output Color)" (P.275)

"Original Type (Selecting the Document Type)" (P.277)

"Resolution (Specifying a Scanning Resolution)" (P.310)

"Image Options (Adjusting Scan Density and Image Sharpness)" (P.305)

"Original Orientation (Specifying the Orientation of the Loaded Documents)" (P.316)

"2 Sided Scanning (Scanning Both Sides of a Document)" (P.310)

"Original Size (Specifying a Scan Size)" (P.312)

- 4 Press the <Start> button.

E-mail


This section describes the features you can select on the [E-mail] screen. The E-mail service allows you to scan a document and send the scanned data as an e-mail attachment. The following shows the reference section for each feature.

Address Book (Specifying an E-mail Address)	268
New Recipient (Entering an Address)	270
Add Me (Adding the Sender's Address)	271
Recipient(s) (Editing a Recipient)	272
From (Setting the Sender's Address)	273
Subject (Setting the Subject)	274
Message (Entering the E-mail Body)	274
Preview (Previewing the Scanned Images during a Scan Job)	274
Color Scanning (Selecting an Output Color)	275
2 Sided Scanning (Scanning Both Sides of a Document)	276
Original Type (Selecting the Document Type)	277
File Format (Selecting a File Format for Output Data)	278

Note • You can encrypt e-mail or send it with a digital signature by S/MIME. To use this feature, you need to register certificates of the machine and the recipient's device in advance. For information on certificates, refer to "13 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.

You can customize the layout of the features displayed on the [E-mail] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "First Tab" in the Administrator Guide.


- 1 Select [E-mail] on the [Services Home] screen.

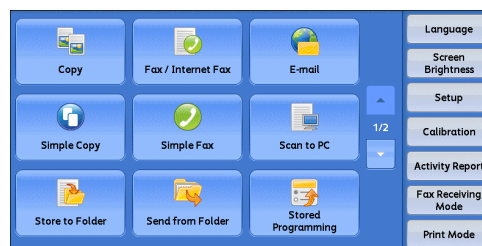

- 2 Select a feature on the [E-mail] screen.

Important • You can only specify recipients registered for e-mail, but not for faxes.

- You cannot use address numbers using the numeric keypad, one touch buttons, or group numbers to specify recipients.
- The [New Recipient] and [Add Me] buttons may not be displayed depending on the settings in the System Administration mode.

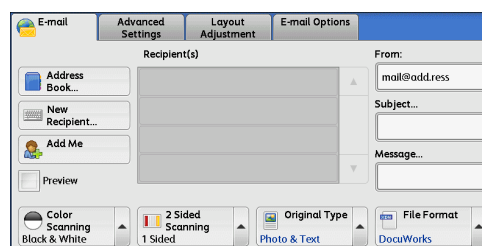

Address Book (Specifying an E-mail Address)


The following describes how to select a recipient using the Address Book.

When sending an encrypted e-mail, select an e-mail address associated with a certificate that can be encrypted, from the Address Book.

To use this feature, an e-mail address associated with a certificate for S/MIME must be registered in the Address Book in advance. For information on how to set the Address Book, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

To verify the validity of a certificate, prior settings are required. For information on the settings, refer to "5 Tools" > "Connectivity & Network Setup" > "Security Settings" > "Certificate Revocation Retrieval Settings" in the Administrator Guide.


1 Select [Address Book].

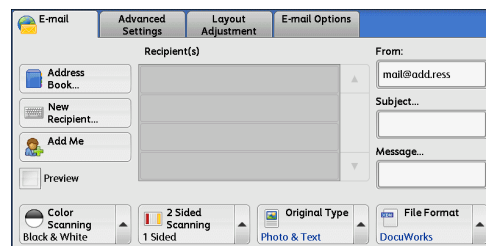

2 Select a recipient from the address list, and then select [To], [Cc], or [Bcc].

Note

- When specifying multiple recipients, specify them continuously.
- To search for recipients by other methods, select and switch to [List all public entries], [Search Public], or [Search Network] from the drop-down menu on the [E-mail Address Book] screen. The methods that appear in the drop-down menu depend on the settings in the System Administration mode.
- Depending on the network settings, [Search Network] may not appear in the drop-down menu. For information on the Network settings, refer to "5 Tools" > "Connectivity & Network Setup" > "Remote Authentication/ Directory Service" > "LDAPServer/ Directory Service Settings" in the Administration Guide.

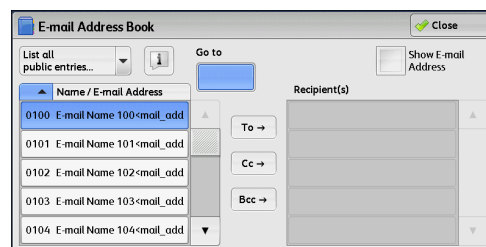

Important • When specifying an e-mail address, check if the address contains a domain that is not permitted for use. In this case, the address cannot be used.

■List all public entries

Displays the local address list.

Refer to "When [List all public entries] is Selected" (P.269).

■Search Public

Searches recipients in the local address list.

Refer to "When [Search Public] or [Search Network] is Selected" (P.269).

■Search Network

Searches recipients in the remote address list.

Note

- This feature is supported only by the ApeosPort series.
- To display [Search Network], the prior setting is required in the System Administration mode.

Refer to "When [Search Public] or [Search Network] is Selected" (P.269).

■Name/E-mail Address

Lists names and their e-mail addresses.

■To

Sets the selected address as a recipient.

■Cc

Sets the selected address as Cc.

■Bcc

Sets the selected address as Bcc.

■Go to

Enter an address number using the numeric keypad to display the e-mail address at the top of the list.

■[] button

Displays detailed information on the selected recipient.

■Show E-mail Address


Select this check box to display only e-mail addresses in the list.

When [List all public entries] is Selected

- 1 Select a recipient from a list under [Name/ E-mail Address].

Note

- Select [] to return to the previous screen or [] to move to the next screen.

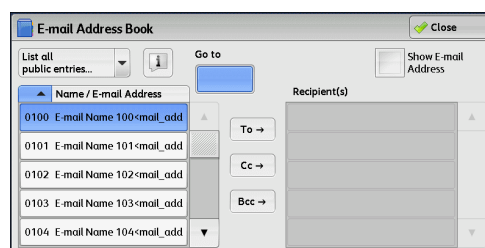
**When [Search Public] or [Search Network] is Selected**

- 1 Enter keywords to search for an address.

Note

- The screen as shown on the right appears when [Search Public] is selected.
- When multiple keywords are used, the address is searched with the AND clause.

For information on how to enter characters, refer to "Entering Text" (P.68).

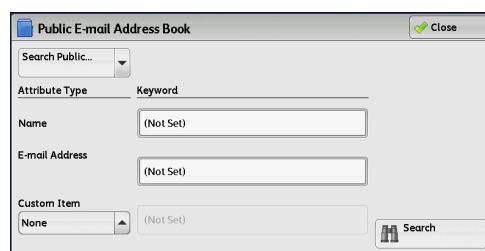**■Name**

Searches with a recipient name as a keyword. Selecting the field for [Name] under [Keyword] displays the screen for entering the keyword. Up to 32 characters are allowed.

Example: John Smith

■E-mail Address

Searches with an e-mail address as a keyword. Selecting the field for [E-mail Address] under [Keyword] displays the screen for entering the keyword. Up to 128 characters are allowed.

Example: myhost@example.com

■ Custom Item

Select this option to search with a keyword item other than a recipient name and e-mail address.

Select any option from [Custom Item] and then select the box under [Keyword] to display a screen for entering a keyword. You can enter the keyword with up to 60 characters.

Note • You can select only one custom item.

- None

No custom item is used for the keyword search.

- Custom Item 1 (Telephone Number)

[Telephone Number] is set by default. When selected, a telephone number is used for the keyword search.

- Custom Item 2 (Office)

[Office] is set by default. When selected, an office name is used for the keyword search.

- Custom Item 3 (Department)

[Department] is set by default. When selected, a department name is used for the keyword search.

For information on how to change the settings for the custom items, refer to "5 Tools" > "Connectivity & Network Setup" > "Remote Authentication/Directory Service" in the Administrator Guide.

■ Keyword

Select a keyword item, and then enter the keyword.


■ Search

The search starts. The searched results are listed on the screen.


New Recipient (Entering an Address)

You can enter e-mail addresses using the keyboard.

1 Select [New Recipient].

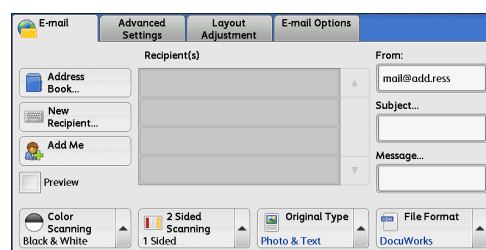

2 Use the keyboard displayed on the screen to enter an e-mail address with up to 128 characters.

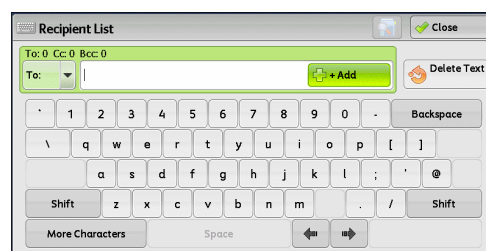

■ To/Cc/Bcc

Allows you to switch the recipient type (To/Cc/Bcc) from the drop-down menu.

■+ Add

Allows you to add e-mail addresses to send e-mails to multiple recipients (Broadcast).

■[🔍] button

Searches for names.

■Delete Text

Deletes all the entered e-mail addresses.

■Backspace

Moves the cursor back to delete one character.

■Shift

Used for entering uppercase characters.


■More Characters

Displays symbols. Use this button to enter symbols for the e-mail address.


Add Me (Adding the Sender's Address)

The sender's address can be added to [To], [Cc], or [Bcc].

- 1 Select [Add Me].

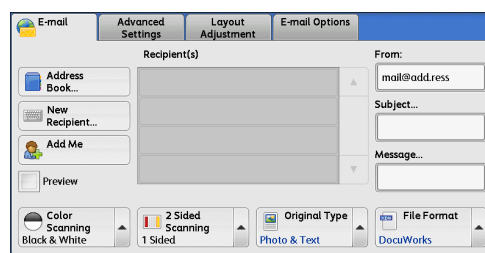

- 2 Select any option.

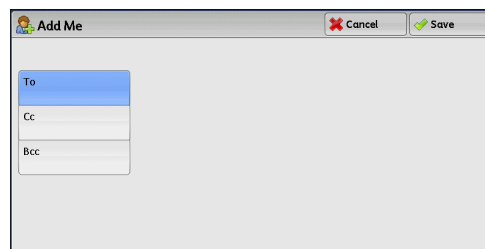**■To**

Adds the sender's address to To.

■Cc

Adds the sender's address to Cc.


■Bcc

Adds the sender's address to Bcc.

Recipient(s) (Editing a Recipient)

You can confirm, delete, or edit recipients using the pop-up menu displayed.

- 1 From the [Recipient(s)] list, select the recipient to be deleted, confirmed, or edited.

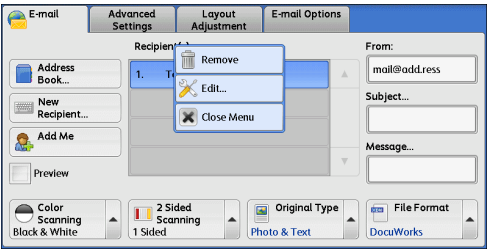

- 2 Select any option from the pop-up menu.

■Remove

Removes the selected recipient.

■Edit

Displays the [Edit Recipient] screen on which you can confirm or edit the recipient. Refer to "[Edit Recipient] Screen" (P.272).


■Close Menu

Hides the pop-up menu.


[Edit Recipient] Screen

This screen allows you to confirm and change the settings of the recipient.

- 1 Select the item to be changed.
- 2 Select [Edit].

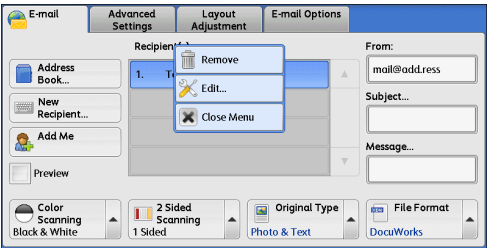

- 3 Select any option.

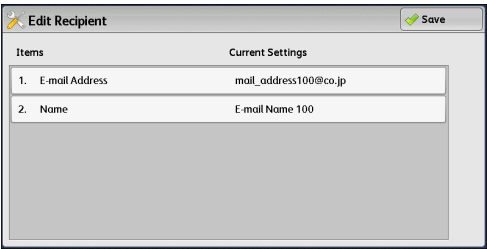

■E-mail Address

To change the e-mail address, select [E-mail Address] to display the keyboard and enter a new address.

■Name

To change the recipient name, select [Name] to display the keyboard and enter a new name.

When the recipient name is registered in the Address Book, that recipient name is displayed.

■S/MIME Certificate

To check whether or not any certificate is linked to the e-mail address, select [Change Settings].

If S/MIME is enabled, and a certificate is linked to the e-mail address, you can check the contents of the S/MIME certificate.

Note • This feature is supported only by the ApeosPort series.

For information on S/MIME communication, refer to "13 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.


From (Setting the Sender's Address)

Specify a sender's e-mail address. You can specify only one address as a sender's address.


- Note**
- When the Authentication feature is enabled, the e-mail address registered in user information is automatically set as a sender's address. For more information on user information, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" in the Administrator Guide.
 - [From] may not be editable depending on the setting in the System Administration mode.
 - When you send e-mail with a digital signature, the machine's e-mail address becomes the sender's address.

For information on a digital signature, refer to "13 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.

1 Select [From].

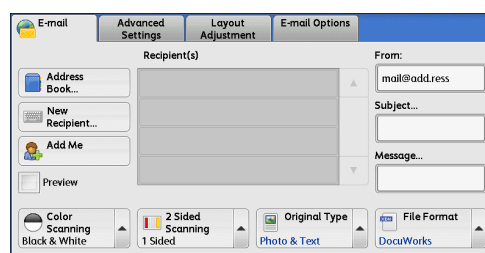

2 Select any option from the pop-up menu displayed.

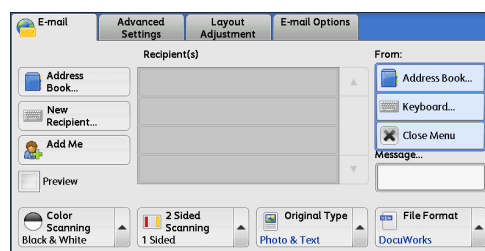

■Address Book

Allows you to select the sender's e-mail address from the Address Book.

For information on the Address Book, refer to "Address Book (Specifying an E-mail Address)" (P.268).

■Keyboard

Allows you to enter the sender's e-mail address with up to 128 characters using the displayed keyboard.

■Close Menu

Hides the pop-up menu.

Subject (Setting the Subject)

You can specify the e-mail subject using the following procedure.

■Auto Set

Automatically sets the subject to [Scan data from XXX] (where XXX is the host name of the machine).

■To set a user-defined subject

- 1 Select [Subject].
- 2 Enter a subject with up to 128 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.68).

Message (Entering the E-mail Body)

You can enter the e-mail body using the following procedure.


- 1 Select [Message].
- 2 Enter a message with up to 512 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.68).

Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

- 1 Select the [Preview] check box.

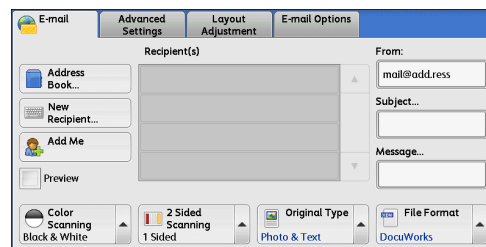

- 2 Preview the scanned images after the document is scanned.


Important • You cannot preview the scanned images when [MRC High Compression] is set to [On] or the [Specific Color] check box is selected on the [File Format] screen.

Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

- Note**
- Only [Black & White] is selectable when [Searchable Text] is set to [Searchable] on the [File Format] screen. To enable [Grayscale] and [Color], the High Compression Image Kit (optional) is required. For more information, contact our Customer Support Center.

- 1 From the menu displayed by selecting [Color Scanning], select any option.

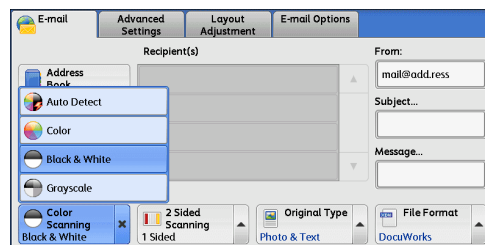

■Auto Detect

The color of the document is determined automatically; the machine scans in full color when the document is colored, otherwise scans in monochrome.

- Note**
- When you select [Auto Detect], the available features on the [Advanced Settings] screen are the same as when you select [Color] in [Color Scanning] for color documents, or the same as when you select [Black & White] in [Color Scanning] for monochrome documents.

■Color

Select this option to scan a color document.

■Black & White

Scans a document in monochrome two tones. You can select the document type in [Original Type].

- Note**
- [Black & White] is not selectable when [MRC High Compression] is set to [On] on the [File Format] screen.


■Grayscale

Scans a document in grayscale. Adds shades to monochrome, creating intermediate tones that change gradually. Suited to documents containing gradations that cannot be reproduced with monochrome (2-color tone).

2 Sided Scanning (Scanning Both Sides of a Document)

You can scan a 1-sided or 2-sided document on one or both sides of paper.
By setting the binding style, both sides are scanned in the same orientation.

- 1 From the menu displayed by selecting [2 Sided Scanning], select any option.

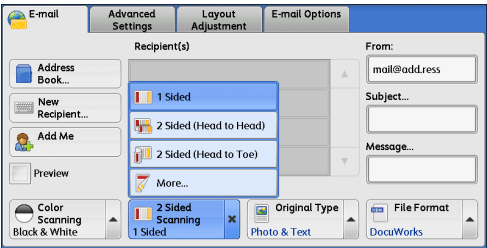

■1 Sided

Select this option to scan only one side of the document.

■2 Sided (Head to Head)

Select this option when both sides of the 2-sided document are in the same orientation.

■2 Sided (Head to Toe)

Select this option when both sides of the 2-sided document are in opposite orientations.

■More


Displays the [2 Sided Scanning] screen.

Refer to "[2 Sided Scanning] Screen" (P.276).

[2 Sided Scanning] Screen

This screen allows you to select the status and orientation of original documents.

- 1 Select any option.

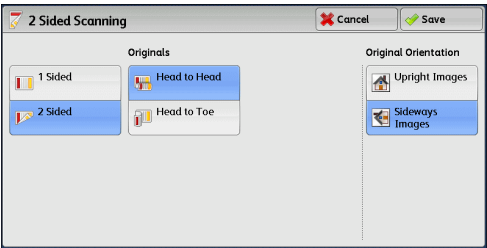

■1 Sided

Select this option to scan only one side of the document.

■2 Sided

Select this option to scan both sides of the document.

■Originals

This option is displayed when [2 Sided] is selected.

- Head to Head
Select this option when both sides of the 2-sided document are in the same orientation.
- Head to Toe
Select this option when both sides of the 2-sided document are in opposite orientations.

■Original Orientation

Specify the orientation of the loaded document.

When you load the top edge of the document against the left side of the document glass or the document feeder, and then select [Sideways Images], the document is displayed in the correct orientation when viewed on your computer screen.

Load the document in the [Sideways Images] orientation when [File Format] is set to [TIFF/JPEG Auto Select], [TIFF], or [JPEG]. The document is displayed in the [Upright Images] orientation when viewed on your computer screen.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.


- Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or the document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

Original Type (Selecting the Document Type)

When you select [Black & White] in [Color Scanning], select the document type.

- 1 From the menu displayed by selecting [Original Type], select any option.

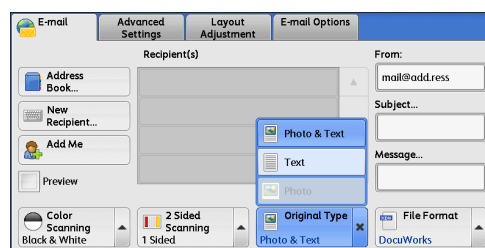

■Photo & Text

Select this option when scanning a document that contains both text and photos. The machine automatically identifies text and photo areas to scan each area with optimum quality.

■Text

Select this option when scanning text clearly.

■Photo

Select this option when scanning photos.


Note • [Photo] is not selectable when [Searchable Text] is set to [Searchable] on the [File Format] screen.

File Format (Selecting a File Format for Output Data)

You can select a file format for scanned data.

- Note**
- If the High Compression Image Kit (optional) is installed, the machine can save PDF, DocuWorks, and XPS files with high compression.
 - If the High Compression Image Kit (optional) is installed, scanned data containing a small number of colors can be compressed with the Specific Color feature. For more information, refer to "Specific Color" (P.280).

- 1** From the menu displayed by selecting [File Format], select any option.

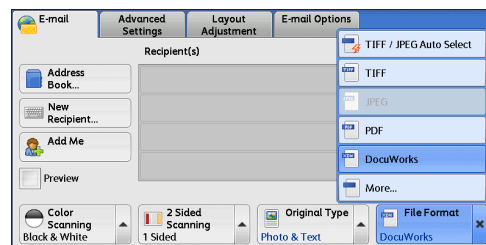

■ TIFF/JPEG Auto Select

Automatically selects JPEG or TIFF. The file format is determined for each page: [JPEG] for full-color and grayscale pages, and [TIFF] for monochrome pages.

■ TIFF

Saves scanned data in TIFF format.

■ JPEG

Saves scanned data in JPEG format. This option is selectable when either [Color] or [Grayscale] is selected in [Color Scanning].

■ PDF

Saves scanned data in PDF format.

- Note**
- The version of PDF files is Adobe® Acrobat® 4.0 (PDF 1.3).

■ DocuWorks

Saves scanned data in DocuWorks format.

- Note**
- To browse or print DocuWorks files on a computer, one of the following software is required:
 - DocuWorks 4.0 or later
 - DocuWorks Viewer Light 4.0 or later
 - DocuWorks Viewer Light for Web 4.0 or later

■ More


Displays the [File Format] screen.

Refer to "[File Format] Screen" (P.279).

[File Format] Screen

This screen allows you to select all available options for File Format.

1 Select any option.

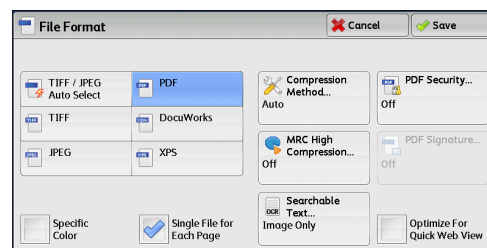

■ TIFF/JPEG Auto Select

Automatically selects JPEG or TIFF. The file format is determined for each page: [JPEG] for full-color and grayscale pages, and [TIFF] for monochrome pages.

■ TIFF

Saves scanned data in TIFF format.

■ JPEG

Saves scanned data in JPEG format. This option is selectable when either [Color] or [Grayscale] is selected in [Color Scanning].

■ PDF

Saves scanned data in PDF format.

Note • The version of PDF files is Adobe® Acrobat® 4.0 (PDF 1.3).

■ DocuWorks

Saves scanned data in DocuWorks format.

Note • To browse or print DocuWorks files on a computer, one of the following software is required:

- DocuWorks 4.0 or later
- DocuWorks Viewer Light 4.0 or later
- DocuWorks Viewer Light for Web 4.0 or later

■ XPS

Saves scanned data in XPS format.

■ Compression Method

Allows you to select a compression method for scanned image data.

Note

- When you select [Auto], the following compression methods will be used:
 - When [Original Type] is set to [Photo & Text] or [Text] for black-and-white images: MMR
 - When [Original Type] is set to [Photo] for black-and-white images: MH
 - For grayscale and color images: JPEG
- When you select [TIFF], [DocuWorks], or [XPS] and then select [Manual Select] in [Compression Method] under [File Format], you can select a compression method from [MH] and [MMR] under [Black & White Pages].
- If you select [PDF] and then select [Manual Select] in [Compression Method] under [File Format], you can select a compression method from [MH], [MMR], [JBIG2 Arithmetic Encoded], and [JBIG2 Huffman Encoded] under [Black & White Pages], and one from [JPEG] and [Flate] under [Grayscale/Color Pages]. Selecting [Flate] saves the image data with higher compression than [JPEG].
- You cannot retrieve grayscale or color images in uncompressed (Raw) format.

■MRC High Compression

Allows you to save PDF, DocuWorks, and XPS files with high compression.

Important • If you use the E-mail or Scan to PC service to scan a document with [MRC High Compression] enabled, the image quality of the scanned data may differ from when you use CentreWare Internet Services to retrieve the scanned data from a folder with [MRC High Compression] enabled.

- DocuWorks 5.0.x and earlier versions (including trial version) do not support high-compressed DocuWorks files.

Note • To browse or print DocuWorks files on a computer, one of the following software is required:

- DocuWorks 6.0 or later
- DocuWorks Viewer Light 5.1 or later
- DocuWorks Viewer Light for Web 5.1 or later

• This feature is available when [Color Scanning] is set to [Auto Detect], [Color], or [Grayscale], when [Resolution] is set to [200 dpi] or [300 dpi], and when [File Format] is set to [PDF], [DocuWorks], or [XPS].

• This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

■Searchable Text

Allows you to select whether to perform character recognition in PDF and DocuWorks files.

When [Searchable Text] is set to [Searchable], the following settings are available

Refer to "[File Format - Searchable Text] Screen" (P.282).

Setting Item		When [MRC High Compression] is Set to [No]	When [MRC High Compression] is Set to [On]
E-mail/Scan to Folder/Network Scanning/ Scan to PC/ Store & Send Link/ Store to USB	Color Scanning	Black & White ^{*1} , Auto Detect, Color, Grayscale	Auto Detect, Color, Grayscale
	Original Type	Photo & Text, Text	
	File Format	PDF, DocuWorks	
Advanced Settings	Color Space ^{*2}	sRGB	
Layout Adjustment	Resolution	200 dpi, 300 dpi	
	Reduce/ Enlarge	100% Note • [Auto %] is not supported.	

*1 Only [Black & White] is available for some models. An optional component is required to select options other than [Black & White]. For more information, contact our Customer Support Center.

*2 [Color Space] may not appear for some models, or may not appear on the screen depending on the setting in the System Administration mode. For more information, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Color Space" in the Administrator Guide, and "Color Space (Specifying the Color Space)" (P.307).

■Specific Color

Allows you to scan documents containing a small number of colors and save the scanned data with compression. Selecting this check box enables the file size to be smaller than selecting [MRC High Compression].

Note • This feature is available when [Color Scanning] is set to [Color], when [Resolution] is set to [200 dpi] or [300 dpi], and when [File Format] is set to [PDF] or [DocuWorks].

• To browse or print DocuWorks files on a computer, one of the following software is required:

- DocuWorks 6.0 or later
- DocuWorks Viewer Light 5.1 or later
- DocuWorks Viewer Light for Web 5.1 or later

- This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

■Add Thumbnail

Allows you to attach thumbnails to DocuWorks and XPS files when [DocuWorks] or [XPS] is selected. A thumbnail is a reduced, small file size image that helps you check the file contents.

■Single File for Each Page

Saves each page as a single file in the specified format.

- Note**
- When you use the Store to Folder, Job Flow Sheets, or Network Scanning service, files cannot be split.

■PDF Security

Displays the [File Format - PDF Security] screen.

Allows you to configure security on the data saved as a PDF file to prevent unauthorized access.

Refer to "[File Format - PDF Security] Screen" (P.283).

■PDF Signature

Displays the [File Format - PDF Signature] screen.

A visible signature added to a file enables to detect alterations in the file, or to prevent impersonation of the sender.

To verify the signature with Adobe Acrobat, select [Digital Signatures] under [Preferences] on Acrobat, and then select the following option for [When Verifying].

- Acrobat 6.0.x : Windows Digital Certificate Security
- Acrobat 7.0.x : Adobe Default Security
- Acrobat 8.0.x : Adobe Default Security

- Off

No visible signature is added.

- On

Adds a visible signature using the certificate of the machine.

- Signature Location

Select the position where the signature is displayed when you select [On] in [PDF Signature].

When you select [Invisible Signature], an invisible signature is added using the certificate of the machine.

- Note**
- The certificate of the machine is used for PDF digital signature. A user certificate cannot be used for the digital signature.
 - This feature is supported only by the ApeosPort series.

■Optimize For Quick Web View

Optimizes the PDF file so that it is displayed faster on a web browser.

■DocuWorks Security

Displays [File Format - DocuWorks Security] screen.

Allows you to configure security on the data saved as a DocuWorks file to prevent unauthorized access.

Refer to "[File Format - DocuWorks Security] Screen" (P.285).

■DocuWorks Signature

Displays the [File Format - DocuWorks Signature] screen.

A visible signature added to a file enables to detect alterations in the file, or prevent impersonation of the sender.

- Off

No visible signature is added.

- On

Adds a visible signature using the certificate of the machine.

- Signature Location

Select the position where the signature is displayed when you select [On] in [DocuWorks Signature].

Note

- The certificate of the machine is used for DocuWorks digital signature. A user certificate cannot be used for the digital signature.
- This feature is supported only by the ApeosPort series.

■XPS Signature

Displays the [File Format - XPS Signature] screen.

A visible signature added to a file enables to detect alterations in the file, or prevent impersonation of the sender.

- Off

No visible signature is added.

- On

Adds a visible signature using the certificate of the machine.


Note

- This feature is supported only by the ApeosPort series.

[File Format - Searchable Text] Screen

Allows you to select whether to perform character recognition in PDF and DocuWorks files.

- 1 Select any option.

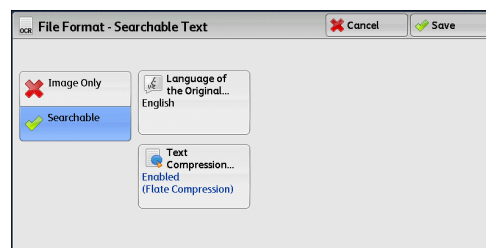

■Language of the Original

Allows you to select a language to identify the text on the original document.

Note

- This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

■Text Compression

Allows you to select whether to compress the text areas of the document when using the Searchable Text feature.

Important • Note the following when [Searchable Text] is set to [Searchable].

- When the text on the document is small (10 points or smaller), scan the document with high resolution (300 dpi).
- Color scanning is recommended when the document has outlined white text, or when it has text placed on a dark background.


- If you use the E-mail or Scan to PC service to scan a document with both [MRC High Compression] and [Searchable Text] enabled, the recognition rate of the scanned data may differ from that of the data retrieved from a folder with both [MRC High Compression] and [Searchable Text] enabled, using CentreWare Internet Services.
- In the following cases, the Searchable Text feature may not function properly.
 - If the document is not loaded correctly and thus the text is slanted, or if the text on the document is in different orientations
 - If the text on the document is decorated (italic, hatching, strike-through, etc.)
 - If the document has background patterns or noise
 - If the text on the document is handwritten

Note • This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

[File Format - PDF Security] Screen

This screen allows you to encrypt a PDF file with a password, and assign the access privileges for the file operation.

1 Select any option.

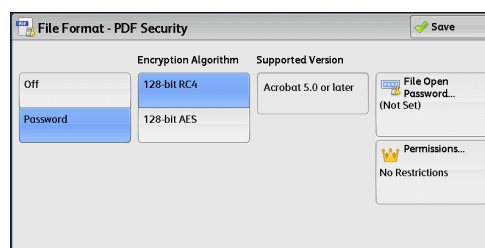

■Off

The file is not encrypted, and no access privilege is assigned.

■Password

Encrypts the file using a password.

■Encryption Algorithm

Allows you to specify the encryption method.

- 128-bit RC4

Encrypts the file by the 128-bit RC4 method. Files encrypted by this method can be opened with Adobe® Acrobat® 5.0 or later.

Important • When the 128-bit RC4 method is used to encrypt a file, and [PDF Signature] is selected, files can be opened only with Adobe® Acrobat® 6.0 or later.

- 128-bit AES

Encrypts the file by the 128-bit AES method. Files encrypted by this method can be opened with Adobe® Acrobat® 7.0 or later.

■Supported Version

Displays the supported versions of Adobe® Acrobat® for encryption.

■File Open Password

Displays the [PDF Security - File Open Password] screen.

If you select [On] and set a password, the password is required to open the file.

You can enter a password with up to 32 characters.

■Permissions


Displays the [PDF Security - Permissions] screen.

Refer to "[PDF Security - Permissions] Screen" (P.284).


[PDF Security - Permissions] Screen

This screen allows you to assign access privileges to a file.

1 Select [Permissions].

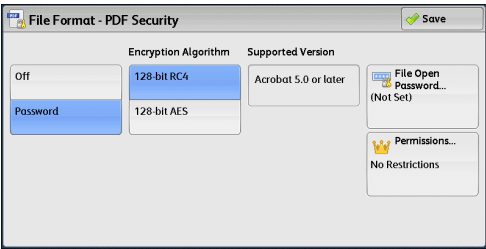

2 Select [Security Password].

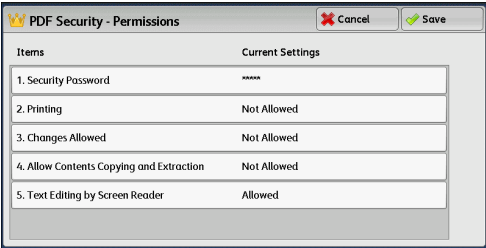

3 Select [On].

4 Enter the security password, and select [Save].

5 Likewise, re-enter the security password, and select [Save].

6 Select any option.

■Security Password

Displays the [PDF Security - Security Password] screen.

[Security Password] allows to assign access privileges to files. The password is required to change the access privileges or to perform unauthorized operations.

You can enter a password with up to 32 characters.

■Printing

Displays the [Permissions - Printing] screen.

Specify whether to allow printing the file. If allowed, select the print resolution.

■Changes Allowed

Displays the [Permissions - Changes Allowed] screen.

Specify whether to allow changing the file contents, such as inserting pages or adding notes.

■Allow Contents Copying and Extraction

Displays the [Allow Contents Copying and Extraction] screen.

Specify whether to allow copying the file contents, such as text and images.

■Text Editing by Screen Reader


Displays the [Text Editing by Screen Reader] screen.

Select [Allowed] to use application software, such as a screen reader, that reads out PDF documents for the visually handicapped.

[File Format - DocuWorks Security] Screen

This screen allows you to encrypt a DocuWorks file with a password, and assign the access privileges for the file operation.

1 Select any option.

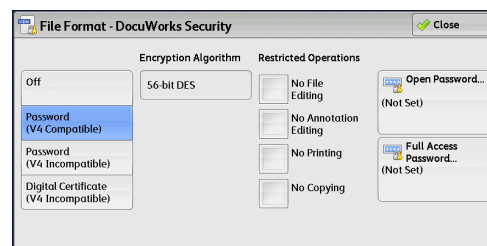

■Off

The file is not encrypted, and no access privilege is assigned.

■Password (V4 Compatible)

Encrypts the file by the 56 bit DES method using a password. Files encrypted by this method can be opened with DocuWorks Ver. 4.0 or later. Select [Open Password] to set a password.

■Password (V4 Incompatible)

Encrypts the file by the 128 bit AES method using a password. Files encrypted by this method can be opened with DocuWorks Ver. 5.0 or later. Select [Open Password] to set a password.

■Digital Certificate (V4 Incompatible)

Encrypts the file by the 128 bit AES method using a certificate. Files encrypted by this method can be opened with DocuWorks Ver. 5.0 or later. Select [Certificate] to set a certificate.

Important • If you encrypt a file using a certificate without Basic Constraints, you cannot use DocuWorks Ver. 5.0.1 and Ver. 6.0.1 to open the file. To use such certificates, use DocuWorks Ver. 5.0.2, or Ver. 6.0.2 or later.

Note

- This feature is supported only by the ApeosPort series.
- When you select [Full Access Password] or [Open Password] in [Digital Certificate (V4 Incompatible)], the same certificate name may be redundantly displayed in [Security Settings] of a DocuWorks document to be generated, in the following conditions. However, this does not affect the operation.
 - When you created a job flow on the machine, the same certificate was selected redundantly.
 - The certificate data was obtained from an LDAP server, and the same certificate was selected redundantly.

■Encryption Algorithm

Displays the encryption methods.

■Restricted Operations

Select file operations to assign access privileges. When assigning access privileges, set [Full Access Password].

■Open Password

Displays the [DocuWorks Security - Open Password] screen.

If you select [On] and set a password, the file is encrypted. To open the file, the password is required. The access privileges set in [Restricted Operations] are assigned.

You can enter a password with up to 32 characters.

■Full Access Password

Displays the [DocuWorks - Full Access Password] screen.

If a password is set, the password is required to change the access privileges set in [Restricted Operations].

You can enter a password with up to 32 characters.

■Certificate

Displays the [DocuWorks Security - Certificate] screen.

Note • This feature is supported only by the ApeosPort series.

Refer to "[DocuWorks Security - Certificate] Screen" (P.286).

[DocuWorks Security - Certificate] Screen

This screen allows you to specify parties to whom the encrypted file is disclosed, and addresses to which privileges are assigned.

Note • You can specify up to 50 parties to whom the encrypted file is disclosed, on the [DocuWorks Security - Certificate] screen.
• This feature is supported only by the ApeosPort series.

■List all public entries

Displays the local address list.

■Search Public

Searches recipients in the local address list.

■Search Network

Searches recipients in the remote address list.

Note • To display [Search Network], prior settings are required in the System Administration mode.

■ [1] button

Displays the [Certificate Details] screen.

Certificate information, such as issuer, expiration date, and persons to whom the certificate is issued, is displayed.

■Name/E-mail Address/DN

Lists names and their e-mail addresses.

■Add

Select this button to add the certificate as one of the certificates of persons who are allowed to open the file.

■Grant full access to this file

Configure certificates of persons who are allowed to change access privileges including editing or operating the file (full access).

Network Scanning

This section describes the procedure to select features on the [Network Scanning] screen. On the [Network Scanning] screen, you can scan documents after specifying a file (job template) saving scanning conditions, information on the forwarding destination server, and others.

This feature creates job templates on a computer using CentreWare Internet Services. Scanned data is converted to the format specified in a job template, and is automatically sent to a server. The machine allows you to automatically retrieve job templates stored in a server. The following describes features available on the [Network Scanning] tab.

- Note**
- If characters not supported by the machine are used in names or descriptions of job templates, the characters will not be displayed or will be garbled on the screen. For information on characters available for use, refer to "16 Appendix" > "Notes and Restrictions" > "Notes and Restrictions on the Use of the Machine" in the Administrator Guide.
 - This service is supported only by the ApeosPort series.


When Scan to Home is enabled, and when the Remote Access feature is available, the scanned document can be transferred to a different destination according to an authenticated user.

- Important**
- When using the Scan to Home feature in computer environment earlier than Windows® 98/NT, a destination user name in the earlier format (domain name\user name) will not be determined automatically. Before scanning, change the user name with which you can log in correctly.


- Note**
- You can configure the Scan to Home feature from CentreWare Internet Services.

For information on how to use CentreWare Internet Services, refer to the help of CentreWare Internet Services.

- 1 Select [Network Scanning] on the [Services Home] screen.

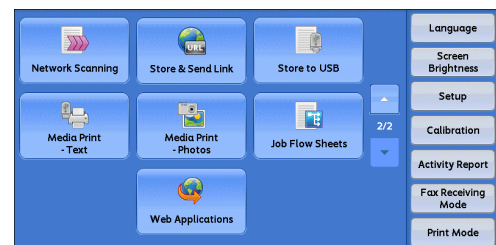

- 2 Select a job template, and then select a feature on the [Network Scanning] screen.

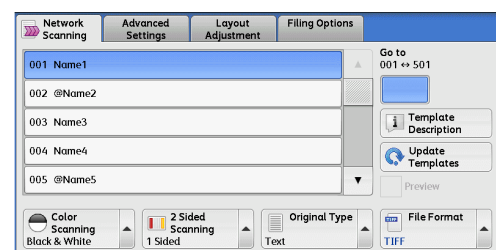

■Job Template

Select a job template for the scan job.

- **DEFAULT** - This is the default job template. This template is used as a base template when a new template is created on CentreWare Internet Services. This template cannot be deleted. It can be edited and returned to the factory-default template only by the system administrator.
- **@S2HOME** - This is the template for the Scan to Home feature. Selecting this template verifies a user and sends scanned data to the folder prespecified for the user.

- Note**
- The job template "@S2HOME" is displayed only when the remote authentication is enabled, and also [Enabled] is selected in [Status] under [Properties] > [Services] > [Scan to Home] on CentreWare Internet Services.
 - The job template name "@S2HOME" can be changed by the system administrator from CentreWare Internet Services.

For information on how to use CentreWare Internet Services, refer to the help of CentreWare Internet Services.

■Go to

Use the numeric keypad to enter a 3-digit job template number. The job template then appears at the top of the list.

■Template Description

Displays the [Template Description] screen on which you can view the description of the job template. This button is displayed only when the description has been added to a job template.

■Update Templates

Refreshes the information. If a created job template has not been displayed, selecting [Refresh] will display the job template.

Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.274).

Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.275).

2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.276).

Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.277).

File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.278).

Scan to PC

This section describes the procedure to select features on the [Scan to PC] screen. The Scan to PC service allows you to scan documents and send the scanned data to a network computer via the FTP or SMB protocol. The following describes features available on the [Scan to PC] tab. The following shows the reference section for each feature.


Transfer Protocol (Selecting a Transfer Protocol)	289
Address Book (Specifying a Destination PC Using the Address Book).....	290
Browse (Specifying a Destination PC by Browsing Your Network).....	291
Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)	292

Note

- Before scanning, you must create a shared folder on your computer to save scanned data in. Furthermore, if you use the FTP protocol, you must set the FTP service. For information on the computer settings, refer to the documentation provided with your operating system. For information on supported operating systems, refer to "16 Appendix" > "Specifications" in the Administrator Guide.

You can customize the layout of the features displayed on the [Scan to PC] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "First Tab" in the Administrator Guide.


- 1 Select [Scan to PC] on the [Services Home] screen.

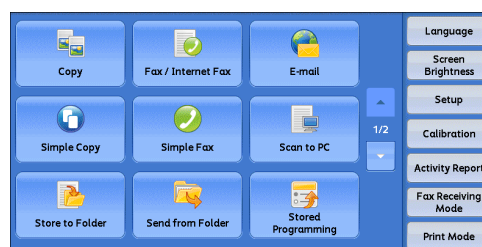

- 2 Select a feature on the [Scan to PC] screen.

Note


- Fields displayed on the screen vary depending on the protocol you have selected.

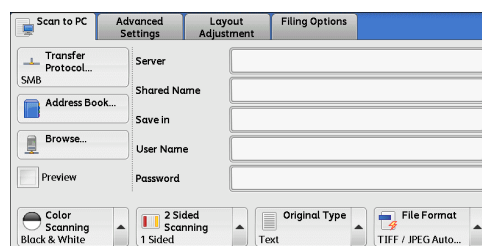


Transfer Protocol (Selecting a Transfer Protocol)

You can select a transfer protocol using the following procedure.

- 1 Select [Transfer Protocol].

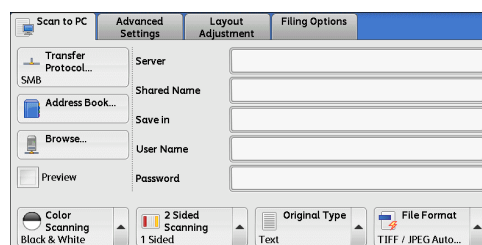

2 Select any option.

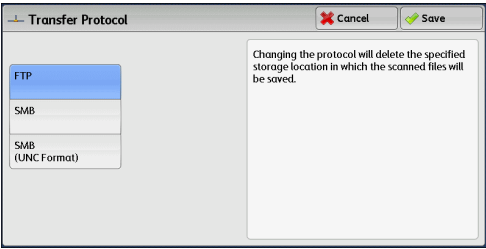

■FTP

Transfers using the FTP protocol.

■SMB

Transfers using the SMB protocol.

■SMB (UNC Format)

Transfers using the SMB protocol (UNC Format).


UNC stands for Universal Naming Convention and its format is as follows:
\\host name\shared name\directory name

Address Book (Specifying a Destination PC Using the Address Book)


You can specify the server name, the name of the user who can decrypt an encrypted file, and other information from the Address Book.

For information on how to set the Address Book, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

1 Select [Address Book].

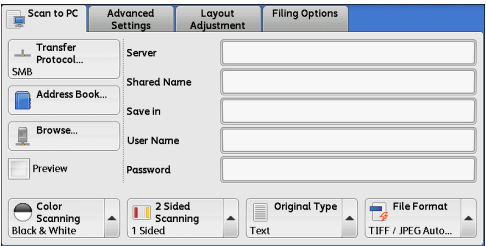

2 Select the destination to store the data in.

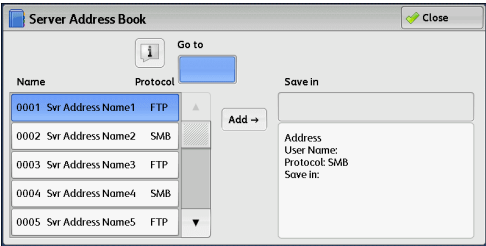

3 Select [Add].

Important • You can only use destinations configured for SMB or FTP.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

■Name, Protocol

Lists recipient names and protocols.

■Add

Adds a selected recipient to the [Save in] box.

■ Save in

Displays a selected recipient.

■ Go to

Enter a recipient number using the numeric keypad to display the recipient at the top of the list.


■ [1] button

Allows you to confirm information, such as [Name] and [Server Name/IP Address], on the screen displayed.

Browse (Specifying a Destination PC by Browsing Your Network)


This feature displays a hierarchy consisting of server names and folders. You can specify a save destination by tracing the hierarchy.

1 Select [Browse].

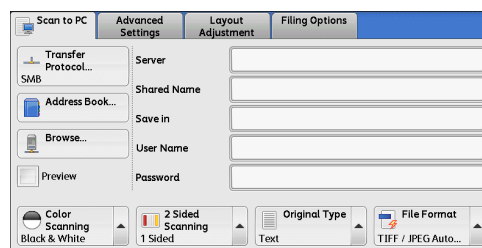

2 Select the destination to save the data in. Select [Previous] or [Next] to move to another level.

Important • You can specify recipients for SMB only.

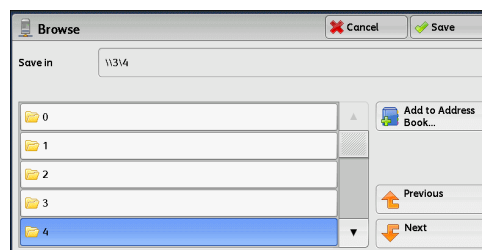

■ Save in

Shows the current location in the hierarchy.

■ Add to Address Book

Displays the [Add to Address Book] screen.

Refer to "[Add to Address Book] Screen" (P.292).

■ Previous

Allows you to move to the upper directory.

Note • This button is grayed out if there is no upper directory.

■ Next


Allows you to move to the lower directory.

Note • This button is available when a folder is selected.

[Add to Address Book] Screen

This screen allows you to register the save destination specified in [Browse], in the Address Book.

- 1 Select [Add to Address Book].

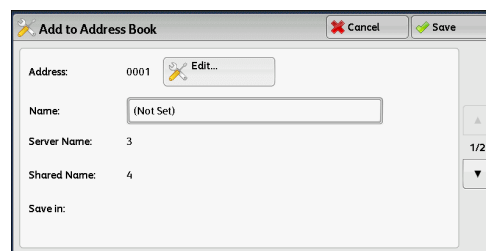

- 2 Select [Save].

■Address

To change the address number, select [Edit] and then the desired number.

■Name

To change the recipient name, enter a new name with the keyboard displayed by selecting [Name].


Note • The recipient name may not be displayed depending on the settings.

Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)

Enter information in the fields provided for the selected protocol, to specify a forwarding destination.

- 1 Select the item to be set.


Note • You can also select [Address Book] to enter information.
• Fields displayed on the screen vary depending on the selected protocol.

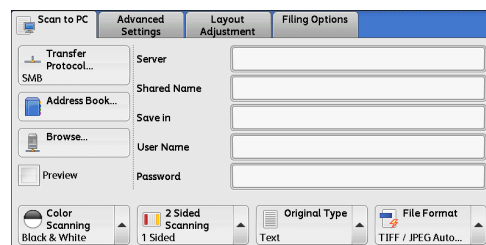

- 2 Enter information using the keyboard displayed on the screen.

For information on how to enter characters, refer to "Entering Text" (P.68).

Note • To delete characters, select [Backspace].

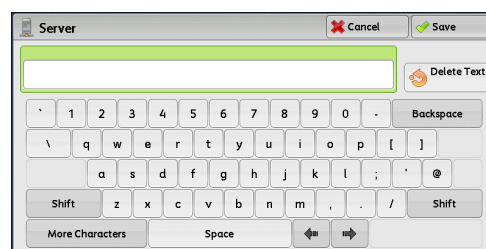

■Server

This option is displayed when you select [FTP] or [SMB] in [Transfer Protocol]. Enter a server name or IP address. When the save location is in the DFS namespace on Windows, enter a domain name or server name. Up to 64 characters are allowed.

The following are examples:

- For [FTP]:
Server name: myhost.example.com
(myhost: host name, example.com: domain name)
IP address: 192.168.1.100

- For [SMB]:
Server name: myhost
IP address: 192.168.1.100

■Shared Name

This option is displayed when you select [SMB] in [Transfer Protocol]. Enter a shared name. When the save location is in the DFS namespace on Windows, enter a root name. Up to 64 characters are allowed.

■Save in

This option is displayed when you select [FTP] or [SMB] in [Transfer Protocol]. Enter a directory path. When the save location is in the DFS namespace on Windows, enter a folder name. Up to 128 characters are allowed.

Note • The folder name is the same as the link name for Windows Server 2003.

- For [FTP]:
Example: mydoc/Scan
- For [SMB]:
Example: mydoc\Scan

■Save in

This option is displayed when you select [SMB (UNC Format)] in [Transfer Protocol]. Enter the following directory path: "\\Host Name\Shared Name\Directory Name". When the save location is in the DFS namespace on Windows, enter "\\Domain Name\Root Name\Folder Name" or "\\Server Name\Root Name\Folder Name". Up to 260 characters are allowed.

■User Name

Enter the user name of the computer you are forwarding to. When a user name is not required for the destination, this field can be skipped.

When you select [FTP] in [Transfer Protocol], up to 97 characters are allowed.

When you select [SMB] in [Transfer Protocol], use one of the following formats:

- For Active Directory:
User name@Domain name (user name: up to 32 characters, domain name: up to 64 characters)
Example: fuji@example.com (fuji: user name, example.com: domain name)
- For Windows NT Domain:
Domain name\User name (domain name: up to 64 characters, user name: up to 32 characters)
Example: example\fuji (example: domain name, fuji: user name)
- For workgroups:
Local user (up to 32 characters)
Example: Fuji-Taro

■Password

Enter the password for the user name. Up to 32 characters are allowed.

Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.274).

Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.275).

2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.276).

Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.277).

File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.278).

Store to Folder

This section describes the procedure to select features on the [Store to Folder] screen. You can scan documents and save the scanned data in a folder of the machine.


The following describes features available on the [Store to Folder] tab.

- Note**
- When [Store to Folder] is selected, [File Format] is disabled.
 - When you use CentreWare Internet Services to retrieve a file from a folder, you can set [Searchable Text] if all scanned images of the file in the folder are set as follows:
 - Image Size: 15 x 15 mm to 309 x 432 mm
 - Original Type: Photo & Text, Text
 - Color Space: sRGB
 - Resolution: 200dpi, 300dpi
 - Reduce/Enlarge: 100%

You need to create a folder in advance. For more information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.


You can customize the layout of the features displayed on the [Store to Folder] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "First Tab" in the Administrator Guide.

- 1 Select [Store to Folder] on the [Services Home] screen.

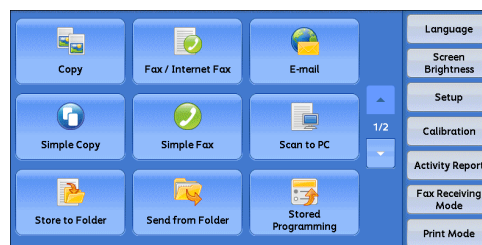

- 2 Select a feature on the [Store to Folder] screen.

- Note**
- If a passcode is set for the folder, the passcode entry screen may appear. Enter the passcode and select [Confirm]. If you have forgotten the passcode, set the folder passcode in the System Administration mode again.

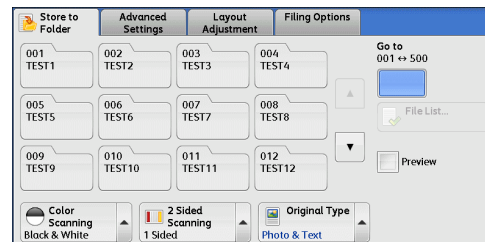

■Folder

Select a folder to save the scanned data in.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.

■Go to

Use the numeric keypad to enter a 3-digit folder number. The folder then appears at the top of the list.

■File List

Select a folder and then select this button to display the [File List] screen. You can confirm or delete files stored in the folder.

Color Scanning (Selecting an Output Color)

You can specify the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.275).

2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.276).

Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.277).

Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.274).



Store to USB

This section describes the procedure to select features on the [Store to USB] screen. The Store to USB service allows you to scan documents and save the scanned data to a USB memory device. The following describes features available on the [Store to USB] tab.

- Save in (Specifying a Storage Location in the USB Memory Device)..... 298
 - Details (Displaying the Details of a Storage Location in the USB Memory Device)..... 299
 - Preview (Previewing the Scanned Images during a Scan Job) 299
 - Color Scanning (Selecting an Output Color) 299
 - 2 Sided Scanning (Scanning Both Sides of a Document) 300
 - Original Type (Selecting the Document Type) 300
 - File Format (Selecting a File Format for Output Data)..... 300
- Important** • Before removing the USB memory device, make sure that the screen indicating that data is being transferred is not displayed. If you remove the USB memory device while the data is being stored, the data in the device may be damaged. You can also view the [Job Status] screen to confirm if the data has been stored to the USB memory device.
- Note** • An optional component is required to use this service. For more information, contact our Customer Support Center.
- A USB memory device encrypted with software is not supported.
 - Use the following USB memory devices:
 - A formatted USB memory device
 - A USB 2.0 compliant memory device (USB 1.1 is not supported.)
 - A USB memory device with a storage capacity of up to 128 GB

You can customize the layout of the features displayed on the [Store to USB] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "First Tab" in the Administrator Guide.

- 1 Insert the USB memory device into the USB memory slot on the control panel.
- 2 Select [Store to USB] on the [Services Home] screen.
- 3 Select a feature on the [Store to USB] screen.

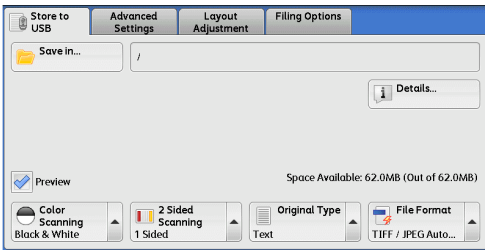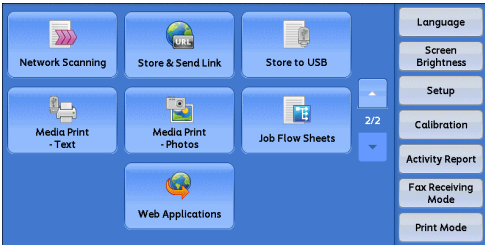

- Important** • Data stored in a USB memory device may be lost or damaged in the following cases. Make sure to back up the data in the device before use.
- When ejecting the medium or switching the power off/on by methods other than described in this guide.
 - When receiving the effect of electrical noise or an electrical discharge
 - When a failure occurs or repairing
 - When receiving damage resulting from a natural calamity


- We assume no responsibility for any direct and indirect damages arising from or caused by such data loss.

Note • If you do not specify the file storage location, the scanned data is saved in the root directory.


Save in (Specifying a Storage Location in the USB Memory Device)

You can specify a file storage location in the USB memory device.

1 Select [Save in].

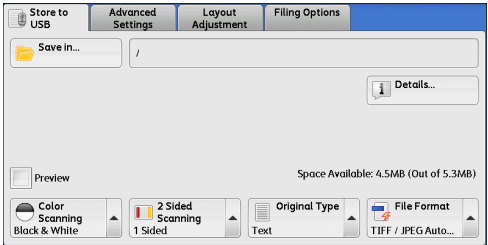


2 Select a folder to save the data in.

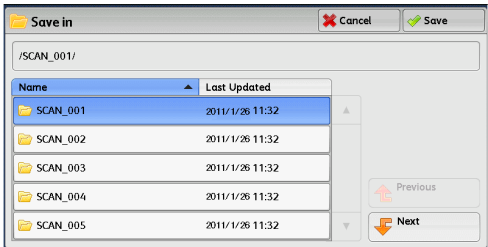

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can sort the order of folders displayed in ascending or descending order by selecting [Name] or [Last Updated].
 - Up to 900 folder names can be displayed in the list of [Save in]. File names are not displayed.
 - If a folder or file name has more than 170 characters long, the folder or file name is not displayed.
 - Folders in the DCIM folder of digital cameras cannot be displayed. Thus, you cannot save files in these folders either.
 - Folder names which include characters that the machine does not support may not be correctly displayed. If you specify the folders as file storage locations, an error occurs. For more information on characters that the machine supports, refer to "Entering Text" (P.68).
 - The machine does not distinguish between upper and lower cases of folder and file names that are created in Windows environment and that consist of eight characters or less. The names for these folders and files are displayed in capital letters.
 - If a full path (a string of folder and file names in all directories) of the file created exceeds 257 characters long, an error occurs.

3 Select [Save].

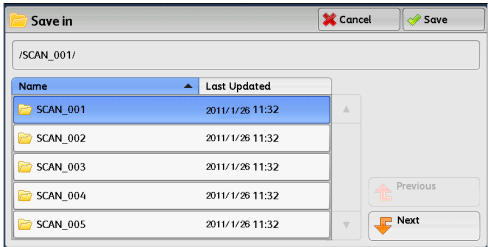

■Previous

Allows you to move to the upper directory.

- Note** • This button is grayed out if there is no upper directory.

■Next

Allows you to move to the lower directory.

Note • This button is available when a folder is selected.


Details (Displaying the Details of a Storage Location in the USB Memory Device)

Selecting [Details] displays the [Details] screen.


[Details] Screen

This screen displays the folder directory in the USB memory device.


- 1 Specify the folder directory, and then select [Save].

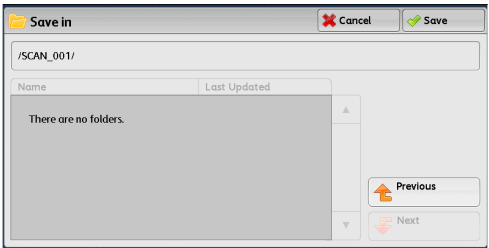

- 2 Select [Details].

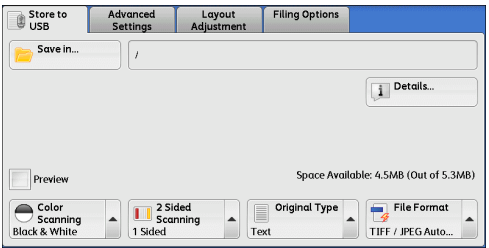

- 3 The folder and file names in all directories to be saved are displayed.

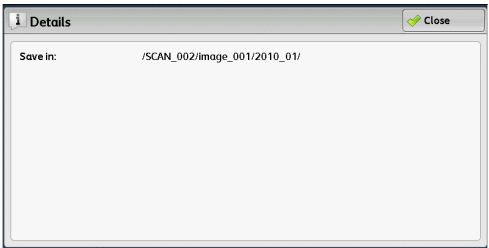

Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.
For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.274).

Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.
For more information, refer to "Color Scanning (Selecting an Output Color)" (P.275).

2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.276).

Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.277).

File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

Important • When you use the Media Print - Text service to print scanned data stored with the Store to USB service, the data cannot be printed if they are saved in Docuworks format.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.278).

Store & Send Link

If an authenticated user scans a document, the machine temporarily saves the scanned data, and automatically obtains the user's e-mail address that was registered in advance. Then, the machine sends an e-mail to the user to notify of two URLs: one is for the location to retrieve the scanned data, and the other is for the location to delete the data.

Only the authenticated user who logs in to the machine can be the recipient of an e-mail transmission. The machine cannot send e-mail to multiple recipients.

After receiving the e-mail on a computer, the user can retrieve the scanned data using a web browser.

The following describes features available on the [Store & Send Link] tab.

Important • Scan files stored in the machine will be automatically deleted when the retention period expires. This retention period can be specified in [URL File Expiration] by the System Administrator in the range of 1 to 168 hours. The default value is 3 hours. The files are to be always deleted automatically.

• To strengthen security, after retrieving the scanned data, access the URL to delete the scanned data stored in the machine.



Note • The Store & Send Link service does not provide document management features, such as backing up/restoring files, deleting all data at one time, listing files, and displaying available storage space.

• The Store & Send Link service allows you to retrieve scanned data without specifying an e-mail address from the Address Book or a folder for each scan job. However, the size of the data and its retention period are restricted on the machine. If you want to avoid these restrictions, use the Scan to PC or E-mail service.

For more information, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Store & Send Link - Maximum File Size" and "URL File Expiration" in the Administrator Guide.

You can customize the layout of the features displayed on the [Store & Send Link] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "First Tab" in the Administrator Guide.

- 1 Press the <Log In/Out> button on the control panel or select the login information field on the touch screen.
- 2 Enter the user ID.
- 3 Select [Store & Send Link] on the [Services Home] screen.
- 4 Select a feature on the [Store & Send Link] screen.

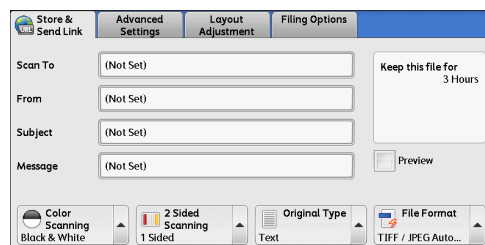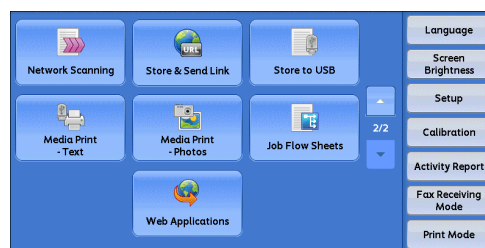

Scan To (Displaying the E-mail Address of the Authenticated User)

Automatically obtains the pre-registered e-mail address of the authenticated user.

From (Displaying the E-mail Address of the Authenticated User)

Automatically obtains the pre-registered e-mail address of the authenticated user.

Subject (Setting the Subject)

You can specify the e-mail subject using the following procedure.

■Auto Set

Automatically sets the subject to [Scan Reference from XXX] (where XXX is the host name of the machine).

■To set a user-defined subject

- 1 Select [Subject].
- 2 Enter a subject with up to 128 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.68).

Message (Entering the E-mail Body)

You can enter the e-mail body using the following procedure.

- 1 Select [Message].
- 2 Enter a message with up to 512 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.68).

Color Scanning (Selecting an Output Color)

You can set the color mode to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.275).

2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.276).

Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.277).

Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.274).

File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

The Store & Send Link service allows you to retrieve scanned data from a computer without password authentication.

To prevent other parties from viewing your scan data, select [PDF] or [DocuWorks] in [File Format] and set a password in [PDF Security] or [DocuWorks Security] before scanning the document.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.278).

Note



- If you select [TIFF/JPEG Auto Select] or the [Single File for Each Page] check box on the [File Format] screen when scanning a document, a file is downloaded in zip format.

Advanced Settings

This section describes the features you can select on the [Advanced Settings] screen under [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB]. The following shows the reference section for each feature.

Photographs (Scanning a Color Photograph).....	304
Image Options (Adjusting Scan Density and Image Sharpness)	305
Image Enhancement (Erasing the Background Color of Documents/Adjusting Contrast)	306
Shadow Suppression (Suppressing the Document Background).....	307
Color Space (Specifying the Color Space)	307


- 1 On the [Services Home] screen, select [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].

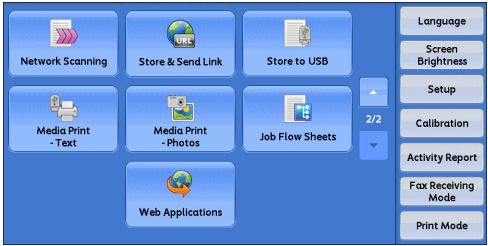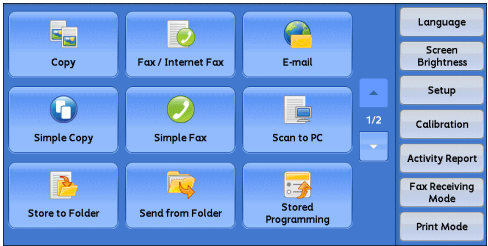

- 2 Select a feature on the [Advanced Settings] screen.

Note

- To activate [Color Space], a prior setting must be made in the System Administration mode. For information on the setting procedure, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Color Space" in the Administrator Guide and "Color Space (Specifying the Color Space)" (P.307).

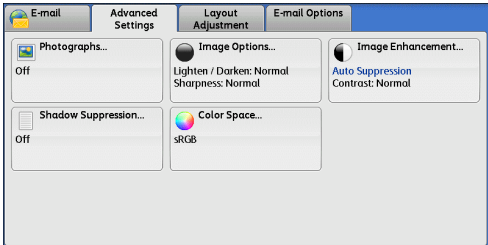


Photographs (Scanning a Color Photograph)

Use this feature when scanning a color photograph.
This feature is available only when [Color Scanning] is set to [Color].

Important

- You cannot use the document feeder with this feature.
- When this feature is enabled, the Shadow Suppression and Background Suppression features cannot be used.

- 1 Select [Photographs].

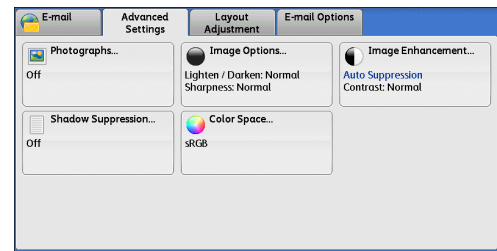

- 2 Select [Enhance Photographs].


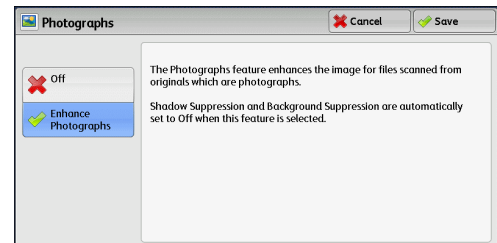



Image Options (Adjusting Scan Density and Image Sharpness)

This feature allows you to adjust the scan density and image sharpness.

- 1 Select [Image Options].

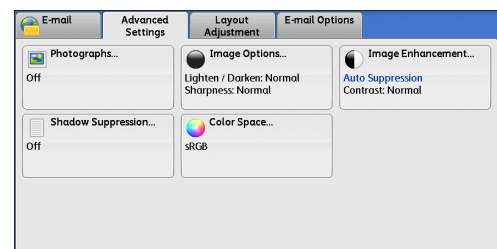

- 2 Select any option.

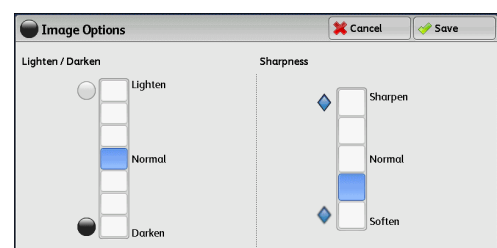

■Lighten/Darken

You can select a scan density level from seven levels between [Lighten] and [Darken]. Selecting an upper cell on the bar makes the scan density lighter, and selecting a lower cell makes darker.


■Sharpness

You can select a sharpness level from five levels between [Sharpen] and [Soften]. Selecting an upper cell on the bar makes the contours of images sharper, and selecting a lower cell makes softer.


Image Enhancement (Erasing the Background Color of Documents/ Adjusting Contrast)

This feature allows you to suppress the background color of a document such as newspaper and colored paper. In addition, when [Color Scanning] is set to [Color] or [Grayscale], you can adjust the contrast.

- 1 Select [Image Enhancement].

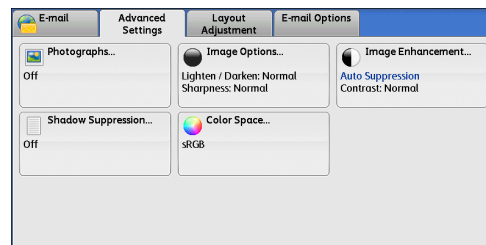

- 2 Set [Background Suppression] and [Contrast].

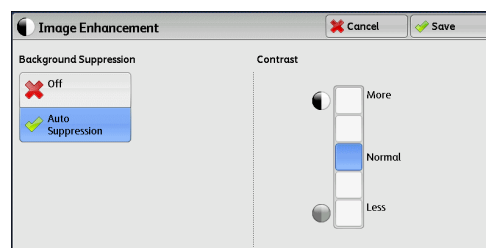

■Background Suppression

- Off
Scans the document backgrounds with no filtering.
- Auto Suppression
When [Color Scanning] is set to [Black & White], the background of a document printed on colored paper, such as newspaper, will be suppressed.
When [Color Scanning] is set to [Color], the background of a document printed on white-color paper will be suppressed.

■Contrast

Allows you to select a contrast level from five levels between [More] and [Less].
Selecting an upper cell on the bar makes the difference between light and dark areas greater; light areas become lighter and dark areas darker. In contrast, selecting a lower cell on the bar makes the difference between light and dark areas smaller.


Shadow Suppression (Suppressing the Document Background)

When you scan a 2-sided document printed on thin paper, this feature allows you to suppress the image and colors on the reverse side of each document page from appearing in the scan image.


This feature is available only when [Color Scanning] is set to [Color] or [Grayscale].

Important • This feature cannot be used with [Photographs].

- 1 Select [Shadow Suppression].

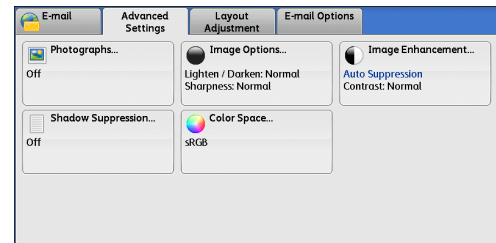

- 2 Select [Auto Suppression].

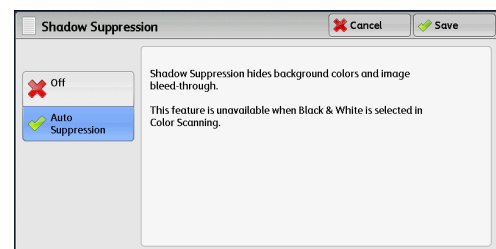


Color Space (Specifying the Color Space)


This feature allows you to set the color space.

- Note**
- [Color Space] is available when [Color Scanning] is set to [Color].
 - To activate [Color Space] on the [Advanced Settings] screen, a prior setting must be made in the System Administration mode. For more information, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Color Space" in the Administrator Guide.
 - [Device Color Space] is not selectable when [Searchable Text] is set to [Searchable] on the [File Format] screen.

- 1 Select [Color Space].

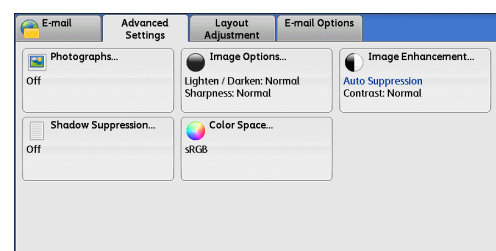

- 2 Select either [sRGB] or [Device Color Space].

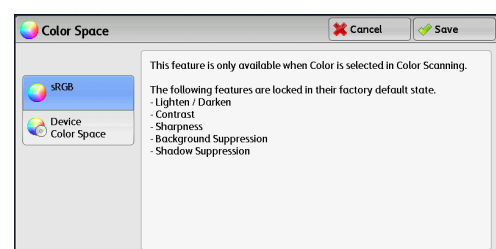

■ sRGB

Uses the color space that conforms to sYCC.

■Device Color Space

Uses the color-space standard of the machine. Recommended for advanced color processing using high-quality color.

- Note**
- You can find ICC profile data in the Driver CD Kit. When processing data scanned by selecting [Device Color Space] with application for color processing, ICC profile is effective.
 - When [Device Color Space] is selected, the following image quality features are changed to their defaults:
Lighten/Darken, Contrast, Sharpness, Background Suppression, Shadow Suppression
 - When [Color Scanning] is set to [Auto Detect], [sRGB] is applied to color pages of the documents.
 - When [Device Color Space] is selected, [2-sided] cannot be selected in the [2-side scanning].



Layout Adjustment

This section describes the features you can select on the [Layout Adjustment] screen under [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].


The following shows the reference section for each feature.

Resolution (Specifying a Scanning Resolution).....	310
2 Sided Scanning (Scanning Both Sides of a Document)	310
Book Scanning (Scanning Facing Pages on Separate Sheets)	310
Original Size (Specifying a Scan Size)	312
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	313
Edge Erase (Erasing Edges and Margin Shadows in the Document)	314
Reduce/Enlarge (Specifying a Scanning Ratio).....	315
Original Orientation (Specifying the Orientation of the Loaded Documents).....	316

- 1 On the [Services Home] screen, select [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].

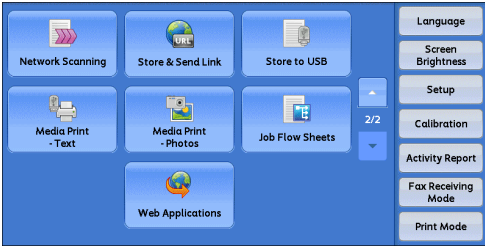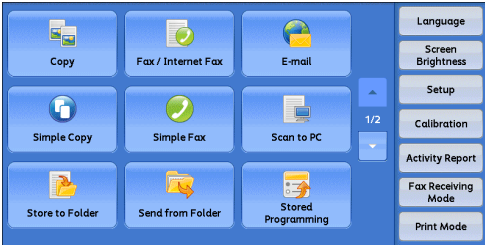


- 2 Select a feature on the [Layout Adjustment] screen.

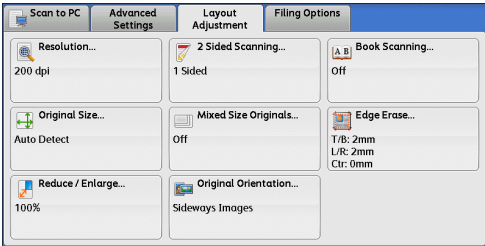

Resolution (Specifying a Scanning Resolution)


This feature allows you to set the resolution to scan a document.
As the value increases, the scan becomes more detailed, but the data size also increases. The scanning and transfer time increases as well.

1 Select [Resolution].

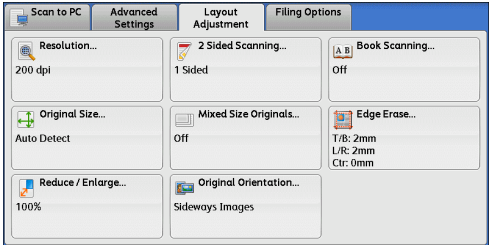

2 Select any option.

- Note**
- Select either [200 dpi] or [300 dpi] when [MRC High Compression] is set to [On] for PDF, DocuWorks or XPS files on the [File Format] screen.
 - Select either [200 dpi] or [300 dpi] when [Searchable Text] is set to [Searchable] for PDF or DocuWorks files on the [File Format] screen.
 - Select either [200 dpi] or [300 dpi] when the [Specific Color] check box is selected for PDF or DocuWorks files on the [File Format] screen.

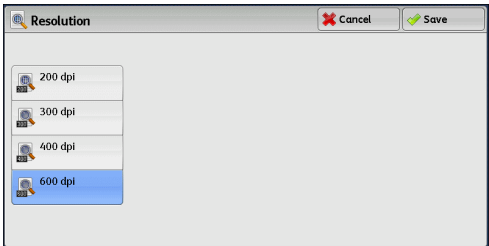

2 Sided Scanning (Scanning Both Sides of a Document)


This feature is the same as [2 Sided Scanning] on the [E-mail] screen.
For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.276).

Book Scanning (Scanning Facing Pages on Separate Sheets)


This feature allows you to scan facing pages of a document onto separate sheets of paper in page order.
It is useful if you want to separately scan facing pages of a bound document such as a booklet.

- Note**
- You cannot use the document feeder with this feature.
 - A non-standard size document or undetectable-size document may not be separated into two accurately.

1 Select [Book Scanning].

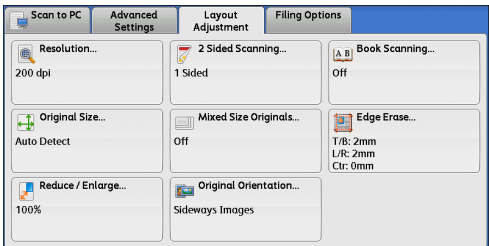

2 Select any option.

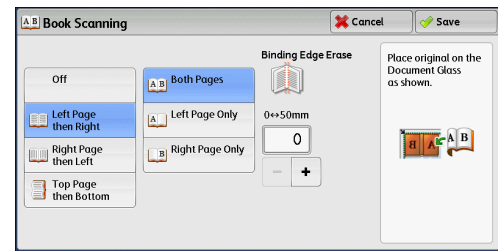

■Off

Does not scan as a bound document.

■Left Page then Right

Scans the left page and then the right page of facing pages.

■Right Page then Left

Scans the right page and then the left page of facing pages.

■Top Page then Bottom

Scans the top page and then the bottom page of facing pages.

■Both Pages

Scans both pages in page order.

■Left Page Only

Scans the left page only in page order. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

■Right Page Only

Scans the right page only in page order. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

■Top Page Only

Scans the top page only in page order. You can select this option when [Top Page then Bottom] is selected.

■Bottom Page Only

Scans the bottom page only in page order. You can select this option when [Top Page then Bottom] is selected.

■Binding Edge Erase


Erases the shadow from the center section of the document. You can specify the binding erase width in the range from 0 to 50 mm in 1 mm increments.

Original Size (Specifying a Scan Size)


This feature allows you to set the scan size for a document.

Use this feature when a document is a non-standard size, or when you want to scan a document at a size different from the original size. You can also add margins, or delete unnecessary margins using this feature.

1 Select [Original Size].

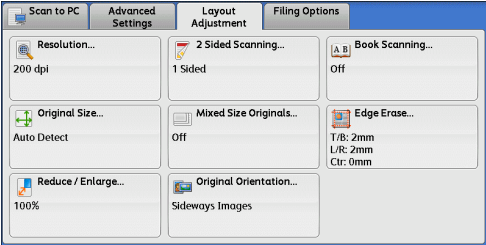

2 Select any option.
When you select a non-standard size, specify values for the X and Y directions.

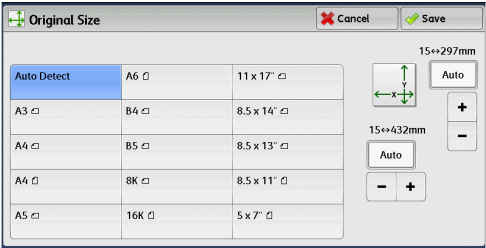

■Auto Detect

Detects the document size automatically. The following table shows the document sizes that can be detected automatically.

	Document feeder	Document glass
Auto-detectable Document Sizes	B5, B5□, B4, A5, A5□, A4, A4□, A3, 8.5 x 11", 8.5 x 11"□, 11 x 17", 16K□, 8K	B6, B6□, B5, B5□, B4, A6, A5, A5□, A4, A4□, A3, 8.5 x 11"□, 16K, 16K□, 8K

Note • If the document size cannot be detected automatically, a screen to enter the document size appears.

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

■Standard Size

Allows you to select from preset sizes.

■Variable Size

Allows you to enter the desired scan size when scanning a non-standard size document or when scanning at a size different from the original document size. You can specify a value in the range from 15 to 432 mm for the scan width (X), and a value in the range from 15 to 297 mm for the scan length (Y), in 1 mm increments. The scales attached on the upper and left edges of the document glass are helpful for you to specify values.


Note • When [MRC High Compression] is set [On] for PDF, DocuWorks, and XPS files on the [File Format] screen, or when the [Specific Color] check box is selected, the variable ranges are 50 to 432 mm for the scan width (X) and 50 to 297 mm for the scan length (Y), in 1 mm increments.

Mixed Size Originals (Scanning Different Size Documents Simultaneously)


You can scan documents of various sizes simultaneously with the respective sizes or with the same size. To use this feature, load the documents in the document feeder.

- Important**
- When you select [Color] in [Color Scanning], and [2 Sided] in [2 Sided Scanning], set [Resolution] to [400dpi] or lower.
 - When you select [2 Sided] in [2 Sided Scanning] to scan A3 documents, set [Resolution] to [400 dpi] or lower. Selecting [600 dpi] will cause an error message to be displayed.
 - Always load A5 documents in portrait orientation.
 - When loading B5 documents together with A3 documents loaded in landscape orientation or A4 documents loaded in portrait orientation, load the B5 documents in portrait orientation.
 - When loading documents, align the top left corners of the documents properly. Otherwise, a paper jam may occur.
 - The recommended document size combinations are A4 portrait and A3 landscape, or B5 portrait and B4 landscape. If another combination of document sizes is used, the documents can be fed at an angle and may not be scanned properly.
- Note**
- When you select [Enter Output Size] in [Reduce/Enlarge] and specify the output size in [Output Size], the scanned data is automatically reduced/enlarged to the specified size. However, since the scanned image is not rotated, the image will be reduced/enlarged to fit the specified size while keeping its orientation. For example, when an A3 landscape original is loaded and the output size is set to A4 portrait, the scanned image is reduced to A5 landscape and printed on A4 portrait paper.
 - If the document size cannot be detected automatically, a screen to enter the document size appears.

1 Select [Mixed Size Originals].

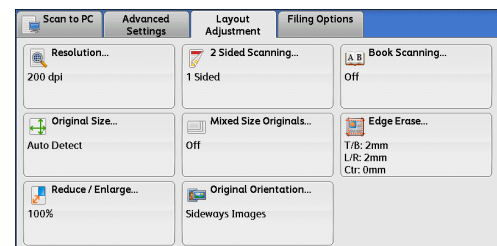

2 Select any option.

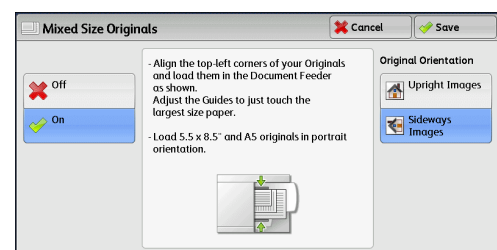

■Off

Select this option when all documents are of the same size.

■On

When scanning documents of different sizes, the machine automatically detects the size of each document.

■Original Orientation

Specify the orientation of the loaded document.

When you load the top edge of the document against the left side of the document glass or the document feeder, and then select [Sideways Images], the document is displayed in the correct orientation when viewed on your computer screen.

- Note**
- If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

- Sideways Images


Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

Edge Erase (Erasing Edges and Margin Shadows in the Document)


When you scan a document with the document cover open or when you scan a book, the edges and center margin of the document may be scanned as black shadows. The Edge Erase feature allows you to erase such shadows.

- Note**
- For 2-sided originals, the same edge erase amounts are set for the front and back sides.
 - If you set [Reduce/Enlarge], the edge erase amounts will be reduced or enlarged in proportion to the ratio you specified.

1 Select [Edge Erase].

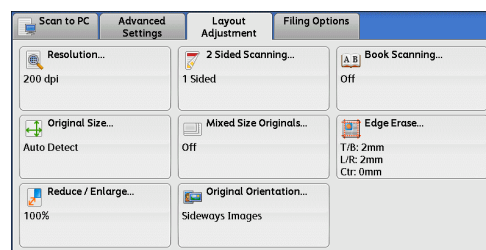

2 Select any option.

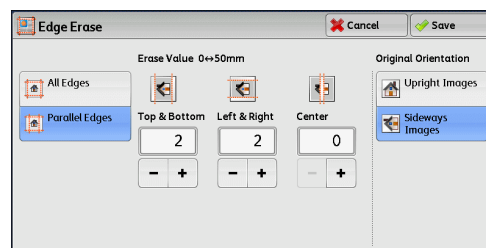

3 If you select [Parallel Edges], use [+] and [-] to specify the erase widths of top and bottom, left and right, and center of the document.

4 Select [Original Orientation].

■ All Edges

The edge width to erase is set to 2 mm for the top and bottom, and left and right edges.

■ Parallel Edges

Allows you to adjust the edge erase amounts.

- Top & Bottom

Erases the shadows of top and bottom edges of the document according to the orientation of the loaded document. You can specify the edge width to erase in the range from 0 to 50 mm in 1 mm increments.

- Left & Right

Erases the shadows of left and right edges of the document according to the orientation of the loaded document. You can specify the edge width to erase in the range from 0 to 50 mm in 1 mm increments.

- Center

Erases the shadow in the center of facing pages of a bound document. You can specify the center erase width in the range from 0 to 50 mm in 1 mm increments.

■Original Orientation

Specify the orientation of the loaded document.

When you load the top edge of the document against the left side of the document glass or the document feeder, and then select [Sideways Images], the document is displayed in the correct orientation when viewed on your computer screen.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

- Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

- Sideways Images


Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

Reduce/Enlarge (Specifying a Scanning Ratio)


This feature allows you to set the scanning ratio for the document to be scanned.

Note • When [Searchable Text] is set to [Searchable], [Reduce/Enlarge] is [100%].
• When [Searchable Text] is set to [Searchable] and the [Specific Color] check box is selected on the [File Format] screen, [Reduce/Enlarge] is [100%].

- 1 Select [Reduce/Enlarge].

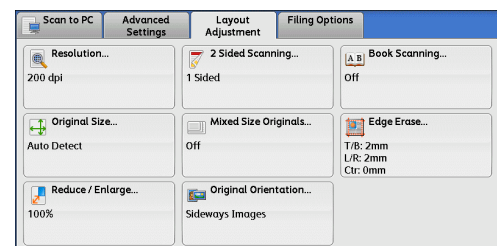

- 2 Select any option.

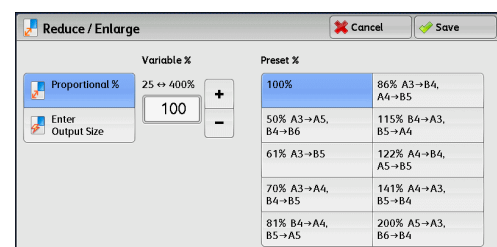

■Proportional %

Allows you to select a preset ratio, or enter a value in the range from 25 to 400% in 1% increments.

Use the numeric keypad or [+] and [-] to enter a value.

- Variable %

Enter the scanning ratio. Specifying "100%" scans at the same image size as the original document.

- Preset %


Select from preset ratios.

You can change the default values of scan ratios other than [100%]. For information on the settings, refer to "5 Tools" > "Scan Service Settings" > "Reduce/Enlarge Presets" in the Administrator Guide.

■Enter Output Size

In [Output Size], select the output size of the scanned document. The machine automatically calculates the scanning ratio based on the selected output size and the original document size.

Note • Selecting [Enter Output Size] may generate blank margin areas.

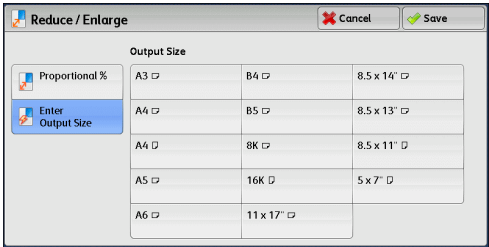

Original Orientation (Specifying the Orientation of the Loaded Documents)

This feature allows you specify the orientation of the loaded document.

When you load the top edge of the document against the left side of the document glass or the document feeder, and then select [Sideways Images], the document is displayed in the correct orientation when viewed on your computer screen.

Note • If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

• Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

• Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).



E-mail Options/Filing Options

This section describes the features you can select on the [E-mail Options]/[Filing Options] screen under [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].

The following shows the reference section for each feature.

Quality/File Size (Specifying an Image Compression Ratio When Scanning).....	318
Read Receipts (Specifying Read Receipts).....	318
Split Send (Sending in Sections).....	319
File Name (Specifying a Name for the File to be Sent).....	320
Reply To (Specifying a Reply Address).....	320
File Name Conflict (Setting the Action to be Taken for File Name Conflict).....	321
File Name (Specifying a Name for the File to be Saved).....	321
Encryption (Sending E-mail Encrypted by S/MIME).....	322
Digital Signature (Sending E-mail with a Digital Signature by S/MIME).....	322
Login Name.....	323
Password.....	323
Meta Data.....	323


- 1 On the [Services Home] screen, select [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].

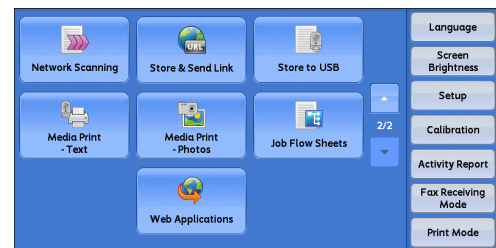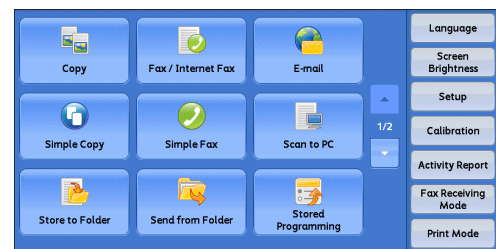

- 2 Select a feature on the [E-mail Options]/[Filing Options] screen.

Note


- The features displayed on the screen depend on the Scan service selected on the [Services Home] screen. The screen as shown on the right appears when [E-mail] is selected.

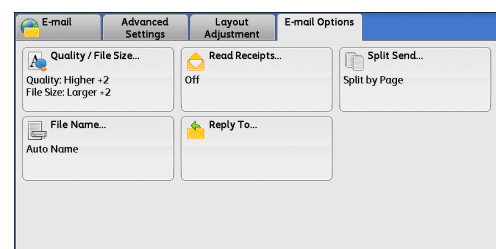

Quality/File Size (Specifying an Image Compression Ratio When Scanning)


This feature allows you to select an image compression level when [Color Scanning] is set to [Color] or [Grayscale].

- 1 Select [Quality/File Size].

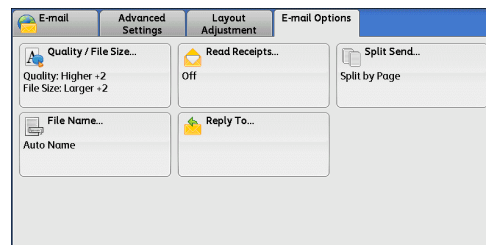

- 2 Select any button.

- Note**
- If the High Compression Image Kit (optional) is installed, and when [MRC High Compression] is set [On] on the [File Format] screen, three image compression levels are available.

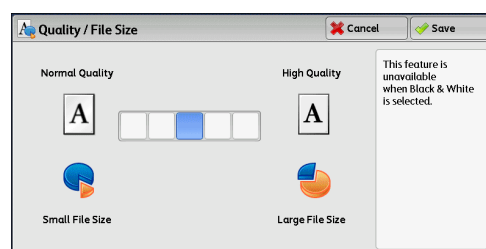

■Normal Quality

The image is saved with high compression. Image quality degrades, but the file size decreases.

■High Quality


The image is saved with low compression. Image quality improves, but the file size increases.

Read Receipts (Specifying Read Receipts)


When using the E-mail service, you can receive read receipts from e-mail recipients. This feature is available only when recipients support the MDN feature.

- Note**
- Read Receipts] is displayed only when [Tools] > [System Settings] > [E-mail/Internet Fax Settings] > [E-mail Control] > [Read Receipts] is set to [On].
 - When multiple e-mails are sent using [Split Send], a read receipt is requested for each e-mail.
 - Read receipts are returned to the address specified in [Reply To], or they are returned to the address specified in [From] on the [E-mail] screen if [Reply To] is not set.
 - This feature is only available when the recipient also sets to return read receipts.

- 1 Select [Read Receipts].

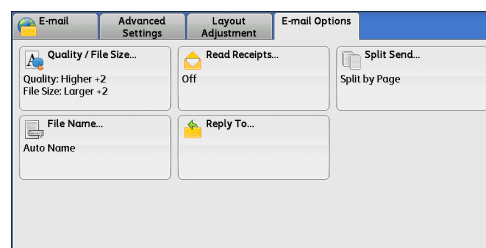

2 Select [On].

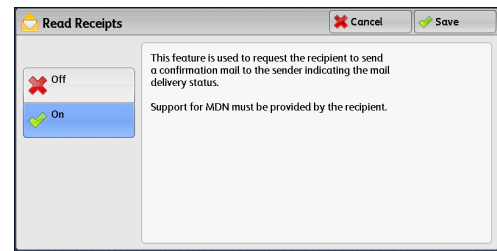

■Off

Select this option when you do not request read receipts.

■On


Select this option when you request read receipts.

Split Send (Sending in Sections)


When using the E-mail service, and the size of the data to be attached is large, you can split the data at page breaks or by a certain data size and then send the data.

For information on [Split Send], refer to "5 Tools" > "E-mail/Internet Fax Service Settings" > "E-mail Control" > "Split Send Method" in the Administrator Guide.

1 Select [Split Send].

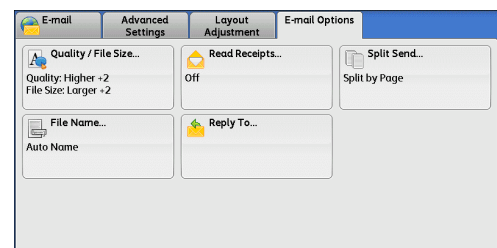

2 Select any option.

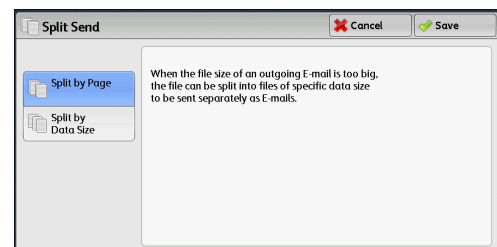

■Split by Page

The data is split at page breaks.

- Note**
- [Split by Page] is available only when [File Format] on the [E-mail] screen is set to [PDF], [DocuWorks], or [XPS], or when [File Format] is set to [TIFF] with [Single File for Each Page] check box not selected.

■Split by Data Size

The data is split by a certain data size.

- Note**
- Select this option if your e-mail application supports message/partial.

File Name (Specifying a Name for the File to be Sent)

When using the E-mail, Scan to PC, Network Scanning, or Store & Send Link service, you can specify a name for the file to be sent.

■Auto Name

The file name is "img-xxx-yyy.zzz" (where xxx is the date and time, yyy is the page number, and zzz is the extension).

The extension depends on the setting in [File Format].

- When [TIFF] is selected in [File Format]: tif
- When [JPEG] is selected in [File Format]: jpeg
- When [PDF] is selected in [File Format]: pdf
- When [XPS] is selected in [File Format]: xps
- When [DocuWorks] is selected in [File Format]: xdw

■To set the file name

- 1 Select [File Name].
- 2 Enter a file name using the displayed keyboard.


For information on how to enter characters, refer to "Entering Text" (P.68).

- Note**
- When each page is saved as one file, the page number is added to the end of each file name.
 - Up to 128 characters can be entered as a file name for the Scan to PC service.
 - Up to 28 characters can be entered as a file name for the E-mail service.
 - Up to 28 characters can be entered as a file name for the Store & Send Link service.
 - Up to 40 characters can be entered as a file name for the Network Scanning service.


Reply To (Specifying a Reply Address)

When using the E-mail service, you can specify the address for reply.

- 1 Select [Reply To].

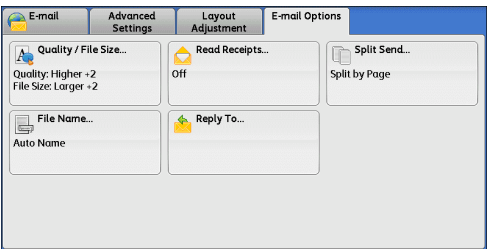

- 2 Enter an address for reply.

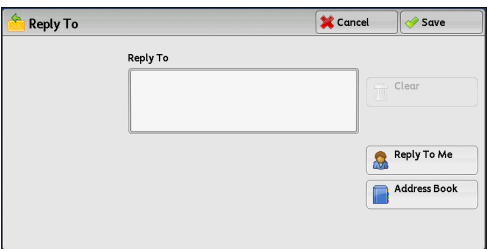

■Reply To

Select the [Reply To] box to display the keyboard screen on which you can enter an address for reply.

■Clear

Deletes the address entered in [Reply To].

■Reply To Me

Uses the address specified in [From] on the [E-mail] screen as a reply address.

Note • [Reply To Me] is selectable only when an address is specified in [From] on the [E-mail] screen.

■Address Book


Allows you to select a reply address from the Address Book.

For more information, refer to "Address Book (Specifying an E-mail Address)" (P.268).


File Name Conflict (Setting the Action to be Taken for File Name Conflict)

When using the Scan to PC service, you can set the action to be taken when the file name conflicts with another file stored in the destination.

- 1 Select [File Name Conflict].

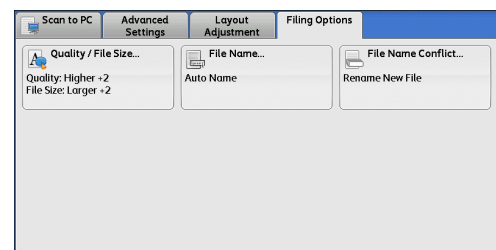

- 2 Select any option.

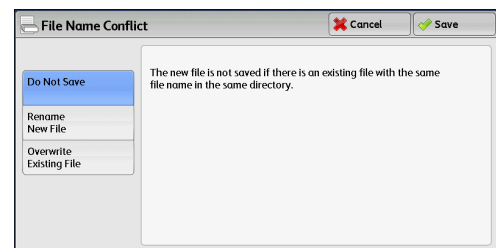**■Do Not Save**

Cancels the job without saving the file.

■Rename New File

Automatically changes the file name by appending a number (0001 - 9999) to the file name, and saves the file.

■Overwrite Existing File

Replaces the existing file with the new one.

File Name (Specifying a Name for the File to be Saved)

When using the Store to Folder service, you can specify a name for the file to be saved.

■Auto Name

The file name is "img-xxx" (where xxx is the date and time).

Note • If a file name is deleted, [(Auto Set)] is displayed.

■To set the file name

- 1 Select [File Name].
- 2 Enter a file name with up to 28 characters using the displayed keyboard.

Note • If a file stored in a folder of the machine is imported to a computer, the specified name may not be reflected on it depending on import method.

For information on how to enter characters, refer to "Entering Text" (P.68).

Encryption (Sending E-mail Encrypted by S/MIME)

When using the E-mail service, you can send e-mail encrypted by S/MIME.

When sending encrypted e-mail, select an e-mail address associated with a certificate that can be encrypted, from the Address Book.

Note • You can change the default value of [E-mail Encryption] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Scan Service Settings" > "Scan Defaults" > "E-mail Encryption" in the Administrator Guide.
• This feature is supported only by the ApeosPort series.

■Off

Sends e-mail without encryption.

■On

Sends e-mail with encryption.

Digital Signature (Sending E-mail with a Digital Signature by S/MIME)

When using the E-mail service, you can send e-mail with a digital signature by S/MIME.

Digital Signature allows a recipient to confirm whether contents of the e-mail are changed, or whether the e-mail is sent from the proper sender.

To use this feature, the machine's mail address must be linked to a certificate.

Note • This feature is supported only by the ApeosPort series.

For information on how to link a certificate to the machine's e-mail address, refer to "13 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.

■Off

Sends e-mail without a digital signature.

■On

Sends e-mail with a digital signature.

Login Name

You can enter the login name for a destination server.

Note • This feature is displayed only when [Network Scanning] is selected on the [Services Home] screen.

- 1** Select [Login Name].
- 2** Enter the login name using the keyboard displayed on the screen.

For information on how to enter characters, refer to "Entering Text" (P.68).

Password

You can enter the password for a destination server.

Note • This feature is displayed only when [Network Scanning] is selected on the [Services Home] screen.

- 1** Select [Password].
- 2** Enter the password using the keyboard displayed on the screen.

For information on how to enter characters, refer to "Entering Text" (P.68).

Meta Data

You can change the values of the Document Management Field (DMF) if they are specified for a selected job template.

Note • This feature is displayed only when [Network Scanning] is selected on the [Services Home] screen.

6 Send from Folder

This chapter describes the basic operations and features to use folders.

- Folder Operating Procedure 326
- Selecting a Folder 328
- Checking/Operating Files in a Folder 329
- Checking File Details 331
- Printing Files in a Folder 332
- Configuring/Starting Job Flow..... 335

Folder Operating Procedure

This section describes the basic procedure to operate files in folders.

You can store print files submitted by a computer, scan files, and fax files in folders on the machine.

These files stored in a folder can be sent by e-mail and be retrieved from a network computer.

You can also automate routine tasks, or register private folders and shared folders separately.

The following shows the reference section for each procedure.


Step 1 Opening the [Send from Folder] Screen	326
Step 2 Selecting a Folder	326
Step 3 Checking/Selecting Files in a Folder	327
Step 4 Operating Files in a Folder	327

Step 1 Opening the [Send from Folder] Screen

The following describes how to select features on the [Send from Folder] screen.


Note • The features displayed on the screen depend on your machine configuration.

- 1 Press the <Services Home> button.

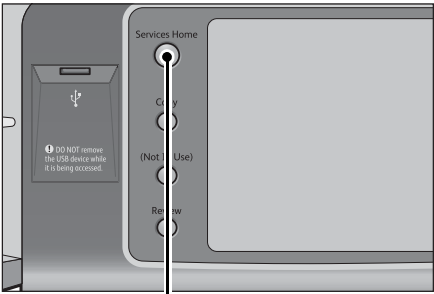

<Services Home> button

- 2 Select [Send from Folder].

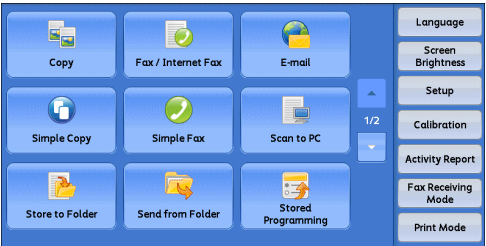


Step 2 Selecting a Folder

Access to some folders may be restricted, depending on the settings of the Authentication feature.

For information on selectable folders depending on the Authentication feature, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.


- 1 Select a folder to operate on.

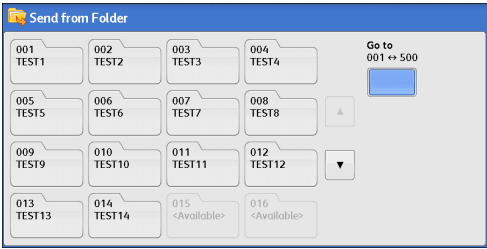


- 2 If a passcode is set for the folder, enter the passcode and select [Confirm].

Step 3 Checking/Selecting Files in a Folder

- 1 Select the display style from [List] and [Thumbnail].

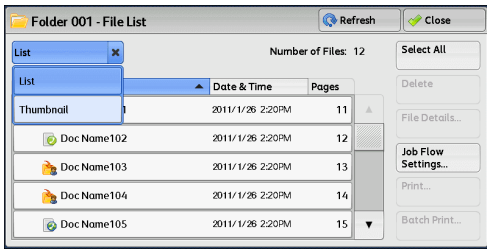

- 2 Select a file to send by e-mail or to print.

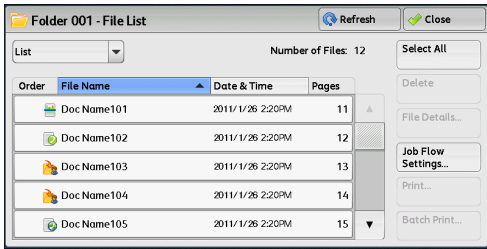

For information on the [File List] screen, refer to "Checking/Operating Files in a Folder" (P.329).

Step 4 Operating Files in a Folder

The following shows the reference sections for operations available on the [Send from Folder] screen.

Selecting a Folder	328
Checking/Operating Files in a Folder	329
Checking File Details	331
Printing Files in a Folder	332
Configuring/Starting Job Flow	335

Selecting a Folder


The following describes how to select a folder.

Access to some folders may be restricted, depending on the settings of the Authentication feature.

For information on selectable folders depending on the Authentication feature, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.

1 Select a folder on the [Send from Folder] screen.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - An arrow is displayed next to each folder which has a link to a job flow sheet and for which the auto start is set.
 - If the passcode entry screen appears, enter the passcode and select [Confirm].

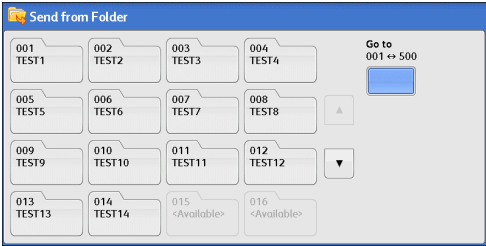

■Go to


Displays a folder at the top when you enter the 3-digit folder number with the numeric keypad.

Checking/Operating Files in a Folder


You can check or operate files stored in a folder.

Note • When selecting print files, [Job Flow Settings] cannot be selected.


- 1 Select a folder on the [Send from Folder] screen.

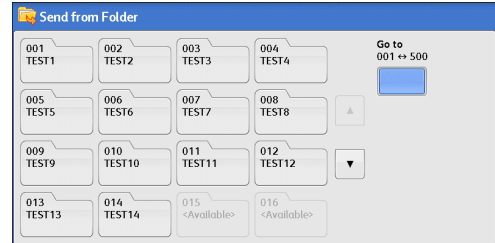

- 2 Select the display style from [List] and [Thumbnail].

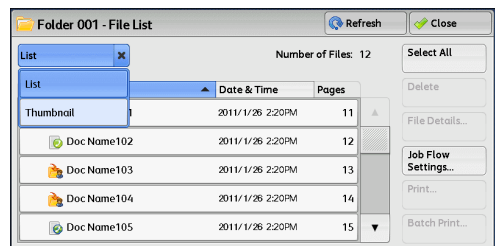

- 3 Select a file.

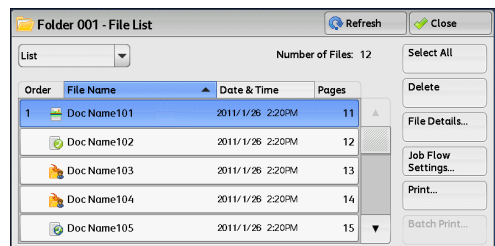

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can sort files in ascending or descending order by selecting either [File Name] or [Date & Time].
 - At the left of each file name, an icon is displayed to show the file type.
 - : Scan file
 - : Print file
 - : File for Secure Polling
 - : Fax/IP Fax (SIP) file
 - : Internet Fax file
 - You can select up to 100 files separately, or select all files at a time. If you select files separately, a number appears to the left of the icon indicating the order in which it was selected. Files are processed in this order.

- 4 Select any option.

■Refresh

Displays the updated information.

■List

Lists the files stored in the folder, with their stored dates and pages.

■Thumbnail

Displays the images and names of the files stored in the folder.

Important • If the power is cut off immediately after a scanned file is stored in a folder, or if the hard disk space is insufficient to display thumbnails, files in the folder may not be displayed in thumbnail view. In that case, display them in list view.

- Characters and images in thumbnail view may not be correctly displayed because they are scaled down from the actual sizes.

Note • The orientation of an image displayed in thumbnail view depends on which orientation the document was stored in.

■Number of Files

Displays the number of files stored in the selected folder.

■Select All

Selects all the files in the folder. To deselect all the files, select this button again while all the files are being selected.

■Delete

Deletes the selected files in the folder.

■File Details

Previews the selected file to allow you to check its details.

Refer to "Checking File Details" (P.331).

■Job Flow Settings

Displays the [Job Flow Settings] screen on which you can create, link, and execute job flows.

Refer to "Configuring/Starting Job Flow" (P.335).

Note • Files stored in a folder by specifying [Store in Remote Folder] on a print driver are called "print files". Job flows are not available for print files. If print files are included in the selected files, a job flow can be executed for the files other than the print files.

■Print

Allows you to print the selected files separately.

Refer to "Print" (P.332).

■Batch Print

Allows you to print the selected multiple files as one file.


Refer to "Batch Print" (P.333).

Checking File Details


You can preview the selected file to check its details.

- Note
 - Monochrome images with high gradation levels may appear bluish when previewed.
 - When the Image Log Control feature is used, it may take more time than expected to preview a file.


1 Select a file on the [Folder - File List] screen.

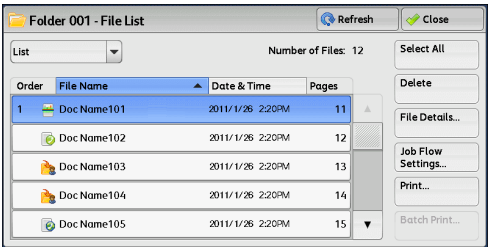

2 Click [File Details].

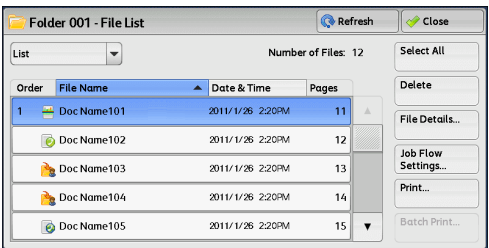

3 Select any option.

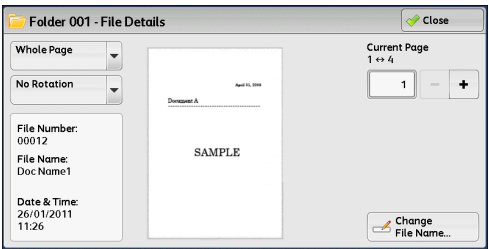

Send from Folder
6

■Whole Page

Allows you to select whether to display the whole page or to enlarge the image by 200%. You can select the view size from [Whole Page] and [Enlarged View].

- Note
 - A small size of a document may not be enlarged even if you select [Enlarged View].
 - You can rotate or enlarge the image of the file in a folder in preview, but cannot save the file with the image rotated or enlarged.

■No Rotation

Allows you to select an angle to preview the image from [Right 90 degrees], [Left 90 degrees], and [180 degrees].

- Note
 - You can rotate or enlarge the image of the file in a folder in preview, but cannot save the file with the image rotated or enlarged.

■Change File Name

Allows you to change the file name. Use the displayed keyboard to enter a new name.


■Current Page

Specify a page to preview on the screen.

Printing Files in a Folder

You can print selected files in a folder.


1 Select files on the [Folder - File List] screen.

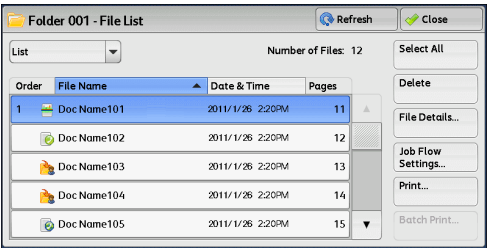


2 Select [Print] or [Batch Print].

Note • When multiple files are selected, [Batch Print] allows you to print the selected files as a single file, while [Print] allows you to print them as separate files.

For information on [Print] and [Batch Print], refer to "Print" (P.332) and "Batch Print" (P.333).

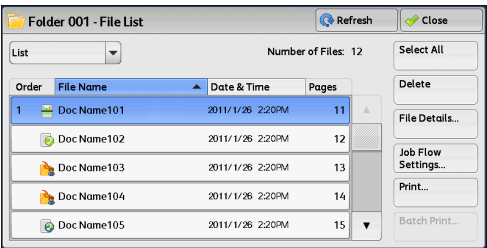

3 Select any option. Enter the number of print sets using the numeric keypad, if necessary.

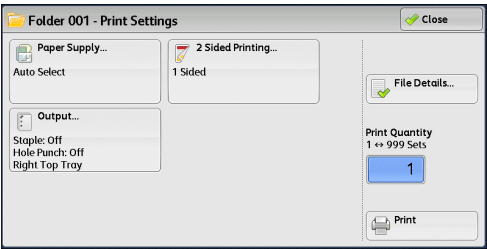

4 Select [Print].

Note • When a file stored by [Store in Remote Folder] of a print driver is printed, the settings specified on the control panel or CentreWare Internet Services will override the settings specified on the print driver except the [Pages Per Sheet (N-Up)], [Skip Blank Page], and [Print Position] settings.

Print

Allows you to set printing.

■Paper Supply

Allows you to select paper.

■2 Sided Printing

Allows you to set 2-sided printing.

■Output

Allows you to set stapling, punching, and a tray where the output is delivered.

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

For examples of the settings of stapling and hole punching, refer to "When stapling/punching holes" (P.334).

Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

■File Details

Displays the [File Details] screen. Select a file from the list to check its preview image.
For information on how to preview a file, refer to "Checking File Details" (P.331).

■Print Quantity

Specify the number of print sets.

■Print

Prints the selected file.

Batch Print

Allows you to set batch printing.

You can print multiple files as one file. Up to 100 files can be bound in the selected order.

- Note**
- For 2-sided printing, the last page becomes blank when the total number of printed pages is odd. For printing of multiple files, a blank page is inserted after the final page of each file.
 - If a different size document is included in multiple files, it may be printed in improper orientation.
 - [Batch Print] is not available while interrupting another job.
 - [Batch Print] is not available for files received by fax or Internet Fax, or files for Secure Polling. When the selected files contain fax or Internet Fax files, the machine will not print the fax or Internet Fax files but only the scan and print files.

■Paper Supply

Allows you to select paper.

■2 Sided Printing

Allows you to set 2-sided printing.

■Output

Allows you to set stapling and punching, and a tray where the output is delivered.

The Finisher C2 and the Finisher C2 with Booklet Maker are capable of stapling 2 - 50 sheets of paper (when 80 gsm paper is used). The Finisher D2-P with Booklet Maker is capable of stapling 2 - 100 sheets of paper (when 80 gsm paper is used).

- Note**
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

For examples of the settings of stapling and hole punching, refer to "When stapling/punching holes" (P.334).

■File Details

Displays the [File Details] screen. Select a file from the list to check its preview image.
For information on how to preview a file, refer to "Checking File Details" (P.331).

■Print Quantity

Specify the number of print sets.

■Print

Prints the selected file.

When stapling/punching holes


The following table shows the stapling/punching positions for print files stored in a folder by specifying [Store in Remote Folder] on a print driver, and for scan files. The following uses the example of [1 Staple] for stapling and [2 Holes] for punching.

- For print files in a folder stored by specifying [Store in Remote Folder] on a print driver

Original		
Stapling Position		
Punching Position		

- For scan files stored in a folder

Important • Ensure that the actual orientation of the original document matches the [Original Orientation] setting in [Edge Erase] or in [2 Sided Scanning] on the [Layout Adjustment] screen.

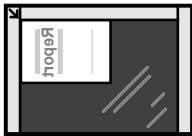Original				
Original Orientation				
Stapling Position				
Punching Position				

Configuring/Starting Job Flow

Job Flow is a feature that allows you to register transfer settings of scan data, such as a transfer method and destination, to simplify data-transfer tasks.

Job flow sheets are categorized into two types according to the target. One type of job flow sheet targets files stored in folders, and the other type targets scan files. This section describes the first type of job flow sheet, targeting files stored in folders.

A job flow operates files stored in a folder, and starts in either of the following ways: 1) automatically start a job flow when a file is stored in a folder, or 2) select a job flow to manually operate files stored in a folder.

To automatically start a job flow, you must make a link with a folder and a job flow sheet in advance. Files are automatically processed with the job flow sheet when they are stored in the linked folder.

Note • When the Authentication feature is disabled, a job flow created in [Send from Folder] can only be used/edited/duplicated/deleted through the folder where the job flow is created. This type of job flow is not displayed on the [Create Job Flow Sheet] screen. When the Authentication feature is enabled, job flows whose owners are authenticated are displayed on the [Create Job Flow Sheet] screen.

For information on job flows that target scan files, refer to "Job Flow Sheets" (P.341).

You can register the following features:

- Forward
- E-mail Notification
- Print

For information on the restrictions on the combination of features, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" in the Administrator Guide.

■Forward

Multiple forwarding recipients can be configured for each forwarding method.

- FTP
Forwards via FTP. Up to 2 recipients can be specified.
- SMB
Forwards via SMB. Up to 2 recipients can be specified.
- Mail
Forwards via E-mail. Up to 100 recipients can be specified.
- Fax
Forwards via fax. Up to 100 recipients can be specified.
- Internet Fax
Forwards via Internet Fax. Up to 100 recipients can be specified.
- IP Fax (SIP)
Forwards via IP Fax. Up to 100 recipients can be specified.

■E-mail Notification


You can receive the job results by e-mail.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Create New Job Flow Sheet" in the Administrator Guide.


■Print

Files in a folder can be printed.


- 1 Select files on the [Folder - File List] screen.

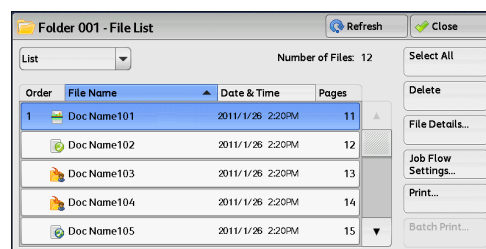

- 2 Select [Job Flow Settings].

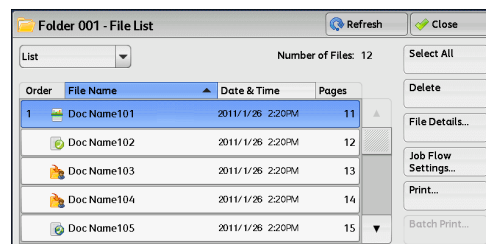

- 3 Select any option.

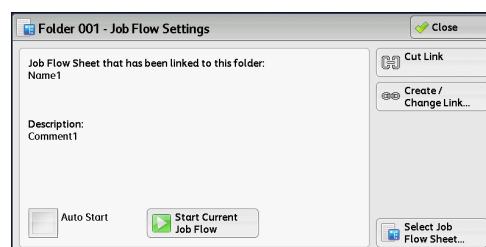

■Auto Start

This sets auto start of the job flow for files stored in the folder. The job flow automatically starts when a file is stored.

■Start Current Job Flow

Select files in the folder, and then select this button to start the job flow linked to this folder.

Important • After executing the job flow, confirm the [Job Status] screen or print a Job History Report to check the result. For information on the Job History Report, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Job History Report" in the Administrator Guide.

■Cut Link

Cancels the link between a folder and the linked job flow sheet.

■Create/Change Link

Displays the [Link Job Flow Sheet to Folder] screen.

Refer to "[Link Job Flow Sheet to Folder] Screen" (P.337).

■Select Job Flow Sheet

Select this button while files are selected to display the [Select Job Flow Sheet] screen.


Refer to "[Select Job Flow Sheet] Screen" (P.338).

[Link Job Flow Sheet to Folder] Screen

You can change the link between the folder and its job flow sheet.

Note • Linking, delinking, and auto start settings can be also performed when you create a folder.


1 Select a job flow sheet to link to.

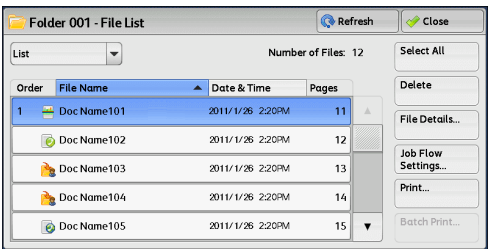


Important • Selecting [Save] without selecting a job flow sheet does not set a link. If the selected job flow sheet is already linked, the link is canceled.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.
• You can sort the list in ascending or descending order by selecting either [Name] or [Updated].


2 Select [Job Flow Settings].

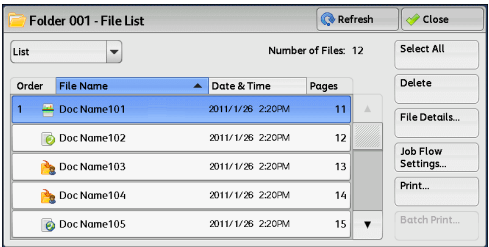

3 Select [Create/Change Link].

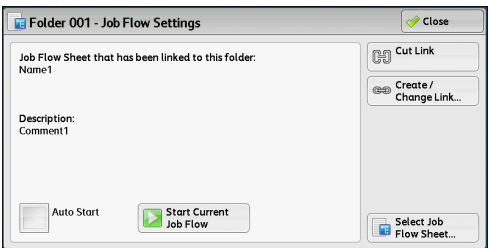

4 Select any option.

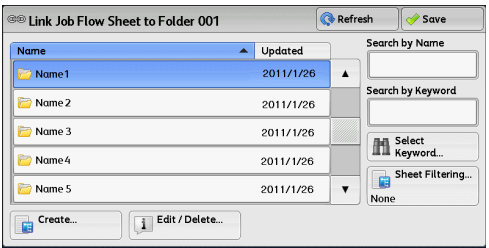

■Refresh

Displays the updated information.

■Create

Displays the [Create New Job Flow Sheet] screen.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Create New Job Flow Sheet" in the Administrator Guide.

■Edit/Delete

Displays the [Details] screen.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Edit/Delete" in the Administrator Guide.

■Search by Name

Searches for job flows that partially match the entry. The machine searches through job flow names that were registered upon each job flow creation. The entry can be up to 128 characters long.

For information on how to enter characters, refer to "Entering Text" (P.68).

■Search by Keyword

Searches for job flows that fully match the entry. The machine searches through keywords that were registered upon each job flow creation. The entry can be up to 12 characters long. You can select from preset keywords if they have been registered in the System Administration mode.

For information on how to enter characters, refer to "Entering Text" (P.68).

■Select Keyword

Displays the [Select Keyword] screen. Select a keyword registered in the System Administration mode to search for job flows. Job flows that fully match the entry are searched. The machine searches through keywords that were registered upon each job flow creation.

■Sheet Filtering

Displays the [Sheet Filtering] screen.

Refer to "[Sheet Filtering] Screen" (P.338).


[Sheet Filtering] Screen

This screen allows you to filter the job flow sheets displayed.

Displayed job flow sheets may vary depending on the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.

- 1 Select the filtering conditions, and select [Save].

Note • The job flows that can be displayed on [Send from Folder] are those whose [Target] is [Folder], and those stored in the machine.

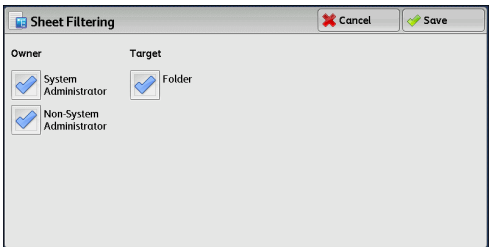

■Owner

Select the owner of job flow sheets to filter.

■Target


Select the target of job flow sheets to filter.

[Select Job Flow Sheet] Screen

This screen allows you to select and execute a job flow for the selected files.

- 1 Select a job flow, and select [Start].

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.
• You can sort the list in ascending or descending order by selecting either [Name] or [Updated].

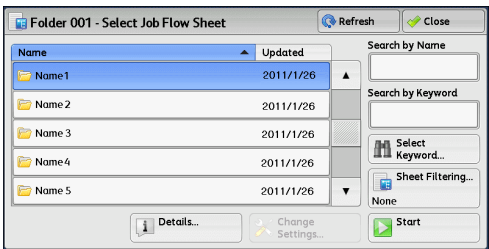

■Start

Executes the selected job flow sheet.

■Refresh

Displays the updated information.

■Details

Displays the [Details] screen.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Edit/Delete" in the Administrator Guide.

■Change Settings

If the selected job flow sheet setting is editable, the [Change Settings] screen appears. You can temporarily change the settings.

■Search by Name

Searches for job flows that partially match the entry. The machine searches through job flow names that were registered upon each job flow creation. The entry can be up to 128 characters long.

For information on how to enter characters, refer to "Entering Text" (P.68).

■Search by Keyword

Searches for job flows that fully match the entry. The machine searches through keywords that were registered upon each job flow creation. The entry can be up to 12 characters long. You can select from preset keywords if they have been registered in the System Administration mode.

For information on how to enter characters, refer to "Entering Text" (P.68).

■Select Keyword

Displays the [Select Keyword] screen. Select a keyword registered in the System Administration mode to search for job flows. Job flows that fully match the entry are searched. The machine searches through keywords that were registered upon each job flow creation.

■Sheet Filtering

Displays the [Sheet Filtering] screen.

Refer to "[Sheet Filtering] Screen" (P.338).

Job Flow Restrictions

A job flow sheet can be used by only one user, can be shared by multiple users, or can be used for only certain folders.

Job flow restrictions may vary depending on the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.



7 Job Flow Sheets

This chapter describes the scanning operation using a job flow sheet registered on the machine.

Job Flow Sheets is a service that allows you to register transfer settings of scan data, such as a transfer method and destination, to simplify data-transfer tasks.

Note • Job flow sheets targeting scanned documents is supported only by the ApeosPort series.

- Job Flow Procedure.....342
- Selecting/Changing a Job Flow Sheet.....344

Job Flow Procedure

Job flow sheets are categorized into two types according to the target. One type of job flow sheets targets scanned documents, and the other type targets files stored in folders. This section describes the first type of job flow sheets, targeting scanned documents.

For information on job flow sheets that target files stored in folders, refer to "Configuring/Starting Job Flow" (P.335).

The following describes the procedure to operate a job flow. Refer to the following section for each procedure.

To create and register a job flow sheet, use a computer.


Step 1 Opening the [Job Flow Sheets] Screen	342
Step 2 Selecting a Job Flow Sheet	343
Step 3 Confirming/Changing the Job Flow Sheet	343
Step 4 Starting the Job Flow Sheet	343

Note • To create a job flow sheet, use EasyOperator or Device Setup Tool. EasyOperator is included in the Driver CD Kit. Device Setup Tool is included in the ApeosWare Management Suite, which you can download from our website.


Step 1 Opening the [Job Flow Sheets] Screen

The following describes how to open the [Job Flow Sheets] screen.

- 1 Press the <Services Home> button.

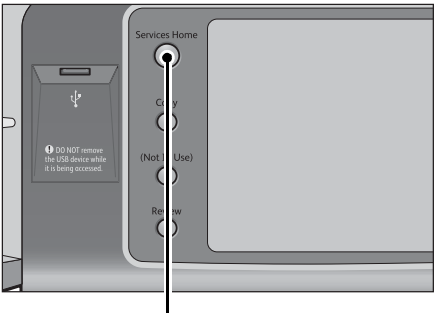


- 2 Select [Job Flow Sheets].

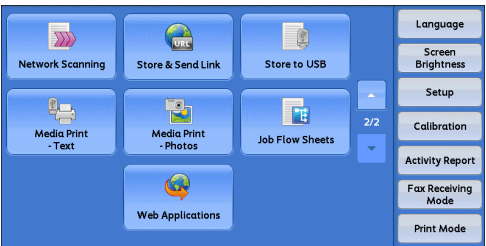

Step 2 Selecting a Job Flow Sheet

- 1 Select a job flow sheet.

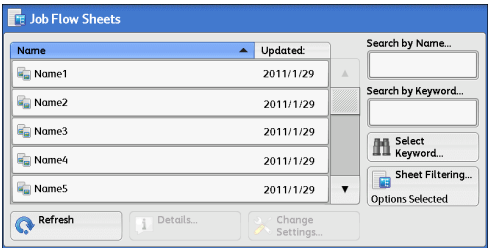


For more information on the [Job Flow Sheets] screen, refer to "Selecting/Changing a Job Flow Sheet" (P.344).

Step 3 Confirming/Changing the Job Flow Sheet

- 1 To confirm the details, select [Details]. To change the settings, select [Change Settings].

For information on how to check or change job flow settings, refer to "Selecting/Changing a Job Flow Sheet" (P.344).

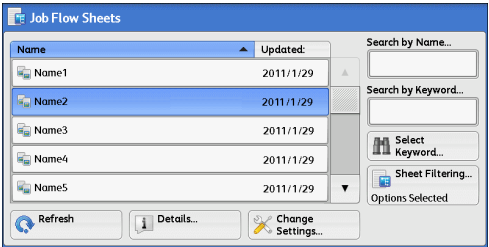

Step 4 Starting the Job Flow Sheet

- 1 Load a document.

Note • A job flow with an application linked does not require you to load a document.

- 2 Press the <Start> button.

Important • After executing the job flow, be sure to print a Job History Report to check the result. For information on the Job History Report, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Job History Report" in the Administrator Guide.

Selecting/Changing a Job Flow Sheet


This section describes how to select or edit a job flow sheet created on a network computer with EasyOperator or Device Setup Tool.

- Important**
- If characters not supported by the machine are used in the name or description of a job flow sheet, the characters will not be displayed or will be garbled on the screen. For information on characters that can be used in the names or descriptions of job flow sheets, refer to "16 Appendix" > "Notes and Restrictions" > "Notes and Restrictions on the Use of the Machine" in the Administrator Guide.
- Note**
- To communicate with network computers, enable the SOAP port on the machine.
 - A job flow sheet created on a network computer can be deleted, but cannot be changed or duplicated. However, you can temporarily change some items that are permitted to be changed.

For information on how to enable the port, refer to "5 Tools" > "Connectivity & Network Setup" > "Port Settings" in the Administrator Guide.

1 Select a job flow sheet.

- Note**
- Displayed job flow sheets may vary depending on the settings of the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" > "Overview" > "Job Flow Sheet Types and Overview" in the Administrator Guide.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can sort the list in ascending or descending order by selecting either [Name] or [Updated].

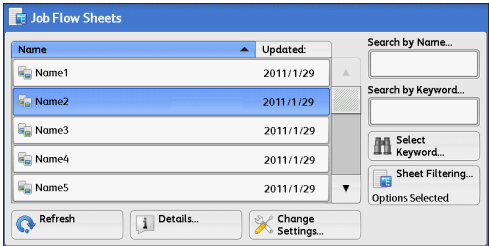

■Refresh

Displays refreshed information.

■Details

Displays the [Details] screen. You can confirm the details of a job flow such as the name, last updated date, target, owner, and save location. When you select the [Details] button, the whole text of the description which was registered when creating the job flow sheet is displayed.

■Change Settings

Displays the [Change Settings] screen. You can change the job flow settings. Refer to "[Change Settings] Screen" (P.345).

■Search by Name

Searches for job flows that partially match the entry. The machine searches through job flow names that were registered upon each job flow creation. The entry can be up to 128 characters long.

■Search by Keyword

Searches for job flows that fully match the entry. The machine searches through keywords that were registered upon each job flow creation. The entry can be up to 12 characters long. You can select from preset keywords if they have been registered in the System Administration mode.

■Select Keyword

Displays the [Select Keyword] screen. Select a keyword registered in the System Administration mode to search for job flows. Job flows that fully match the entry are searched. The machine searches through keywords that were registered upon each job flow creation.


■Sheet Filtering

Displays the [Sheet Filtering] screen on which you can filter the job flow sheets displayed.

Refer to "[Sheet Filtering] Screen" (P.346).


[Change Settings] Screen

- 1 Select [Change Settings].

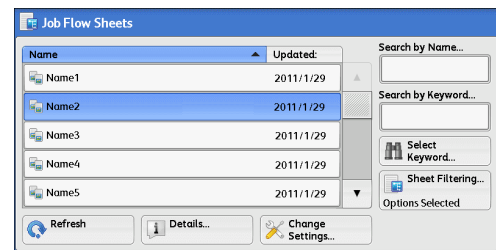


- 2 Select a group to be changed from [Group of Items].

Note • The screen as shown on the right does not appear if only one group is registered.

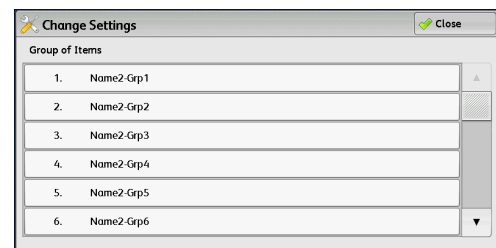

- 3 Select the item to be changed.

Note • A triangle icon appears at the left of each mandatory item.

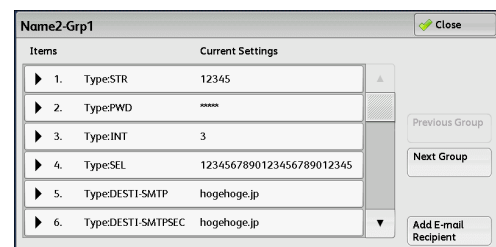

- 4 Select any option.

■Items

Displays the items set for the job flow sheet.

■Current Settings

Displays the values set for the job flow sheet.

■Previous Group

Displays the items of the previous group.

■Next Group

Displays the items of the next group.


■Add E-mail Recipient

Adds recipients for the e-mail.


[Sheet Filtering] Screen

This screen allows you to filter the job flow sheets displayed.
Job flow sheets displayed vary depending on the settings of the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" > "Overview" > "Job Flow Sheet Types and Overview" in the Administrator Guide.

1 Select [Sheet Filtering].

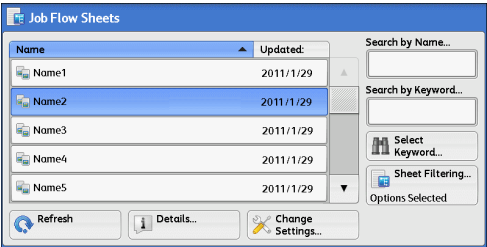

2 Select the filtering conditions, and select [Save].

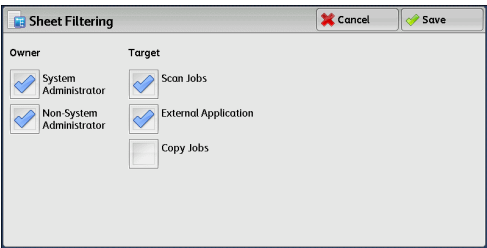

■Owner

Select the owner of job flow sheets to filter.

■Target

Select the target of job flow sheets to filter.

Note • Job flow sheets whose [Target] is [Folder] can be used only from [Send from Folder].

8 **Stored Programming**

This chapter describes the Stored Programming service that enables you to store customized job settings.

- Stored Programming Overview.....348
- Registering/Deleting/Renaming Stored Programs.....349
- Calling a Stored Program355

Stored Programming Overview

The Stored Programming service allows you to store settings that you expect to use frequently and call them with a single button operation. You can also assign a screen to a stored program button, to use the button as a short-cut to the screen.

A stored program can store not only settings of a feature, but a flow of settings configured on multiple screens.

For example, this service is available when you want to record a procedure starting from pressing the <Machine Status> button, to displaying the screen under [Print Reports] to print a Job History Report.

In addition, while Build Job is running, this service can be used for the remaining document stacks.

For information on Build Job, refer to "Build Job (Processing Documents Scanned with Different Settings as One Job)" (P.155).


The following shows the reference section for each feature.

Registering/Deleting/Renaming Stored Programs	349
Calling a Stored Program	355

Registering/Deleting/Renaming Stored Programs


You can register and delete stored programs on the [Stored Programming] screen.

- 1 Press the <Services Home> button.

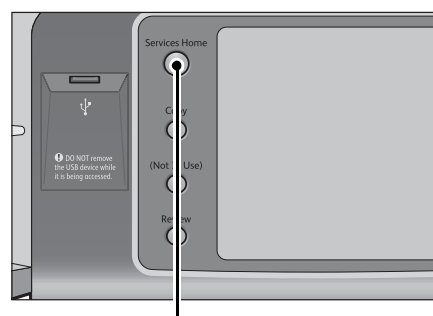


<Services Home> button


- 2 Select [Setup].

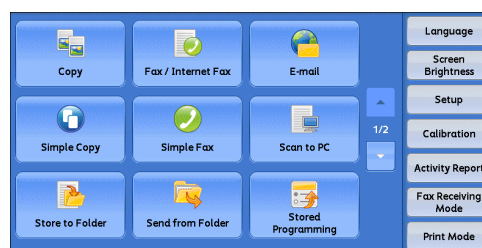

- 3 Select [Stored Programming].

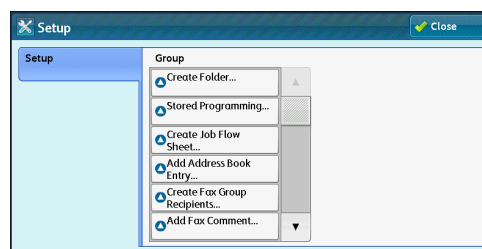

- 4 Select a feature.

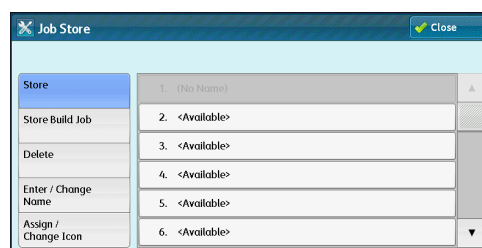

■Store

Register a stored program.

Refer to "Registering Stored Programs" (P.350).

■Store Build Job

Register a stored program for Build Job.

Refer to "Registering Stored Programs for Build Job" (P.352).

■Delete

Deletes a stored program. Select the stored program number to be deleted.

Refer to "Deleting Stored Programs" (P.352).

■Enter/Change Name

Enter or change the name of a stored program.

Refer to "Entering/Changing a Stored Program Name" (P.353).

■Assign/Change Icon

Specify an icon for a registered stored program.

Refer to "Assigning/Changing Icons for Stored Programs" (P.354).

Registering Stored Programs

Up to 100 actions can be registered with one stored program. Up to 40 stored programs can be registered in the machine.


Actions registered in stored programs No.1 and 2 or No. 1 to No.12 can also be performed by using one touch buttons <71> and <72> or <61> to <72>. (This feature is available only when the optional Fax service is installed.)

The following describes how to register actions with stored programs.

Important • If registered settings such as tray paper size and comments, or default values in the System Settings are changed after a stored program is registered, the program's content also changes.

- Note**
- Services using System Settings, Job Flow Sheet, Network Scanning, or Address Book cannot be registered.
 - The registering procedure for a stored program is canceled when the <Interrupt> button is pressed, the Auto Clear feature causes a time-out, or a pop-up window (paper jam, etc.) appears.
 - There are two ways in which address numbers and stored programs are assigned to the one touch buttons. Select either of the following. By default, [Type 1] is selected. For information on how to change the settings registered to the one touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.
 - [Type 1]
The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons 71 and 72 are used for stored programs and they correspond to the registered stored programs 1 and 2.
 - [Type 2]
The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 72 are used for stored programs and they correspond to the registered stored programs 1 to 12.

1 Select [Store].

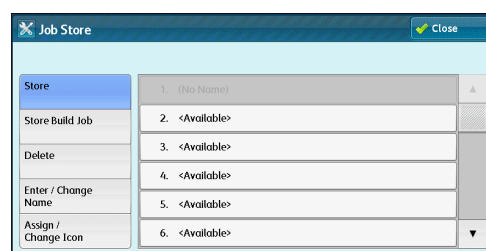

2 Select a number to register a stored program.

- Note**
- Once a job is stored to a button, it cannot be overwritten.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.

3 Set the feature you want to register.

- Note**
- The machine sounds an audible tone while a stored program is being registered.
 - Press the <Interrupt> button to cancel registration.

You can change the volume of the sound that notifies that a stored program is being registered. For information on the setting, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Tone" in the Administrator Guide.

4 Press the <Start> or <Clear All> button.

- Note**
- If no name is entered for a registered stored program, the name becomes "(No Name)".

For information on how to name a registered stored program, refer to "Entering/Changing a Stored Program Name" (P.353).

Notes and Restrictions on Registering Stored Programs

The following notes and restrictions applies when you register stored programs.

- When registering a stored program to select a paper size or type loaded on the bypass tray, register both the paper size and the paper type. If only the paper size or type is registered, the stored program may not be called properly.
- If any of the following operations is performed while a stored program is being registered, the stored program may not be registered or may not work correctly.
 - Removing or inserting a paper tray
 - Loading or reloading paper in the bypass tray
- If any of the following operations is performed after a stored program is registered, the registered stored program may not be called properly.
 - If the stored program has the Watermark feature and the default values of that feature are changed.
 - If the stored program has an operation for a folder and the folder passcode is changed.
 - If the settings of the control panel are changed.
 - If the services assigned to the <Custom> buttons are changed.
 - If any setting is changed under [Tools] > [System Settings] > [Copy Service Settings] > [Preset Buttons].
 - If the selection is made from a list of the Address Book or Job Flow Sheet.
 - If any optional components installed on the machine, such as a finisher, are changed, and thereby the associated buttons become no longer available.
 - If the measurement unit, millimeters or inches, is changed.
 - If a job is selected from the list of the stored jobs in [Secure Print Jobs & More] under Job Status.
- The following features and operations cannot be registered in Stored Programming.
 - Registration and call of a stored program
 - System Settings
 - The [Media Print - Text] and [Media Print - Photos] buttons on the [Services Home] screen
 - The [Store to USB] button on the [Services Home] screen
 - The [Network Scanning], [Job Flow Sheets], and [Web Applications] buttons on the [Services Home] screen (ApeosPort series only)
 - The <Custom> button to which the Network Scanning or Job Flow Sheets service is assigned.
 - The Address Book for the Fax/Internet Fax, E-mail, and Scan to PC services
 - Unselectable buttons
 - The [Language] button on the [Services Home] screen
 - The [Screen Brightness] button on the [Services Home] screen
 - Selecting items using the scroll bar
 - Scrolling operation while previewing
 - The [Browse] button for the Scan to PC service
 - Operations to edit e-mail addresses for the E-mail service (the pop-up menu [Keyboard], [Remove], and [Edit] displayed by selecting [Recipient(s)] or [From])
 - The <Energy Saver> button

- A stored program registration is canceled when the <Interrupt> button is pressed, the Auto Clear feature causes a time-out, or a pop-up window (such as a paper jam window) appears.
- If the Fax service is available, one touch buttons can be used.


Registering Stored Programs for Build Job

Up to 100 actions can be registered with one stored program for Build Job. Up to 40 stored programs can be registered in the machine.

The following describes how to register actions with stored programs.

1 Select [Store Build Job].

- Note**
- Once a job is stored to a button, it cannot be overwritten.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.

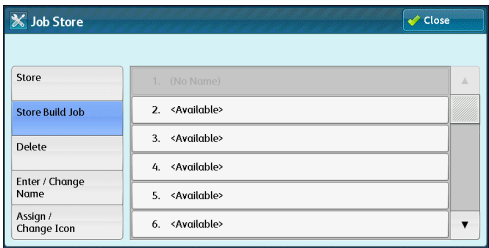

2 Select a number to register a stored program.

- Note**
- Once a job is stored to a button, it cannot be overwritten.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.

3 Set the feature you want to register.

- Note**
- The machine sounds an audible tone while a stored program is being registered.
 - Press the <Interrupt> button to cancel registration.

You can change the volume of the sound that notifies that a stored program is being registered. For information on the settings, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Tone" in the Administrator Guide.

4 Press the <Start> or <Clear All> button.


- Note**
- An icon is displayed to the left of each registered stored program for Build Job.
 - If no name is entered for a registered stored program, the name becomes "No Name".

For information on how to name a registered stored program, refer to "Entering/Changing a Stored Program Name" (P.353).

Deleting Stored Programs

The following describes how to delete stored programs.


1 Select [Delete].

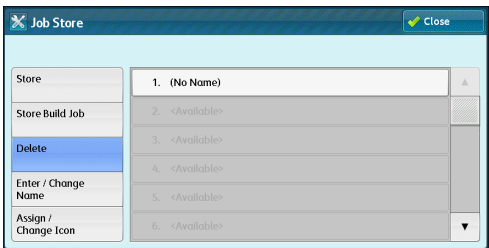

2 Select the number to deleted.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

3 Select [Delete].

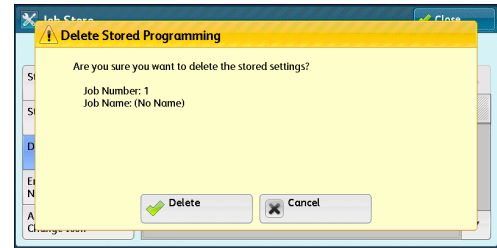

■Delete

Deletes the stored program.

Note • Deleted stored programs cannot be restored.

■Cancel

Cancels deleting the stored program.


Entering/Changing a Stored Program Name

The following describes how to enter or change the name of a stored program.

Up to 18 characters are allowed for a stored program's name.

For information on how to enter characters, refer to "Entering Text" (P.68).


1 Select [Enter/Change Name].

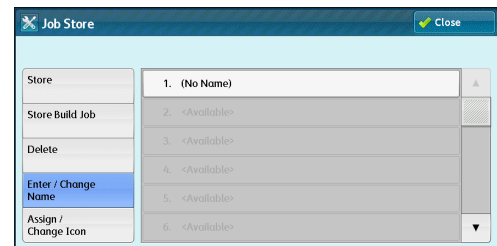

2 Select the number to register or change a name.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.


3 Enter a name, and select [Save].

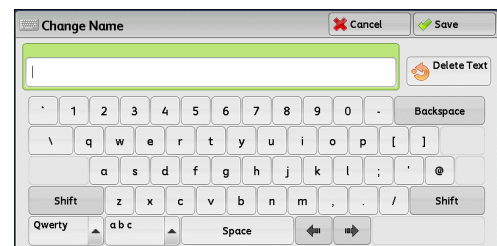

Assigning/Changing Icons for Stored Programs

The following describes how to assign or change an icon of a stored program.
You can select from 12 icons.


1 Select [Assign/Change Icon].

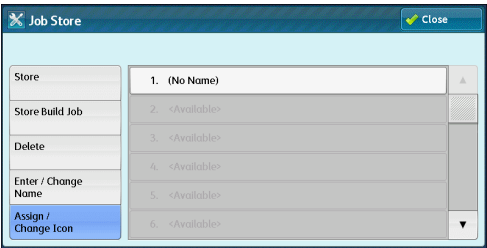

2 Select the number to assign or change an icon.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

3 Select an icon, and select [Save].

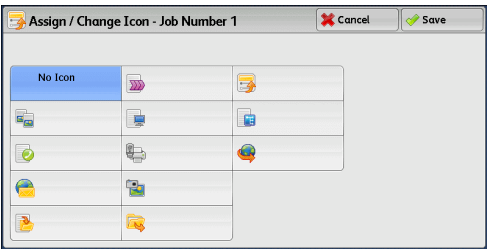

■No Icon

No icon is assigned to a registered stored program.

■Icon


Select an icon according to the content of the registered stored program.

Calling a Stored Program

The following describes how to call a stored program.


When you call a specified stored program, the last screen shown when you registered the stored program appears.

- 1 Press the <Services Home> button.

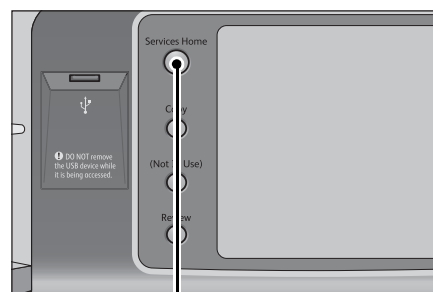


<Services Home> button

- 2 Select [Stored Programming].

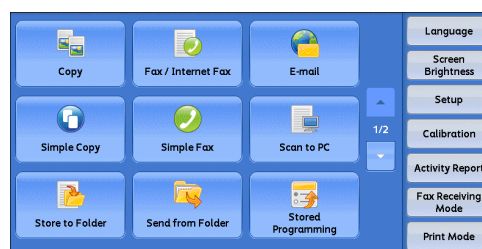


- 3 Select a number of a stored program containing the features you want to use.

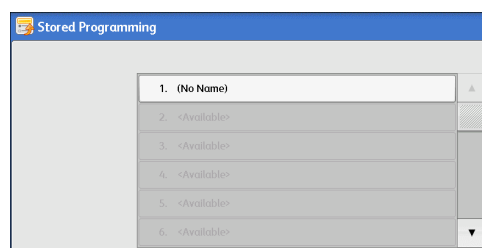

- Note**
- You can only select registered numbers.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - After the stored program has been called, the machine sounds an audible tone. If a failure occurs, the machine sounds a fault tone.

For information on how to change the volume of the sound that notifies that a stored program has been called, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Complete Tone" in the Administrator Guide.

- 4 After the stored program is called, select other features if necessary.
- 5 Press the <Start> button.

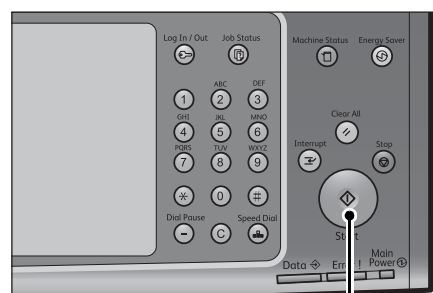


<Start> button

Calling a Stored Program for Build Job

You can call a stored program for Build Job on the [Copy] screen displayed while Build Job is running.

- 1 Select [Change Settings].

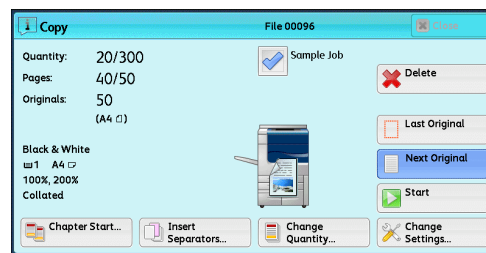

- 2 Select the [Job Assembly] tab.
- 3 Select [Stored Programming].
- 4 Select a number of a stored program containing the features you want to use.

- Note**
- You can only select registered numbers.
 - After the stored program has been called, the machine sounds an audible tone. If a failure occurs, the machine sounds a fault tone.

For information on how to change the volume of the sound that notifies that a stored program has been called, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Complete Tone" in the Administrator Guide.

9 Web Applications

This chapter describes how to operate web applications.

Note

- This service is supported only by the ApeosPort series.
- This service is not available for some models. An optional component is required.
For more information, contact our Customer Support Center.

- Web Applications Overview 358
- Accessing Web Applications 359
- Accessing Using Buttons Registered on the [Services Home] Screen 360

Web Applications Overview

Web Applications is a service that allows you to access to web applications via a network using the browser on the machine in order to display and store data.

The machine provides the following features:

- Accessing web applications from the machine, and displaying the web application screen on the machine
- Storing scanned documents directly in a web application folder
- Printing a file directly that is stored on a remote server

Note • The web applications that can be displayed on the machine are those which are compatible with the machine. You cannot access website on the Internet.

To access the web application on the machine, prior settings are required. For information on the settings, refer to "5 Tools" > "Web Applications Service Setup" in the Administrator Guide.


Accessing Web Applications

The following describes how to access web applications.

You need to register an access destination in advance.

For information on how to register an access destination, refer to "5 Tools" > "Web Applications Service Setup" > "Server Setup" in the Administrator Guide.


- 1 Press the <Services Home> button.

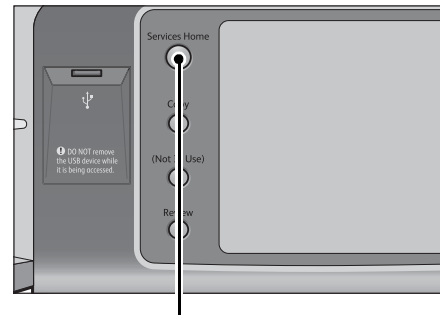


<Services Home> button

- 2 Select [Web Applications].


Note • If Auto Link has been set, the machine can access the remote service.

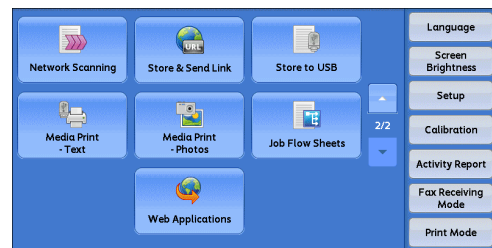

- 3 Select an access destination.

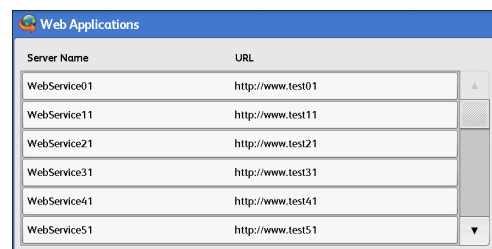

- 4 Select [Open] from the pop-up menu displayed.

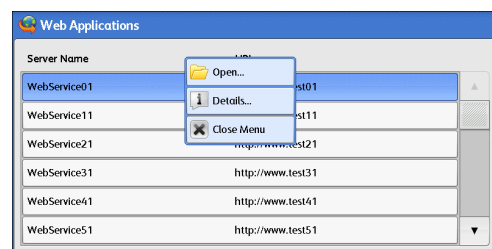

■Open

Accesses the specified remote service.

■Details

Displays the information of the specified remote service.

■Close Menu


Hides the pop-up menu.

Accessing Using Buttons Registered on the [Services Home] Screen

You can register frequently used web applications on the [Services Home] screen as buttons. The following describes how to access the applications by simply selecting the buttons.

For information on how to assign buttons displayed on the [Services Home] screen, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" > "Services Home" in the Administrator Guide.

- 1 Press the <Services Home> button.

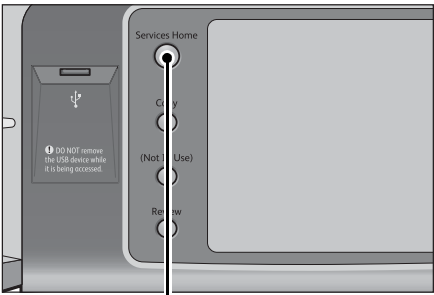


<Services Home> button

- 2 Select [Head Office] registered on the [Services Home] screen.

Note

- In this example, an access destination named [Head Office] is registered in the default position of the [Web Applications] button. You can assign the button anywhere on the screen.

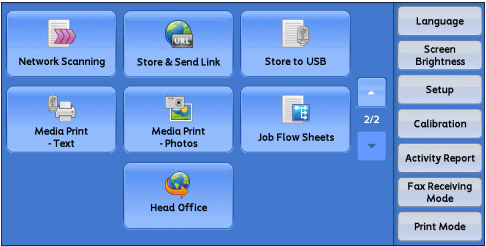

10 Media Print (Text and Photos)

This chapter describes the basic procedures and features of Media Print - Text and Media Print - Photos when a USB memory device is connected.

Note • This service is not available for some models. An optional component is required.
For more information, contact our Customer Support Center.

• Overview of Media Print.....	362
• Media Print - Text	365
• Media Print - Photos	367
• Selecting the Printing Options	369

Overview of Media Print

If a USB memory device is connected to the machine, the data stored in the USB memory device can also be printed. You can also print scanned data stored with the Store to USB service.

The installation of commercially available Memory Card Reader allows the machine to retrieve and print image data (DCF1.0-compliant JPEG and TIFF) taken with a digital camera as well as document files (PDF, TIFF, XPS, XDW, XBD and JPEG (JFIF)).

- Important**
- Data stored in USB memory device may be lost or damaged in the following cases. Make sure to back up data in media before use.
 - When disconnecting/connecting the USB memory device by methods other than described in this guide.
 - When receiving the effect of electrical noise or an electrical discharge.
 - When a fault or failure occurs during operation.
 - If the USB memory device receives mechanical damage.
 - We assume no responsibility for any direct and indirect damages arising from or caused by such data loss.
 - When you use the Media Print - Text service to print scanned data stored with the Store to USB service, the data cannot be printed if they are saved in DocuWorks format.
 - For Media Print - Photos, images can be displayed in thumbnail view, but cannot be previewed. For Media Print - Text, files cannot be displayed in thumbnail view and cannot be previewed either.

- Note**
- Commercially available Memory Card Reader with single slot ^{*1} can be used for Media Print feature (text/photo), but its safe performance is not guaranteed. When a Memory Card Reader with multi-slot ^{*2} is used, only one particular slot is available. And which slot is available differs according to models and slot of media/Memory Card that you want to use is not always available. Safe performance of a Memory Card Reader with multi-slot is not guaranteed, either.
 - ^{*1}: Media/Memory Card that has one slot. Some allows only one type of media/Memory Card, while others allows more than one types (ex. SD card, xD-Picture Card).
 - ^{*2}: Media/Memory Card that has two or more slots.
 - "Exif" is a file format that embeds information required to print the image data taken with a digital camera. The machine supports Exif 2.0 to 2.2.
 - The Store to USB service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

The Media Print feature comprises two modes: Media Print - Photos and Media Print - Text. The Media Print - Photo mode prints data stored in the standard digital camera format, while the Media Print - Text mode prints data stored in text format. The feature also includes Index Printing that prints a list of files retrieved in the both modes.

Supported Media and File Formats

The machine supports USB memory devices.

Supported media and file formats are as follows.

Supported Media	Supported File Format	
	Media Print - Photos	Media Print - Text
• USB 2.0 memory	• JPEG files • TIFF files Supports DCF1.0-compliant JPEG/TIFF files (Exif2.0, Exif2.1, Exif2.2)	• PDF files Extension: pdf, PDF 1.3 or later • TIFF files Extension: tif, Grayscale 4-bit/8-bit uncompressed, 8-bit/24-bit JPEG compressed, MH/MMR compressed • XPS files Extension: xps • JPEG (JFIF) Extension: jpg

Important • When you specify the save location, only folder names are displayed in the list. File names and shortcuts (symbolic link or alias) are not displayed.

- Folders that comply with the Design rule for Camera File system (DCF) standard used for digital cameras are not displayed.
- If a full path (a string of folder and file names in all directories) of the file created exceeds 257 characters long, an error occurs.
- If the medium contains more than 900 folders, the machine may not be able to recognize the medium correctly.
- PDF files saved on Mac OS® cannot be displayed on the screen and cannot be printed.
- If a file name contains characters that are not supported by the machine, the file name will not be displayed on the screen.

Note • In the Media Print - Photos mode, only 8 characters can be recognized as a file name. In the Media Print - Text mode, up to 255 characters can be recognized.

- Up to 900 files can be processed with Media Print.
- Use media formatted with digital cameras or computers (FAT12, FAT16, FAT32 only).
- Use USB 2.0 compliant memory devices with the size up to 128GB only. (USB 1.1 compliant memory devices are not supported.)
- The use of media recommended by Fuji Xerox is suggested. For information on recommended media, contact our Customer Support Center.
- If a file name contains machine-dependent codes, the file may not be recognized or displayed on the screen correctly.

Notes and Restrictions on Media Print

The following notes and restrictions apply on the use of the Media Print service.

- Use the Media Print - Photos service with a medium inserted. Otherwise, an error code (016-794/116-212) is displayed on the screen.
- Image files other than files in Exif format (JPEG/TIFF files created on computers) cannot be printed.
- Once an image file in Exif format is edited or saved on a computer, the file format is no longer the Exif format.
- If the medium fails, the process is terminated within a few minutes, and an error message is displayed.
- Eject the medium before switching off the power.
- Be sure to wait until printing is completed and then eject the medium by following the procedure described in this chapter.
- Always back up data in a medium before use.
- Printing data may take from a few minutes to several tens of minutes, depending on the size and number of files in the medium.
- Before storing document files, format the USB memory with a computer (FAT12, FAT16, FAT32 only).
- When you print a PDF file using Media Print, [PDF Bridge] is selected regardless of the [Print Processing Mode] setting in [PDF Direct Print].

For more information on [Print Processing Mode], refer to "16 Appendix" > "PDF Direct Print" in the Administrator Guide.

- To print from a USB memory device, the USB Memory Print Kit (optional) is required.
- You can use a USB host adapter to print from your USB memory device or via your USB cable (as necessary), but the operation is not guaranteed.
- Multiple USB memory devices cannot be used simultaneously.
- Use USB 2.0 compliant memory devices only. USB 1.1 compliant memory devices are not supported.

The following USB memory devices are not supported:

- A USB memory device with multiple media partitions that require other utilities to access to the contents therein.
- A USB memory device connected via an external hub.
- Do not use a medium if it stores data that cannot be backed up, such as music data with the copyright protection function. We assume no responsibility for any direct and indirect damages arising from or caused by such data loss.
- The machine does not display a menu to prevent you from removing a USB memory device while it is being accessed.

Media Print - Text


Selecting Files

You can select files using any of the following three methods:


- Selecting all files
- Selecting the desired files on the [Select From List] screen
- Selecting one file or a range of files with index numbers

Note • You can select up to 32 files simultaneously.

- 1 Press the <Services Home> button.

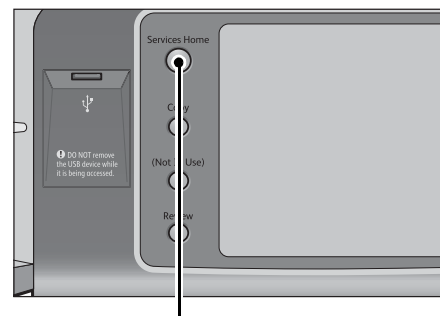

- 2 Select [Media Print - Text].

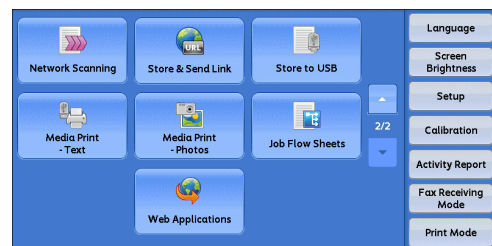


The machine starts retrieving files from the medium.

During the retrieval, a screen appears on the control panel indicating that the files are being transferred.

Note • Index numbers from 001 to 900 are automatically assigned to the files retrieved.

- 3 After the files are retrieved, select either [Select All] or [Select From List] to specify files.

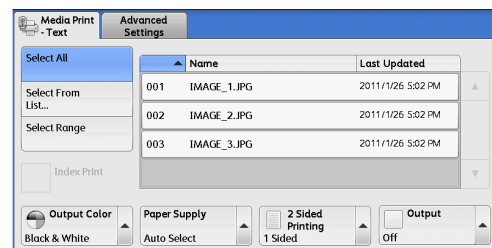

- 4 After selecting the files to be printed, select the printing options.

For more information on the printing options, refer to "Selecting the Printing Options" (P.369).

Note

- On the pop-up menu displayed when selecting files, you can cancel the selection or display details.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.

■Select All

Selects all document files to be printed.

- Note**
- Depending on the type of files stored in the medium or the directory configuration, some files may not be printed.

■Select From List

Displays the [Select From List] screen.

Refer to "[Select From List] Screen" (P.366).

■Select Range

Use [+] and [-] to specify the range of files to be printed in [First File] and [Last File] under [Media Print - Text].

- Note**
- Select [Select From List] to display a list of files, and reference the list when selecting the range.

■Index Print

Prints a list of the selected files with the index numbers automatically assigned.


For more information on Index Print, refer to "Index Print" (P.371).

[Select From List] Screen

This screen displays a list of files with their folder and file names and stored dates and times.

You can select the desired files from a list of files.

- 1 Select the desired files from a list of files.

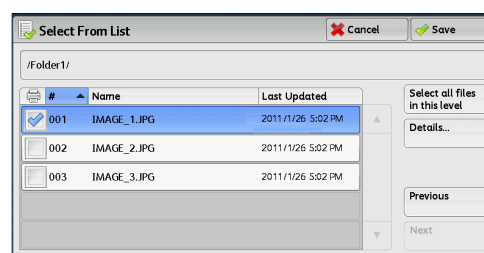

- Important**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can sort the list in ascending or descending order by selecting [# ▲], [Name], or [Last Updated].
 - A check mark is placed in the check box for each file selected. To deselect the file, select the file again while the file is selected (highlighted).
 - If a folder or file name has more than 170 characters long, the folder or file name is not displayed.
 - Folder names which include characters that the machine does not support may not be correctly displayed. If you specify the folders as file storage locations, an error occurs. For more information on characters that the machine supports, refer to "Entering Text" (P.68).
 - The machine does not distinguish between upper and lower cases of folder and file names that are created in Windows environment and that consist of eight characters or less. The names for these folders and files are displayed in capital letters.

■Details

Displays detailed information on the selected (highlighted) file. To print the file, select the [Print] check box on the [Details] screen.


Media Print - Photos

Selecting Files

You can select files using any of the following three methods:


- Selecting all files
- Selecting the desired files on the [Select From List] screen. You can select up to 100 files simultaneously
- Selecting one file or a range of files with index numbers

1 Press the <Services Home> button.

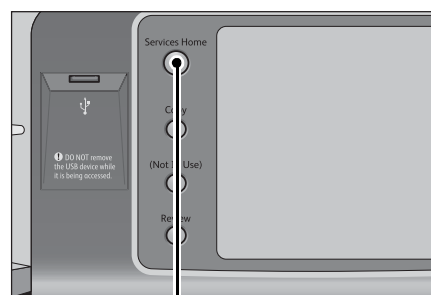

<Services Home> button


2 Select [Media Print - Photos].

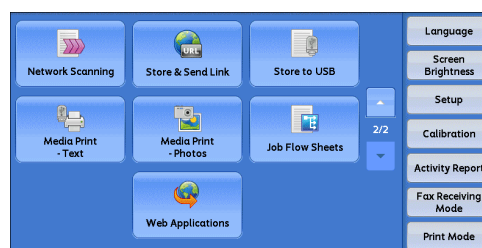

The machine starts retrieving files from the medium. During the retrieval, a screen appears on the control panel indicating that the files are being transferred.

Note • Index numbers from 001 to 900 are automatically assigned to the files retrieved.

3 After the files are retrieved, select either [Select All] or [Select From List] to specify files.

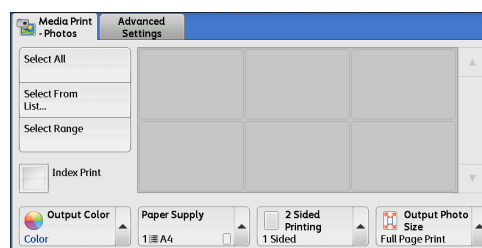

4 After selecting the files to be printed, select the printing options.

For more information on the printing options, refer to "Selecting the Printing Options" (P.369).

Note

- On the pop-up menu displayed when selecting files, you can cancel the selection or display details.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.

■Select All

Selects all image data to be printed.

- Note**
- Depending on the type of files stored in the medium or the directory configuration, some files may not be printed.

■Select From List

Displays the [Select From List] screen.

Refer to "[Select From List] Screen" (P.368).

■Select Range

Use [+] and [-] to specify the range of files to be printed in [First picture] and [Last picture] under [Media Print - Photos].

- Note**
- Select [Select From List] to display a list of files, and reference the list when selecting the range.

■Index Print


Prints a list of the selected files with the index numbers automatically assigned.

For more information on Index Print, refer to "Index Print" (P.371).

[Select From List] Screen

You can select the desired files from a list of files.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - A check mark is placed in the check box for each file selected. To deselect the file, select the file again while the file is selected (highlighted).

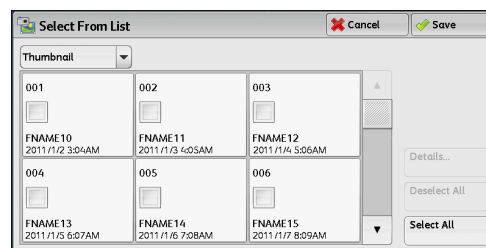**■List**

Display a list of files with their names and stored dates and times.

- Note**
- You can sort the list in ascending or descending order by selecting [# ▲], [Name], or [Date & Time]. The number of files selected appears on the top on the screen.

■Thumbnail

Displays a list of the images and names of the files.

- Important**
- The thumbnail view may not be available for some files. If a file is not displayed in thumbnail view, display it in list view or in Index Print.
 - Characters and images may not be correctly displayed in thumbnail view because they are reduced in size.

- Note**
- An image is displayed in thumbnail view in the orientation with which the file was stored.

■Details

Displays detailed information on the selected (highlighted) file. To print the file, select the [Print] check box on the [Details] screen.

■Deselect All

Deselects all selected files.

■Select All

Selects all files.

Selecting the Printing Options

You can set the printing options on the [Media Print - Text] or [Media Print - Photos], and [Advanced Settings] tabs.

By default, pressing the <Custom 3> (Review) button on the control panel allows you to view a list of the setting values.

Media Print - Photos

Tab	Item	Setting Value
-	Quantity	Specify the number of print sets in the range of 1 - 999, using the numeric keypad.
Media Print Photos	Output Color	Color, Black & White
	Paper Supply	Trays 1 - 6 Note • Select the tray in which any of the following sizes of paper is loaded: SRA3, B4, A4, A4□, 8.5 x 11", 8.5 x 11"□, B5, B5□. • When the desired tray is not displayed, select [More], and on the screen displayed, select the tray. When you select [More] and then [Bypass], you can set [Paper Size] and [Paper Type]. • Paper Size Select the paper size to be used from the list: SRA3, B4, A4, A4□, 8.5 x 11", 8.5 x 11"□, B5, B5□, 100 x 148 mm • Paper Type Select the paper type to be used from the list.
	2 Sided Printing	Off, Long Edge Flip, Short Edge Flip
Media Print Photos	Output Photo Size	• Full Page Print • 5 x 7" When you select [Output Size] on the screen displayed after selecting [More], the following sizes are selectable: A4, 8.5 x 11", 100 x 148 mm, 3.5 x 5", 5 x 7" Note • According to the size selected here and the paper size, only the photos fitting on one sheet of paper are aligned and printed. If you select [1 Picture per Page], one sheet of paper is used for one file and printed. • 3 Pictures per Page (Center) When you select [Pictures per Page] on the screen displayed after selecting [More], the following options are available: 2 Pictures, 3 Pictures (Center), 3 Pictures (Left), 4 Pictures, 6 Pictures, 8 Pictures
Advanced Settings	Bitmap Smoothing	Off, On

Note • When you select a paper size smaller than the image size, the image is automatically reduced. When you select a paper size larger than the image size, the image is printed at its original size.

- The features displayed on the [Media Print - Photos] and [Advanced Settings] screens may vary depending on the combination of the optional components installed on the machine.

Media Print - Text

Tab	Item	Setting Value
-	Quantity	Specify the number of print sets in the range of 1 - 999, using the numeric keypad.
Media Print Text	Output Color	Color, Black & White
	Paper Supply	Trays 1 - 6 Note • Select [Auto Select] or the tray in which any of the following sizes of paper is loaded: A3, B4, A4, A4□, B5, B5□, A5, A5□, 8.5 x 11", 8.5 x 11"□, 8.5 x 14", 11 x 17" • When you select [Auto Select], the machine automatically selects a tray that contains the same size of paper as the document, and prints the document at its original size. • When the desired tray is not displayed, select [More], and on the screen displayed, select the tray. When you select [More] and then [Bypass], you can set [Paper Size] and [Paper Type]. • Paper Size Select the paper size to be used from the list: A3, B4, A4, A4□, B5, B5□, A5, A5□, 8.5 x 11", 8.5 x 11"□, 8.5 x 14", 11 x 17" • Paper Type Select the paper type to be used from the list.
	2 Sided Printing	Off, Long Edge Flip, Short Edge Flip
Media Print Text	Staple	Specify the stapling/punching positions. When the desired stapling/punching positions are not displayed, select [More]. Important • If you select and print multiple documents, all of the documents are stapled together. To staple only one document, print only that document.
Advanced Settings	Pages per Side	Off, 2 Pages, 4 Pages
	Bitmap Smoothing	Off, On

- Note**
- When you select a paper size smaller than the document size, the document image is automatically reduced. When you select a paper size larger than the document size, the document is printed at its original size.
 - The features displayed on the [Media Print - Text] and [Advanced Settings] screens may vary depending on the combination of the optional components installed on the machine.

Index Print

- In the Media Print - Photos mode, a list of 30 x 40 mm reduced images, plus index numbers, file names, and dates when images were stored in the medium are printed.
- In the Media Print - Text mode, names (up to 2 lines and 100 characters), dates when files were stored in the medium, and the total number of files are printed.

You can specify only the number of print sets for Index Print, in the range from 1 - 999 sets in 1 set increments. For other printing options, the settings you have specified for Media Print - Text or Media Print - Photos before selecting the [Index Print] check box will be effective. To change these settings, deselect the [Index Print] check box, change the print settings, and then perform Index Print. The setting values return to the defaults if the machine is rebooted.

The following setting items are restricted when you select Index Print.

Setting Item	Value
Output Color	In the Media Print - Photos mode • Color only In the Media Print - Text mode • Black & White only
Paper Supply	Trays 1 - 5 Note • Select the tray in which any of the following sizes of paper is loaded: A3, A4, or 8.5 x 11".
2 Sided Printing	Not available
Staple	Not available
Pages per Side	Not available

11 Job Status


This chapter describes how to check the status of jobs and operate the jobs.

- Job Status Overview 374
- Checking Current/Pending Jobs 375
- Checking Completed Jobs 377
- Printing and Deleting Stored Jobs 378
- Printing Pending Jobs 392
- Handling Error Terminations 393

Job Status Overview

The Job Status feature allows you to check current, pending, and completed jobs. You can also cancel printing and print jobs that are waiting to be output or resumed.

- 1 Press the <Job Status> button.

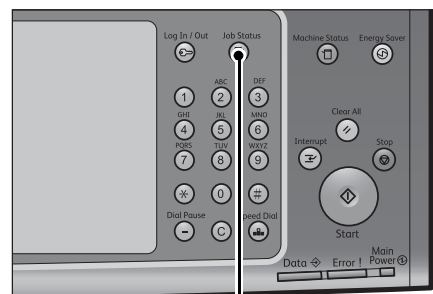

<Job Status> button

You can operate the following on the [Job Status] screen.

■Checking current/pending jobs

Lists current and pending jobs, and displays their details. Also allows you to cancel current or pending jobs.

For more information, refer to "Checking Current/Pending Jobs" (P.375).

■Checking completed jobs

Displays the status of completed jobs, and their details.

For more information, refer to "Checking Completed Jobs" (P.377).

■Checking stored jobs

Prints or deletes jobs stored using the Charge Print, Secure Print, Private Charge Print, Sample Set, and Delayed Print features.

For more information, refer to "Printing and Deleting Stored Jobs" (P.378).

■Printing Pending Jobs


Prints jobs that are waiting to be output or resumed.

For more information, refer to "Printing Pending Jobs" (P.392).

Checking Current/Pending Jobs

This section describes how to check current or pending jobs. On the status screen, you can cancel or preferentially execute jobs.

- 1 Press the <Job Status> button.

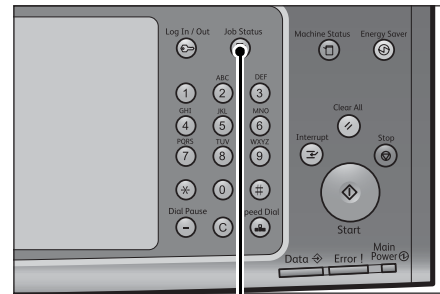


<Job Status> button

- 2 Select the job to be canceled or preferentially executed.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - From the drop-down menu, you can select and display the desired type of jobs

Active Jobs	Completed Jobs	Secure Print Jobs & More	Print Waiting Jobs	Close
All Jobs			Display Time	
File / Job Type	Remote Terminal	Status	Progress	
02222 - Copy	11x22mm:3%	Copying	55/66	▲
02223 - Print	11x22mm:3%	Print Wait	66	
Get Information	XXXXXX			
Get Information	XXXXXX			
Get Information	XXXXXX			

- 3 Select [Cancel] or [Promote Job].

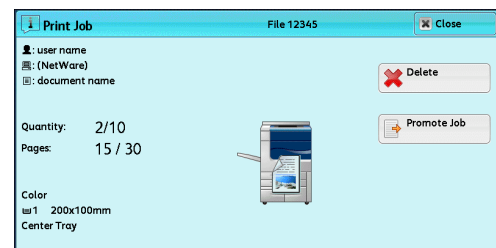

■Print Waiting Jobs

Prints the jobs that are waiting to be output or resumed.

For more information, refer to "Printing Pending Jobs" (P.392).

■Display Time

Displays the estimated time required to complete the job. The time is displayed in the form of either [Cumulative time for all jobs] or [Time required for single job].

- The estimated time for [Cumulative time for all jobs] is not displayed for the following jobs:
 - Jobs that are not spooled on the machine, such as a job without using a printer driver and quantity selection and Fax Immediate Reception.
 - Job with time difference between spooling and printing, such as Secure Print.
 - Pending jobs
 - Jobs that are waiting to be processed due to a paper jam or running out of paper.
- For or more information on Fax Immediate Reception, refer to "16 Appendix" > "Notes and Restrictions on the Use of the Fax Feature" in the Administrator Guide.
- The estimated time is not displayed while data is being processed.

You can change the form in which the estimated time is displayed. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Estimated Job Time" in the Administrator Guide.

■ **Delete**

Cancels the current or pending job.

■ **Promote Job**

Preferentially executes the selected job.

If you select this button, [🔄] appears under the [Status] of the selected job.

■ **Delete**

Stops processing the job.

■ **Last Original**

Select this button to end scanning of documents. The job is then executed.

■ **Next Original**

Select this button when you have another document to scan.

■ **Start**

Resumes the suspended job.

■ **Change Quantity**


Displays the [Change Quantity] screen on which you can change the number of copies entered before. Enter a new quantity using the numeric keypad.

Checking Completed Jobs

This section describes how to check completed jobs.

You can check whether a job has been completed successfully. Selecting a job allows you to see its details.

- 1 Press the <Job Status> button.

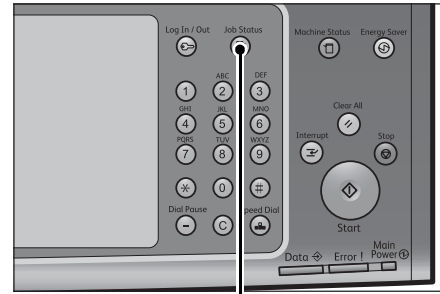

<Job Status> button

- 2 Select the [Completed Jobs] tab.

- Note**
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Note**
- From the drop-down menu, you can select and display the desired type of jobs.

Active Jobs			
Completed Jobs			
Secure Print Jobs & More			
Close			
All Jobs			
Group Parent Jobs			
File / Job Type	Remote Terminal	Status	Pages
- Copy	A4	Completed	1/1
- Secure Print	BARUTAN-HOST NAME	Completed	2/3
33333 - Print Fax		Completed	
22222 - Print Fax	Fax Received	Completed	
02222 - Receive Fax Relay	FAX_TRNMSMSN_RCV11	Completed	

- 3 Select a job to see the details.
- 4 Select [Close] after the confirmation.

Copy			
Close			
Original Size	: A4 D	1	
Output Color	: Black & White		
Status	: Completed	Time Completed	: 2011/1/26 3:35 PM
Quantity	: 1 / 1		
Pages	: 1 / 1		
Paper	: A4		
Print this Job History Report			

■Group Parent Jobs

Allows you to check the list or history of related jobs (such as job flow jobs).

■Show Children Jobs

Displays a job list.

■Print this Job History Report

Prints the Job History Report.

■Print this Job Report

Prints the Job Report.


Printing and Deleting Stored Jobs

This section describes how to print or delete jobs stored with the Secure Print or Sample Set feature, or stored with the [Receive Control] setting of the Charge Print feature. The [Secure Print Jobs & More] screen allows you to print or delete stored jobs.

The following shows the reference section for each feature.


Secure Print.....	378
Sample Set.....	380
Delayed Print.....	382
Charge Print	384
Private Charge Print	386
Public Folder.....	388
Undelivered Faxes.....	390

1 Press the <Job Status> button.

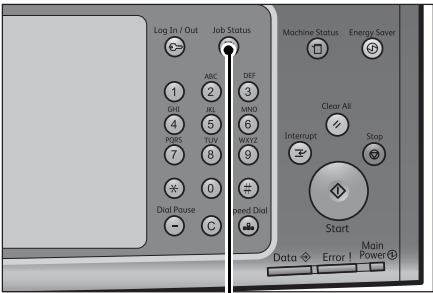

<Job Status> button

2 Select the [Secure Print Jobs & More] tab.

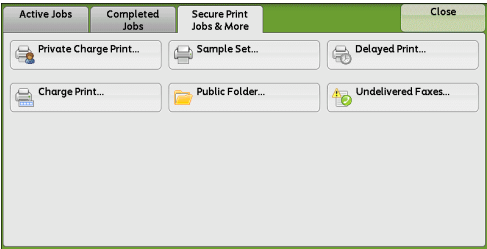

[Secure Print] and [Private Charge Print] are not displayed simultaneously on the screen. For more information on the settings, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

Secure Print

This feature allows you to temporarily store print data in the machine to print it with the print command from the machine. The feature also enables you to set a passcode, which is helpful to print confidential documents.

The following describes how to print or delete jobs stored with the Secure Print feature.

- Note**
- This feature does not appear when [Receive Control] in [Charge/Private Print Settings] is set to either of the following:
 - Select [According to Print Auditor], and then select [Save as Private Charge Print Job] in [Job Login Success].
 - Select [Save as Private Charge Print Job].


When [Save as Private Charge Print Job] or [Save as Charge Print Job] is selected in [Receive Control] under [Charge/Private Print Settings], jobs will not be saved in [Secure Print] under [Secure Print Jobs & More] even if you select [Secure Print] on the print driver. For more information, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

For information on how to operate a Secure Print job, refer to the print driver's help.

1 Select [Secure Print].


2 Select the user to be checked, and select [Job List].

- Note**
- Select [Refresh] to display the updated information.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can enter a user ID in [Go to] using the numeric keypad to display the user ID at the top of the list.

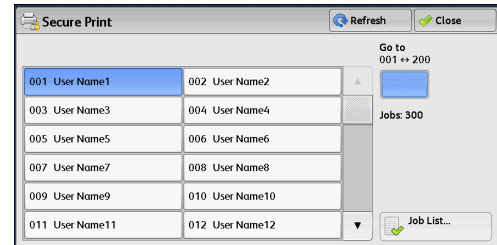


3 Enter the passcode, and select [Confirm].

- Note**
- If the passcode is not set, the passcode entry screen does not appear.

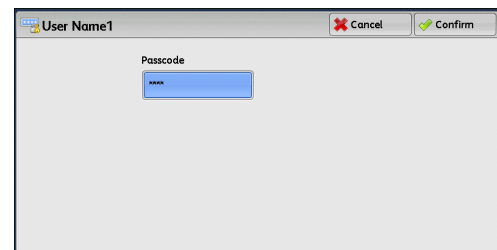

4 Select the job to be printed or deleted.

- Note**
- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.

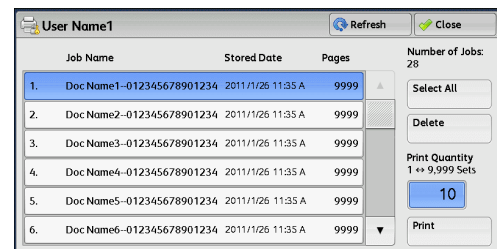

5 Select any option.

6 When printing, specify the number of print sets using the numeric keypad.

■ **Select All**

Selects all jobs. To deselect all the jobs, select this button again.

■ **Delete**

Deletes the Secure Print job.

- Note**
- If jobs with the same Billing ID are all deleted, the Billing ID will be deleted. Refer to "When [Delete] is Selected" (P.380).

■ **Print Quantity**

Specify the number of print sets.

■ **Print**

Prints the Secure Print job. After printing, the job is deleted.

Refer to "When [Print] is Selected" (P.380).

When [Delete] is Selected

- 1 Select [Delete].



■Delete

Deletes the job.

Important • Once the job is deleted, it cannot be restored.


■Cancel

Cancels deleting the job.

When [Print] is Selected

- 1 Specify how to process the job after printing.

Note • The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.

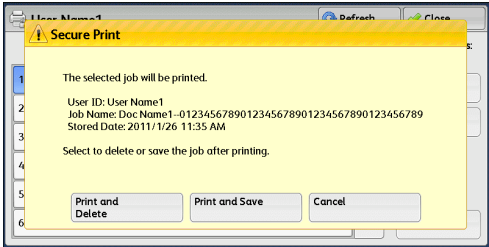

■Print and Delete

Starts printing the job. After printing, the job is deleted.

■Print and Save

Starts printing the job. After printing, the job remains undeleted.

■Cancel

Cancels printing the job.

Sample Set

Before printing multiple sets of a document, you can first print one set for trial, and then print the remaining sets from the machine.

The following describes how to print or delete jobs stored with the Sample Set feature.

For information on how to operate a Sample Set job, refer to the print driver's help.

Note • When [Save as Private Charge Print Job] or [Save as Charge Print Job] is selected in [Receive Control] under [Charge/Private Print Settings], jobs will not be saved in [Sample Set] under [Secure Print Jobs & More] even if you select [Sample Set] on the print driver.



For more information, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

- 1 Select [Sample Set].
- 2 Select the user you want to check, and select [Job List].

- Note**
- Select [Refresh] to display the updated information.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can enter a user ID in [Go to] using the numeric keypad to display the user ID at the top of the list.

- 3 Select the job to be printed or deleted.

- Note**
- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.

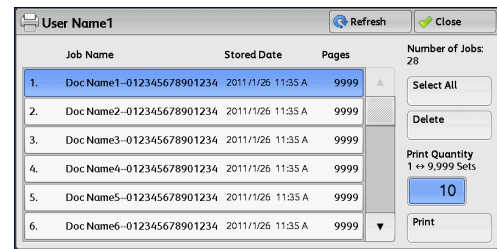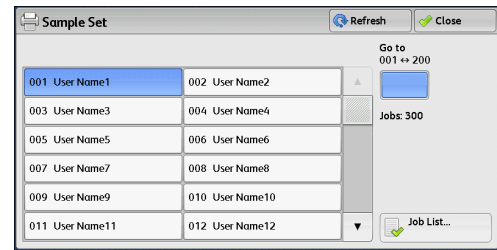

- 4 Select any option.
- 5 When printing, specify the number of print sets using the numeric keypad.

■Select All

Selects all jobs. To deselect all the jobs, select this button again.

■Delete

Deletes the Sample Set job.

Refer to "When [Delete] is Selected" (P.381).

■Print Quantity

Specify the number of print sets using the numeric keypad.

■Print

Prints the Sample Set job. After printing the remaining sets of the job, the job is deleted.

Refer to "When [Print] is Selected" (P.382).

When [Delete] is Selected

- 1 Select [Delete].



■Delete

Deletes the job.

Important • Once the job is deleted, it cannot be restored.


■Cancel

Cancels deleting the job.

When [Print] is Selected

1 Select [Yes].

- Note
 - The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.

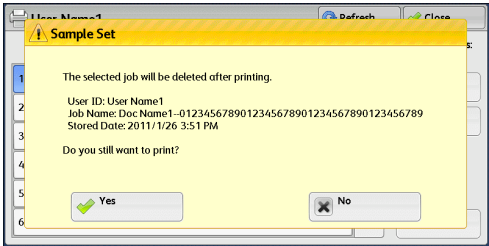

■Yes

Starts printing the job. After printing, the job is deleted.

- Note
 - After a sample set is output, the remaining sets will automatically be output if the machine is not instructed for the period specified in [Auto Job Release]. To prevent the remaining sets from being output automatically, set [Auto Job Release] to [Off]. For information on how to set [Auto Job Release], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Job Release" in the Administrator Guide.

■No

Cancels printing the job.

Delayed Print

This feature allows you to temporarily store print data on the machine to print it at specified time.

Up to 100 jobs can be stored (queued) simultaneously for the Delayed Print feature. If the power is switched off when jobs are in queue (before the specified print time), the jobs whose print time has elapsed will automatically be printed immediately after the power is switched on again.

The following describes how to print or delete jobs stored with the Delayed Print feature.


For information on how to operate a Delayed Print job, refer to the print driver's help.

- Note
 - When [Save as Private Charge Print Job] or [Save as Charge Print Job] is selected in [Receive Control] under [Charge/Private Print Settings], jobs will not be saved in [Delayed Print] under [Secure Print Jobs & More] even if you select [Delayed Print] on the print driver. For more information, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

1 Select [Delayed Print].

2 Select the job to be printed or deleted.

- Note
 - Select [Refresh] to display the updated information.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - [Print Time] shows the time to start printing.

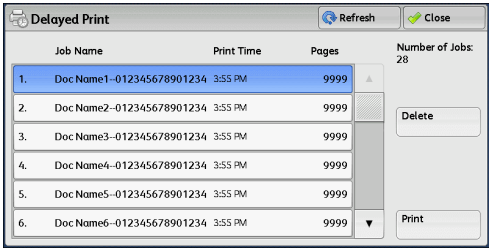

3 Select any option.

■Delete

Deletes the Delayed Print job.

Refer to "When [Delete] is Selected" (P.383).


■Print

Prints the Delayed Print job. After printing, the job is deleted. If printed manually, the job will not be printed at the specified time.

Refer to "When [Print] is Selected" (P.383).

When [Delete] is Selected

1 Select [Delete].

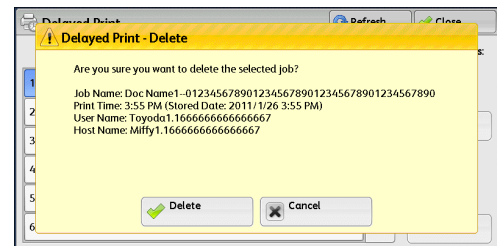

■Delete

Deletes the job.

Important • Once the job is deleted, it cannot be restored.

■Cancel


Cancels deleting the job.

When [Print] is Selected

1 Select [Yes].

Note

- The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.

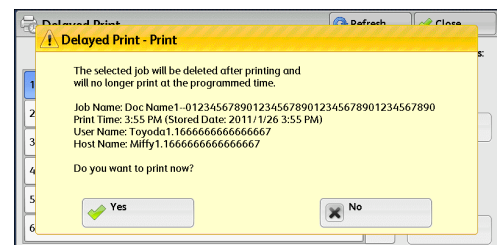

■Yes

Starts printing the job. After printing, the job is deleted.

■No

Cancels printing the job.

Charge Print

This feature authenticates users on the machine to prevent unauthorized users from operating print jobs. When this feature is enabled, the machine prints only the jobs of authenticated users. You can also configure the machine to store print jobs temporarily, and then print them from the machine's control panel.

If received print jobs are set to be saved as Charge Print under [Tools] > [Authentication/Security Settings] > [Authentication] > [Charge/Private Print Settings] > [Receive Control], the jobs are saved for each Billing ID. Any jobs that were not given a Billing ID on the print driver are saved in [No User ID].

For more information on how to register user IDs on the machine, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" in the Administrator Guide.


- Note
 - Unlike the Private Charge Print feature, the Charge Print feature can store jobs without a user ID, such as e-mail printing and print jobs sent from ContentsBridge or CentreWare Internet Services, and can print the jobs after authenticating users.
 - [Charge Print] appears when [Save as Charge Print Job] is selected by using one of the following procedures in the System Administration mode:
 - Select [Save as Charge Print Job] in [Receive Control].
 - Select [According to Print Auditor] in [Receive Control], and then select [Save as Charge Print Job] in [Job Login Failure].
 - Select [According to Print Auditor] or [Save as Private Charge Print Job] in [Receive Control], and then select [Save as Charge Print Job] in [Job without User ID].

For information on how to set Charge Print, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

The following describes how to print and delete a job stored with the Charge Print feature.


- 1 Press the <Log In/Out> button on the control panel, or select the login information field on the touch screen.
- 2 Enter the user ID, and select [Enter].

- Note
 - When the passcode is set, enter the user ID and select [Next]. Then, enter the passcode and select [Enter].
 - While a user is authenticated, the <Log In/Out> button lights up on the control panel.
 - To log out of the machine, press the <Log In/Out> button on the control panel.

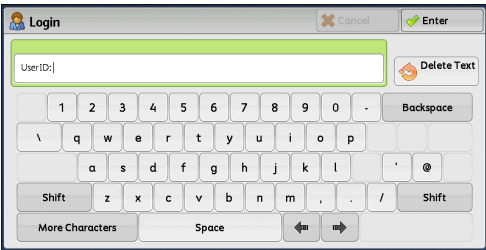

- 3 Select [Charge Print].
- 4 Select the user to be checked, and select [Job List].

- Note
 - Select [Refresh] to display the updated information.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.
 - You can enter a user ID in [Go to] using the numeric keypad to display the user ID at the top of the list.

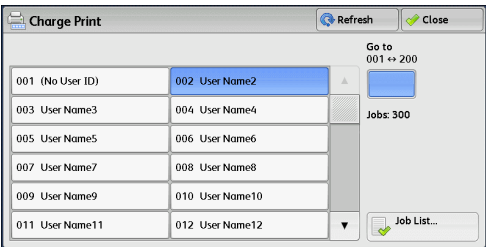

5 Enter the passcode, and select [Confirm].

Note • If the passcode is not set, the passcode entry screen does not appear.

6 Select the job to be printed or deleted.

	Job Name	Stored Date	Pages
1.	Doc Name1-012345678901234	2011/1/26 11:35 A	9999
2.	Doc Name2-012345678901234	2011/1/26 11:35 A	9999
3.	Doc Name3-012345678901234	2011/1/26 11:35 A	9999
4.	Doc Name4-012345678901234	2011/1/26 11:35 A	9999
5.	Doc Name5-012345678901234	2011/1/26 11:35 A	9999
6.	Doc Name6-012345678901234	2011/1/26 11:35 A	9999

7 Select any option.

8 When printing, specify the number of print sets using the numeric keypad.

■ **Delete**

Deletes the Charge Print job.
Refer to "When [Delete] is Selected" (P.385).

■ **Print Quantity**

Specify the number of print sets using the numeric keypad.

■ **Print**

Prints the Charge Print job. After printing, the job is deleted.
Refer to "When [Print] is Selected" (P.386).

When [Delete] is Selected

1 Select [Delete].

■ **Delete**

Deletes the job.
Important • Once the job is deleted, it cannot be restored.


■ **Cancel**

Cancels deleting the job.

When [Print] is Selected

1 Specify how to process the job after printing.

- Note**
- The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.

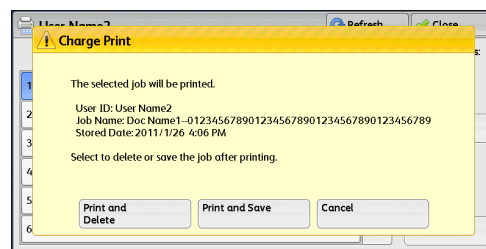

■Print and Delete

Starts printing the job. After printing, the job is deleted.

■Print and Save

Starts printing the job. After printing, the job remains undeleted.

■Cancel

Cancels printing the job.

Private Charge Print

This feature allows you to temporarily store print data in the machine for each authentication user ID, and request on the machine's control panel to print the data. As the feature enables you to select and print only necessary jobs, you can avoid printing unnecessary jobs. Furthermore, the machine displays only the jobs of authenticated users and their associated sub users to securely protect the privacy of the users. The Private Print feature is suitable for authenticating and managing specific users managed by the system administrator.

If received print jobs are set to be saved with Private Charge Print, the jobs are saved for each authentication user ID.

- Note**
- An application (sold separately) is required to use the feature that associates sub users with the user ID of a login user. For more information, contact our Customer Support Center.
 - [Private Charge Print] is displayed when [Receive Control] in [Charge/Private Print Settings] is set to either of the following:
 - Select [According to Print Auditor] in [Receive Control], and then select [Save as Private Charge Print Job] in [Job Login Success].
 - Select [Save as Private Charge Print Job] in [Receive Control].
 - When the Private Charge Print feature is selected, you cannot specify normal print, Secure Print, Sample Set, Delayed Print on the print driver.

The Private Charge Print feature restricts the use of the machine through either user ID authentication or card authentication (only the IC Card Reader (optional) is available), or the combination of both. For information on the types of authentication, refer to "14 Authentication and Accounting Features" > "Authentication" > "Types of Authentication" in the Administrator Guide.


To delete a print job instructed with an invalid user ID, display the list of print jobs after logging in as a system administrator, and then select the job to be deleted. For more information, refer to "3 Maintenance" > "Deleting a Private Charge Print Job with an Invalid User ID" in the Administrator Guide. For information on how to set a User ID, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

The following describes how to print or delete a job stored with the Private Charge Print feature.

- 1 Press the <Log In/Out> button on the control panel, or select the login information field on the touch screen.

- 2 Enter the user ID, and select [Enter].

- Note**
- When the passcode is set, enter the user ID and select [Next]. Then, enter the passcode and select [Enter].
 - While the user is authenticated, the <Log In/Out> button lights up on the control panel.
 - To log out of the machine, press the <Log In/Out> button on the control panel.

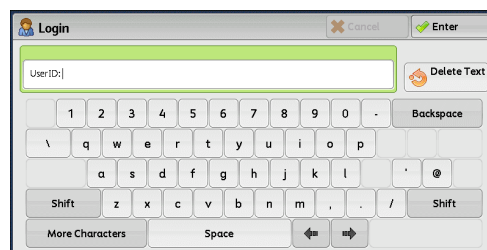


- 3 Select [Private Charge Print].

- Note**
- If you are authenticated as a system administrator, selecting [Private Charge Print] will display a list of authentication user IDs. Select a user ID from the list, and then select [Job List] to display a list of jobs stored for the selected user.

- 4 Select the job to be printed or deleted.

- Note**
- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.

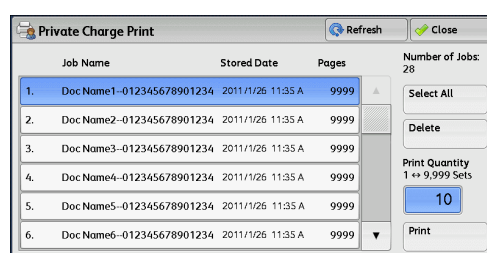

- 5 Select any option.

- 6 When printing, specify the number of print sets using the numeric keypad.

■Select All

Selects all jobs. To deselect all the jobs, select this button again.

■Delete

Deletes the Private Charge Print job.

- Note**
- If jobs with the same user ID are all deleted, the user ID will be deleted. Refer to "When [Delete] is Selected" (P.388).

■Print Quantity


Specify the number of print sets using the numeric keypad.

■Print

Prints the Private Charge Print job. After printing, the job is deleted. Refer to "When [Print] is Selected" (P.388).

When [Delete] is Selected

- 1 Select [Delete].

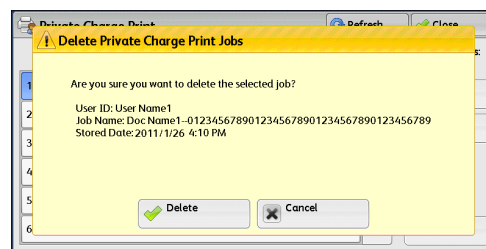

■Delete

Deletes the job.

Important • Once the job is deleted, it cannot be restored.


■Cancel

Cancels deleting the job.

When [Print] is Selected

- 1 Specify how to process the job after printing.

Note • The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.

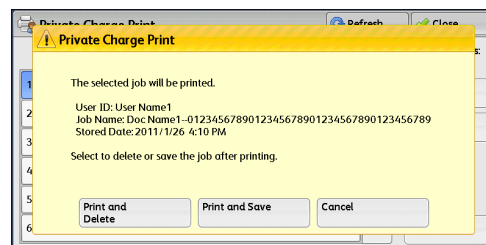

■Print and Delete

Starts printing the job. After printing, the job is deleted.

■Print and Save

Starts printing the job. After printing, the job remains undeleted.

■Cancel

Cancels printing the job.

Public Folder


This feature allows you to store data in the machine and send the data by operating on a remote machine.

The following describes how to print or delete a job stored in a public folder.

For information on how to operate public folders, refer to "Store for Polling (Storing Files on the Machine that a Remote Machine can Retrieve)" (P.238).


Note • This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

1 Select [Public Folder].

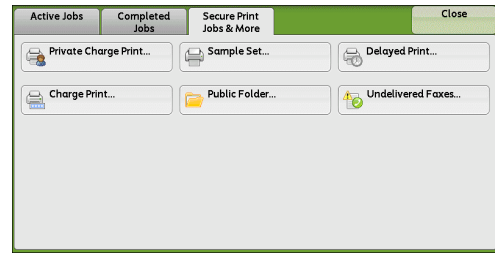

2 Select the job to be printed or deleted.

- Note**
- Select [Refresh] to display the updated information.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.

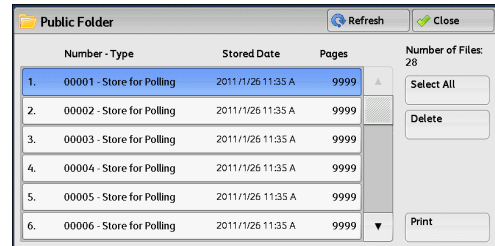

3 Select any option.

■ **Select All**

Selects all jobs. To deselect all the jobs, select this button again.

■ **Delete**

Deletes the selected job stored in the public folder.

Refer to "When [Delete] is Selected" (P.389).


■ **Print**

Prints the selected job stored in the public folder.

Refer to "When [Print] is Selected" (P.389).

When [Delete] is Selected

1 Select [Delete].

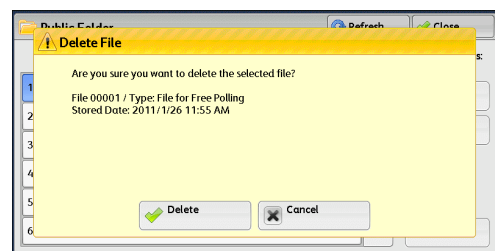

■ **Delete**

Deletes the job.

Important • Once the job is deleted, it cannot be restored.

■ **Cancel**

Cancels deleting the job.

When [Print] is Selected


Starts printing the job.

Undelivered Faxes

The following describes how to re-send or delete an undelivered fax job.


- Note
 - This feature may not appear depending on the settings in the System Administration mode.
 - This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

- 1 Select [Undelivered Faxes].
- 2 Select the job to be re-sent or deleted.

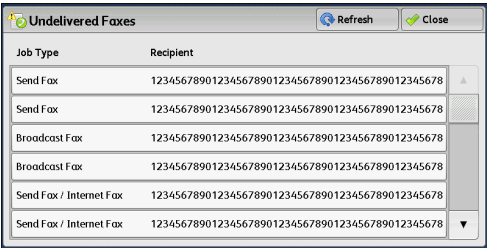

- Note
 - Select [Refresh] to display the updated information.
 - Select [▲] to return to the previous screen or [▼] to move to the next screen.

- 3 Select any option.
To re-send to the previously specified fax number, press the <Start> button.

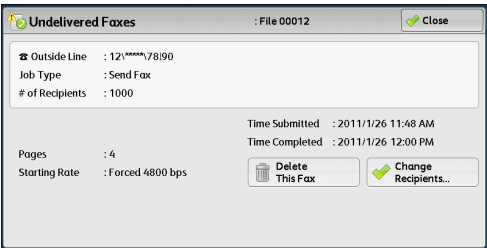

■Delete This Fax

Deletes the undelivered fax job.
Refer to "When [Delete This Fax] is Selected" (P.390).

■Change Recipients

Allows you to change the fax recipient and re-send the undelivered fax job.
Refer to "When [Change Recipients] is Selected" (P.391).

When [Delete This Fax] is Selected

- 1 Select [Delete].



■Delete

Deletes the undelivered fax job.

■Cancel

Cancels deleting the undelivered fax job.

When [Change Recipients] is Selected

Specify a fax recipient for the undelivered fax job.

Besides the fax recipient, the following features can be changed on the control panel:

- Fax type
- Starting Rate

Important • If the fax recipient has been changed, header information will not be added even if [Transmission Header Text] is set to [Display Header].

For information on how to specify fax recipients, refer to "Step 3 Specifying Destinations" (P.169).


Printing Pending Jobs

After the last user operation on the control panel of the machine, a job is waiting to be printed until the period of time specified in [Auto Print] elapses, instead of being printed immediately. You can forcibly print this pending job without waiting for this time period to elapse.

If a job is paused by the <Stop> button and is waiting to be resumed, you can also resume the job. If there are multiple jobs, subsequent jobs are printed after the paused job has been printed.


Note • If there are no pending jobs, the [Print Waiting Jobs] button is disabled.
For information on how to set [Auto Print], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Print" in the Administrator Guide.

1 Press the <Job Status> button.

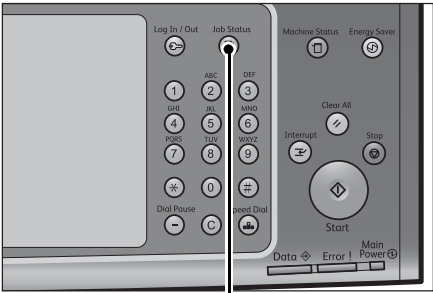

<Job Status> button

2 Select [Print Waiting Jobs].

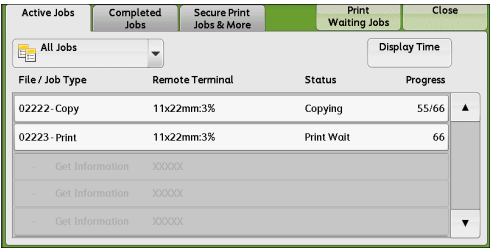

Handling Error Terminations

This section describes how to handle error terminations.

■For a Print Job

Select a job shown as an error termination on the [Completed Jobs] tab to check the error code. Follow the instructions of the error code to solve the problem.

If an error occurs during a print job, the machine can be configured either to pause the print job until the error is confirmed by the user, or to automatically cancel the error job so that subsequent jobs can be printed.

For more information on the setting, refer to "5 Tools" > "Print Service Settings" in the Administrator Guide.

For information on error codes, refer to "15 Problem Solving" > "Error Code" in the Administrator Guide.

■For a Fax Job

A Transmission Report - Job Undelivered is printed.

For more information on the Transmission Report - Job Undelivered, refer to "4 Machine Status" > "Machine Information" > "Automatically Printed Reports/Lists" > "Transmission Report - Job Undelivered" in the Administrator Guide. For more information on how to print the Transmission Report - Job Undelivered automatically, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Transmission Report - Job Undelivered" in the Administrator Guide.

■For a Scan Job

A Transmission Report - Job Undelivered is printed.

For more information on the Transmission Report - Job Undelivered, refer to "4 Machine Status" > "Machine Information" > "Automatically Printed Reports/Lists" > "Transmission Report - Job Undelivered" in the Administrator Guide. For more information on how to print the Transmission Report - Job Undelivered automatically, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Transmission Report - Job Undelivered" in the Administrator Guide.

■For Other Jobs

Print a Job History Report, and check the execution results.

For information on the Job History Report, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Job History Report" in the Administrator Guide.

When an error code is listed in the Transmission Report - Job Undelivered or the Job History Report, refer to "15 Problem Solving" > "Error Code" in the Administrator Guide.

12 Computer Operations

This chapter describes how to print documents, import scanned files, use Direct Fax, and operate CentreWare Internet Services on your computer.

- Note**
- Some models do not support the features described in this chapter. An optional component is required. For more information, contact our Customer Support Center.
 - The computer screen images shown in this chapter are as of January 2011.
 - The procedures in this chapter may vary depending on the driver and utility software being used due to the upgrades.

• Features Overview.....	396
• Print	397
• E-mail Printing	400
• Sending Fax.....	402
• Importing Scanned Data	404
• CentreWare Internet Services	412

Features Overview

This section describes an overview of features you can perform from a computer.

■Printing

Submits a print job to the machine from a computer.

For more information, refer to "Print" (P.397).

■E-mail Printing

Submits a print job to the machine from a computer by sending e-mail attached with a document. The received e-mail is automatically printed from the machine according to the settings on the machine.

For more information, refer to "E-mail Printing" (P.400).

■Sending Fax

Sends a fax directly from a computer.

For more information, refer to "Sending Fax" (P.402).

■Importing Scanned Data

Imports files stored in a folder of the machine to a computer.

For more information, refer to "Importing Scanned Data" (P.404).

■CentreWare Internet Services

Displays the machine status and job status. The feature also allows you to change settings as well as to import files stored in a folder.

For more information, refer to "CentreWare Internet Services" (P.412).

For information on how to import scanned data stored in a folder, refer to "Importing Using CentreWare Internet Services" (P.409).

Print

This section describes how to print with the machine by operating on a computer.

Print Features

The main print features of the machine are as follows:

Printing Using a Print Driver

For more information on print features, click [Help] on the print driver screen to view the print driver's help. For information on printing, refer to "Printing" (P.399).

Note • Some features become available after you make option settings on the [Configuration] tab. The unavailable features are grayed out.

■Pages Per Sheet (N-Up)

Prints multiple pages onto one sheet of paper.

■2-Sided Print

Prints data on both sides of paper.

■Poster

Splits one page of print data into multiple sheets of paper and enlarges the printed image to fit the size of each sheet. Used to create large posters.

■Booklet Creation

Performs 2-sided printing and page allocation for printing a booklet in the correct page order.

■Transparency Separators

Automatically inserts a blank sheet of paper as a separator each time a transparency is printed.

■Watermark

Prints preset text, such as "Confidential", over the print data.

■Secure Print

Temporarily stores the print data on the machine, to print it with the print command from the machine. This feature allows you to set a passcode, which is helpful to print confidential documents.

For information on how to print a Secure Print job, refer to "Secure Print" (P.378).

■Sample Set

Before printing multiple sets of a document, you can first print one set for trial, and then print the remaining sets from the machine.

For information on how to print a Sample Set job, refer to "Sample Set" (P.380).

■Delayed Print

Temporarily stores the print data on the machine to print it at specified time.

For information on how to print a Delayed Print job, refer to "Delayed Print" (P.382).

■Store in Remote Folder

Temporarily stores the print data in a registered folder, to print the data with the print command from the machine.

Important • The print result of the Store in Remote Folder feature may be inferior to the other print results in quality.

For information on how to print files in a folder, refer to "Printing Files in a Folder" (P.332).

Direct Printing

Allows you to directly send TIFF, PDF, JPEG, XPS, XDW (DocuWorks), or XBD (DocuWorks binder) format files from a computer to the machine without using a print driver.

For information on Direct Printing, refer to "Print" > "Job Submission" in the help of CentreWare Internet Services.

E-mail Printing

Allows you to send e-mail with the TIFF, PDF, JPEG (JFIF), XPS, XDW (DocuWorks), or XBD (DocuWorks binder) format documents attached from a computer to the machine. The received e-mail is automatically printed from the machine.

Note • If the Authentication feature is enabled, received e-mails are not printed automatically.

For information on how to use E-mail Printing, refer to "E-mail Printing" (P.400).

Print Features Using Authentication Information

■Charge Print

This feature authenticates users on the machine to prevent unauthorized users from operating print jobs. When this feature is enabled, the machine prints only the jobs of authenticated users. The machine can also be configured to store multiple print jobs temporarily until the user requests to print them on the control panel.

In addition, by registering an authentication user ID and passcode on the machine in advance, only the registered user can print the jobs.

Note • To prohibit other users from operating jobs, register a passcode for your Billing ID on the print driver.

For information on how to set Charge Print, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide. For information on how to print a Charge Print job, refer to "Charge Print" (P.384).

■Private Charge Print

This feature allows you to temporarily store print data in the machine for each authentication user ID, and request on the machine's control panel to print the data. As the feature enables you to select and print only necessary jobs, you can avoid printing unnecessary jobs. Furthermore, the machine displays only the jobs of authenticated users and their associated sub users to securely protect the privacy of the users. This feature is suitable for authenticating and managing specific users managed by the system administrator.

Note • If you do not want to store unnecessary jobs, you can configure the machine to store only the jobs whose authentication succeeded.
• An application (sold separately) is required to use the feature that associates sub users with the User ID of a login user. For more information, contact our Customer Support Center

For information on how to set Private Charge Print, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide. For information on how to print a Private Charge Print job, refer to "Private Charge Print" (P.386).

Setup

To print from your computer, your computer must have a print driver installed.

For information on how to install the print driver, refer to the manual included in the Driver CD Kit.

- Note**
- When printing using authentication information, you must configure the printer settings on your computer. Make the necessary settings on the [Configuration] tab of the printer's properties. For more information, refer to the print driver's help.

Printing


This following describes how to print documents.

The printing procedure depends on the application software you use. For more information, refer to the documentation provided with the application.

For more information on print features, click [Help] on the print driver screen to view the print driver's help.

- 1 Select [Print] from the [File] menu on the application.
- 2 Confirm [Printer Name] and click [Properties] if necessary.
- 3 Set the properties if necessary.

- Note**
- You can change the print feature in [Job Type].

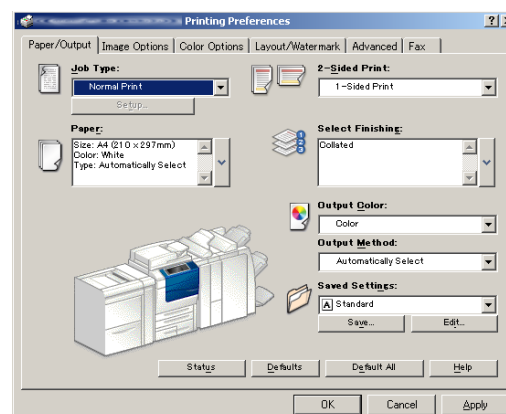

- 4 Click [OK].
- 5 Click [OK] in the [Print] dialog box.

E-mail Printing

You can send e-mail with documents attached from a computer to the machine. The received e-mail is automatically printed from the machine according to the settings on the machine. This feature is called "E-mail Printing".

- Note
 - If the Authentication feature is enabled, received e-mails are not printed automatically.
 - The following file formats can be used: TIFF, PDF, JPEG (JFIF), XPS, XDW (DocuWorks), or XBD (DocuWorks binder).

Setup

To use the E-mail Printing feature, the following settings are required. Check with your system administrator or network administrator whether these settings have been completed.

■E-mail Account Registration

Registering an e-mail account in advance.

■Configuration on the Machine

Configuring the required settings on the machine.
For information on E-mail Environment Settings, refer to "8 E-mail Environment Settings" in the Administrator Guide.


Receiving E-Mail

The following describes how to receive e-mails from Outlook Express on a computer as an example.

- 1 Use your e-mail software to create an e-mail body, and then attach a document to the e-mail if necessary.

Important
 - Only plain text is available for the e-mail body. Change the body text format to plain text on your e-mail application.
 - Any forwarded e-mail (that is attached to another e-mail) cannot be printed.

Note
 - If the extension of the attached file is other than ".tif", ".tiff", ".pdf", ".jpeg", ".jpg", ".jpe", ".jfif", ".xps", ".xdw", and ".xbd", the file may not be printed correctly.
 - Up to 31 documents can be attached.
- 2 Enter the machine's e-mail address as a recipient.

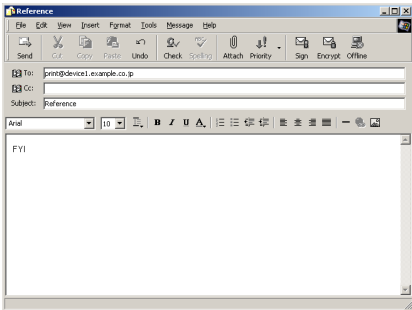

3 Send the e-mail.

Note

- The machine prints the e-mail body and the attached documents according to the following settings. The offset output setting is disabled in all cases.
 - E-mail body:
Default values of the PCL print driver for this machine which is installed on the computer
 - TIFF or JPEG formatted attached file:
Default values of the logical printer set in [Memory Settings] of [TIFF/JPEG] in [Language Emulations] of CentreWare Internet Services
 - PDF formatted attached file:
Settings of PDF Direct Print when [Print Processing Mode] is set to [PDF Bridge] in PDF Direct Print.
Default values of the logical printer configured under [Language Emulations] > [PostScript] > [Logical Printer Number] in CentreWare Internet Services when [Print Processing Mode] is set to [PS] in PDF Direct Print.

Sending Fax

This section describes how to send a fax using the Direct Fax feature. The following procedure uses Windows XP WordPad as an example.

The Direct Fax procedure depends on the application you use. For more information, refer to the documentation provided with the application.


For more information on the Direct Fax feature, click [Help] on the print driver screen to view the print driver's help.

Important • The Direct Fax feature is not available when the Server Fax service is enabled.

Note • This feature does not appear for some models. To use the feature, an optional component is required. For more information, contact our Customer Support Center.

- 1 Select [Print] from the [File] menu on the application.
- 2 Select a fax printer from [Printer Name].
- 3 Click [Properties], and select [Fax] in [Job Type].
- 4 Click [OK].
- 5 Click [OK] in the [Print] dialog box.
- 6 Specify a destination in the [Fax Recipient] dialog box.
- 7 Click [OK].

The [Fax Job Confirmation] dialog box appears after you have sent a fax job. A list of recipients to whom the fax job is being sent will be displayed.

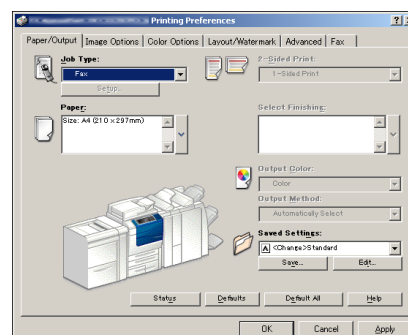

Registering Destinations

The following describes how to register fax destinations from the machine to another machine (ApeosPort-IV C7780/C6680/C5580, DocuCentre-IV C7780/C6680/C5580) in a single operation through a computer.

You can use the same procedure to register fax destinations from another machine (ApeosPort-IV C7780/C6680/C5580, DocuCentre-IV C7780/C6680/C5580) to this machine.

Use CentreWare Internet Services to register fax destinations.

For information on CentreWare Internet Services, refer to "6 CentreWare Internet Services Settings" > "Configuring Machine Settings Using CentreWare Internet Services" in the Administrator Guide.

You can register fax destinations separately on the control panel. For more information, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

Important • Because CentreWare Internet Services is accessible by multiple users simultaneously, the registered data will have a risk to be overwritten if a system administrator ID and passcode are not set. We recommend that data edit is permitted only by a system administrator with a passcode.

- Be sure not to perform this operation simultaneously with the address number registration from the control panel.
- If a number is duplicated, the existing number will be overwritten by the new one.

- A file in CSV format exported by CentreWare Internet Services (address book data) is not designed to be edited or changed by editing software. The data may be damaged when it is edited or changed. Due to the altered data, fax may be sent to undesired recipients. Therefore, do not edit or change the file in CSV format (address book data) with software such as Microsoft® Excel.

Note

- Using CentreWare Internet Services, you can import a CSV format file which is created other than the machine to the Address Book of the machine. For more information, refer to the help of CentreWare Internet Services.
This feature is not available depending on the version of the CSV format file or the model of the machine.
- Using CentreWare Internet Services, you can download a blank form of the Address Book (CSV format file) to a computer. After completing the form on a computer, batch registration of it (a CSV format file) on the machine is available via CentreWare Internet Services. For more information, refer to the help of CentreWare Internet Services.

1 Start up the computer, and a web browser.

2 Enter the machine's IP address or Internet address in the browser address field, and press the <Enter> key.

Note

- If your network uses DNS (Domain Name System) and the machine's host name is registered in the domain name server, you can access the machine using the URL with the combination of the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com", then the URL is "myhost.example.com".
- Ask your system administrator for the IP address or Internet address.
- When specifying a port number, add ":" and the port number after the address. The default port number is "80".
- When the Authentication feature is enabled on the machine, enter a user ID and passcode in the [User Name] and [Password] fields respectively. Ask your system administrator for the user ID and passcode.
- If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.

3 Click the [Properties] tab, and select [Services] > [E-mail] > [Public Address Book] in the left frame on the screen.

4 Click [Map Existing Address Book] in [Export Public Address Book].

5 Click [Save] in the Security Warning dialog box.

6 Specify the destination to save the file in.

7 Enter the IP address or Internet address of another machine (ApeosPort-IV C7780/C6680/C5580, DocuCentre-IV C7780/C6680/C5580) in the browser address field, and press the <Enter> key.


8 Click the [Properties] tab, and select [Public Address Book] in the left frame on the screen.

Note

- Batch registration feature of the [Properties] tab is not available for the Address Book data created based on CSV file which is downloaded from the [Address Book] tab. For the Address Book data, perform batch registration on the [Address Book] tab.

9 Click [Browse] in [Import Public Address Book] to specify the file saved in step 6.

10 Click [Import Now].

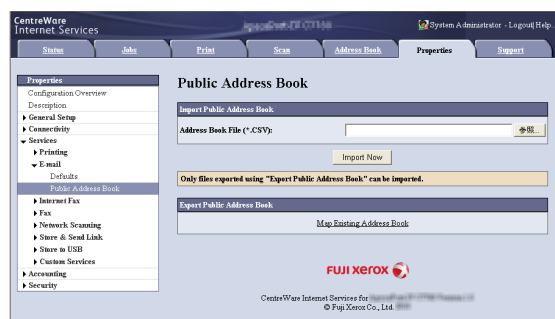

Importing Scanned Data

This section describes how to import files from a machine's folder to your computer. The following four methods are available. The following shows the reference section for each procedure.

Importing to a TWAIN Compatible Application.....	404
Importing Using Stored File Manager 3	406
Importing Using CentreWare Internet Services.....	409
Importing Using EasyOperator	410

Importing to a TWAIN Compatible Application

The following describes how to import files from a machine's folder to application software.

Network Scanner Driver is used to import stored files.

Network Scanner Driver is software that allows a client-side application to import stored files (scan data) from a machine's folder via a network.

To use Network Scanner Driver, you must have Network Scanner Utility 3 installed on your computer.


Note • Install Network Scanner Utility 3 from the Driver CD Kit.

To import files stored in a folder, prior settings are required, such as enabling ports. For more information, refer to "9 Scanner Environment Settings" > "Configuration of Store to Folder" in the Administrator Guide. For information on the operation of the application, refer to the documentation provided with the application.

For information on how to install Network Scanner Driver, refer to the manual included in the Driver CD Kit.

To learn about fields in the displayed dialog box, click [Help] to view the Network Scanner Driver's help.


- 1** Launch application software to which files are imported.
Important • The application must support TWAIN. TWAIN is a standard for scanners and other input devices.
Note • For notes and restrictions on the use of application software, refer to the "Readme" included in Network Scanner Utility 3.
- 2** From the [File] menu, select the command for selecting the scanner (source).
- 3** Select [FX Network Scanner 3 TWAIN], and click [Select].

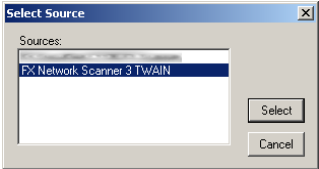

- 4** From the [File] menu, select the command for importing the image from the scanner.


5 From the displayed list, click the scanner name of the machine, and click [Next].

- Note**
- If no scanners are shown in the list, click [Search Again]. The application searches for scanners.
 - To change the display of scanner names, use the dialog box that appears by clicking [Search/Display Settings]. For more information, refer to "Changing the display of scanner names" (P.406).
 - Only scanners on the network are automatically listed. To view a scanner on another network, click [Search/Display Settings], and register the IP Address and scanner name. For information on how to register a scanner, refer to "Changing the display of scanner names" (P.406).

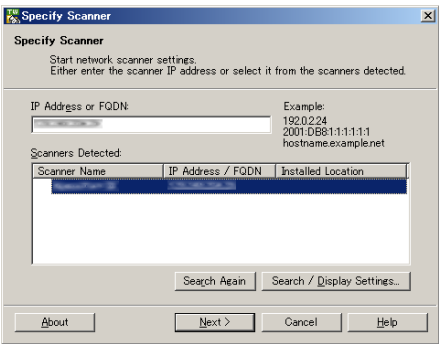

6 In the [Folder Number] field, enter the number of the folder (001 - 500) that contains the file to be imported. In the [Passcode] field, enter a passcode (up to 20 digits).


- Note**
- You can also select a folder number from [Registered Folders].
 - Clicking [Select Scanner] returns to step 5, where you can reselect a scanner.

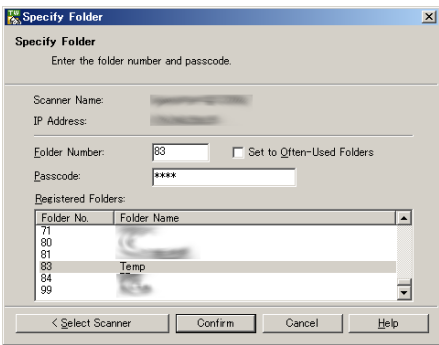

7 Click [Confirm].

8 Select a file to be imported from the list, and click [Import].

- Note**
- You can select multiple files.
 - [Import], [Refresh], and [Delete] are available from the menu that appears when you right-click on the list.

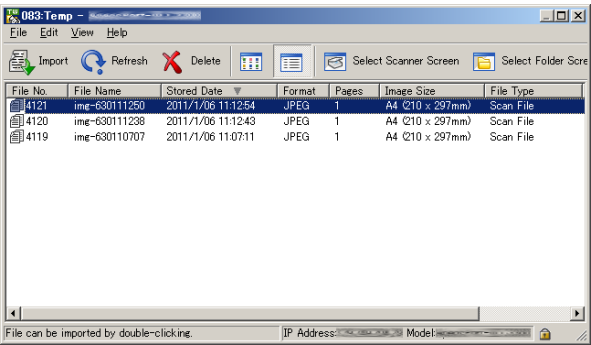

When the import starts, the scan data is forwarded from the folder to the computer.

After being forwarded, the data is loaded onto the application software and is deleted from the folder.

- Note**
- An icon is displayed next to a file that is scanned in pages and whose forwarding operation has not been completed.
 - For most applications except DocuWorks, Network Scanner Driver expands the compressed data and transfers the data to the applications in BMP format. For DocuWorks, on the other hand, Network Scanner Driver transfers the data without data expansion processing. For this reason, it does not take much time for data transfer.
 - The machine can be configured not to delete files from a folder after forwarding them. For information on the setting, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

Changing Network Scanner Driver Settings

To learn about fields in the displayed dialog box, click [Help] to view the Network Scanner Driver's help.

■ Changing the display of scanner names


You can change the display of scanner names listed.

To change the display of scanner names, use the dialog box that appears by clicking [Search/Display Settings] in the scanner selection dialog box.

Under [Scanner Name Display], you can change the method in which scanner names are displayed in [Scanner for Searching].

Specify scanners to search for under [Search Target Settings].


Note • If you click [Add] and then register a scanner, you can display scanners from other networks.

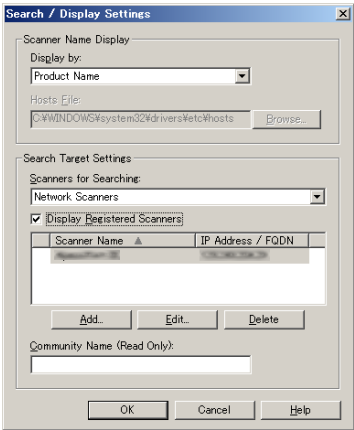

■ Import method for scanned files

You can change the display and the import settings for files scanned from a folder.

To change the import method, click [Import Settings] from [File] menu in the file selection dialog box, and configure the settings in the dialog box that appears.

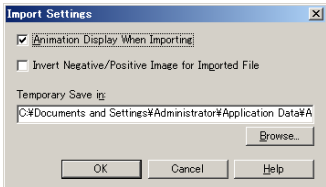

Importing Using Stored File Manager 3

The following describes how to use Stored File Manager 3 to import files from a machine's folder.

Stored File Manager 3 is software to import files from a machine's folder to a computer without using any client-side application.

To use Stored File Manager 3, your computer must have Network Scanner Utility 3 installed.

Note • Install Network Scanner Utility 3 from the Driver CD Kit.

To import files stored in a folder, prior settings are required, such as enabling ports. For more information, refer to "9 Scanner Environment Settings" > "Configuration of Store to Folder" in the Administrator Guide. For information on the operation of the application, refer to the documentation provided with the application.

For information on how to install Stored File Manager 3, refer to the manual included in the Driver CD Kit.


To learn about fields in the displayed dialog box, click [Help] to view the Stored File Manager 3 help.

- 1 Click [Start] and select [Programs] > [Fuji Xerox] > [Network Scanner Utility 3] > [Stored File Manager 3].

Note • If you used another directory for installation, specify the directory instead.


2 From the displayed list, click the scanner name of the machine, and click [Next].

- Note**
- If no scanners are shown in the list, click [Search Again]. The application searches for scanners.
 - To change the display of scanner names, use the dialog box that appears by clicking [Search/Display Settings]. For more information, refer to "Changing the display of scanner names" (P.408).
 - Only when the machine is connected to the network, the scanner name is automatically listed. To view the machine connected to another network, click [Search/Display Settings] and register the IP address and scanner name. For information on how to change the settings, refer to "Changing the display of scanner names" (P.408).

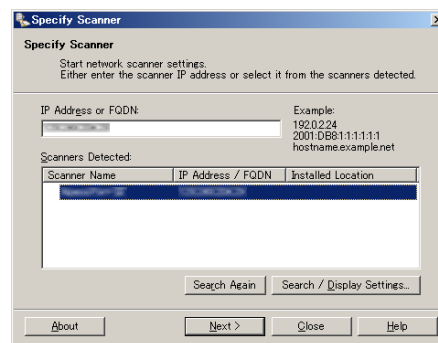

3 In the [Folder Number] field, enter the number of the folder (001 - 500) that contains the file to be imported. In the [Passcode] field, enter a passcode (up to 20 digits).


- Note**
- You can also select a folder number from [Registered Folders].
 - Clicking [Select Scanner] returns to step 2, where you can reselect a scanner.

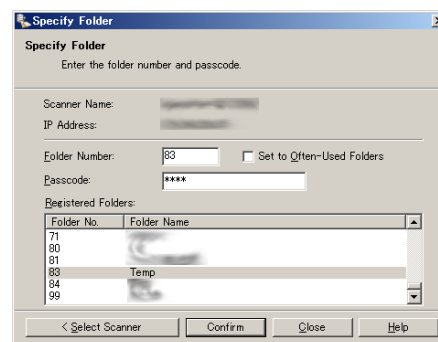

4 Click [Confirm].

5 Select a file to be imported from the list, and click [Import].

- Note**
- You can select multiple files.
 - When [File Saving Options] is set to [Set Destination for Each File] under the import settings, a dialog box for specifying a save destination is displayed. When the dialog box appears, specify a save destination, and click [OK]. For information on the import settings, refer to "Import settings for scanned files" (P.408).

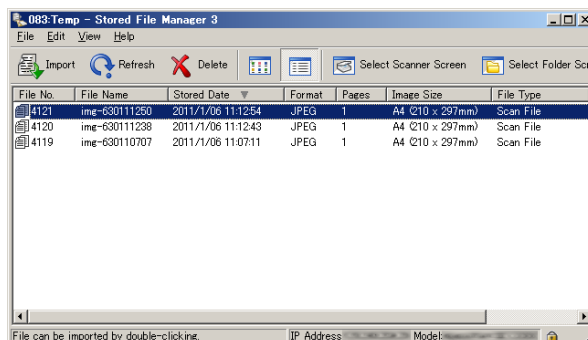

6 The file is imported to the specified directory.

- Note**
- When [File Saving Options] is set to [Save in Fixed Destination] under the import settings, a file is saved in the specified directory. For information on the import settings, refer to "Import settings for scanned files" (P.408).

Changing Stored File Manager 3 Settings

To learn about fields in the displayed dialog box, click [Help] to view the Stored File Manager 3 help.

■Changing the display of scanner names


You can change the display of scanner names listed.

To change the display of scanner names, use the dialog box that appears by clicking [Search/Display Settings] in the scanner selection dialog box.

Under [Scanner Name Display], you can change the method in which scanner names are displayed in [Scanner for Searching].

Specify scanners to search for under [Search Target Settings].



- Note
- If click [Add] and then register a scanner, you can display scanners from other networks.

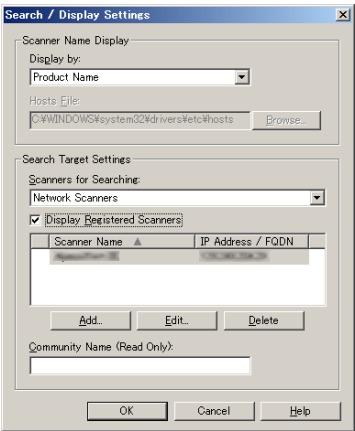

■Import settings for scanned files

You can change the display and the import settings for files scanned from a folder.

To change the import method, click [Details] from [File] menu in the file selection dialog box, and configure the settings in the dialog box that appears.

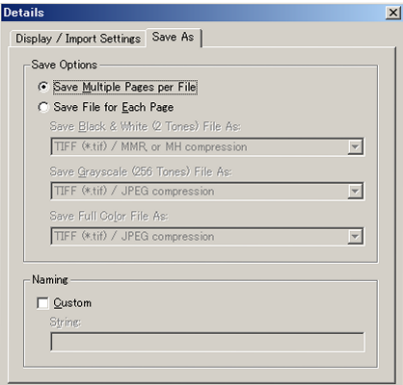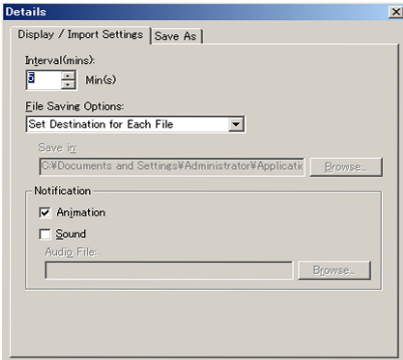

Importing Using CentreWare Internet Services

This following describes how to import files stored in a machine's folder using CentreWare Internet Services.

When the machine is installed in a TCP/IP environment, CentreWare Internet Services allows you to import files stored in a machine's folder by accessing the machine from a computer via a web browser. You can also use a Macintosh® computer to import files via a web browser.


Note • You can retrieve scanned data in DocuWorks or PDF format, but cannot encrypt the DocuWorks or PDF files and cannot attach a signature to the files when retrieving them.

For information on an overview of CentreWare Internet Services, refer to "CentreWare Internet Services" (P.412).

For more information on this operation, click [Help] in the top frame to view the help.

- 1 Start up the computer, and a web browser.
- 2 Enter the machine's IP address or Internet address in the browser address field, and press the <Enter> key.
 - Note** • If your network uses DNS (Domain Name System) and the machine's host name is registered in the domain name server, you can access the machine using the Internet address with the combination of the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com", then the Internet address is "myhost.example.com".
 - Ask your system administrator for the IP address or Internet address.
 - When specifying a port number, add ":" and the port number after the IP address or the Internet address.
 - If the authentication feature is enabled on the machine, enter a user ID and passcode in the [User Name] and [Password] fields. Ask your system administrator for the user ID and passcode.
 - If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.

- 3 Select [Folder] on the [Scan] tab.
 - 4 Click [File List] of the folder that contains the files to be imported.
- Note** • If a passcode is set, enter the passcode in the [Passcode] field (up to 20 digits).

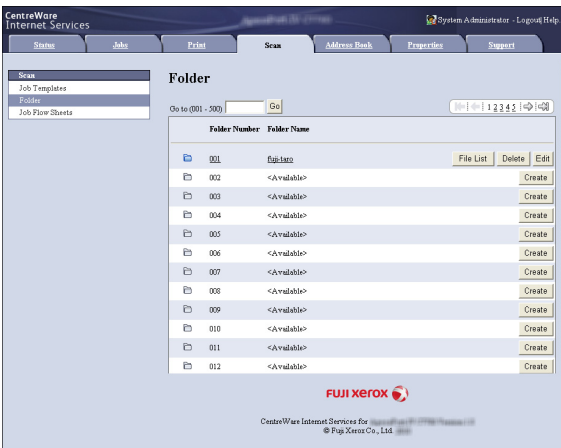

- 5 Place a check mark next to each file to be imported, set the necessary items, and then click [Retrieve].


Note • When you import files in PDF format from a folder, they cannot be optimized for web view.



- 6 Click a file name and save a link.



- 7 Click [Save].

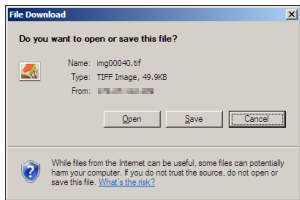

Importing Using EasyOperator

When you use Fuji Xerox applications such as EasyOperator, you can import files stored in a machine's folder to your computer without using Network Scanner Driver. The files in a folder can also be listed or displayed in thumbnail view.

To import files stored in a folder, prior settings are required, such as enabling ports. For more information, refer to "9 Scanner Environment Settings" > "Configuration of Store to Folder" in the Administrator Guide. For information on the operation of the application, refer to the documentation provided with the application.


The following describes how to import files stored in a machine's folder by using EasyOperator as an example.

- 1 Click the [Start] menu, and select [Programs] > [Fuji Xerox] > [CentreWare EasyOperator] > [EasyOperator].

Note • If you used another directory for installation, specify the directory instead.

- 2** In the left frame of the window displayed, add a machine's folder to [Mailbox].


Add the folder in which files to be imported are stored. For more information on how to add a folder, refer to the EasyOperator's help.

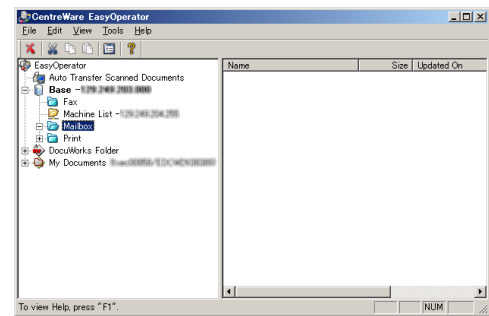

- 3** Select [Refresh] from the [View] menu.


- 4** Click [+] to the left of [Folder] to display the added folder.

When you select the added folder, the file will be displayed in the right frame.

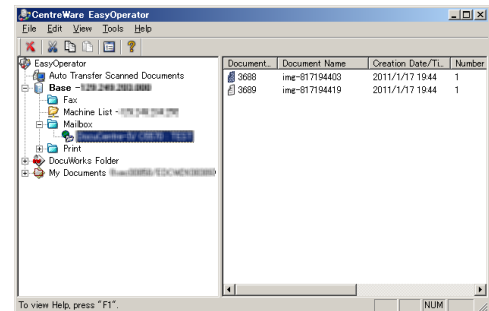

- 5** Select [Show Thumbnail] in the [View] menu to display the file in thumbnail view.

- 6** Check the thumbnails of the file to be retrieved, and select the file.

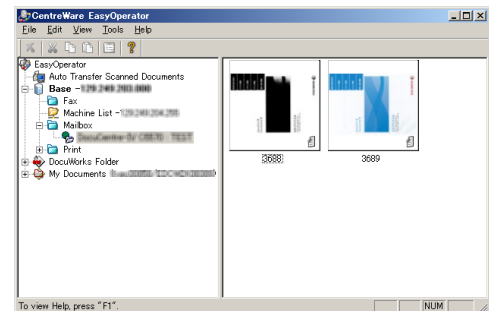

- 7** Select [Retrieve] from the [Tools] menu.

- 8** Select a save destination in the [Browse For Folder] dialog box, and click [OK].

CentreWare Internet Services

CentreWare Internet Services requires a TCP/IP environment, and enables you to view the status of the machine and its jobs, as well as change settings via a web browser. You can also import files stored in a folder.


For information on how to import files, refer to "Importing Using CentreWare Internet Services" (P.409).

For information on the settings of CentreWare Internet Services, refer to "6 CentreWare Internet Services Settings" in the Administrator Guide.

CentreWare Internet Services Screen

The [CentreWare Internet Services] screen consists of five frames (divided windows). The information displayed in each frame depends on the feature selected: [Status], [Jobs], [Print], [Scan], [Address Book], [Properties], or [Support].

Note • Clicking [Help] in the top frame displays the help for CentreWare Internet Services.

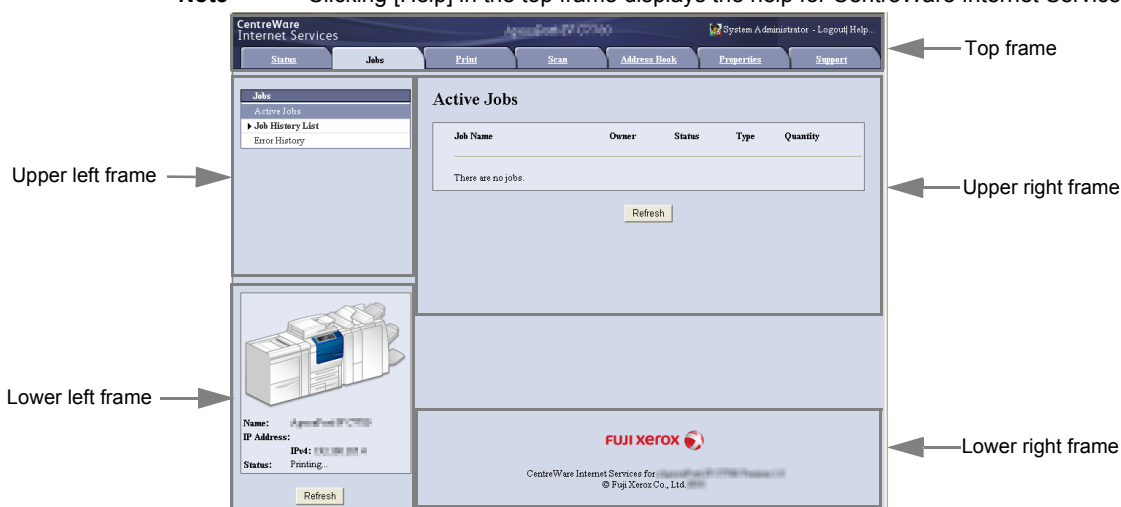

■Top Frame

Displayed at the top of the window. This frame includes the machine model name, a link to the help, user information, and tabs (links) leading to each feature.

For information on each feature provided by CentreWare Internet Services, click [Help] in this frame to view the help.

■Upper Left Frame/Upper Right Frame

Information appearing in the upper left and upper right frames changes depending on the feature. Selecting a feature displays its available features and information in these frames.

■Lower Left Frame

Displays the machine information and status, and the [Refresh] button. Clicking [Refresh] updates the information.

■Lower Right Frame

Clicking the logo opens the Fuji Xerox home page.

Main features of CentreWare Internet Services are listed below.

Tab Name	Main Features
Status	• Displaying the machine status Displaying the status of the paper trays, output trays, and consumables such as toner cartridges. • Usage Counters Displays the total number of pages used for each feature and cumulative numbers. • Total Runtime Displays [Output Device Runtime], [Scanner Runtime], [Standby Time], [Low Power Time], [Sleep Time], [Warm-up Time], and [Power Off Time] by minutes.
Jobs	• Listing active jobs and allowing you to delete the jobs, and displaying completed jobs and error information
Print	• Job Submission Allows you to specify and print a file stored on your computer.
Scan	• Job Templates Allows you to create, edit, copy, and delete job templates. • Folder Allows you to create and set folders. You can also import files in a folder and print the files. • Job Flow Sheets Allows you to create, edit, and delete job flow sheets.
Address Book	• Allows you to add, edit, and delete recipients in the Address Book. • Address Book Allows you to view a list of the Address Book, delete the Address Book data, and restrict users to access to the Address Book. • CSV file Allows you to import a CSV file which is created by other than the machine, and download the sample CSV file and a blank CSV file.
Properties	• Displaying and setting the items such as Machine configuration, Interface, and Emulation settings.
Support	• Displaying support information

- Note**
- Some field settings take effect after a reboot (after switching the power off and then on again, or after changing the System Settings from the control panel).
 - If a setting is changed by CentreWare Internet Services during operation on the control panel, the updated information does not appear on the control panel. In that case, switch the power off and then on again.
 - To change the settings of items set by the system administrator, you need to enter the user ID and passcode. Ask your system administrator for the user ID and passcode.

Browser

CentreWare Internet Services supports the following browsers:

■For Windows 7

- Microsoft® Internet Explorer® 8.0

■For Windows Vista®

- Microsoft Internet Explorer 7.0

■For Windows XP

- Mozilla® Firefox® 3.0
- Microsoft Internet Explorer 6.0 Service Pack 2

■For Windows 2000

- Microsoft Internet Explorer 6.0 Service Pack 2

■For Mac OS X 10.6

- Safari 4
- Mozilla Firefox 3.0

■For Mac OS X 10.5

- Mozilla Firefox 3.0

■For Mac OS X 10.4

- Mozilla Firefox 3.0
- Safari 1.3

■For Mac OS X 10.3.9

- Mozilla Firefox 3.0

Browser Settings

Before using this service, ensure the following settings on your browser.

The following describes the setting procedure for Internet Explorer 6.0 SP2.

- 1** Select [Internet Options] from the [Tools] menu.
- 2** On the [General] tab, click [Settings] for [Temporary Internet Files].
- 3** In the [Settings] dialog box, select [Every visit to the page] or [Every time you start Internet Explorer] for [Check for newer versions of stored pages:].
- 4** Click [OK].

Proxy Server and Port Number

The following describes proxy server settings and a port number required for this service.

■Proxy Server

We recommend that you access this service directly, not through a proxy server.

Note • If using a proxy server, specifying the machine's IP address in the browser results in slower responses, and could prevent some screens from appearing. In this case, set the machine's IP address on the browser not to use a proxy server. For information on the setting instructions, refer to the documentation provided with your browser.

■Port Number

The default port number of this service is "80". The port number can be changed in [Properties] > [Connectivity] > [Protocols] > [HTTP]. Usable ports are "1" to "65535".

If you set the port to a number other than 80, you must add ":" and the port number after the IP address or the Internet address when entering the address into your browser.

For example, if the port number is 8080, the URL is:

`http://[the machine's IP address]:8080/`

or

`http://[the machine's Internet address]:8080/`

You can check the port number in a Configuration Report. For information on the Configuration Report, refer to "4 Machine Status" > "Machine Information" > "Print Reports" in the Administrator Guide.

Note • If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.

Starting CentreWare Internet Services

To use this service, perform the following procedure on your computer.

- 1** Start up the computer, and a web browser.
- 2** Enter the machine's IP address or Internet address in the browser address field, and press the <Enter> key.

Note

- If your network uses DNS (Domain Name System) and the machine's host name is registered in the domain name server, you can access the machine using the URL with the combination of the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com", then the Internet address is "myhost.example.com".
- Ask your system administrator for the IP address or Internet address.
- When specifying a port number, add "://" and the port number after the IP address or the Internet address.
- If the Authentication feature is enabled on the machine, enter a user ID and passcode in the [User Name] and [Password] fields. Ask your system administrator for the user ID and passcode.
- If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.
- If authentication of the system administrator fails, the following message is displayed in the right frame of web browser:
"Login failed."
- If the number of times that authentication fails exceeds the specified number, the following message is displayed in the right frame of web browser:
"Switch the machine Off and then On for System Administrator login."

13 Appendix

This chapter contains a glossary of terms used in this guide.

- Glossary.....418

Glossary

Term	Description
A3	420 x 297 mm paper
A4	297 x 210 mm paper
A5	210 x 148 mm paper
Alias	An alternative name of the machine's e-mail address. For example, when the e-mail address for the machine is ifax@mb1.abc.fujixerox.com, you can use ifax@fuji-xerox.com (alias) to reach the same location.
Auto Center	A feature that automatically moves an image to the center of paper when copying.
Auto Clear	A feature that automatically returns the touch screen to its default display when the machine is inactive for a certain period of time.
Auto Select	Based on the document loaded and the magnification selected, the machine automatically selects an appropriate paper size.
Auto Tray Switching	When paper runs out during copying, another tray of identical paper size and orientation automatically begins supplying paper.
B4	364 x 257 mm paper
B5	257 x 182 mm paper
Binding Shift	When creating a booklet, this feature adds margins to the center binding area of documents.
Book Scanning	A feature that copies the left and right pages of an unfolded document onto two separate sheets of paper.
Border Limit (Page split threshold value)	One more sheet is used when the length of the transmitted document exceeds the length of paper installed on the receiving terminal. A margin at the bottom of a received document can be eliminated so that the data can be printed on one page. The amount of space that can be removed from the bottom of a document is the border limit. When the border limit value is small, the data is printed on the next page. But when it is large, a larger space can be cut so that data can be printed on one page.
Calibration	This refers to smoothness of colors. Calibration levels are shown in gradation steps. The greater the step, the smoother the color will be.
CMS	An abbreviation of Color Management System. It corrects device-dependent color differences to match the colors printed on your output with the colors displayed on your screen.
Collate	A feature where each copy set is delivered in the same order the documents were copied.
Communication(s)	A communications network that can offer voice data (telephone), image data (fax), video data (videotex) and PC data (PC communication service) over the same channel. In this guide, it is mostly referred to as transmitting/receiving images as well as speaking with a remote user.

Term	Description
CSV File	CSV (Comma Separated Values) is a file format that is often used for saving data by spreadsheets and database programs.
Cut Paper	Standard paper sizes, such as A4 and B5.
Default Screen	A screen displayed on the touch screen immediately after switching the power on, or pressing the <Clear All> button. The screen is also displayed when the Auto Clear feature is used.
Default Value	A factory default value, or a value set in the System Administration mode.
Dial	In this guide, it refers to entering a recipient's fax number. The methods of dialing provided by the machine include: manual dialing using the numeric keypad, speed dialing, one touch dialing, and using the address book, etc.
Dial Tone	A tone generated from the telephone line. It indicates that you are connected to the line.
Dial Type	The dial type of connected line. The machine offers two dial types: Tone (push circuit) and 10PPS (dial circuit / 10PPS).
Direct Internet Fax	Allows you to send e-mail directly to the Internet Fax-compatible machines without going through the SMTP server, while Internet Fax uses the SMTP server to send e-mail.
Document Image	An image of a document scanned by the machine.
DPI	An abbreviation of Dots Per Inch. A unit used to describe printing resolution in terms of the number of dots printed in one inch. Used as a unit to describe resolution.
ECM	An abbreviation of Error Correction Mode. A type of G3 transmission. ECM transmission sends the document image data in segments and retransmits segments that the remote machine receives incorrectly. "ECM" described on the Activity Report shows that the communication was processed using ECM.
Edge Erase	A feature that erases the top/bottom, left/right or center edge of a document image when copying.
Emulation	This refers to operating the printer to achieve the same print results as when printing with other manufacturers' printers. This mode is called the Emulation Mode.
Energy Saver Feature	A feature that switches the machine status to standby after a period of inactivity. The following energy saver features can be set for the machine. Low Power Mode: The power to the fusing unit and motor is lowered when the machine is left unused for a fixed amount of time. The touch screen goes out, and the <Energy Saver> button lights up. Sleep Mode: Most of the units in the machine are in standby status. The machine consumes the least power.
Error Code	A code is displayed on the touch screen or a report when a problem occurs.

Term	Description
F Code	A transmission method defined by Communications and Information Network Association of Japan (CIAJ) for use of T.30* sub-addresses standardized by ITU-T. Between the machines with the F Code feature, including those manufactured by other companies, various features making use of F Code can be used. (*: Communication standard) With IP Fax (SIP) communication and the Internet Fax feature of the machine, you can use F Code to forward fax documents received in folders by e-mail.
F4800	This refers to communicating with a remote terminal outside the country. It is also one of the Transmission Mode selections that reduces transmission speed to enable reliable communications even under poor line conditions.
Fax Gateway	Connects the Internet network to regular telephone lines, enabling e-mail documents to be sent as fax documents to regular fax machines.
Fax Server	A feature that transfers image data received by the machine to a Server Fax server and transfers image data received by a Server Fax server to the machine via a network based on the settings you made. Using this feature enables you to manage multiple machines.
G3	A facsimile communication system standardized by the advisory committee for International Telecommunications (CCITT, now the ITU-T).
Header	A record of the sender. It is printed on the top edge of a received document.
FQDN	FQDN (Fully Qualified Domain Name) is fully specified with domain name, sub domain name, and host name so that it is identified in network.
ICM	An abbreviation of Image Color Matching. A color management software used with Windows 2000, Windows XP, and Windows Server 2003. It corrects device-dependent color differences to match the colors printed on your output with the colors displayed on your screen.
Image Enhancement	A feature which makes the border between black and white smooth, with rough edges reduced, giving the appearance of a higher resolution.
Image Rotation	This feature rotates a document image by 90 degrees when the document orientation is not the same as the paper supply orientation.
Independent X - Y%	A feature that transforms a document image horizontally or vertically.
Internet	A worldwide communications network that combine miscellaneous networks.
Internet Fax	Unlike a regular fax machine, Internet Fax uses corporate networks or the Internet to send or receive e-mail (TIFF attachments).
Job Offset	This feature outputs sheets in alternating offsets to make each set easier to recognize.

Term	Description
Line Monitor	Allows you to audibly monitor a transmission through the speaker after dialing and until you are connected.
Low Toner Alert Tone	A tone the device sounds when the drum/toner cartridge needs to be replaced.
Machine Ready Tone	A tone produced when the status of the machine changes from standby to ready, such as when the power is switched on.
MIME Type	Multipurpose Internet Mail Extension. A method for determining what kind of data was received by e-mail. A MIME type refers to the type of data.
NAT/NAPT	NAT (Network Address Translation) converts private IP addresses to global IP addresses. NAPT (Network Address Port Translation) also converts IP addresses to global addresses. It modifies port numbers as well.
NV Memory	A non-volatile memory, which stores the settings information of the printer even when the power is switched off.
Off-hook Dialing	Dialing with the receiver off the hook.
On-hook Dialing	Dialing with the receiver on the cradle.
Optional component	This refers to a product that is sold separately. In addition to the machine's basic configuration, various optional features are available as separately-sold optional components. (For more information on optional components, contact our Customer Support Center.)
Pages per Side	A feature that copies two or four documents onto one sheet of paper.
PCL	An abbreviation of Printer Control Language. A page description language developed by Hewlett Packard.
PJL	An abbreviation of Printer Job Language. A command language for controlling printers developed by Hewlett Packard.
Polling	A feature that allows you to retrieve a file from a remote machine.
POP3	An abbreviation of Post Office Protocol Version 3. One of the commonly used communications protocols used for receiving e-mail. It sets up a private mailbox on a provider's e-mail server, and receives messages when a communication is made. POP3 is for receiving only. SMTP is used for sending e-mail.
Print Page Buffer	The memory area where printing images are stored.
Printable Area	The actual area on paper which can be printed.
Profile	A protocol controlling image resolution, paper size, and other attributes when sending or receiving faxes using Internet Fax. The profiles that can be used vary with the Internet Fax of the remote terminal. When specifying a profile, check that it can be handled by the other party's Internet Fax-compatible machine.
QoS	QoS (Quality of Service) is a technology to ensure a certain-level speed for specific network communications.

Term	Description
RAM	An abbreviation of Random Access Memory. It is a storage device (memory) where information can be retrieved as well as stored.
Receive Buffer	The area in the machine's memory or hard disk drive. Data sent from client computers is stored in this area.
Receiving Paper Size	A feature that specifies the output paper size for received fax documents. The specified paper size will be declared to recipients from the sender.
Recipient	The person or terminal you send a document to. "Dialing" indicates the operation of entering a recipient's telephone number. For Internet Fax, this refers to the recipient's e-mail address.
Remote Terminal	A terminal with which you want to communicate. This is a general term for terminals such as telephones, facsimile machines and personal computers.
Resolution	Represents a fineness of detail that can be distinguished on an image. It is usually described in terms of the number of dots per square inch (dpi), and a higher value indicates a higher resolution (finely represented).
ROM	An abbreviation of Read Only Memory. It is a storage device (memory) specific for the retrieval of information.
ROS	An abbreviation of Raster Output Scanner. It is a device for writing image signals to a drum (light sensitive). A ROS is often referred to as a laser beam scanner.
Scan	Sensing or reading a paper document and converting the optical image of the document to an electronic image. The machine offers two scanning devices: document glass and document feeder.
Screen	The screen that is displayed on the touch screen. It displays messages and feature buttons.
Select	In this document, "Select" refers to highlighting a feature selection by touching the feature button on the touch screen with your finger.
Send Password	This feature requires to enter an "S" and the ID of a remote terminal after entering its fax number. This prevents transmission errors.
Sender	Originator of a communication. It is used as opposed to "recipient".
Separator	A blank, colored, or copied paper inserted between two copy sets.
SIP	SIP (Session Initiation Protocol) is a signalling protocol call control protocol which is necessary to communicate in an IP network.
SIP Server	Servers such as SIP proxy server, SIP registrar server, and others.
SIP proxy server	SIP proxy server forwards requests from SIP terminals to other SIP terminals and SIP servers.
SIP user name	In SIP communication, user names are specified in "xxx@yyy" format. (example: 1111@192.168.1.1) The part before "@" ("1111" in the example) is SIP user name.

Term	Description
SIP registrar server	SIP registrar server receives registration request from SIP terminals and registers the information.
SMTP	An abbreviation of Simple Mail Transfer Protocol. A communications protocol (an agreement governing the way data is transmitted) commonly used for sending and receiving e-mail.
Start Reservation	In this guide, this refers to loading a document, selecting features, and pressing the <Start> button immediately after switching the power on. Once the machine is warmed up and ready, it will automatically start copying.
Status Display Code	A code that indicates the machine status. When an error occurs on the machine, a status display code appears on the touch screen.
Store	In this guide, it is referred to as scanning an image of a document and saving the image on the machine.
Stored Programming	By registering a series of operations, the machine executes the operations with just one press of [Stored Programming] on the touch screen.
T.38	T.38 is a protocol for timely fax communication over IP network. The protocol is also necessary for fax communication between existing public phone lines and IP network.
Transmission Interval	The period between transmissions.
Transparency Copy	A feature that copies on transparency films or inserts a sheet of blank or copied paper between transparency films.
UNC	An abbreviation of Universal Naming Convention. UNC is a way to specify a path describing the location of a network resource, such as shared folders, or shared printers, on a network, Microsoft Network (SMB). The UNC syntax uses "\\" before the hostname, hostname and resource name are delimited by "\". If the hostname is "myhost", and if its host shared folder name is "sharefolder", the UNC syntax is described as follows: \\myhost\sharefolder
VoIP Gateway	The device that relays voice signals including fax communication between IP network and public phone lines. It has a feature to convert the communication using VoIP and G3 fax communication in public phone lines.

Index

Symbols

+ Add 198

Numerics

1 Staple (Simple Copy) 82
 10BASE-T / 100BASE-TX connector 43
 2 Pages Up (Simple Copy) 82
 2 Sided Book Copying 109
 2 Sided Copying (Simple Copy) 81
 2 Sided Scanning 196, 206, 276
 2-Sided Print 397

A

Activity Report 67
 Add Me 271
 adding a comment/a date/page numbers
 to copies 129
 adding originals 161
 adding sender name and phone number
 to faxes 219
 adding the sender's address 271
 additional feature buttons 66
 Address Book 199, 268, 290
 adjusting color balance 102
 adjusting contrast 100, 306
 adjusting copy density/sharpness/saturation of
 images 99
 adjusting fax density 205
 adjusting scan density and image sharpness ... 305
 adjusting the color tone 104
 adjusting the copy density 97
 adjusting the image position 114
 Advanced Settings 304
 Annotations 129
 attaching covers to copies 124
 Auto Detect 210, 312
 Auto Receive 249

B

Background Suppression 306
 Batch Print 333
 Black & White/Color (Simple Copy) 81
 Book Copying 108
 Book Faxing 211
 Book Scanning 310
 Booklet 121
 Booklet Creation 121, 397
 booklet output tray 48
 booklet output tray button 48
 booklet staple cartridges 47
 booklet tray 47
 booklet unit 47
 bottom left cover 43
 Broadcast 241
 Broadcast Send 177, 198, 245
 Browse 291
 Build Job 155

C

<C (Clear)> button 57, 62
 Calculator % 88
 Calibration 67
 calling a stored program 355
 calling a stored program for Build Job 356
 Cancel 376
 CentreWare Internet Services 409, 412
 Change Quantity 376
 changing a job flow sheet 344
 changing a stored program name 353
 changing the orientation of images 118
 Chapter Start 158
 Charge Print 384, 398
 checking completed jobs 377
 checking the finished output of the copy 160
 checking/selecting files in a folder 327
 <Clear All> button 57, 61
 Color Balance 102
 Color Effects 101
 Color Scanning 275

Color Shift 104
 Color Space 307
 Combine Original Sets 161
 combining multiple pages into one sheet 224
 Compression Method 279
 confirmation indicator 45
 confirming a recipient 205
 confirming remote machine response prior to
 transmission 239
 confirming the fax job in Job Status 172
 constant velocity transport glass 45
 consumable storage space 49
 Contrast 306
 control panel 42
 Copies 107
 Copy Output 146
 copying both sides of an ID card 153
 copying facing pages onto separate sheets 108
 copying multiple pages onto one sheet 125
 copying on tab stock paper 141
 Cover Page 220
 Covers 124
 creating a booklet 121
 <Custom> buttons 57, 58, 61

D

<Data> indicator 57, 61
 De-curl button 48
 Delay Start 217
 Delayed Print 382, 397
 Delete Outside/Delete Inside 162
 deleting Charge Print jobs 385
 deleting Delayed Print jobs 383
 deleting outside or inside of the selected
 area 162
 deleting Private Charge Print jobs 388
 deleting Sample Set jobs 381
 deleting Secure Print jobs 379
 deleting stored jobs 378
 deleting stored programs 352
 density levels 305
 <Dial Pause> button 57, 62
 Digital Signature 234, 322
 Direct Fax 402
 Direct Printing 398

Disable Auto Printing/Release Printer 67
 document cover 42
 document feeder 70, 166, 256
 document feeder tray 45
 document glass 42, 71, 257
 document guides 45
 document output tray 45
 document stopper 45
 DocuWorks 278, 279
 DocuWorks Security 281
 DocuWorks Signature 282
 drum cartridges 44

E

Edge Erase 113, 314
 editing a recipient 272
 editing the Internet Fax mail contents 222
 E-mail 267
 E-mail Printing 398, 400
 Encryption 233, 322
 <Energy Saver> button 57, 61
 Energy Saver mode 54
 enhancing gloss of the document 105
 enlarged copies 85
 Enter Output Size 316
 entering a stored program name 353
 entering an address 270
 entering specific symbols 204
 entering text 68
 entering the e-mail body 274, 302
 erasing edges and margin shadows in
 the document 314
 erasing edges and margin shadows of
 the document 113
 erasing the background color of
 documents 100, 306
 <Error> indicator 57, 61
 error terminations 393
 exit cover 47

F

F Code 228
 Face Up/Down Output 142
 Facsimile Information Services 235, 240, 252

Fax 197
 Fax Receiving Mode 67
 Fax/Internet Fax 197
 Fax/Internet Fax Options 214
 File Format 278, 303
 File Name 320, 321
 File Name Conflict 321
 Finisher C2 47
 Finisher C2 with Booklet Maker 47
 Finisher D2-P with Booklet Maker 48
 finisher tray 47, 48
 folder output tray 48
 folder output tray button 49
 Folder Receive 251
 Folding 142
 Forced 4800 bps 216
 From 273
 front cover 43, 47
 fusing unit 44

G

G3 216
 gigabit ethernet board 43
 Gloss Level 105
 ground fault interrupter 44, 48, 49

H

HCF B1-S 49
 hidden text 140

I

ID Card Copying 153
 Image Enhancement 100, 306
 Image Options 100, 305
 Image Rotation 118
 Image Shift 114
 importing scanned data 404
 Independent X - Y% 87
 Index Print 371
 inner cover 45
 inserting blank sheets between
 transparencies 144
 Internet Fax 197

Internet Fax Message 222
 Internet Fax Profile 232
 Internet Fax Subject 222
 Internet Fax transmission 178
 <Interrupt> button 57, 62
 Invert Image 117
 IP Fax (SIP) 184

J

Job Assembly 155
 Job Flow Sheets 342
 Job Status 374
 <Job Status> button 56, 62
 job template 287
 JPEG 278, 279

L

Language 66
 Language of the Original 282
 large size UI 43
 Last Original 376
 Layout Adjustment 106, 209, 309
 left cover 45, 49
 lever 44
 license 33
 Lighten/Darken 97, 100, 205
 Lighten/Darken (Simple Copy) 82
 loading documents 256
 local terminal information 203
 Lock Out Printer 67
 locking casters 43
 <Log In/Out> button 56, 61
 Login Name 323
 Low Power mode 54
 lower-right cover 44

M

machine components 42
 <Machine Status> button 56, 62
 <Main Power> indicator 57, 61
 main power switch 44
 making 2-sided copies of facing pages 109

making enlarged copies spread over multiple sheets 127

making enlarged/reduced copies 85

making multiple copies on a single sheet 143

making multiple copies on one sheet 128

making reversed copies of images 117

managing documents security 138

Manual Receive 249

Manual Send 239

Media Print 362

Media Print - Photos 369

Media Print - Text 370

Message 274, 302

message field 64

Meta Data 323

Mirror Image 117

Mixed Size Originals 112, 210, 313

More Options 235

MRC High Compression 280

N

Negative Image 117

Network Scanner Driver 406

Network Scanning 287

New Recipient 270

Next Original 376

non-standard size document 111

Non-target Area Color 95

numeric keypad 57, 62

O

one touch button 193

one touch buttons 59, 201

one touch panels 58

On-hook 239

optical glass 45

Original Orientation
..... 107, 112, 114, 115, 118, 126, 130, 316

Original Size 111, 209, 312

Original Type 98, 195, 207, 277

Originals 107

Output Color 92

Output Format 120

output tray 44, 47, 48

outputting bi-folded/tri-folded paper 142

P

Pages per Side 125

paper feed section cover 49

Paper Supply 89

Paper Supply (Simple Copy) 79

paper tray 49

Password 293, 323

PDF 278, 279

PDF Security 281

PDF Signature 281

Photo 277

Photo & Text 277

Photographs 304

Poster 127, 397

power switch 42

Preset Repeat Image 143

print driver 399

Print Mode 67

Printing 332

printing 399

printing Charge Print jobs 386

printing control numbers on the background of
copies 135

printing Delayed Print jobs 383

printing files in a folder 332

printing multiple sets at the remote machine 224

printing pending jobs preferentially 392

printing Private Charge Print jobs 388

printing Sample Set jobs 382

printing Secure Print jobs 380

printing stored jobs 378

Priority Send 217

Private Charge Print 386, 398

processing documents scanned with different
settings as one job 155

Promote Job 376

Proportional % 86, 315

Public Folder 388

punch scrap container 47, 48

punching 148

Q

Quality/File Size 318

R

Read Receipts 318
 receiver 239
 Recipient Print Sets 224
 Recipient(s) 272
 Reduce/Enlarge 85, 213, 315
 Reduce/Enlarge (Simple Copy) 80
 reduced copies 85
 registering stored programs 350
 Release Printer 67
 Remote Folder 225
 Remote Polling 235
 removing a recipient 205
 Repeat Image 128
 Reply To 320
 Resolution 194, 208, 310
 retrieving files from remote machines 235
 Right cover 48
 RSA BSAFE 33

S

Sample Job 160
 Sample Set 380, 397
 Saturation 100
 Save in 293
 saving the scanned data 263
 scan density 305
 Scan To 302
 Scan to Folder 295
 Scan to Home 287
 Scan to PC 289
 scanning a color photograph 304
 scanning both sides of a document 276
 scanning different size documents
 simultaneously 112, 210, 313
 scanning facing pages on separate
 sheets 211, 310
 Screen Brightness 67
 Searchable Text 280
 Secure Print 378, 397

Secure Watermark 138
 Segment Separators 158
 selecting a communication mode 216
 selecting a file format for output data 278, 303
 selecting a folder 326, 328
 selecting a job flow sheet 344
 selecting a transfer protocol 289
 selecting an image quality 101
 selecting an output color 275
 selecting files 365, 367
 selecting Internet Fax/Fax 197
 selecting the color for copying 92
 selecting the document type 98, 195, 207, 277
 selecting the paper for copying 89
 selecting the printing options 369
 sending e-mail encrypted by S/MIME 322
 sending e-mail with a digital signature
 by S/MIME 322
 Sending faxes to multiple recipients 198
 sending in sections 319
 sending Internet Fax encrypted by S/MIME 233
 sending Internet Fax with a digital signature
 by S/MIME 234
 Server 292
 Server Fax 189
 service buttons 64
 <Services Home> button 56, 62
 [Services Home] screen 64
 setting the action to be taken for file name
 conflict 321
 setting the sender's address 273
 setting the subject 274, 302
 Setup 67
 Shadow Suppression 307
 Shared Name 293
 Sharpness 100
 sharpness 305
 Sideways Images 277
 Simple Copy 79
 Single File for Each Page 281
 Sleep mode 54
 Source Color 94
 Specific Color 280
 specifying a destination PC by browsing your
 network 291

-
- specifying a destination PC using the address book290
 - specifying a destination PC using the screen keyboard292
 - specifying a destination using a one touch button193, 201
 - specifying a destination using an address number200
 - specifying a destination using the address book199
 - Specifying a destination using the numeric keypad192
 - specifying a line (port)203
 - specifying a name for the file to be saved321
 - specifying a name for the file to be sent320
 - specifying a reply address320
 - specifying a scan ratio213
 - specifying a scan size312
 - specifying a scanning ratio315
 - specifying a scanning resolution310
 - specifying an e-mail address268
 - specifying an image compression ratio when scanning318
 - specifying destination using the keyboard screen202
 - specifying destinations169
 - specifying face up or down142
 - specifying finishing options146
 - specifying Internet Fax profiles232
 - specifying read receipts318
 - specifying send priority217
 - specifying send time217
 - specifying the color space307
 - specifying the Internet Fax subject222
 - specifying the orientation of the loaded documents118, 316
 - specifying the scan size for the document111
 - specifying the scan size for the original209
 - specifying the scanning resolution194, 208
 - <Speed Dial> button57, 62
 - Speed Dialing200
 - Split Send319
 - Standard Size210, 312
 - staple cartridge47, 48
 - staple cartridges for booklet48
 - staple scrap container48
 - Stapling147
 - <Start> button57, 62
 - Starting Rate216
 - <Stop> button57, 62
 - stopping a copy job76
 - stopping a fax job173
 - stopping a scan job264
 - Store & Send Link301
 - Store for Polling238
 - Store in Remote Folder398
 - Store to Folder295
 - Store to USB297
 - Stored File Manager 3263, 406
 - storing files on the machine that a remote machine can retrieve238
 - stylus pen43
 - stylus pen holder43
 - Subject274, 302
 - suppressing the document background307
- T**
- Tab Margin Shift141
 - Target Area Color95
 - Text277
 - Text Compression282
 - TIFF278, 279
 - TIFF/JPEG Auto Select278, 279
 - TIFF-F232
 - TIFF-J233
 - TIFF-S232
 - toner cartridges44
 - toner cover43
 - top cover45
 - touch screen56, 60
 - Transfer Protocol289
 - transfer unit44
 - Transmission Header Text219
 - transmitting 2-sided originals196, 206
 - transmitting documents with a cover page220
 - Transparency Options144
 - Transparency Separators397
 - Tray 1, 2, 3, 443
 - Tray 5 (Bypass)43, 49
 - Tray 5 (Bypass) top cover43, 49
 - Tray 643
-

Tray 6 top cover	43
Tray 8 (Inserter)	48

U

Upright Images	277
USB 2.0 interface connector	43
USB memory slot	58
User Name	293
using F Code transmission	228
using remote folder	225

V

Variable Size	312
---------------------	-----

W

waste toner bottle	44
waste toner bottle cover	44
Watermark	135, 397
Web Applications	358

X

XPS	279
XPS Signature	282

**ApeosPort-IV C7780/C6680/C5580
DocuCentre-IV C7780/C6680/C5580
User Guide**

ME4905E2-1 (Edition 1)

February 2011

Fuji Xerox Co., Ltd.

Copyright © 2011 by Fuji Xerox Co., Ltd.