

ApeosPort/DocuCentre Product
Package Aware Print Driver
Installation Guide (Windows® OS)



NOTE: Standard printer setup and custom printer setup are two methods of installing the print driver. The following describes how to install the print driver with standard printer setup when the machine is connected to the subnet using TCP / IP as the same as the computer.

Setting Procedure:

- I. [Machine] Checking the machine's model name
- II. [Machine] Checking the Machine's IP Address
- III. [PC] Downloading the Print Driver
- IV. [PC] Installing the Print Driver
- V. [PC] Sending a Print Job from the Computer

NOTE: You need to operate with both your computer and the machine. [PC] indicates the operation with your computer, and [Machine] indicates the operation with the machine. Change the security settings to configure the following procedure. Make the settings according to the security rules you are using.

I. [Machine] Checking the Machine's model name


1. The machine's model name is displayed in front side of the Control Panel.

II. [Machine] Checking the Machine's IP Address

1. Press the <Machine Status> button.



2. Check the machine's IP address on the 'Machine Information' screen.

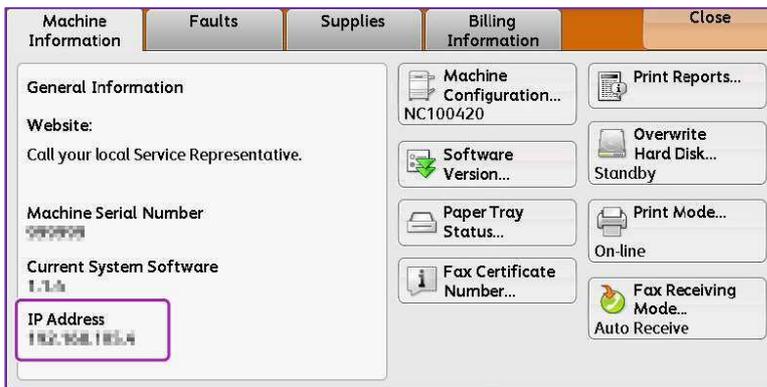

IMPORTANT: When an IPv6 address is specified, IPv4 address is not displayed. Select [System Settings] > [Connectivity & Network Setup] > [Protocol Settings] > [TCP / IP – Network Settings], and then select [Change Settings]. Refer to [IPv4 – IP Address].

3. Select [Close].


III. [PC] Downloading the Print Driver

NOTE: You can get the print driver by either of the following two methods.


- Install from the media (software, product manual) provided with the machine.
- Download from our official website. (<http://www.fujixerox.co.kr>)

IV. [PC] Installing the Print Driver

1. Double-click the downloaded PCL print driver.
2. Confirm the software license agreement, and click [Yes].

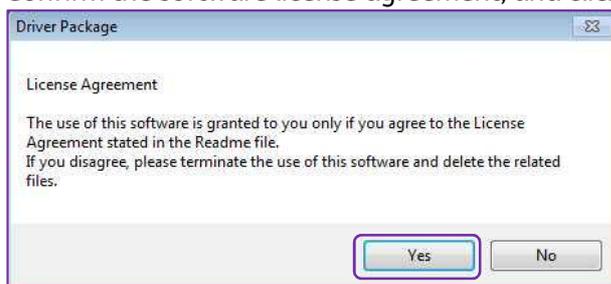


3. Click [**Machine**] icon on the Printer Driver Installation screen.

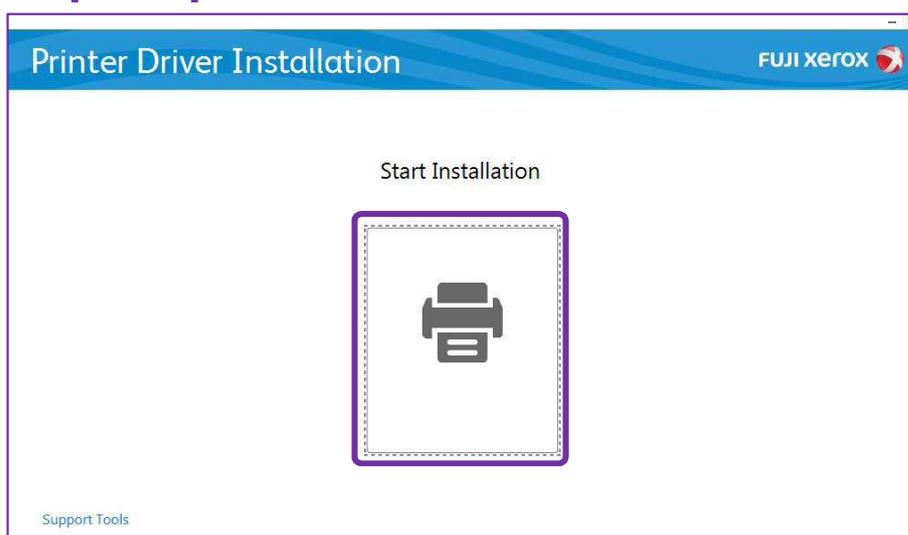


4. Click [**Yes**] on the 'User Account Control' window.



5. Select **[I accept the terms of the license agreement]**, and click **[Next]**.

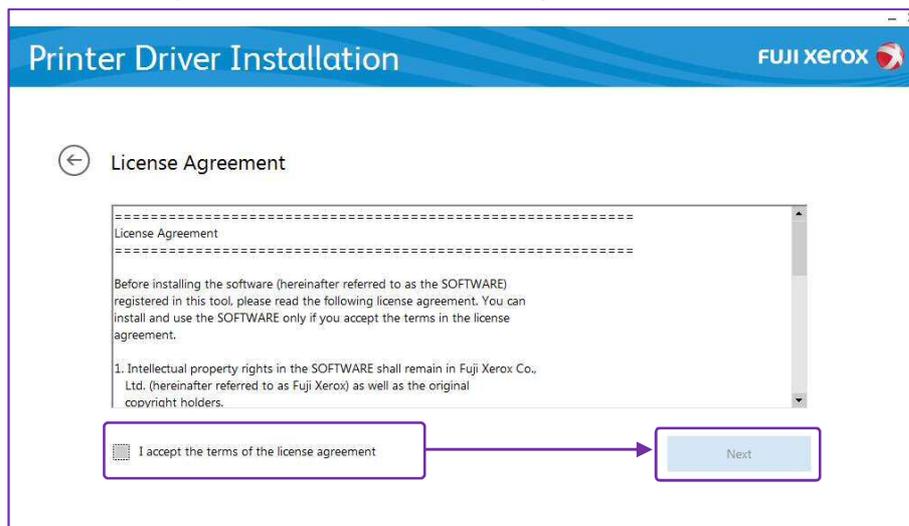

6. Select **[Wireless or Ethernet Connection]** in the 'Choose a Method of Connection' window, and click **[Next]**.

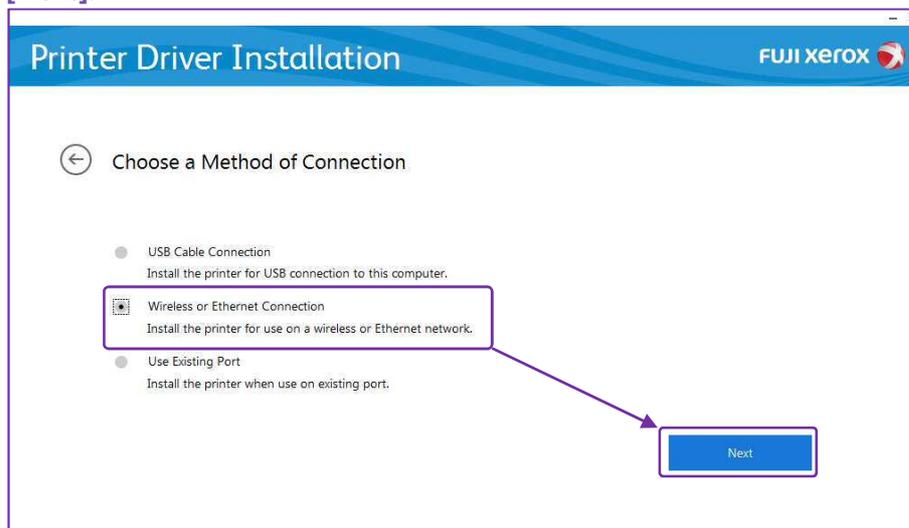

7. The machine connected over the same subnet using TCP / IP are listed in the screen. Confirm if the machine's IP address is displayed.


NOTE: If the machine is not displayed, perform the following steps.

7-1. select [add printer manually].


7-2. Enter the [Enter IP Address] and [Port Name], and then click [Next].

8. Confirm if the machine is displayed, and then click [Next].

9. Setup [Set this printer as default] and [Share this printer with other computer on the network] options, and then click [Install].

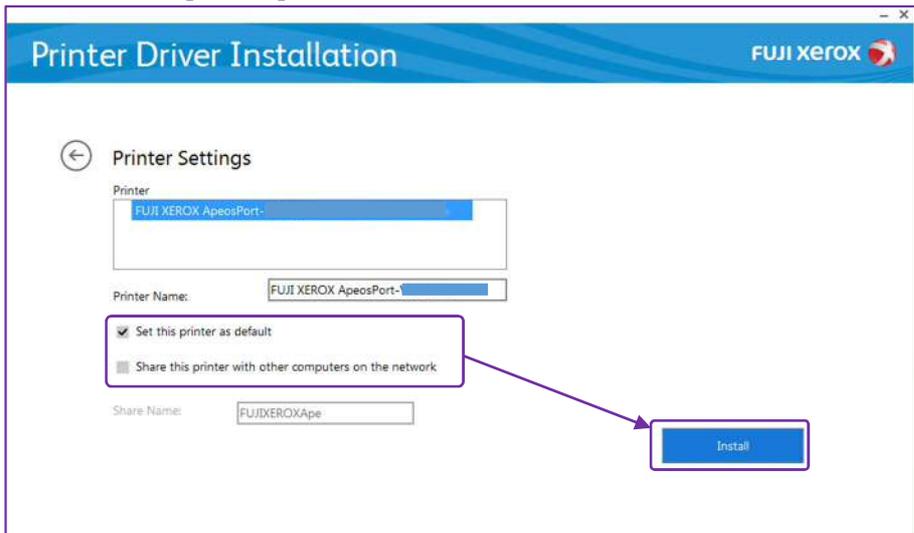

10. When the installation is finished, click [Finish].

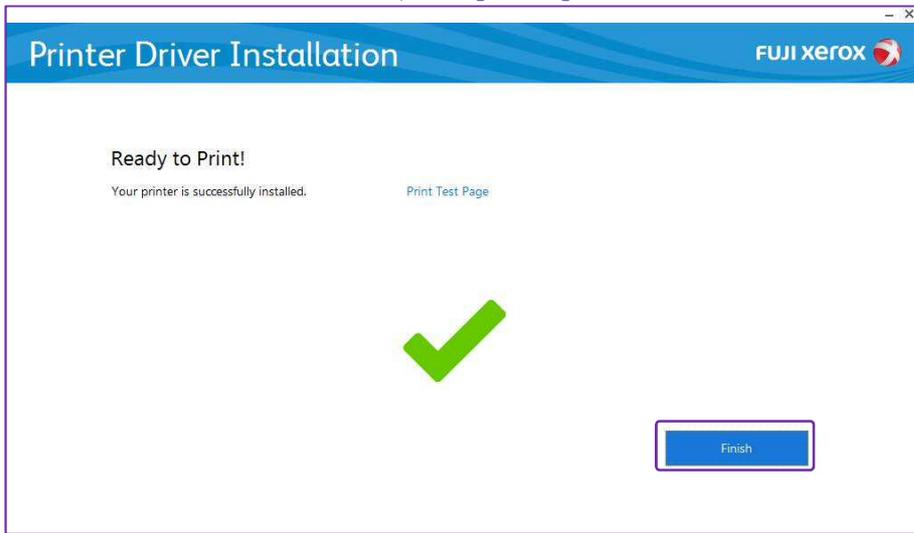


V. [PC] Sending a print job from the computer

1. Open the document to print from the application software, and select [Print] from the [File] menu.

NOTE : The menu names may vary depending on the application software you use.

2. [Select the print driver from [Select Printer]. Change the settings in [Preference] if necessary.

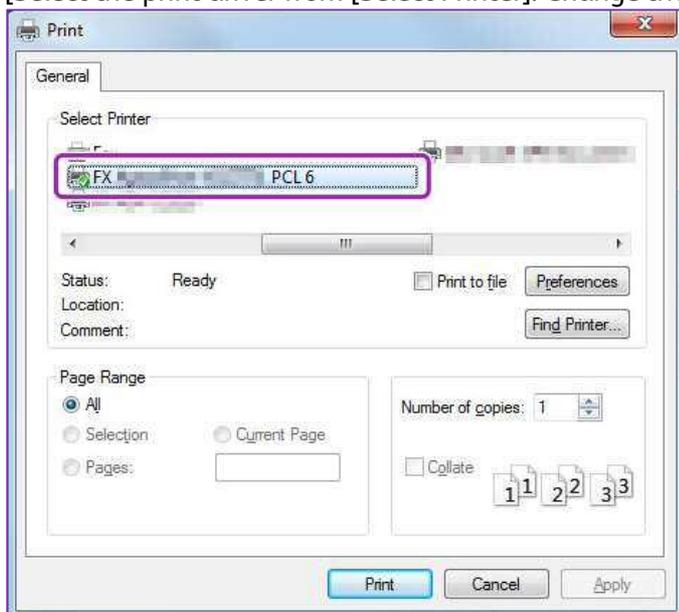

3. Click [Print].

