

ApeosPort / DocuCentre Products

Standard Printer Driver Installation Guide (Windows® OS)



NOTE : Standard printer setup and custom printer setup are two methods of installing the print driver. The following describes how to install the print driver with standard printer setup when the machine is connected to the subnet using TCP / IP as the same as the computer.

Setting Procedure:

1. [Machine] Checking the machine's model name
2. [Machine] Checking the machine's IP Address
3. [PC] Downloading the print driver
4. [PC] Installing the print driver
5. [PC] Sending a print job from the computer

NOTE : You need to operate with both your computer and the machine. [PC] indicates the operation with your computer, and [Machine] indicates the operation with the machine. Change the security settings to configure the following procedure. Make the settings according to the security rules you are using.

[Machine] Checking the machine's model name


1. The machine's model name is displayed in front side of the Control Panel.

[Machine] Checking the machine's IP Address

1. Press the <Machine Status> button.



2. Check the machine's IP address on the 'Machine Information' screen.

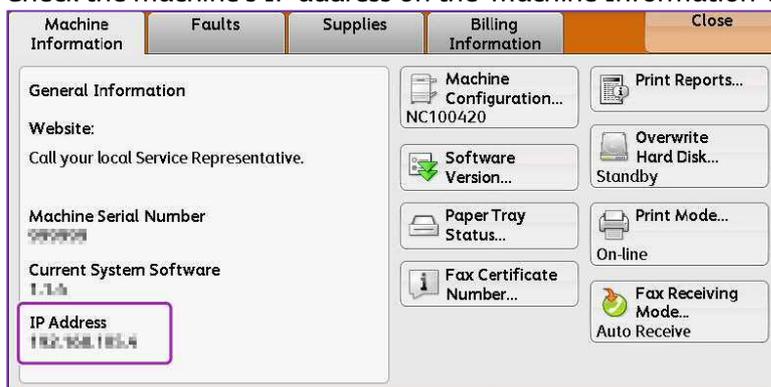

IMPORTANT:

When an IPv6 address is specified, IPv4 address is not displayed. Select [System Settings] > [Connectivity & Network Setup] > [Protocol Settings] > [TCP / IP – Network Settings], and then select [Change Settings]. Refer to [IPv4 – IP Address].

3. Select [Close].

[PC] Downloading the Print Driver


NOTE : You can get the print driver by either of the following two methods.

- Install from the media (software, product manual) provided with the machine.
- Download from our official website. (<http://www.fujixerox.com>)


[PC] Installing the Print Driver

NOTE : Standard printer setup and custom printer setup are two methods of installing the print driver. The following describes how to install the downloaded PCL driver with standard printer setup when the machine is connected to the subnet using TCP / IP as the same as the computer.


1. Double-click the downloaded PCL print driver.
2. Confirm the software license agreement, and click **[Yes]**.

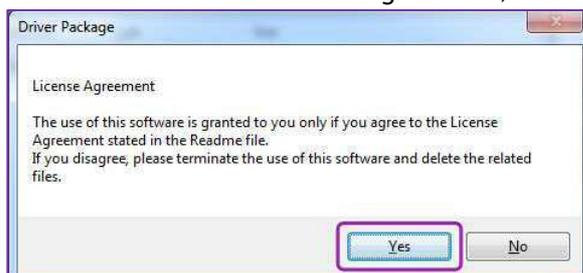

3. If you execute Step2, you will see the following installation options and click **[Standard]** at the top.

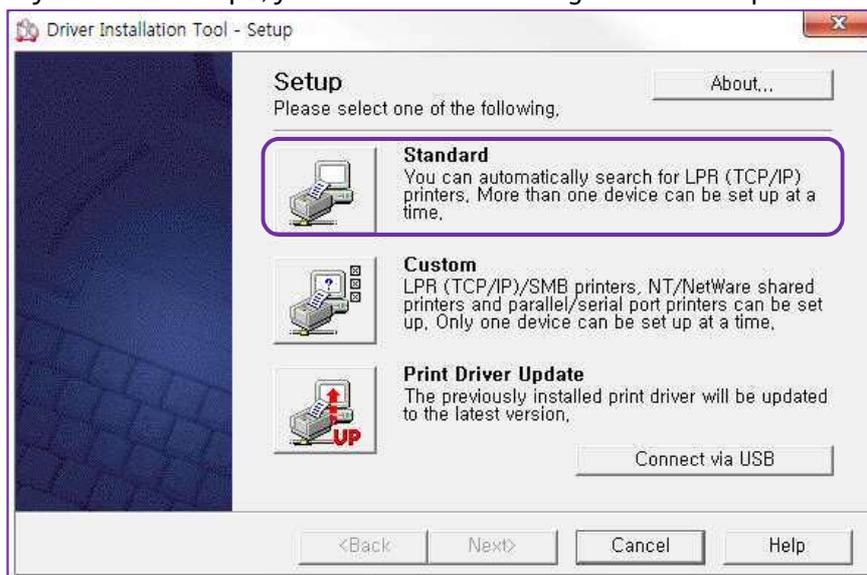


4. After completing the above steps, click **[Standard]** from 'Device Type' and then click **[Next>]**.

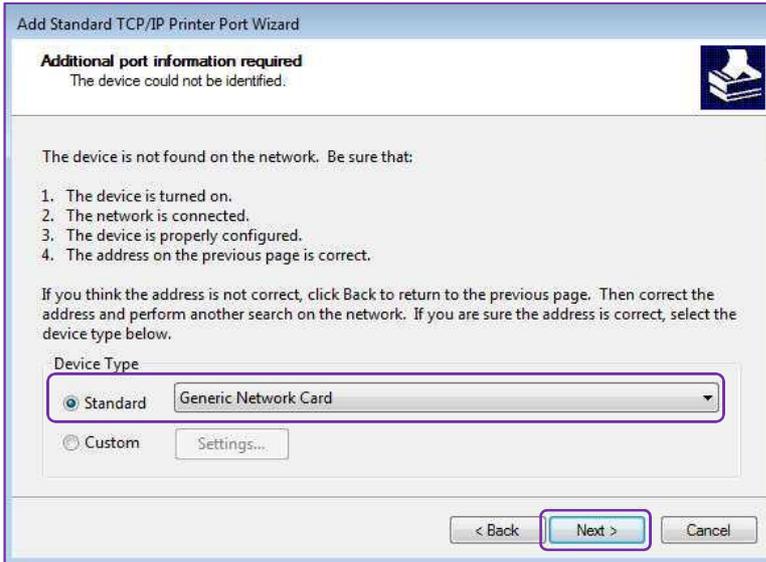


NOTE : The 'Standard(S)' due to the network settings may not be executed. If the installation is not in progress, please proceed the next step.


- 1) Click **[Custom]**.

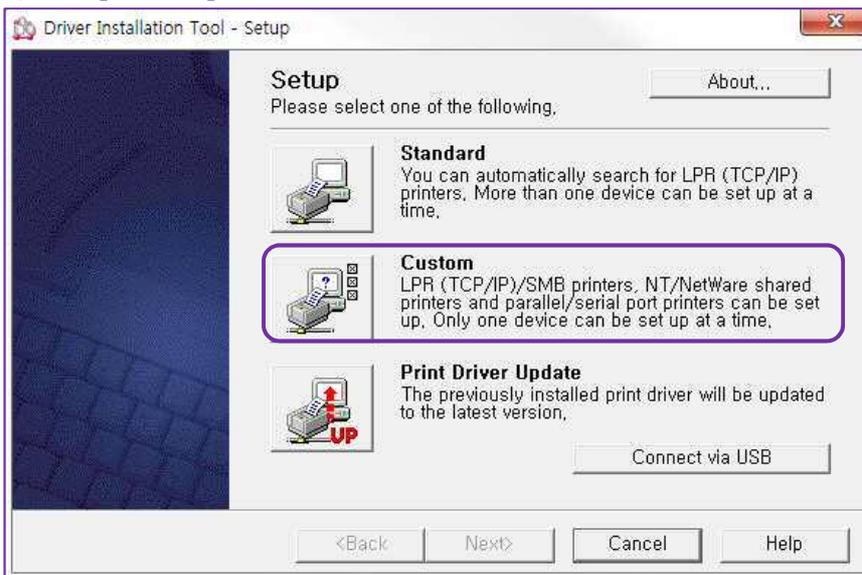


- 2) Select **[Local Printer]**, and then click **[Next]**.

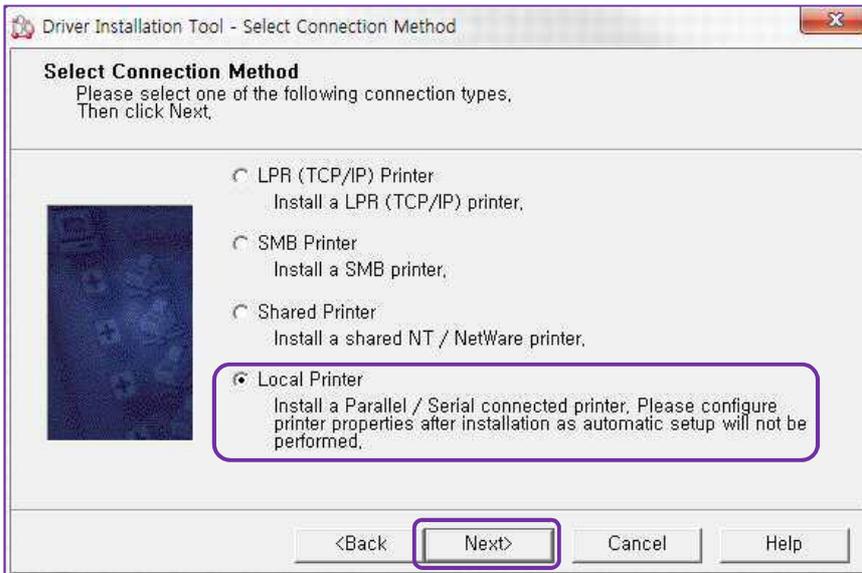


3) Select **[LPT1]** from the Port list, product from the Model list and then click **[Next>]**.

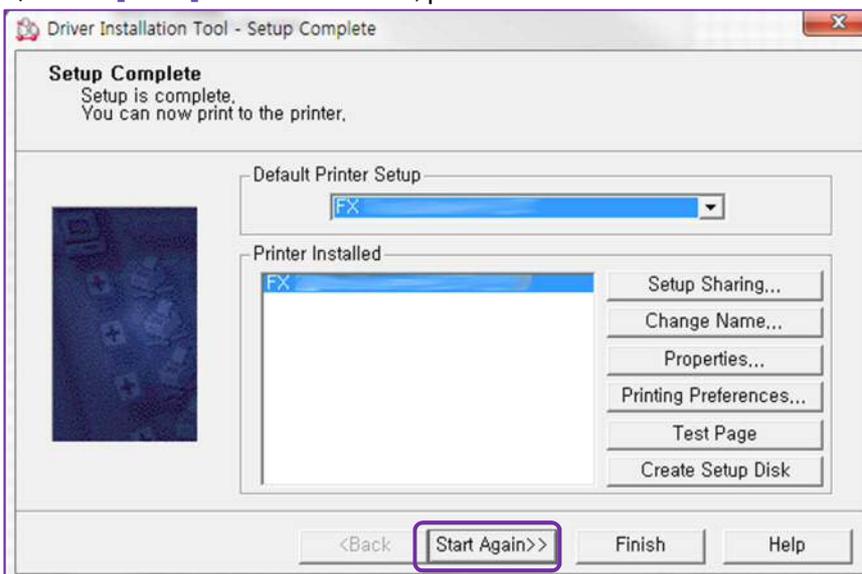


4) Select **[Yes]** and click **[Install]** on the Software License Agreement window.

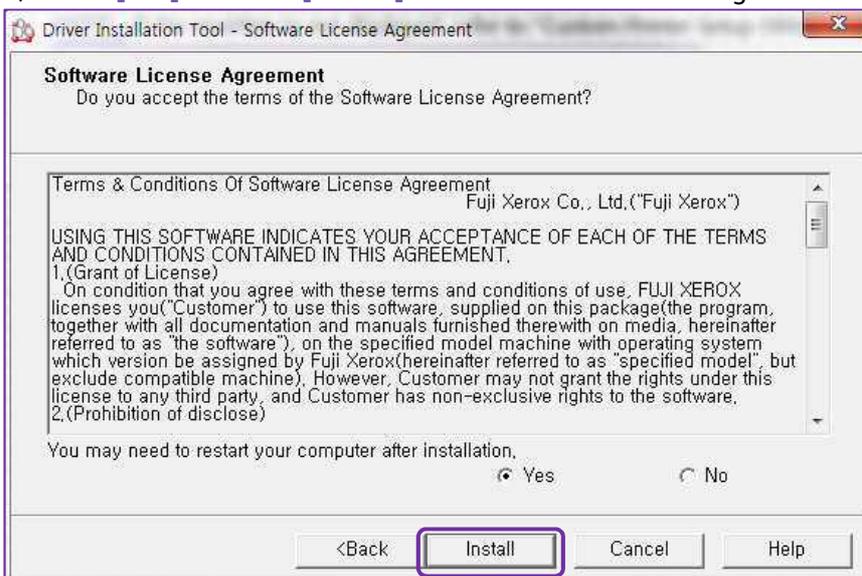


5) The completed window is displayed. Select whether to install as the default printer in the 'Default Printer Setup' list, and then click the **[Finish]** button.

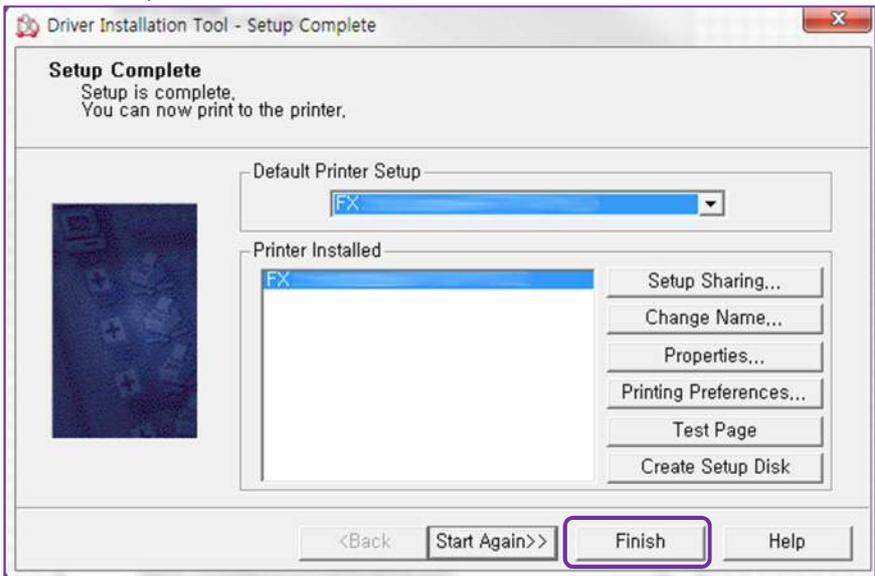


6) Select **[Yes]** on the 'Driver Installation Tool' window.

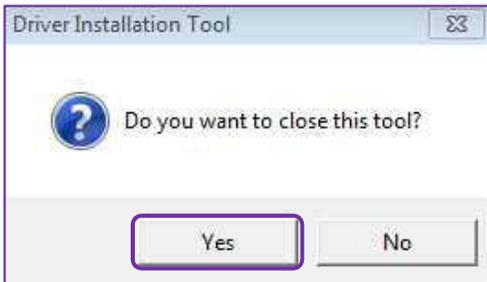

7) If you click 'No', you cannot print until you have restarted. The computer restarts if you click 'Yes'.

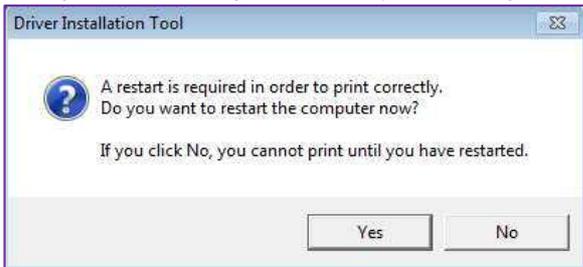



7) Click [Start] and select **[Devices and Printers]** from the computer. The 'Devices and Printers' window is displayed.

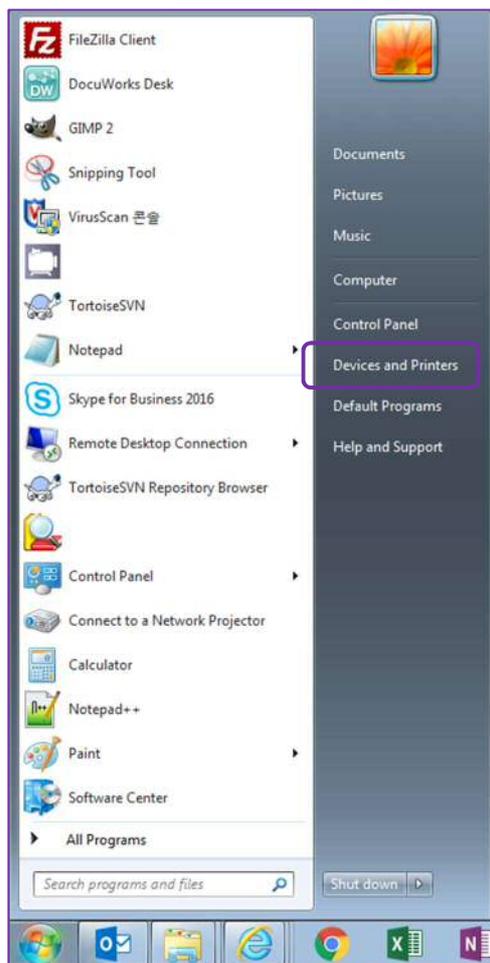


8) Select the printer from the printer list.




9) Click printer, right-click and select **[Printer Properties]**. The Printer properties window is displayed.

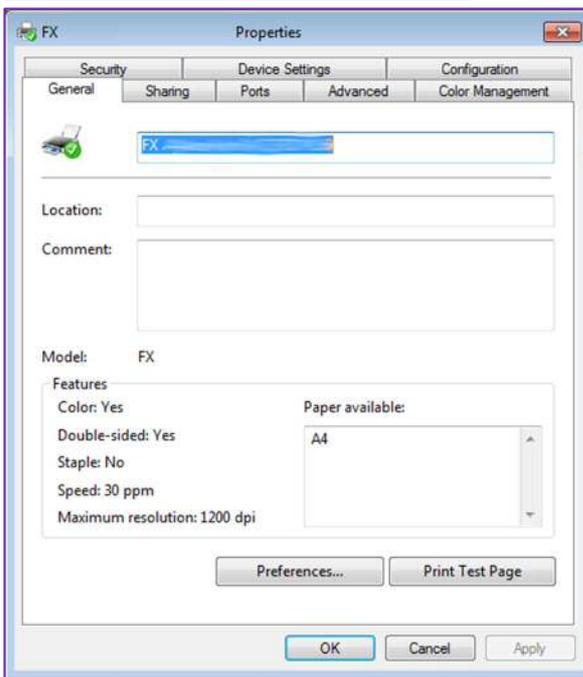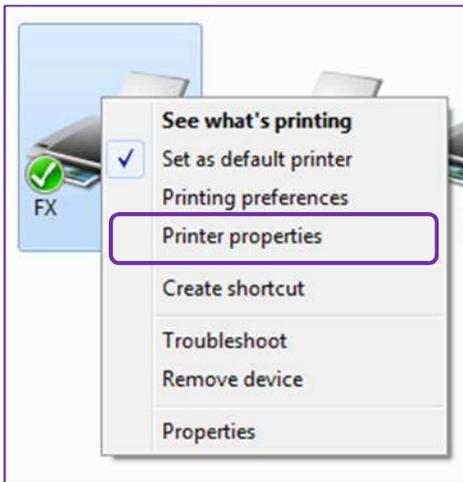


10) Click the **[Add Port]** button from the Printer Properties.

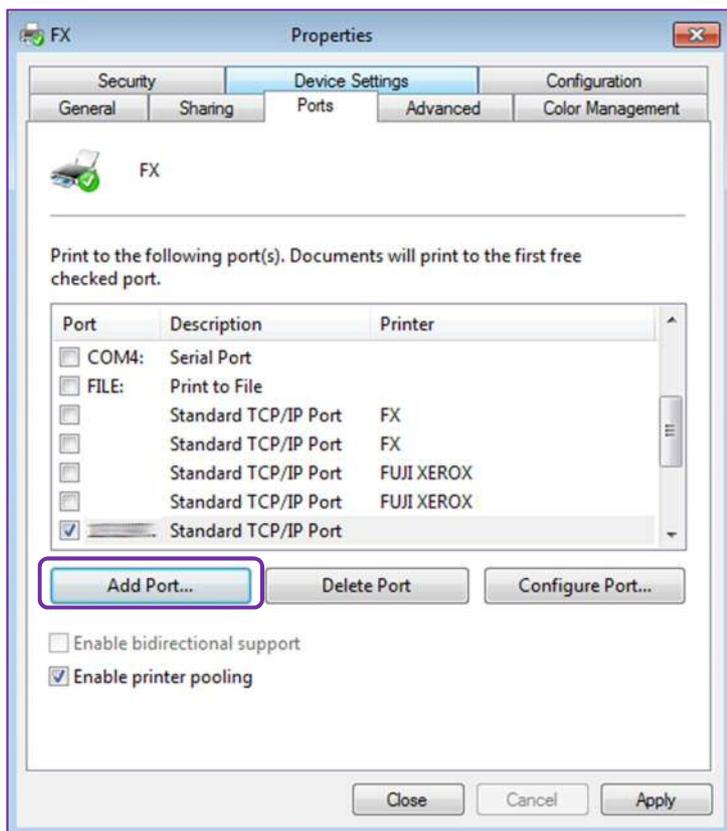


11) Select [Standard TCP / IP Port] from the Available port types lists, and then click [New Port...] button. The 'Add Standard TCP / IP Printer Port Wizard' window is displayed.

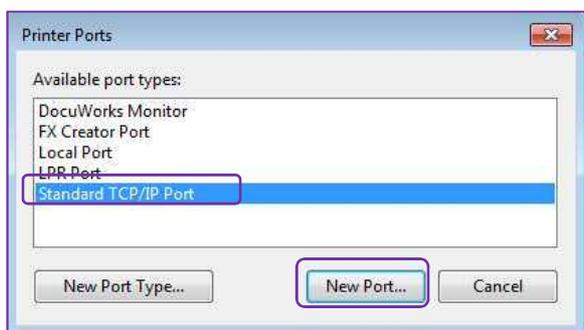


12) Click [Next>] from the Add Standard TCP / IP Printer Port Wizard window.

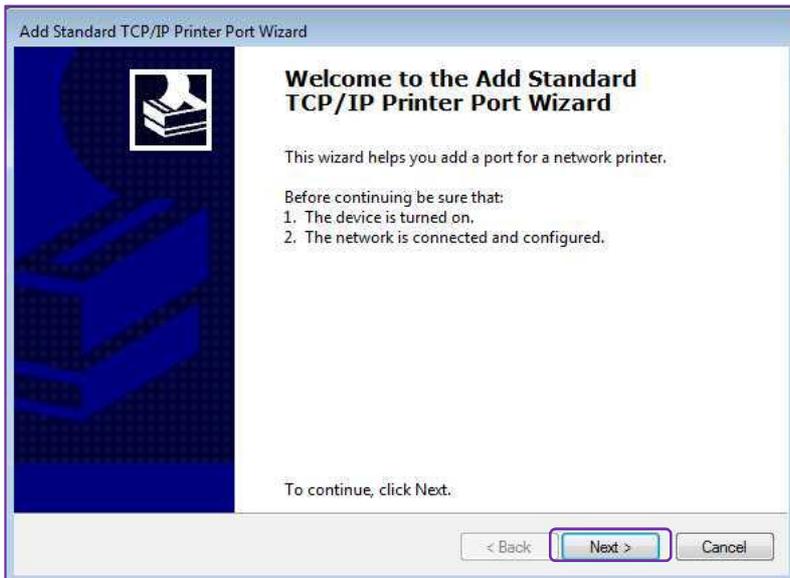


13) Enter the IP address of the printer you are using on [Printer Name or IP Address] field, enter the [Port Name] field and click the **[Next>]** button.

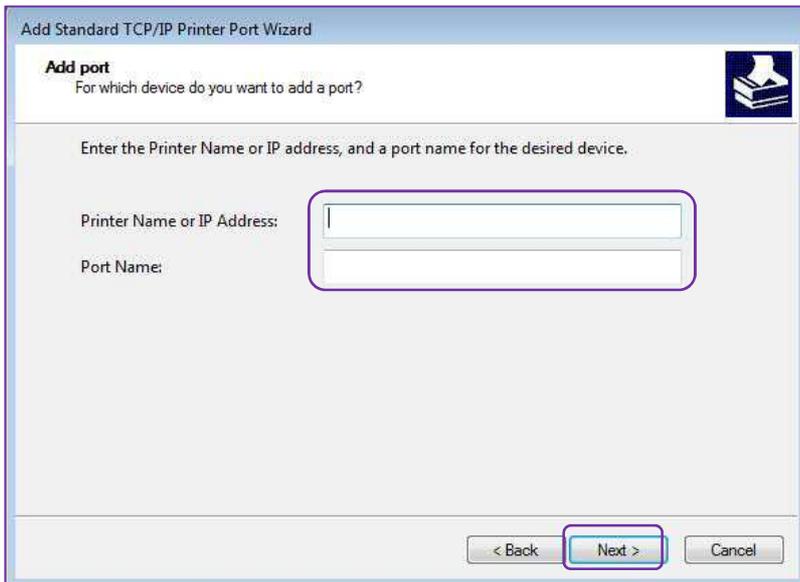

14) After completing the above steps, click **[Standard]** from 'Device Type' and then click **[Next>]**.

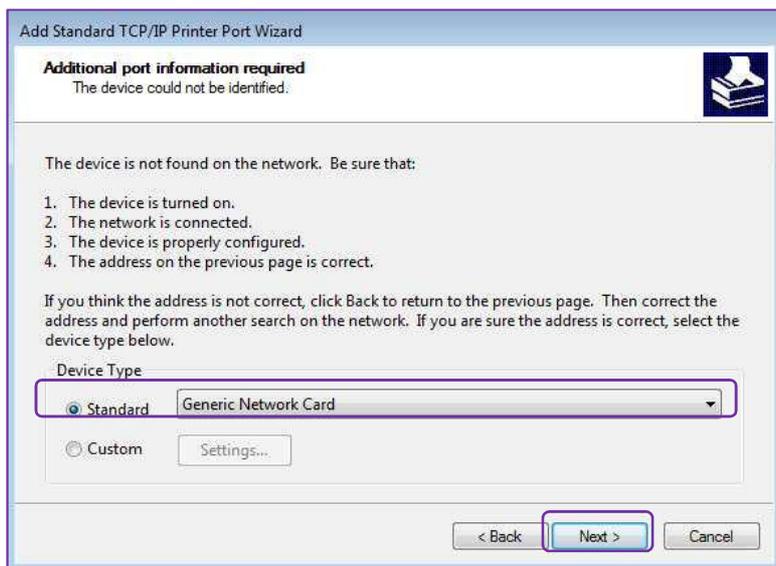


15) Click **[Next>]** and then click **[Finish]** to complete the task.

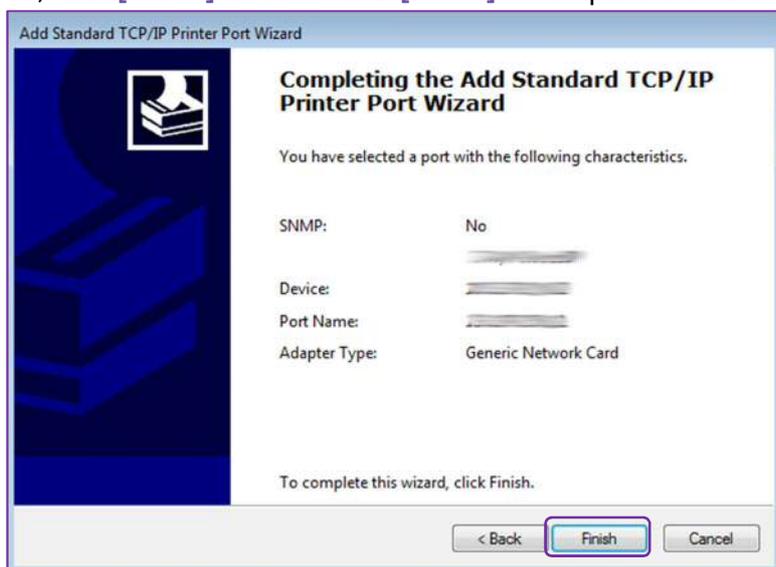

17) Click **[Close]**.

16) Click **[Apply]** and then click **[Close]** to exit.

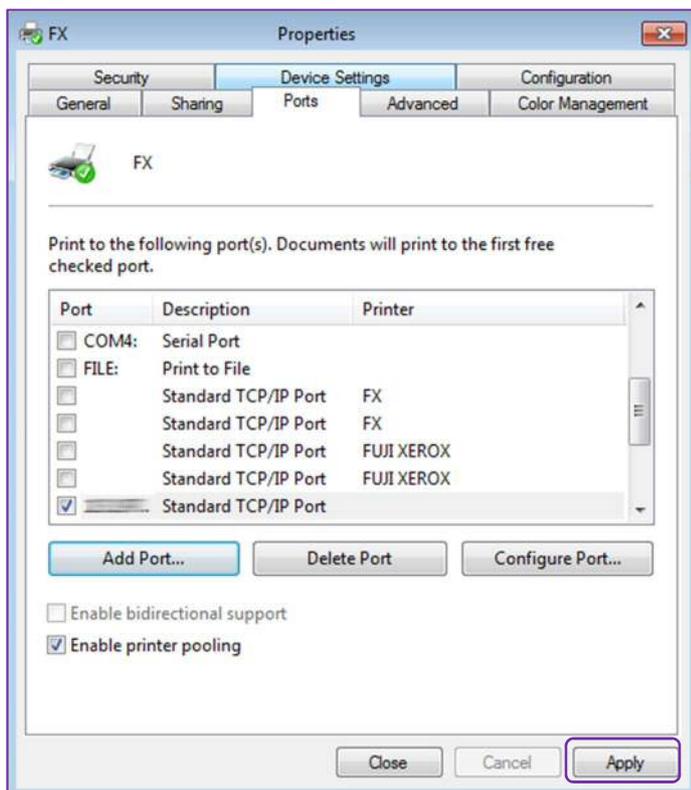


NOTE : After completing, you can use the driver that you set up.

[PC] Sending a print job from the computer

1. Open the document to print from the application software, and select [Print] from the [File] menu.

NOTE : The menu names may vary depending on the application software you use.

2. Select the print driver from [Select Printer]. Change the settings in [Preference] if necessary.

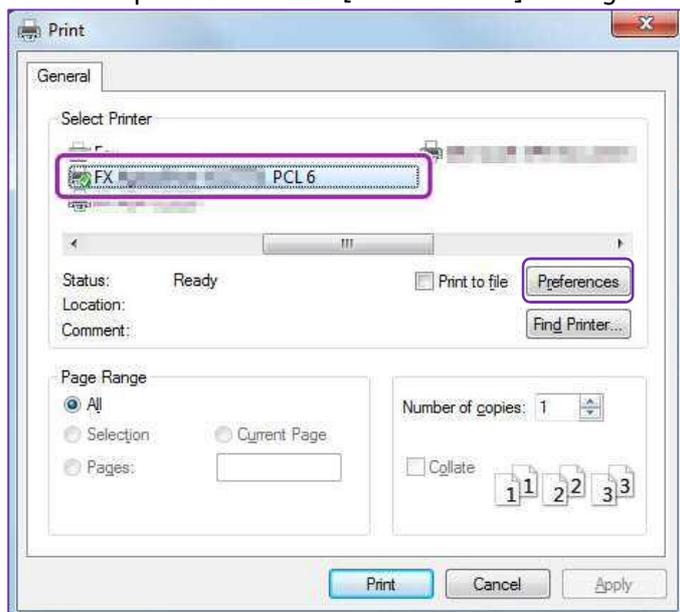

3. Click [Print].

