ApeosPort-V C7775 ApeosPort-V C6675 ApeosPort-V C5575 ApeosPort-V C4475 ApeosPort-V C3375 ApeosPort-V C3373 ApeosPort-V C2275 DocuCentre-V C7775
DocuCentre-V C6675
DocuCentre-V C5575
DocuCentre-V C4475
DocuCentre-V C3375
DocuCentre-V C3373
DocuCentre-V C2275



User Guide



Microsoft, Windows, Windows NT, Windows Server, Windows Vista, Internet Explorer, and Microsoft Network are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries

Adobe, Acrobat, PostScript and PostScript 3 are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Macintosh and Mac OS are trademarks of Apple Inc.

PCL is a registered trademarks of Hewlett-Packard Corporation.

RSA and BSAFE are either registered trademarks or trademarks of EMC Corporation in the United States and/or other countries.

All product/brand names are trademarks or registered trademarks of the respective holders.

Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.

For information on license, refer to About License.

In this manual, safety instructions are preceded by the symbol  $\triangle$ . Always read and follow the instructions before performing the required procedures.

As the copying machine contains a feature designed to prevent forging of certain documents, there may be rare instances where copies or scanned images do not achieve the desired results.

The data saved in the hard disk of the machine may be lost if there is any problem in the hard disk. Fuji Xerox is not responsible for any direct and indirect damages arising from or caused by such data loss.

Fuji Xerox is not responsible for any breakdown of machines due to infection of computer virus or computer hacking.

#### **Important**

- 1. This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied or modified in whole or part, without the written consent of the publisher.
- 2. Parts of this manual are subject to change without prior notice.
- 3. We welcome any comments on ambiguities, errors, omissions, or missing pages.
- 4. Never attempt any procedure on the machine that is not specifically described in this manual.

  Unauthorized operation can cause faults or accidents. Fuji Xerox is not liable for any problems resulting from unauthorized operation of the equipment.


An export of this product is strictly controlled in accordance with Laws concerning Foreign Exchange and Foreign Trade of Japan and/or the export control regulations of the United States.

XEROX, the sphere of connectivity design, PDF Bridge, ContentsBridge, Smart WelcomEyes, ApeosWare, and CentreWare are trademarks or registered trademarks of Xerox Corporation in the U.S. or Fuji Xerox Co., Ltd. DocuWorks is a trademark of Fuji Xerox Co., Ltd.

#### **About the Machine**

The machine is the Type 2 (T2) model of ApeosPort-V C7775/C6675/C5575/C4475/C3375/C3373/C2275, DocuCentre-V C7775/C6675/C5575/C4475/C3375/C3373/C2275.

The Type 2 (T2) model has the label, which is located on the back side of the front cover.

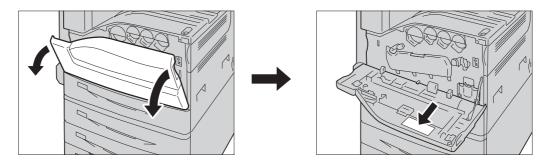

## Change Overview of the Type 2 (T2) Model

- [Enter Power Saver after Printing Ends] is added in [Power Saver Settings].
- Usability is improved in line selection for Fax/Internet Fax, by changing the line display from the drop down menu to the button style.
- The filename format to be generated when fax is stored to folder can be specified.
- If fax is selected for a targeted job in [Notify Job Completion by E-mail], fax converted to PDF format can be attached to notification e-mail.
- For the easy-to-follow machine operation, the message will be displayed when you preview a fax or scan job.
- The default for [File Format] displayed in the Scan screen is set to [PDF].
- You can access to the forwarding destination server using authentication information registered on CentreWare Internet Services, when you transferring files with Scan to My Folder.
- Contents to be confirmed before printing is enhanced as follows, if a booklet job is stored in the machine. The booklet icon will be displayed when you confirm the stored job, and also the detail of the booklet setting will be displayed on the preview screen.
- In the [Auto Job Promotion] setting, you can specify the period of time until a bypassed job is deleted automatically.
- The DNS server address can be set in [IPv4 DNS Server Setup] and [IPv6 DNS Server Setup] using the control panel.
- [Ping Connection Test] is added in [Protocol Settings].
- AirPrint<sup>TM</sup> of Apple Inc. is supported. AirPrint is a trademark of Apple Inc.
- Secondary Ethernet Kit is in store as an option. This addition has changed some items in [Connectivity & Network Setup].

## **Table of Contents**

About the Machine	
Change Overview of the Type 2 (T2) Model	
Before Using the Machine	15
Preface	16
Types of Manuals	17
Using This Guide	18
Organization of This Guide	
Conventions	19
Safety Notes	21
Electrical Safety	22
Machine Installation	23
Operational Safety	29
Location of Warning and Caution Labels	32
Consumable	33
Regulation	34
Radio Frequency Emissions (Class B)	34
Regulatory Information for RFID	34
Others	
Environment	35
About License	36
RSA BSAFE	
Heimdal	36
JPEG Code	36
Libcurl	36
FreeBSD	
OpenLDAP	
DES	
AES	
TIFF (libtiff)	
ICC Profile (Little cms)	
XML Paper Specification (XPS)	
EDICT and COMPDIC	
Newlib	
About QTAbout software applied to LGPL	
Other Licenses	
Legal Notice	
•	
Product Overview	
Machine Components	
Power Source	
Switching the Main Power On	

	Switching the Power On	76
	Switching the Power Off	77
	Switching the Main Power Off	78
	Switching the Power Off from Remote Location	79
	Circuit Breaker	80
	Power Saver Mode	82
	Entering the Power Saver Mode	
	Exiting the Power Saver Mode	
	Smart WelcomEyes	
	Control Panel	85
	Large Size Color UI	
	Screens and Buttons Displayed	
	About the Services Home Screen	
	Touch Screen	
	Entering Text	
	Installing the Tray Attachment on the Finisher-B1	
	Thistatting the Tray Attachment on the Finisher-BT	101
3	Copy	103
	Copying Procedure	104
	Step 1 Loading Documents	104
	Step 2 Selecting Features	
	Step 3 Entering a Quantity	107
	Step 4 Starting the Copy Job	
	Step 5 Confirming the Copy Job in Job Status	109
	Operations during Copying	110
	Stopping the Copy Job	110
	Changing the Number of Copies	
	Interrupting the Copy Job	112
	Simple Copy	113
	Paper Supply (Selecting the Paper for Copying)	
	Reduce/Enlarge (Making Enlarged/Reduced Copies)	
	2 Sided Copying (Making 2 Sided Copies)	
	Auto / Color / Black & White (Selecting the Color for Copying)	
	Lighten/Darken (Adjusting the Copy Density)	
	2 Pages per Side (Copying Two Pages onto One Sheet)	
	1 Staple	
	Copy	
	Reduce/Enlarge (Making Enlarged/Reduced Copies)	
	Paper Supply (Selecting the Paper for Copying)	
	Output Color (Selecting the Color for Copying)	
	2 Sided Copying (Making 2 Sided Copies)	
	Copy Output (Specifying Finishing Options)	
	Pages per Side (Copying Multiple Pages onto One Sheet)	
	Lighten/Darken (Adjusting the Copy Density)	
	Image Quality	
	Original Type (Selecting the Document Type)	
	Image Options (Adjusting Copy Density/Sharpness/Saturation of Images)	131

	Image Enhancement	122
	(Erasing the Background Color of Documents/Adjusting Contrast)	
	Color Effects (Selecting an Image Quality)	
	Color Balance (Adjusting Color Balance)	
	Color Shift (Adjusting the Color Tone)	
	Layout Adjustment	
	2 Sided Copying (Making 2 Sided Copies)	
	Book Copying (Copying Facing Pages onto Separate Sheets)	
	2 Sided Book Copying (Making 2 Sided Copies of Facing Pages)	
	Original Size (Specifying the Scan Size for the Document)	
	Mixed Size Originals (Scanning Different Size Documents Simultaneously)	
	Edge Erase (Erasing Edges and Margin Shadows of the Document)	
	Image Shift (Adjusting the Image Position)	
	Invert Image (Making Reversed Copies of Images)	
	Original Orientation (Specifying the Orientation of Loaded Documents)	
	Image Rotation (Changing the Orientation of Images)	
	Output Format	
	2 Sided Copying (Making 2 Sided Copies)	
	Booklet Creation (Creating a Bound Booklet)	
	Covers (Attaching Covers to Copies)	
	Pages per Side (Copying Multiple Pages onto One Sheet)	
	Poster (Making Enlarged Copies Spread over Multiple Sheets)	
	Repeat Image (Making Multiple Copies on One Sheet)	
	Annotations (Adding a Comment/a Date/Page Numbers to Copies)	
	Watermark (Printing Control Numbers on the Background of Copies)	
	Secure Watermark (Managing Document Security)	
	Folding (Outputting Bi-Folded/Tri-Folded Paper)	
	Preset Repeat Image (Making Multiple Copies on a Single Sheet)	
	Transparency Options (Inserting Blank Sheets between Transparencies)	
	Copy Output (Specifying Finishing Options)	
	ID Card Copy (Copying Both Sides of an ID Card)	
	Job Assembly	177
	Build Job	477
	(Processing Documents Scanned with Different Settings as One Job)	
	Sample Job (Checking the Finished Output of the Copy)	
	Combine Original Sets (Adding Originals)	182
	Delete Outside/Delete Inside (Deleting Outside or Inside of the Selected Area)	183
	Stored Programming (Calling a Stored Program for Build Job)	
4	Fax	
	Fax Procedure	188
	Step 1 Loading Documents	188
	Step 2 Selecting Features	
	Step 3 Specifying Destinations	
	Step 4 Starting the Fax Job	
	Step 5 Confirming the Fax Job in Job Status	194
	Operations during Faxing	
	Stopping the Fax Job	195

Previewing the Read Images during a Fax Job	196
Changing the Scan Settings	198
About Internet Fax	200
Internet Fax Features	
Sending Internet Fax	202
Receiving Internet Fax	
Useful Features	204
About IP Fax (SIP)	207
IP Fax (SIP) Features	
Feature Comparison with Regular Fax	
Sending IP Fax (SIP)	
Receiving IP Fax (SIP)	
About Server Fax	
Sending Server Fax	
Simple Fax	
Specifying a Destination Using the Numeric Keypad	
Speed Dialing (Specifying a Destination Using an Address Number)	
Specifying a Destination Using a One-Touch Button	
Previewing the Read Images during a Simple Fax Job	
Resolution (Specifying the Scanning Resolution)	
Original Type (Selecting the Document Type)	
2 Sided Scanning (Transmitting 2-sided Originals)	
Fax/Internet Fax.	
Internet Fax / Fax / IP Fax (SIP) (Selecting Internet Fax / Fax / IP Fax (SIP))	
+ Add (Sending Faxes to Multiple Recipients)	
Address Book (Specifying a Destination Using the Address Book [Type 1])	
- 31 -	
Address Book (Specifying a Destination Using the Address Book [Type 2]) Speed Dialing (Specifying a Destination Using an Address Number)	
Add New Address (Registering a Destination on the Address Book)	
Specifying a Destination Using a One-Touch Button	
Specifying a Destination Using the Keyboard Screen	
Specifying a Destination Using the Redial Feature	
Specifying a Line (Port)	
Entering Specific Symbols	
Removing/Confirming a Recipient	
Previewing the Read Images during a Fax/Internet Fax Job	
Lighten/Darken (Adjusting Fax Density)	
2 Sided Scanning (Transmitting 2-sided Originals)	
Original Type (Selecting the Document Type)	
Resolution (Specifying the Scanning Resolution)	
Layout Adjustment	
2 Sided Scanning (Transmitting 2-sided Originals)	
Original Type (Selecting the Document Type)Resolution (Specifying the Scanning Resolution)	
Original Size (Specifying the Scan Size for the Original)	
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	
Book Faxing (Scanning Facing Pages onto Separate Sheets)	
book i aking (scarining i acing i ages onto separate sneets)	233

	Reduce/Enlarge (Specifying a Scan Ratio)	240
	Stamp (Adding a Stamp when Scanning a Document)	241
	Lighten / Darken (Adjusting Fax Density) (Type 2 (T2) Model Only)	242
	Fax/Internet Fax Options	243
	Acknowledgement Report (Confirming Transmission Results)	
	Starting Rate (Selecting a Communication Mode)	
	Priority Send/Delay Start (Specifying Send Priority/Send Time)	
	Transmission Header Text (Adding Sender Name and Phone Number to Faxes)	248
	Cover Page (Transmitting Documents With a Cover Page)	248
	Internet Fax Subject (Specifying the Internet Fax Subject)	250
	Internet Fax Message (Editing the Internet Fax Mail Contents)	250
	Recipient Print Sets (Printing Multiple Sets at the Remote Machine)	251
	Pages per Side (Combining Multiple Pages into One Sheet)	252
	Remote Folder (Using Remote Folder)	252
	F Code (Using F Code Transmission)	255
	Internet Fax Profile (Specifying Internet Fax Profiles)	259
	Encryption (Sending Internet Fax Encrypted by S/MIME)	260
	Digital Signature (Sending Internet Fax with a Digital Signature by S/MIME)	260
	More Options	261
	Remote Polling (Retrieving Files from Remote Machines)	261
	Store for Polling	
	(Storing Files on the Machine that a Remote Machine can Retrieve)	263
	On-hook (Confirming Remote Machine Response Prior to Transmission)	265
	Broadcast	267
	Broadcast Send (Transmitting to Multiple Recipients)	267
	Relay Broadcast (Transmitting Documents Through a Relay Station)	268
	Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)	271
	Receiving Faxes	275
	Switching between Auto Receive and Manual Receive	
	Using Auto Receive	
	Using Manual Receive	276
	Using Folder Receive	276
	Facsimile Information Services	278
	Using the Receiver	
	When Not Using a Receiver	
	-	
5	Scan	281
	Scanning Procedure	
	Step 1 Loading Documents	
	Step 2 Selecting the Features	
	Step 3 Starting the Scan Job	
	Step 4 Confirming the Scan Job in Job Status	
	Step 5 Saving the Scanned Data	289
	Operations during Scanning	290
	Stopping the Scan Job	290
	Previewing the Scanned Images during a Scan Job	291
	Changing Scan Settings	294
	E-mail	296

Address Book	297
Address Book (Specifying a Destination Using the Address Book [Ty	/pe 1])297
Address Book (Specifying a Destination Using the Address Book [Ty	· ·
Add New Address (Registering a Recipient on the Address Book)	3 <b>0</b> 3
Specifying a Destination Using a One-Touch Button	304
New Recipient (Specifying an E-mail Address)	305
Add Me (Adding the Sender's Address)	306
Recipient(s) (Editing a Recipient)	307
From (Setting the Sender's Address)	308
Subject (Setting the Subject)	309
Message (Entering the E-mail Body)	309
Preview (Previewing the Scanned Images during a Scan Job)	310
Color Scanning (Selecting an Output Color)	
2 Sided Scanning (Scanning Both Sides of a Document)	
Original Type (Selecting the Document Type)	312
File Format (Selecting a File Format for Output Data)	312
Network Scanning	324
Preview (Previewing the Scanned Images during a Scan Job)	325
Color Scanning (Selecting an Output Color)	325
2 Sided Scanning (Scanning Both Sides of a Document)	325
Original Type (Selecting the Document Type)	325
File Format (Selecting a File Format for Output Data)	325
Scan to PC	326
Transfer Protocol (Selecting a Transfer Protocol)	327
Address Book	327
Address Book (Specifying a Destination Using the Address Book [Ty	/pe 1])328
Address Book (Specifying a Destination Using the Address Book [Ty	/pe 2])329
Add New Address (Registering a Destination PC on the Address Boo	ok) 330
Specifying a Destination PC Using a One-Touch Button	332
Browse (Specifying a Destination PC by Browsing Your Network)	333
Specifying a Destination	
(Specifying a Destination PC Using the Screen Keyboard)	
Preview (Previewing the Scanned Images during a Scan Job)	
Color Scanning (Selecting an Output Color)	
2 Sided Scanning (Scanning Both Sides of a Document)	
Original Type (Selecting the Document Type)	
File Format (Selecting a File Format for Output Data)	
Store to Folder	
Color Scanning (Selecting an Output Color)	
2 Sided Scanning (Scanning Both Sides of a Document)	
Original Type (Selecting the Document Type)	
Preview (Previewing the Scanned Images during a Scan Job)	339
Store to USB	340
Save in (Specifying a Storage Location in the USB Memory Device)	344
Details	
(Displaying the Details of a Storage Location in the USB Memory D	
Preview (Previewing the Scanned Images during a Scan Job)	
Color Scanning (Selecting an Output Color)	346

2 Sided Scanning (Scanning Both Sides of a Document)	346
Original Type (Selecting the Document Type)	346
File Format (Selecting a File Format for Output Data)	346
Store & Send Link	347
Scan To (Displaying the E-mail Address of the Authenticated User)	
From (Displaying the E-mail Address of the Authenticated User)	
Subject (Setting the Subject)	
Message (Entering the E-mail Body)	
Color Scanning (Selecting an Output Color)	
2 Sided Scanning (Scanning Both Sides of a Document)	
Original Type (Selecting the Document Type)	
Preview (Previewing the Scanned Images during a Scan Job)	
File Format (Selecting a File Format for Output Data)	349
Store to WSD	350
Computer (Starting a Scan Job via Computer Operation)	
This Device (Storing Data Scanned by the Machine on a Network Computer)	
Advanced Settings	
Color Scanning (Selecting an Output Color)	
Original Type (Selecting the Document Type)	
Photographs (Scanning a Color Photograph)	
Image Options (Adjusting Scan Density and Image Sharpness)	
Image Enhancement	
(Erasing the Background Color of Documents/Adjusting Contrast)	355
Shadow Suppression (Suppressing the Document Background)	
Color Space (Specifying the Color Space)	
Layout Adjustment	
Resolution (Specifying a Scanning Resolution)	
2 Sided Scanning (Scanning Both Sides of a Document)	
Book Scanning (Scanning Facing Pages on Separate Sheets)	
Original Size (Specifying a Scan Size)	
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	
Edge Erase (Erasing Edges and Margin Shadows in the Document)	
Reduce/Enlarge (Specifying a Scanning Ratio)	
Original Orientation (Specifying the Orientation of the Loaded Document)	
E-mail Options/Filing Options	
Quality/File Size (Specifying an Image Compression Ratio When Scanning)	
File Format (Selecting a File Format for Output Data)	
Read Receipts (Specifying Read Receipts)	
Split Send (Sending in Sections)	
File Name (Specifying a Name for the File to be Sent)	
Reply To (Specifying a Reply Address)	
File Name Conflict (Setting the Action to be Taken for File Name Conflict)	
File Name (Specifying a Name for the File to be Saved)	
Encryption (Sending E-mail Encrypted by S/MIME)	
Digital Signature (Sending E-mail with a Digital Signature by S/MIME)	
Login Name	
Password	
Meta Data	

6	Send from Folder	371
	Folder Operating Procedure	372
	Step 1 Opening the [Send from Folder] Screen	372
	Step 2 Selecting a Folder	372
	Step 3 Checking/Selecting Files in a Folder	
	Step 4 Operating Files in a Folder	373
	Selecting a Folder	374
	Checking/Operating Files in a Folder	375
	Checking File Details	377
	Printing Files in a Folder	380
	Configuring/Starting Job Flow	383
	[Link Job Flow Sheet to Folder] Screen	384
	Job Flow Restrictions	387
7	Job Flow Sheets (ApeosPort Series Models Only)	389
	Job Flow Procedure	
	Step 1 Opening the [Job Flow Sheets] Screen	
	Step 2 Selecting a Job Flow Sheet	
	Step 3 Confirming/Changing the Job Flow Sheet	391
	Step 4 Starting the Job Flow Sheet	391
	Selecting/Changing a Job Flow Sheet	392
8	Stored Programming	395
	Stored Programming Overview	396
	Registering/Deleting/Renaming Stored Programs	397
	Registering Stored Programs	398
	Notes and Restrictions on Registering Stored Programs	398
	Registering Stored Programs for Build Job	
	Deleting Stored Programs	
	Entering/Changing a Stored Program Name	
	Assigning/Changing Icons for Stored Programs	
	Calling a Stored Program	
	Calling a Stored Program for Build Job	404
9	Web Applications (ApeosPort Series Models Only)	405
	Web Applications Overview	406
	Accessing Web Applications	407
	Accessing Using Buttons Registered on the Services Home Screen	408
10	Media Print (Text and Photos)	409
	Overview of Media Print	410
	Supported Media and File Formats	
	Notes and Restrictions on Media Print	411
	Inserting USB Memory Device	413
	Media Print - Text	
	Selecting Files	
	[Select From List] Screen	416

	Media Print - Photos	418
	Selecting Files	418
	[Select From List] Screen	419
	Selecting the Printing Options	420
	Media Print - Photos	420
	Media Print - Text	
	Index Print	422
11	Job Status	423
	Job Status Overview	424
	Checking Current/Pending Jobs	425
	Checking Completed Jobs	427
	Printing and Deleting Stored Jobs	
	Secure Print	
	Sample Set	431
	Delayed Print	434
	Charge Print	
	Private Charge Print	
	Public Folder	
	Undelivered Faxes	
	Printing Pending Jobs	
	Handling Error Terminations	446
12	Computer Operations	447
	Features Overview	448
	Print	449
	Print Features	449
	Setup	451
	Printing	451
	E-mail Printing	
	Setup	
	Receiving E-Mail	453
	Sending Fax	
	Registering Destinations	454
	Importing Scanned Data	
	Importing to a TWAIN Compatible Application	
	Importing Using Stored File Manager 3	
	Importing Using CentreWare Internet Services	
	CentreWare Internet Services	464
13	Appendix	469
	Glossary	470
[nd	lov	/.77

# 1 Before Using the Machine

This chapter describes how to use this guide, as well as safety notes and legal notice you should read before using the machine.

•	Preface	16
•	Types of Manuals	17
•	Using This Guide	18
•	Safety Notes	21
•	Regulation	34
•	Environment	35
•	About License	36
•	About QT	55
•	Legal Notice	6/

## Preface

Thank you for selecting the ApeosPort-V C7775/C6675/C5575/C4475/C3375/C3373/ C2275, DocuCentre-V C7775/C6675/C5575/C4475/C3375/C3373/C2275 (hereafter referred to as "the machine").

This guide describes how to operate the machine and the precautions you should follow during operation. To get the most out of the machine and to use it effectively, be sure to read this guide before use.

The quide assumes that you are familiar with a personal computer and that you are knowledgeable of computer networks. When you need additional information, refer to the manuals provided with the personal computer, operating system, and network products.

For information on how to configure your network environment, refer to the Administrator Guide. For information on optional components for the print feature, also refer to the guide provided with each optional accessory.

After reading this guide, be sure to keep it handy for guick reference. It will be useful in case you forget how to perform operations or if a problem occurs with the machine.

Warning:
The equipment will be inoperable when main power fails.

When you use this machine, we recommend that you change the system administrator's user ID and passcode immediately after installing the machine.

For more information on changing the user ID and passcode, refer to "5 Tools" > "Authentication/Security Settings" > "System Administrator Settings" in the Administrator Guide.

## **Types of Manuals**

The following guides are provided with the machine.

#### **Accompanying Manuals**

#### ■ User Guide (this guide) (Document CD-ROM)

The guide describes all the necessary steps for copy, print, scan, and fax.

#### ■ Administrator Guide (Document CD-ROM)

The guide is intended for system administrators, and describes how to configure network and how to solve problems that may occur with the machine. This guide also describes daily maintenance and the system settings procedures.

#### ■ Quick Reference Guide (Booklet)

The guide describes the basic operations of the machine, as well as daily management and maintenance.

#### ■ Security Function Supplementary Guide (Document CD-ROM)

The quide is intended for the manager and system administrator of the organization where the machine is installed, and describes the setup procedures related to security.

#### ■ Manual (HTML)

The manual describes installation and configuration procedures for print drivers and the printer environment. This manual is included in the Driver CD Kit.

#### **■** Print Driver Help

The help describes print features and operations.

#### **■** CentreWare Internet Services Help

The help describes how to change various settings of the machine using a web browser, and how to import scanned data to a computer from the machine.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

#### **Guides for Optional Components**

Optional components are available for the machine. Some of them come with user guides. The guides for optional components describe all the necessary steps for using the optional components and installing the software.

## **Using This Guide**

This guide is intended for first time users of the machine. It describes the basic operations for the Copy, Print, Scan, and Fax services.

## Organization of This Guide

This guide consists of the following chapters:

#### ■ 1 Before Using the Machine

Describes how to use this guide, as well as safety notes, legal notices, and other important information you should read before using the machine.

#### ■ 2 Product Overview

Describes the basic information of the machine, such as the names of components, how to use the touch screen, how to switch the machine on and off, and how to exit the Power Saver mode.

#### **■**3 Copy

Describes the basic operations and features for the Copy service.

#### ■4 Fax

Describes the basic operations and features for the Fax services.

#### ■5 Scan

Describes the basic operations and features for the Scan services.

#### ■ 6 Send from Folder

Describes the basic operations and features to use folders.

#### ■ 7 Job Flow Sheets (ApeosPort Series Models Only)

Describes the operations to use a job flow created on a remote system.

#### ■8 Stored Programming

Describes the Stored Programming service that enables you to store customized job settings.

#### ■ 9 Web Applications (ApeosPort Series Models Only)

Describes the operations to connect to web applications.

#### ■ 10 Media Print (Text and Photos)

Describes the basic operations and features of Media Print that allows you to print image data and document files.

#### ■ 11 Job Status

Describes how to check job status and how to delete jobs.

#### ■ 12 Computer Operations

Describes operations performed from a computer, such as printing documents, importing scanned files, using Direct Fax, and operating CentreWare Internet Services.

#### ■ 13 Appendix

ſ

1

Contains a glossary of terms used in this guide.

#### **Conventions**

- The screen shots and illustrations used in this guide vary depending on the machine configuration and optional components installed. Some of the items in the screen shots may not be displayed or available depending on your machine configuration.
- The procedures in this guide may vary depending on the driver and utility software being used due to the upgrades.
- In this guide, "Computer" refers to a personal computer or workstation.
- The following terms are used in this guide:

Important : Important information that you should read.

Note : Additional information on operations or features.

• The following symbols are used in this guide:

" : • A cross-reference included in this guide.

 Names of CD-ROM, features, and touch screen messages and input text.

input tex

: • Folders, files, applications, button or menu names displayed on the touch screen.

- Names of menus, commands, windows, or dialog boxes displayed on the computer screen and their buttons and menu names.
- > button : Hardware buttons on the control panel.
- key : Keys on the keyboard of the computer.
  - :  $\bullet \;\;$  Path to a certain item within a procedure on the control panel.

For example: When you see the procedure "select [Tools] > [Setup] > [Create Folder]", this means that you need to select [Tools], select [Setup], and then select [Create Folder].

• Path to a certain item within a procedure on a computer.


For example: When you see the procedure "to search for files and folders, click [Start] > [Search] > [For Files or Folders]", this means that you need to click [Start], click [Search], and then click [For Files or Folders] to search for files and folders.


Cross-reference

For example: "Refer to "5 Tools" > "Common Service Settings" > "Audio Tones" in the Administrator Guide."
The sentence above means that it is recommended to refer to the section "Audio Tones" in "Common Service Settings" in chapter 5 "Tools" of the Administrator Guide.

- Orientation of documents or paper is described in this guide as follows:
  - $\square$ ,  $\square$ , Long Edge Feed (LEF): Loading the document or paper in portrait orientation when you view the machine from the front of the machine.

 $\square$ , Short Edge Feed (SEF): Loading document or paper in landscape orientation when you view the machine from the front of the machine.

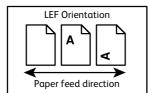

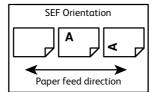

## **Safety Notes**

Before using this product, read "Safety Notes" carefully for safety use.

This product and recommended supplies have been tested and found to comply with strict safety requirements including safety agency approvals and compliance with environmental standards. Follow the following instructions for safety use.

#### **№ WARNING**

Any unauthorized alteration including an addition of new functions or connection to external devices may not be covered by the product warranty. Contact your local Fuji Xerox representative for more information.

Follow all warning instructions marked on this product. The warning marks stand for the followings:

<b>∆DANGER</b>	Used for item that if not followed strictly, can lead death or severe or fatal injuries and the possibility to do it is comparatively high.
<b>∆WARNING</b>	Used for items that if not followed strictly, can lead to severe or fatal injuries.
<b>∆</b> CAUTION	Used for items that if not followed strictly, can cause injuries to user or damages to machine.

A symbol for items to pay attention to when handling machine. Follow instructions carefully to use machine safely.









shock



surface



object

Pinched

fingers

A symbol for prohibited items. Follow instructions carefully to avoid any dangerous acts.



**Prohibited** 





Do not

touch



bathroom



down



from wet



with wet hand

A symbol for items that must be performed. Follow instructions carefully to carry out these essential tasks.

Do not use Do not tear







Earth

Instructions Unplug

21

#### **Electrical Safety**

#### **△WARNING**

This product shall be operated by the power source as indicated on the product's data plate. Consult your local power company to check if your power source meets the requirements.



WARNING: Connect this product to a protective earth circuit.

This product is supplied with a plug that has a protective earth pin. The plug fits only into an earthed electrical outlet. This is a safety feature. If the plug doesn't fit to the outlet, contact an electrician to replace the outlet to avoid risk of electric shock. Never use an earthed adapter plug to connect the product to the electrical outlet that has no earth connection terminal.

Improper connection of a grounding conductor may cause electric shock.



Plug the power cord directly into a grounded electrical outlet. To prevent overheat and a fire accident, do not use an extension cord, a multi-plug adaptor or a multiple connector. Consult your local Fuji Xerox representative to check if an outlet is grounded.



Connect this product to a branch circuit or an outlet that has larger capacity than the rated ampere and voltage of this product. See the data plate on the rear panel of this product for its rated ampere and voltage.



Never touch the power cord with wet hands. It may cause electric shock.



Do not put an object on the power cord.



Always keep the plug connection free of dust. The dusty and damp environment may bring about minute electric current in a connector. It may generate heat and eventually cause a fire accident.



To avoid the risk of electric shock and a fire accident, only use the power cord supplied with this product or the ones designated by Fuji Xerox.

The power cord is exclusive use for this product. Do not use it for any other product.

Do not damage or alter the power cord. Damage and alteration may generate heat and eventually cause electric shock or a fire accident.

If the power cord is damaged or insulated wires are exposed, contact your local Fuji Xerox representative for its replacement. Do not use a damaged or uninsulated cord to avoid the risk of electric shock and a fire accident.




(ApeosPort-V C7775/C6675, DocuCentre-V C7775/C6675 only)

This product uses 2 power cords. Plug off all the power cords to completely stop power supply to this product.



(ApeosPort-V C7775/C6675, DocuCentre-V C7775/C6675 only)

Power capacity of this product is 10A per power cord. Connect each power cord to the different power supply whose breaker of a switchboard is independent each other. Do not connect power cords to outlets leading to the same breaker of a switch board. Otherwise, a breaker may trip. Confirm power capacity of a breaker before you connect peripheral devices to an outlet. Connect peripheral devices to another outlet than that for a main product.

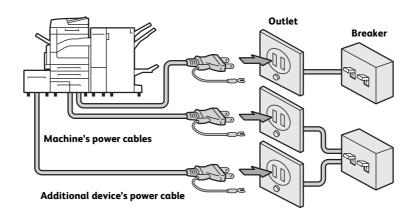

#### **ACAUTION**



When cleaning this product, always switch off and unplug it. Access to a live machine interior may cause electric shock.



When cleaning this product, switch off the product and its switchboard (branch circuit). Access to a live machine interior may cause electric shock.



Do not unplug or re-plug this product with the switch on. Plugging and unplugging a live connector may deform the plug and generate heat, and eventually cause a fire accident.



Hold the plug not the cord when unplugging this product, or it may damage the cord and cause electric shock or a fire accident.



Switch off and unplug the product when it (i.e., fax function) is not used over weekends or long holidays. Please note that it cannot receive fax message during switch-off.



Once a month, switch off this product and check if

- the power cord is plugged firmly into an electrical outlet;
- the plug is not excessively heated, rusted or bent;
- the plug and electrical outlet are free of dust; and
- the power cord is not cracked or worn down.

Once you notice any unusual condition, switch off and unplug this product first and contact your local Fuji Xerox representative.

#### **Machine Installation**

#### **↑** WARNING



Do not locate this product where people might step on or trip over the power cord. Friction or excessive pressure may generate heat and eventually cause electric shock or a fire accident.

#### **ACAUTION**



Never locate this product in the following places:

- Near radiators or any other heat sources
- Near volatile flammable materials such as curtains
- In the hot, humid, dusty or poorly ventilated environment
- In the place receiving direct sunlight
- Near cookers or humidifiers




Locate this product on a level and sturdy surface that can withstand a weight of 288 kg (maximum weight when Large Size UI Kit, C3 Finisher with Booklet Maker, Side Tray, and HCF B1 are installed to 3 Tray Module Model). Otherwise, if tilted, the product may fall over and cause injuries.




Locate this product in a well-ventilated area. Do not obstruct ventilation openings of the product.

Keep the minimum clearance as follows for ventilation and an access to the power plug. Unplug the product if an abnormal condition is noted.

#### With Duplex Automatic Document Feeder B1-C/B1-PC (optional)

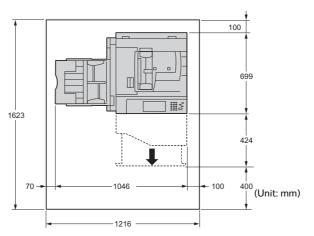


#### With Finisher-A1 (optional)

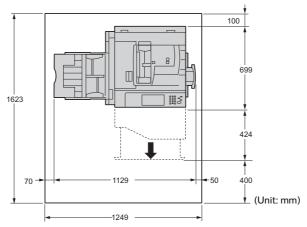


## With Finisher-B1 (optional) and Side Tray (optional) 100 1623 - 50 | 400 70 (Unit: mm) 1786


#### With Booklet Maker Unit for Finisher-B1 (optional) and Side Tray (optional)

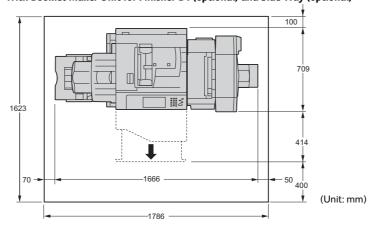


With C3 Finisher (optional) and Side Tray (optional)

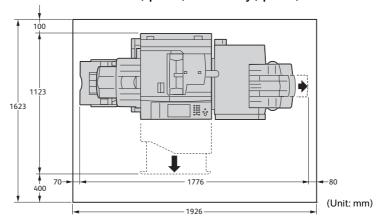


With C3 Finisher with Booklet Maker (optional) and Side Tray (optional)

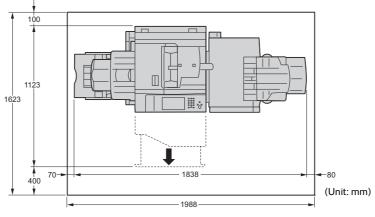


With C3 Finisher with Booklet Maker (optional), Folder Unit CD1 (optional), and Side Tray (optional)

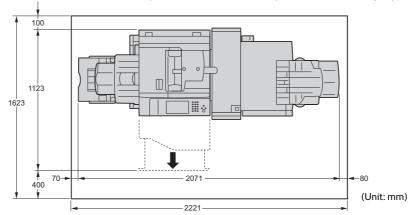

With C3 Finisher with Booklet Maker (optional), Folder Unit CD1 (optional), HCF B1 (optional), and Side Tray (optional)

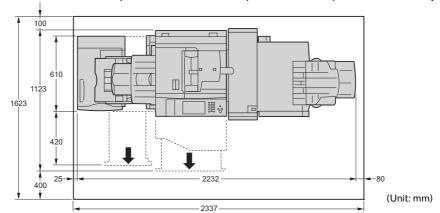



Do not incline the product at more than 10 degree angle. Otherwise, it may fall over and cause injuries.

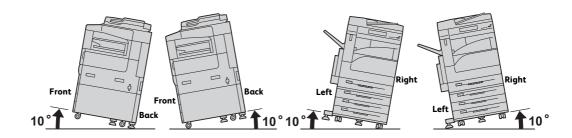



Always lock the wheels of this product after installation. Otherwise, it may fall over or slide and cause injuries.

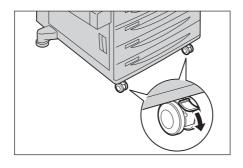

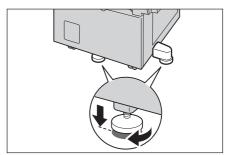

#### **Others**



To keep this product in a good performance and condition, always use it in the following environment:

• Temperature: 10 - 32°C

• Humidity: 15 - 85%

When the product is left in a chilly room and the room is rapidly warmed up by heater, dew condensation may form inside the product and cause a partial deletion on printing.

#### **Operational Safety**

#### **MARNING**



The operator's product maintenance procedures are described in the customer documentation supplied with this product. Do not carry out any other maintenance procedures not described in the documentation.



This product features safety design not to allow operators access to hazard areas. The hazard areas are isolated from operators by covers or protectors which require a tool to remove. To prevent electric shock and injuries, never remove those covers and protectors.



To avoid the risk of electric shock and a fire accident, switch off and unplug the product promptly in the following conditions, then contact your local Fuji Xerox representative.

- The product emits smoke or its surface is unusually hot.
- The product emits unusual noise or odor.
- The power cord is cracked or worn down.
- A circuit breaker, fuse or any other safety device becomes activated.
- Any liquid is spilled into the product.
- The product is soaked in water.
- Any part of the product is damaged.



Do not insert any object into slots or openings of this product.

Do not put any of the followings on the product:

- Liquid container such as flower vases or coffee cups
- Metal parts such as staples or clips
- Heavy objects

If liquid is spilled over or metal parts are slipped into the product, it may cause electric shock or a fire accident.



Do not use conductive paper such as origami paper, carbonic paper or conductively-coated paper. When paper jam occurs, it may cause short-circuit and eventually a fire accident.



When cleaning this product, use the designated cleaning materials exclusive to it. Other cleaning materials may result in poor performance of the product. Never use aerosol cleaners to avoid catching fire and explosion.



If you need to pull out a tray to remove paper jam, contact your local Fuji Xerox representative. Do not pull out a tray, otherwise it may cause injuries.



Never play the CD-ROM supplied with the product on an audio player. Always use a CD-ROM player. Otherwise, large sound may damage audio players or your ears.

#### **⚠CAUTION**



Keep electrical and mechanical safety interlocks active. Keep the safety interlocks away from magnetic materials. Magnetic materials may accidentally activate the product and cause injuries or electric shock.




A ground fault interrupter is embedded in this product. If current leakage occurs, the ground fault interrupter automatically cuts off power circuit to prevent electric shock and a fire accident. The ground fault interrupter is normally ON. Check once a month if the ground fault interrupter works properly in accordance with the following procedures:


1 Switch the power off.




**2** Open the front cover.

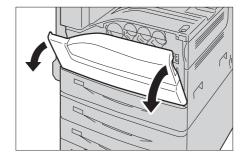


3 Press the main power switch to the [O] position to switch the main power off.

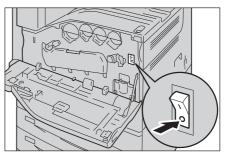

4 Press the <RESET> button to the reset position. The button will be depressed even after the pushing force is released.

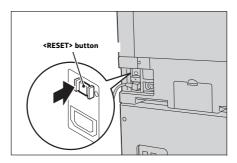

5 Press the <TEST> button lightly with α sharp edge such as α pen tip. The depressed <RESET> button will stick out again. This is the end of the check procedure.

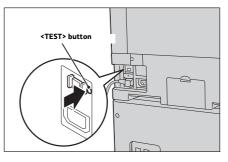

6 Press the <RESET> button back to the depressed position.

If the circuit does not work properly, contact your local Fuji Xerox representative.



Do not attempt to remove a paper deeply jammed inside the product, particularly a paper wrapped around the fusing unit or the heat roller. Otherwise, it may cause injuries or burns. Switch off the product immediately and contact your local Fuji Xerox representative.



Never touch the paper output area of the finisher during operation. It may cause injuries.



Be careful in removing jammed staples.



Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.



To move this product to another location, contact your local Fuji Xerox representative.



Ventilate well during extended operation or mass copying. It may affect the office air environment due to odor such as ozone in a poorly ventilated room.

Provide proper ventilation to ensure the comfortable and safe environment.




When you use earphones, adjust the volume. Loud sound may cause hearing loss.

## **Location of Warning and Caution Labels**



Always follow all warning instructions marked on or supplied with this product.

To avoid the risk of burn injuries and electric shock, never touch the area with the "High Temperature" or "High Voltage" marks on.

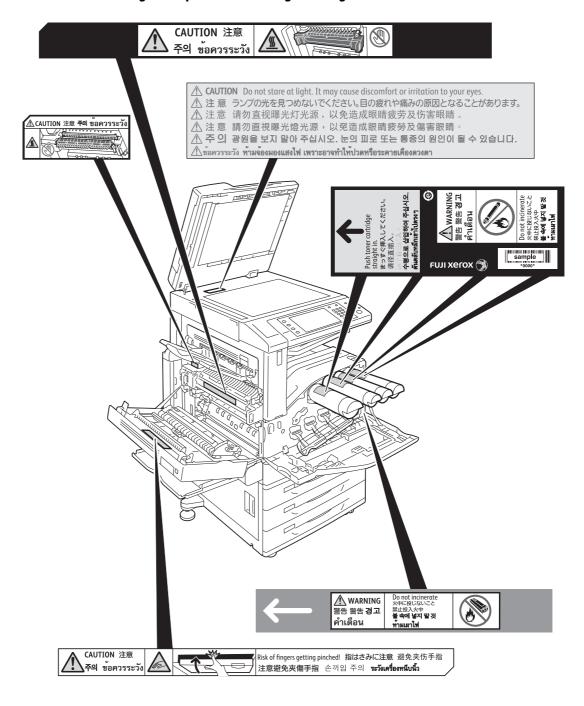

#### Consumable

#### **MARNING**



Store all consumables in accordance with the instructions given on its package or container.



Never use a vacuum cleaner for spilled toner and residual toner in this product, toner cartridge or toner bottle. It may catch fire by electric sparks inside a vacuum cleaner and cause explosion. Use a broom or a wet cloth to wipe off the spills. If you spill a large volume of toner, contact your local Fuji Xerox representative.



Never throw a toner cartridge into an open flame. Remaining toner in the cartridge may catch fire and cause burn injuries or explosion.

If you have a used toner cartridge no longer needed, contact your local Fuji Xerox representative for its disposal.



Never throw a waste toner bottle into an open flame. Toner may catch fire and cause burn injuries or explosion.

If you have a used waste toner bottle no longer needed, contact your local Fuji Xerox representative for its disposal.

#### **ACAUTION**



Keep drum cartridges and toner cartridges out of the reach of children. If a child accidentally swallows toner, spit it out, rinse mouth with water, drink water and consult a physician immediately.



When replacing drum cartridges and toner cartridges, be careful not to spill the toner. In case of any toner spills, avoid contact with clothes, skin, eyes and mouth as well as inhalation.



If toner spills onto your skin or clothing, wash it off with soap and water.

If you get toner particles in the eyes, wash it out with plenty of water for at least 15 minutes until irritation is gone. Consult a physician if necessary.

If you inhale toner particles, move to a fresh air location and rinse your mouth with water.

If you swallow toner, spit it out, rinse your mouth with water, drink plenty of water and consult a physician immediately.

## Regulation

## Radio Frequency Emissions (Class B)

#### **⚠CAUTION**



This product has been tested and found to comply with the limits for a Class B digital device, pursuant to the International Standard for Electromagnetic Interference (CISPR Publ. 22) and Radiocommunications Act 1992 in Australia/New Zealand. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning this product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between this product and the receiver.
- Connect this product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications to this product not specifically approved by Fuji Xerox may void the user's authority to operate this product.

## **Regulatory Information for RFID**

This product contains Radio Frequency Identification system device (RFID) and it is certified in compliance with applicable local laws and/or regulations.

#### Others

#### **<b>△WARNING**



This product emits weak electromagnetic waves. If you have a medical device implanted (e.g., a cardiac pacemaker) and get out of shape, keep away from this product immediately and consult a physician.

## **Environment**

- For environmental protection and efficient use of resources, Fuji Xerox reuses returned toner cartridges and drum cartridges to make recycle parts, recycle materials or energy recovery.
- Proper disposal is required for toner cartridges and drum cartridges no longer needed. Do not open toner cartridges and drum cartridges. Return them to your local Fuji Xerox representative.

## About License

This section describes information about licenses. Be sure to read through it.

#### **RSA BSAFE**



This product includes RSA® BSAFE® Cryptographic software from EMC Corporation.

#### Heimdal

Copyright (c) 2000 Kungliga Tekniska Högskolan (Royal Institute of Technology, Stockholm, Sweden). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of the Institute nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE INSTITUTE AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE INSTITUTE OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### JPEG Code

Our printer software uses some of the codes defined by the Independent JPEG Group.

#### Libcurl

COPYRIGHT AND PERMISSION NOTICE

Copyright (c) 1996 - 2006, Daniel Stenberg, <a href="mailto:daniel@haxx.se">daniel@haxx.se</a>.

All rights reserved.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

#### **FreeBSD**

This product contains the part of FreeBSD codes.

The FreeBSD Copyright

Copyright 1994-2006 The FreeBSD Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE FREEBSD PROJECT "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FREEBSD PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The views and conclusions contained in the software and documentation are those of the authors and should not be interpreted as representing official policies, either expressed or implied, of the FreeBSD Project.

## **OpenLDAP**

Copyright 1998-2006 The OpenLDAP Foundation All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted only as authorized by the OpenLDAP Public License.

A copy of this license is available in the file LICENSE in the top-level directory of the distribution or, alternatively, at <a href="http://www.OpenLDAP.org/license.html">http://www.OpenLDAP.org/license.html</a>.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Individual files and/or contributed packages may be copyright by other parties and/or subject to additional restrictions.

This work is derived from the University of Michigan LDAP v3.3 distribution. Information concerning this software is available at <a href="http://www.umich.edu/~dirsvcs/ldap/ldap.html">http://www.umich.edu/~dirsvcs/ldap/ldap.html</a>.

This work also contains materials derived from public sources.

Additional information about OpenLDAP can be obtained at <a href="http://www.openldap.org/">http://www.openldap.org/</a>>.

Portions Copyright 1998-2006 Kurt D. Zeilenga.

Portions Copyright 1998-2006 Net Boolean Incorporated.

Portions Copyright 2001-2006 IBM Corporation.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted only as authorized by the OpenLDAP Public License.

Portions Copyright 1999-2005 Howard Y.H. Chu.

Portions Copyright 1999-2005 Symas Corporation.

Portions Copyright 1998-2003 Hallvard B. Furuseth.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that this notice is preserved.

The names of the copyright holders may not be used to endorse or promote products derived from this software without their specific prior written permission. This software is provided "as is" without express or implied warranty.

Portions Copyright (c) 1992-1996 Regents of the University of Michigan.

All rights reserved.

Redistribution and use in source and binary forms are permitted provided that this notice is preserved and that due credit is given to the University of Michigan at Ann Arbor. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission. This software is provided "as is" without express or implied warranty.

-----

The OpenLDAP Public License

Version 2.8, 17 August 2003

Redistribution and use of this software and associated documentation ("Software"), with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions in source form must retain copyright statements and notices,
- 2. Redistributions in binary form must reproduce applicable copyright statements and notices, this list of conditions, and the following disclaimer in the documentation and/or other materials provided with the distribution, and
- 3. Redistributions must contain a verbatim copy of this document.

The OpenLDAP Foundation may revise this license from time to time.

Each revision is distinguished by a version number. You may use this Software under terms of this license revision or under the terms of any subsequent revision of the license.

THIS SOFTWARE IS PROVIDED BY THE OPENLDAP FOUNDATION AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENLDAP FOUNDATION, ITS CONTRIBUTORS, OR THE AUTHOR(S) OR OWNER(S) OF THE SOFTWARE BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The names of the authors and copyright holders must not be used in advertising or otherwise to promote the sale, use or other dealing in this Software without specific, written prior permission. Title to copyright in this Software shall at all times remain with copyright holders.

OpenLDAP is a registered trademark of the OpenLDAP Foundation.

Copyright 1999-2003 The OpenLDAP Foundation, Redwood City, California, USA. All Rights Reserved. Permission to copy and distribute verbatim copies of this document is granted.

#### **DES**

This product includes software developed by Eric Young(eay@mincom.oz.au)

#### **AES**

Copyright (c) 2003. Dr Brian Gladman. Worcester. UK. All rights reserved. This product uses published AES software provided by Dr Brian Gladman under BSD licensing terms.

## TIFF (libtiff)

Lib TIFF copyright (c) 1988-1997 Sam Leffler Copyright (c) 1991-1997 Silicon Graphics. Inc.

## **ICC Profile (Little cms)**

Little cms copyright (c) 1988-2004 Marti Maria

## XML Paper Specification (XPS)

This product may incorporate intellectual property owned by Microsoft Corporation. The terms and conditions upon which Microsoft is licensing such intellectual property may be found at http://go.microsoft.com/fwlink/?LinkId=52369.

## **EDICT and COMPDIC**

The Japanese-English dictionaries (EDICT and COMPDIC) edited by The Electronic Dictionary Research and Development Group under the coordination of Professor James William Breen at Monash University are used in the advanced scan kit option of Fuji Xerox.

These Japanese-English dictionary files are licensed to customers under the terms and conditions of a Creative Commons Attribution-ShareAlike License. Prior to use, be sure to check the terms and conditions of this license at the URL below. Use of these Japanese-English dictionaries is not permitted unless you agree to the terms and conditions of this license.

Furthermore, care should be taken because at the point in time that you begin to use these Japanese-English dictionaries as specified in the said license, you accept and agree to be bound by the terms and conditions of this license.

The Japanese-English dictionaries are provided to customers on an as-is basis, and Fuji Xerox and the original supplier make no representations of warranties of any kind.

- Original Author Information (extracted from http://www.csse.monash.edu.au/~jwb/edrdg/licence.html)
   Copyright over the documents covered by this statement is held by James William BREEN and The Electronic Dictionary Research and Development Group at Monash University.
- Monash University License Information http://www.csse.monash.edu.au/~jwb/edrdg/licence.html
- Information Regarding EDICT and COMPDIC http://www.csse.monash.edu.au/~jwb/edict.html

http://www.csse.monash.edu.au/~jwb/compdic\_doc.html

 Information Regarding the Creative Commons Attribution-ShareAlike License http://creativecommons.org/licenses/by-sa/2.5/legalcode

## Cyrus SASL

Copyright (c) 1998-2003 Carnegie Mellon University. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name "Carnegie Mellon University" must not be used to endorse or promote products derived from this software without prior written permission. For permission or any other legal details, please contact

Office of Technology Transfer

Carnegie Mellon University

5000 Forbes Avenue

Pittsburgh, PA 15213-3890

(412) 268-4387, fax: (412) 268-7395

tech-transfer@andrew.cmu.edu

4. Redistributions of any form whatsoever must retain the following acknowledgment:

"This product includes software developed by Computing Services at Carnegie Mellon University (http://www.cmu.edu/computing/)."

CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

### Newlib

The newlib subdirectory is a collection of software from several sources.

Each file may have its own copyright/license that is embedded in the source file. Unless otherwise noted in the body of the source file(s), the following copyright notices will apply to the contents of the newlib subdirectory:

(1) Red Hat Incorporated

Copyright (c) 1994-2009 Red Hat, Inc. All rights reserved.

This copyrighted material is made available to anyone wishing to use, modify, copy, or redistribute it subject to the terms and conditions of the BSD License. This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY expressed or

implied, including the implied warranties of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. A copy of this license is available at http://www.opensource.org/ licenses. Any Red Hat trademarks that are incorporated in the source code or documentation are not subject to the BSD License and may only be used or replicated with the express permission of Red Hat, Inc.

(2) University of California, Berkeley

Copyright (c) 1981-2000 The Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(3) David M. Gay (AT&T 1991, Lucent 1998)

The author of this software is David M. Gay. Copyright (c) 1991 by AT&T.

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, NEITHER THE AUTHOR NOR AT&T MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

The author of this software is David M. Gay.

Copyright (C) 1998-2001 by Lucent Technologies All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that the copyright notice and this permission notice and warranty disclaimer appear in supporting documentation, and that the name of Lucent or any of its entities not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

LUCENT DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL LUCENT OR ANY OF ITS ENTITIES BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS

OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

#### (4) Advanced Micro Devices

Copyright 1989, 1990 Advanced Micro Devices, Inc.

This software is the property of Advanced Micro Devices, Inc (AMD) which specifically grants the user the right to modify, use and distribute this software provided this notice is not removed or altered. All other rights are reserved by AMD.

AMD MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS SOFTWARE. IN NO EVENT SHALL AMD BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH OR ARISING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS SOFTWARE.

So that all may benefit from your experience, please report any problems or suggestions about this software to the 29K Technical Support Center at 800-29-29-AMD (800-292-9263) in the USA, or 0800-89-1131 in the UK, or 0031-11-1129 in Japan, toll free. The direct dial number is 512-462-4118.

Advanced Micro Devices, Inc. 29K Support Products Mail Stop 573 5900 E. Ben White Blvd. Austin, TX 78741 800-292-9263

- (5)
- (6)
- (7) Sun Microsystems

Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

Developed at SunPro, a Sun Microsystems, Inc. business. Permission to use, copy, modify, and distribute this software is freely granted, provided that this notice is preserved.

- (8) Hewlett Packard
- (c) Copyright 1986 HEWLETT-PACKARD COMPANY

To anyone who acknowledges that this file is provided "AS IS" without any express or implied warranty: permission to use, copy, modify, and distribute this file for any purpose is hereby granted without fee, provided that the above copyright notice and this notice appears in all copies, and that the name of Hewlett-Packard Company not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Hewlett-Packard Company makes no representations about the suitability of this software for any purpose.

(9) Hans-Peter Nilsson

Copyright (C) 2001 Hans-Peter Nilsson

Permission to use, copy, modify, and distribute this software is freely granted, provided that the above copyright notice, this notice and the following disclaimer are preserved with no changes.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

(10) Stephane Carrez (m68hc11-elf/m68hc12-elf targets only)

Copyright (C) 1999, 2000, 2001, 2002 Stephane Carrez (stcarrez@nerim.fr)

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the

licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

(11) Christopher G. Demetriou

Copyright (c) 2001 Christopher G. Demetriou All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(12) SuperH, Inc.

Copyright 2002 SuperH, Inc. All rights reserved.

This software is the property of SuperH, Inc (SuperH) which specifically grants the user the right to modify, use and distribute this software provided this notice is not removed or altered. All other rights are reserved by SuperH.

SUPERH MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS SOFTWARE. IN NO EVENT SHALL SUPERH BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH OR ARISING FROM THE FURNISHING, PERFORMANCE, OR USE OF THIS SOFTWARE.

So that all may benefit from your experience, please report any problems or suggestions about this software to the SuperH Support Center via e-mail at softwaresupport@superh.com.

SuperH, Inc. 405 River Oaks Parkway San Jose CA 95134 **USA** 

(13) Royal Institute of Technology Copyright (c) 1999 Kungliga Tekniska Hogskolan (Royal Institute of Technology, Stockholm, Sweden). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. Neither the name of KTH nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY KTH AND ITS CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL KTH OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### (14) Alexey Zelkin

Copyright (c) 2000, 2001 Alexey Zelkin <phantom@FreeBSD.org> All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

#### (15) Andrey A. Chernov

Copyright (C) 1997 by Andrey A. Chernov, Moscow, Russia. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" ANDANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THEIMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSEARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(16) FreeBSD

Copyright (c) 1997-2002 FreeBSD Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(17) S. L. Moshier

Author: S. L. Moshier.

Copyright (c) 1984,2000 S.L. Moshier

Permission to use, copy, modify, and distribute this software for any purpose without fee is hereby granted, provided that this entire notice is included in all copies of any software which is or includes a copy or modification of this software and in all copies of the supporting documentation for such software.

THIS SOFTWARE IS BEING PROVIDED "AS IS", WITHOUT ANY EXPRESS OR IMPLIED WARRANTY. IN PARTICULAR, THE AUTHOR MAKES NO REPRESENTATION OR WARRANTY OF ANY KIND CONCERNING THE MERCHANTABILITY OF THIS SOFTWARE OR ITS FITNESS FOR ANY PARTICULAR PURPOSE.

(18) Citrus Project

Copyright (c)1999 Citrus Project, All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(19) Todd C. Miller

Copyright (c) 1998 Todd C. Miller < Todd. Miller@courtesan.com > All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(20) DJ Delorie (i386)

Copyright (C) 1991 DJ Delorie All rights reserved.

Redistribution, modification, and use in source and binary forms is permitted provided that the above copyright notice and following paragraph are duplicated in all such forms.

This file is distributed WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

(21) Free Software Foundation LGPL License (\*-linux\* targets only)

Copyright (C) 1990-1999, 2000, 2001 Free Software Foundation, Inc. This file is part of the GNU C Library.

Contributed by Mark Kettenis <a href="mailto:kettenis@phys.uva.nl">kettenis@phys.uva.nl</a>, 1997.

The GNU C Library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

The GNU C Library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with the GNU C Library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA.

(22) Xavier Leroy LGPL License (i[3456]86-\*-linux\* targets only)

Copyright (C) 1996 Xavier Leroy (Xavier.Leroy@inria.fr)

This program is free software; you can redistribute it and/or modify it under the terms of the GNU Library General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Library General Public License for more details.

(23) Intel (i960)

Copyright (c) 1993 Intel Corporation

Intel hereby grants you permission to copy, modify, and distribute this software and its documentation. Intel grants this permission provided that the above copyright notice appears in all copies and that both the copyright notice and this permission notice appear in supporting documentation. In addition, Intel grants this permission provided that you prominently mark as "not part of the original" any modifications made to this software or documentation, and that the name of Intel Corporation not be used in advertising or publicity pertaining to distribution of the software or the documentation without specific, written prior permission.

Intel Corporation provides this AS IS, WITHOUT ANY WARRANTY, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Intel makes no quarantee or representations regarding the use of, or the results of the use of, the software and documentation in terms of correctness, accuracy, reliability, currentness, or otherwise; and you rely on the software, documentation and results solely at your own risk.

IN NO EVENT SHALL INTEL BE LIABLE FOR ANY LOSS OF USE, LOSS OF BUSINESS, LOSS OF PROFITS, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND. IN NO EVENT SHALL INTEL'S TOTAL LIABILITY EXCEED THE SUM PAID TO INTEL FOR THE PRODUCT LICENSED HEREUNDER.

- (24) Hewlett-Packard (hppa targets only)
- (c) Copyright 1986 HEWLETT-PACKARD COMPANY

To anyone who acknowledges that this file is provided "AS IS" without any express or implied warranty: permission to use, copy, modify, and distribute this file for any purpose is hereby granted without fee, provided that the above copyright notice and this notice appears in allcopies, and that the name of Hewlett-Packard Company not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Hewlett-Packard Company makes no representations about the suitability of this software for any purpose.

(25) Henry Spencer (only \*-linux targets)

Copyright 1992, 1993, 1994 Henry Spencer. All rights reserved.

This software is not subject to any license of the American Telephone and Telegraph Company or of the Regents of the University of California.

Permission is granted to anyone to use this software for any purpose on any computer system, and to alter it and redistribute it, subject to the following restrictions:

- 1. The author is not responsible for the consequences of use of this software, no matter how awful, even if they arise from flaws in it.
- 2. The origin of this software must not be misrepresented, either by explicit claim or by omission. Since few users ever read sources, credits must appear in the documentation.
- 3. Altered versions must be plainly marked as such, and must not be misrepresented as being the original software. Since few users ever read sources, credits must appear in the documentation.
- 4. This notice may not be removed or altered.
- (26) Mike Barcroft

Copyright (c) 2001 Mike Barcroft <mike@FreeBSD.org> All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED

WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(27) Konstantin Chuquev (--enable-newlib-iconv)

Copyright (c) 1999, 2000

Konstantin Chuguev. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" ANDANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THEIMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSEARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

iconv (Charset Conversion Library) v2.0

(28) Artem Bityuckiy (--enable-newlib-iconv)

Copyright (c) 2003, Artem B. Bityuckiy, SoftMine Corporation. Rights transferred to Franklin Electronic Publishers.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(29) IBM, Sony, Toshiba (only spu-\* targets)

(C) Copyright 2001,2006,

International Business Machines Corporation,

Sony Computer Entertainment, Incorporated, Toshiba Corporation, All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- \* Neither the names of the copyright holders nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(30) - Alex Tatmanjants (targets using libc/posix)

Copyright (c) 1995 Alex Tatmanjants <alex@elvisti.kiev.ua> at Electronni Visti IA, Kiev, Ukraine. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE. EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(31) - M. Warner Losh (targets using libc/posix)

Copyright (c) 1998, M. Warner Losh <imp@freebsd.org> All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(32) - Andrey A. Chernov (targets using libc/posix)

Copyright (C) 1996 by Andrey A. Chernov, Moscow, Russia. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(33) - Daniel Eischen (targets using libc/posix)

Copyright (c) 2001 Daniel Eischen <a href="mailto:deischen@FreeBSD.org">deischen@FreeBSD.org</a>. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(34) - Jon Beniston (only lm32-\* targets)

Contributed by Jon Beniston <jon@beniston.com>

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(35) - ARM Ltd (arm and thumb variant targets only)

Copyright (c) 2009 ARM Ltd All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. The name of the company may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY ARM LTD "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL ARM LTD BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(36) - Xilinx, Inc. (microblaze-\* and powerpc-\* targets)

Copyright (c) 2004, 2009 Xilinx, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. Neither the name of Xilinx nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(37) Texas Instruments Incorporated (tic6x-\* targets)

Copyright (c) 1996-2010 Texas Instruments Incorporated http://www.ti.com/

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

Neither the name of Texas Instruments Incorporated nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

(38) National Semiconductor (cr16-\* and crx-\* targets)

Copyright (c) 2004 National Semiconductor Corporation

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

(39) - Adapteva, Inc. (epiphany-\* targets)

Copyright (c) 2011, Adapteva, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- \* Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- \* Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

\* Neither the name of Adapteva nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## **About QT**

This product includes software licensed under GNU LESSER GENERAL PUBLIC License Version 2.1 and other licenses as follows:

- (1) GNU LESSER GENERAL PUBLIC License Version 2.1
- (2) Other Licenses

Under the licence agreement, the source code is available on our official website. http://www.fujixerox.co.jp/etc/oss/mfd\_ui/

## About software applied to LGPL

This product includes software licensed under GNU LESSER GENERAL PUBLIC LICENSE Version 2.1.

**GNU LESSER GENERAL PUBLIC LICENSE** 

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, nonfree programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

## **GNU LESSER GENERAL PUBLIC LICENSE** TERMS AND CONDITIONS FOR COPYING. DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.
- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which

must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

- 7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two thinas:
- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.
- 8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
- 9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or

distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

- 10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.
- 11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

- 12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
- 13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for

permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be quided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### **NO WARRANTY**

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES. PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### **END OF TERMS AND CONDITIONS**

How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the library's name and a brief idea of what it does.> Copyright (C) < year > < name of author >

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library `Frob' (a library for tweaking knobs) written by James Random Hacker.

<signature of Ty Coon>, 1 April 1990 Ty Coon, President of Vice

#### **Other Licenses**

DES (des.cpp), FreeType 2 (freetype) version 2.3.6, HarfBuzz (harfbuzz), JavaScriptCore, WebCore (WebKit), Easing Equations by Robert Penner, Shift-JIS Text Codec, ISO 2022-JP (JIS) Text Codec, EUC-JP Text Codec, EUC-KR Text Codec, GBK Text Codec, Big5-HKSCS Text Codec, Big5 Text Codec, QImage, The qtmain Library, QRegion, QDate::weekNumber(), QLocale, TSCII Text Codec, Drag and Drop, QtSvg Module, Phonon Module, QtXmlPatterns Module, Parts of the QCrashHandler class, Parts of the Q3PolygonScanner class used in Qt for Embedded Linux, Parts of the internal QImageSmoothScaler::scale() function use code based on pnmscale.c by Jef Poskanzer, src/corelib/io/qurl.cpp, Parts of the FreeType library, Included in the build system of the FreeType library, Parts of WebKit used by the QtWebKit module.

## Legal Notice

Copying or printing certain documents may be illegal in your country. Penalties of fines or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy or print in your country.

- Currency
- Banknotes and checks
- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.

# **2 Product Overview**


This chapter describes the basic information of the machine, such as machine components, how to switch the machine on and off, and how to use the touch screen.

Machine Components	66
Power Source	76
Circuit Breaker	80
Power Saver Mode	82
Control Panel	85
About the Services Home Screen	93
Touch Screen	98
Entering Text	100
Installing the Tray Attachment on the Finisher-R1	101

## **Machine Components**

The following describes machine components and their functions.


## ■ 3 Tray Module Model and HCF B1 (optional)

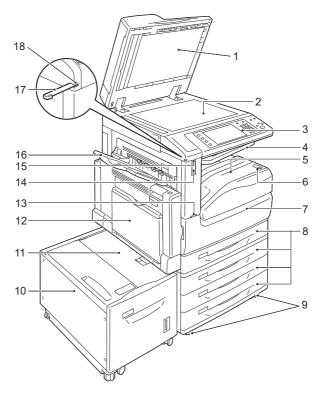

No.	Component	Function	
1	Document cover	Holds a document in place.	
2	Document glass	Load a document here.	
3	Control panel	Consists of operation buttons, LED indicators, and the touch screen.  Refer to "Control Panel" (P.85).	
4	Exit 2 Tray	Outputs are delivered here by separating the center tray into two levels.	
5	Lower Center tray (output tray)	Copies and prints are delivered here, facing down.	
6	Push-button power switch	Switches the power of the machine on and off. Refer to "Power Source" (P.76).	
7	Front cover	Open this cover to replace the consumables.	
8	Tray 1, Tray 2-4	Load paper here.	
9	Locking casters	Lock these casters after moving the machine to its installation site.	
10	Tray 6 (HCF B1) (optional)	Load paper here.	
11	Tray 6 top cover	Open this cover to clear paper jams after moving Tray 6 to the left.	
12	Tray 5 (bypass tray)	Used for loading non-standard paper, such as thick-stock paper and other special media, that cannot be loaded in Trays 1 to 4, and 6.	
13	Smart WelcomEyes (SWE) pyroelectric sensor	The SWE pyroelectric sensor works consistently, and when it detects human presence in the detectable area, the SWE reflection sensor starts working.	

No.	Component	Function	
14	Smart WelcomEyes (SWE) reflection sensor	When the SWE pyroelectric sensor detects human presence, the SWE reflection sensor starts working, and when it also detects human presence, the machine exits the Power Saver mode.  While the SWE reflection sensor detects human presence, the machine will neither reset the settings automatically nor enter the Power Saver mode.	
15	Smart WelcomEyes (SWE) Access Lamp	The Access Lamp lights up while the SWE reflection sensor detects human presence.	
16	Side tray (optional)	Copies and prints are delivered here, facing up.	
17	Stylus pen	Used for touching the touch screen on the control panel to configure settings.  Note  • You can directly touch the touch screen not only with the stylus pen but also with a finger.	
18	Stylus pen holder	Stores the stylus pen.	

## ■ Left side and rear views of the machine

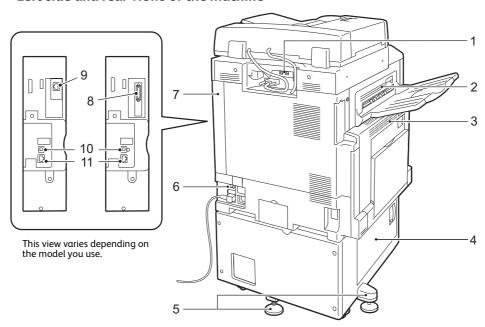


No.	Component	Function	
1	USB 2.0 interface connector (optional)	Connects to the cable of the Memory Card Reader or a USB memory device.	
2	Top left cover	Open this cover to clear paper jams.	
3	Upper left cover	Open this cover by pressing the release lever to clear paper jams.  Note  • Before you open the upper left cover, exit the Sleep Mode and then switch off the machine.	
4	Bottom left cover	Open this cover to clear paper jams. When Tray 6 is installed, open this cover after moving Tray 6 to the left.	
5	Adjusting foot	Prevents the machine from toppling over. Move the machine to its installation site and then rotate this adjuster in clockwise direction until it touches a floor.	
6	RESET button	Automatically switches the machine off when a current leakage is detected.	

No.	Component	Function	
7	Rear right cover	Make sure that this cover is attached. Open this cover when connecting an interface cable.	
8	Parallel interface connector (optional)	Connects to a Centronics-conformed interface cable, and connects the machine to a computer.	
9	Secondary Ethernet connector (optional)	Connects to a network cable. Can be used as Gigabit Ethernet interface connector.	
10	USB 2.0 interface connector	Connects a USB memory cable for printing.	
11	10BASE-T/100BASE-TX connector	Connects to a network cable. To use this as a Gigabit Ethernet interface connector, install the Gigabit Ethernet Kit (optional).	

Note


• The Memory Card Reader and a USB memory device cannot be connected to the machine at the same time. The machine will recognize the one that is connected first.

## **■** Inside

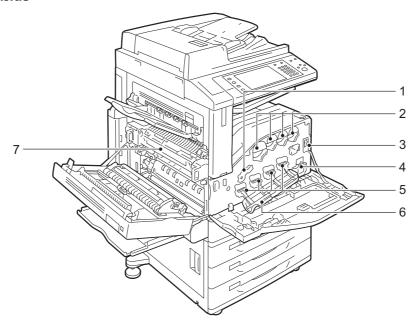

No.	Component	Function	
1	Drum cartridge release lever	Unlock this lever when replacing a drum cartridge.	
2	Toner cartridges	Contains Black (K), Cyan (C), Magenta (M), and Yellow (Y) toner (image forming powder).	
3	Main power switch	Switches the main power on/off of the machine. Always follow the instructions by the system administrator.	
		Important • Always switch the power off before switching the main power off. Refer to "Power Source" (P.76).	
4	Waste toner container (R5)	Collects waste toner.	
5	Drum cartridges (R1, R2, R3, R4)	Contains photoconductors R1, R2, R3, and R4.	
6	Drum cartridge cover	Open this cover when replacing a drum cartridge or cleaning the interior of the machine.	
7	Fusing unit (R8)	Fuses toner on paper. Do not touch this unit as it is extremely hot.	

## ■ Duplex Automatic Document Feeder B1-C

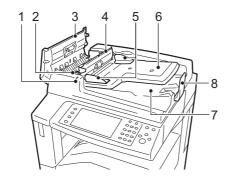





No.	Component	Function	
1	Confirmation indicator	Lights up when a document is loaded correctly.	
2	Lever	Turn this lever to clear paper jams.	
3	Left cover	Open this cover to clear paper jams.	
4	Inner cover	Open this cover to clear paper jams.	
5	Document guides	Use these guides to align the edges of documents.	
6	Document feeder tray	Load documents here.	
7	Document output tray	Scanned documents are delivered here.	
8	Document stopper	Prevents outputs from falling off.	
9	Constant velocity transport glass	Scans a loaded document.	

Note

• In this guide, "document feeder" means both the Duplex Automatic Document Feeder B1-C and the Duplex Automatic Document Feeder B1-PC (optional) unless expressly restricted to one of them.

## ■ Duplex Automatic Document Feeder B1-PC (optional)

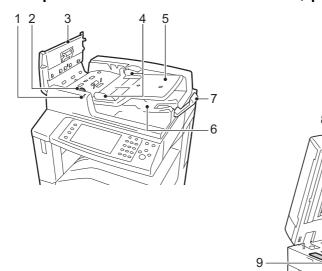


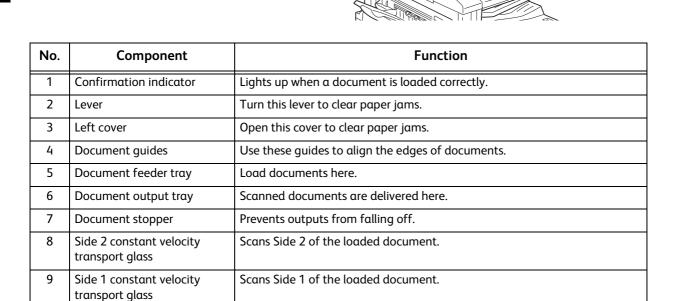

Note


• In this guide, "document feeder" means both the Duplex Automatic Document Feeder B1-C and the Duplex Automatic Document Feeder B1-PC (optional) unless expressly restricted to one of them.

## ■ Tandem Tray Module Model

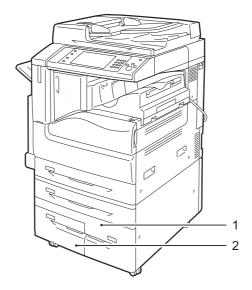

No.	Component	Function
1	Tray 4	Load paper here.
2	Tray 3	Load paper here.

## **■** Telephone line connectors

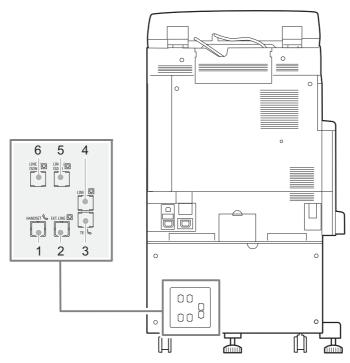


No.	Name marked on the cover of the machine	Name displayed on the touch screen	Function
1	HANDSET	-	Not available.
2	EXT. LINE	-	Not available.

No.	Name marked on the cover of the machine	Name displayed on the touch screen	Function
3	TEL	-	Enables you to connect the machine to a telephone device.  Do not connect any device (fax system) other than a telephone.  Note  • When using the TEL terminal, open the cover with an object such as a coin.
4	LINE 1	Line 1	Use this connector to connect to a telephone line.
5	LINE 2 / ISDN 1	Line 2	Use this connector to connect to a telephone line.
6	LINE 3 / ISDN 2	Line 3	Use this connector to connect to a telephone line.

#### Note

- The Fax service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
- LINE 2 (Line 2) and LINE 3 (Line 3) are optional.
- HANDSET and EXT. LINE are not used.
- ISDN connection is not available.
- When you talk into the external telephone receiver connected to TEL, only the line connected to LINE 1 is available. (LINE 2 and LINE 3 are not available.)

## ■ Finisher-A1 (optional)

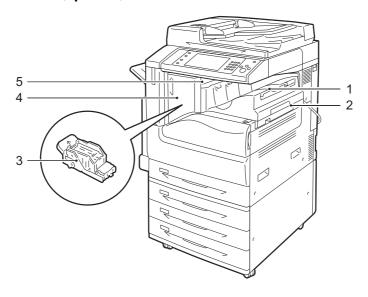


No.	Component	Function	
1	Center tray	Copies or prints are delivered here.	
2	Finisher-A1	Staples copies or prints.	
3	Staple cartridge	Contains staples. Remove this cartridge when replacing or adding stables, or clearing staple jams.	
4	Front cover	Open this cover when replacing staples or clearing staple jams.	
5	Top cover	Open this cover to clear paper jams.	

Note

• The Finisher-A1 is optional. The common features of the Finisher-A1, Finisher-B1, and C3 Finisher described in this guide are referred to as the "finisher".

## ■ Finisher-B1 (optional)

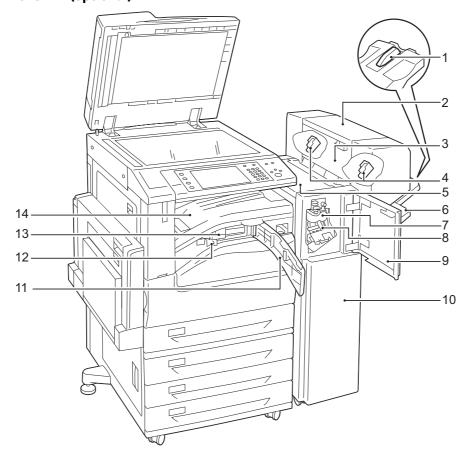


No.	Component	Function
1	Tray attachment	Install this attachment when delivering A4 or B5 paper to the finisher tray without stapling.  For more information, refer to "Installing the Tray Attachment on the Finisher-B1" (P.101).
2	Booklet unit (optional)	Staples creased outputs.
3	Booklet unit side cover	Open this cover when replacing the booklet staple cartridge.
4	Booklet staple cartridge	Contains staples. Remove this cartridge when replacing or adding staples, or clearing staple jams.
5	Top cover	Open this cover to clear paper jams.
6	Finisher tray	Stapled or creased outputs are delivered here.
7	Creaser unit	Creases outputs in half.
8	Staple cartridge	Contains staples.
9	Front door	Open this cover when clearing paper jams or replacing staples.
10	Finisher-B1	Staples copies or prints.
11	Front transport cover	Open this cover when discarding punch scraps.
12	Hole-punch waste container	Collects scraps from the puncher.
13	US 2/3 Hole Punch Kit (optional) 2/4 Hole Punch Kit (optional)	Hole-punches outputs.  Note  • The distance between the two holes made with the US 2/3 Hole Punch Kit (US standard) is 70 mm, which is different from the 80 mm distance made with the 2/4 Hole Punch Kit.

No.	Component	Function
14	Center tray (Top cover of the finisher transport)	Copies and prints are delivered here when they are unable to be delivered to the finisher tray. Pull the cover upward when clearing paper jams.
		Note • Remove outputs delivered to the center tray constantly.

#### Note

- The Finisher-B1 is optional. The common features of the Finisher-A1, Finisher-B1, and C3 Finisher described in this guide are referred to as the "finisher".
- $\bullet$  The power cord connected to the Finisher-B1 is a connecting cord dedicated to the machine. Do not connect this cord to any other devices than the machine.

#### ■ C3 Finisher (optional), C3 Finisher with Booklet Maker (optional), and Folder Unit CD1 (optional)

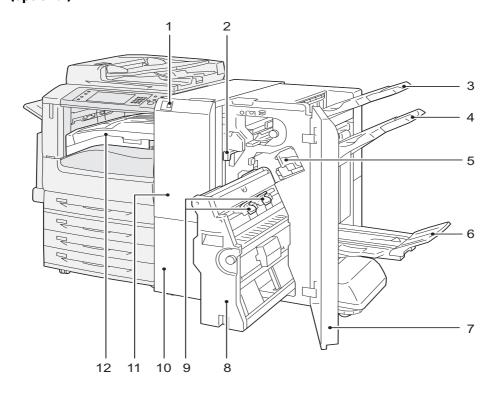

No.	Component	Function
1	Tri-fold output tray button (When the optional Folder Unit CD1 is installed)	Press this button to open the tri-fold output tray.
2	Hole-punch waste container	Collects punch scraps from the puncher. Remove this container when discarding the scraps.
3	Output tray	Outputs are delivered here.
4	Finisher tray	Outputs are delivered here.
5	Staple cartridge	Staples are stored in this cartridge. Pull out this cartridge to replace staples or clear staple jams.
6	Booklet tray	Bound booklets are delivered here.
7	Finisher front door	Open this door to clear paper or staple jams, replace staples, or discard punch scraps.
8	Booklet unit	This unit is for folding outputs in half and stapling the folded outputs.

No.	Component	Function
9	Booklet staple cartridge	Two staple cartridges for booklet creation. Take out the cartridges when clearing stapled jams, or when replacing them with new ones.
10	Tri-fold output tray (When the optional Folder Unit CD1 is installed)	Tri-folded outputs are delivered here.
11	Folder Unit cover (When the optional Folder Unit CD1 is installed)	Open this cover to clear paper jams.
12	Finisher transport center tray (Top cover of the finisher transport)	Copies and prints are delivered here when they are unable to be delivered to the output tray or finisher tray. Pull the cover upward when clearing paper jams.
		Note • Remove outputs delivered to the center tray constantly.

Note

• The C3 Finisher and the C3 Finisher with Booklet Maker are optional. The common features of the Finisher-A1, Finisher-B1, and C3 Finisher described in this guide are referred to as the "finisher".

## **Power Source**


The machine is provided with the push-button power switch and the main power switch.

#### ■ Push-button power switch

To use the machine, press the push-button power switch to switch its power on. You can start operations after the machine warms up.

#### ■ Main power switch

Press the main power switch to the [O] position. The <Main Power> indicator goes out on the right side of the control panel, and the machine powers off. Do not switch the main

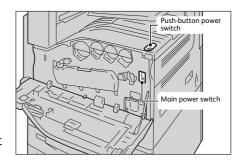

power off except when you connect a cable to the machine or clean the machine. Switching off the main power may erase the data in the memory when using the Fax service.

## Switching the Main Power On

The following describes how to switch the main power on.


**Important** • Do not switch off the main power immediately after switching on the main power. This may damage the hard disk and the memory or cause a machine malfunction.

- **1** Make sure that the power cord is plugged in correctly.
- **2** Open the front cover.



**3** Press the main power switch to the [1] position to switch the main power on.

The <Main Power> indicator lights up on the control panel.

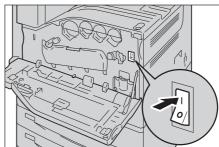

**4** Close the front cover.

## Switching the Power On

The following describes how to switch the power on.

The machine takes approximately 30 seconds to warm up and to be ready to copy or print after switching the power on. This may take more time depending on the configuration of your machine.


Switch the power off at the end of the day or when not using the machine for an extended period of time.

You can also use the Power Saver feature to save power consumption while the machine is not in use.


For information on the Power Saver feature, refer to "Power Saver Mode" (P.82).

**Important** • If the power is switched off, all the services of the machine will stop. When using the machine throughout the day for jobs such as receiving fax, do not switch the power off.

**1** Press the push-button power switch to switch the power on.

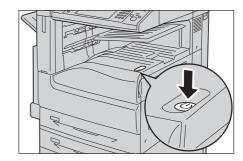


When the Finisher-B1 (optional), the C3
 Finisher (optional), or the C3 Finisher with Booklet Maker (optional) is installed

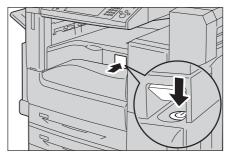

#### Note

- The "Please wait..." message indicates that the machine is warming up. The machine is not available during warming up.
- If the machine does not power on, check the followina:
  - The power cord is plugged in.
  - The main power is switched on.
  - The <RESET> button is set on and is in the depressed position.

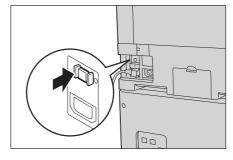

## **Switching the Power Off**

The following describes how to switch the power off.

**1** Before switching the power off, make sure that the machine has completed all copy or print jobs. Then, make sure that the <Data> indicator is not blinking.

**Important** • Do not switch the power off in the following situations. If the power is switched off, the data being processed may be erased.


- While data is being received
- While a job is being printed
- While a job is being copied
- While a job is being scanned
- When switching the power off, wait 5 seconds after outputs have been delivered.


**2** Press the push-button power switch.

**Important** • Power off processing is performed internally on the machine for a while after the power is switched off. Therefore, do not switch the main power off immediately after switching the power off.

Note

- When powering the machine on after it has been switched off, wait 10 seconds after the touch screen has gone dark.
- When the Finisher-B1 (optional), the C3 Finisher (optional), or the C3 Finisher with Booklet Maker (optional) is installed

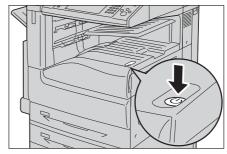


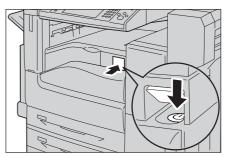

## **Switching the Main Power Off**


The following describes how to switch the main power off.

- Important Do not switch the main power off when a screen is displayed on the touch screen or while the <Power Saver> button is blinking. Switching off the main power under such circumstances may damage the hard disk and the memory or cause a machine malfunction.
  - Switch the main power off first when unplugging the power cord. Unplugging the power cord with the main power on may damage the hard disk and the memory or cause a machine malfunction.
- **1** Make sure that the power is switched off.
- Make sure that the touch screen is blank and the <Power Saver> button is not lit.
- Open the front cover.

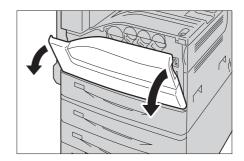

**4** Press the main power switch to the [O] position to switch the main power off.

The <Main Power> indicator goes out on the control panel.

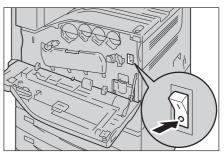

Close the front cover.

## **Switching the Power Off from Remote Location**

The following describes how to switch the power off from remote location.

Note • A user ID and passcode are required to switch the power off. Ask your system administrator for the user ID and passcode.

From your computer, access to CentreWare Internet Services.

For information on how to access to CentreWare Internet Services, refer to "Starting CentreWare Internet Services" (P.466).

2 Click [Power Off].

• If there are any jobs in process, the request for powering off the machine will not be processed.



**3** Click [OK].





## Circuit Breaker

The machine is provided with a circuit breaker.

In the event of a current leakage, the circuit breaker will automatically cut off the power circuit to prevent fire from occurring.


Check that the circuit breaker works properly at least once a month.

Be sure to establish a ground for the machine. Without a proper ground, the circuit breaker may be disabled, causing a risk of electric shock.


If you have any problems with the circuit breaker, contact our Customer Support Center.

The following describes how to check the circuit breaker.


**1** Press the push-button power switch to switch the power off.

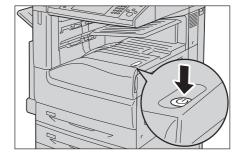


- **2** Make sure that the touch screen is blank and the <Power Saver> button does not light up.
- **3** Open the front cover.

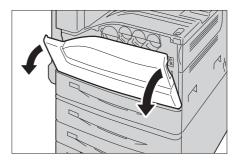


4 Press the main power switch to the [O] position to switch the main power off.

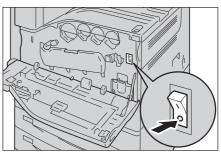

Press the <RESET> button. The button will be depressed even after the pushing force is released.

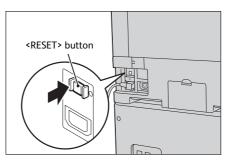

**6** Press the <TEST> button lightly with a sharp edge such as a pen tip. The depressed <RESET> button will stick out again. This is the end of the check procedure.

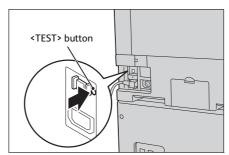

**7** Press the <RESET> button back to the depressed position.

#### **Power Saver Mode**

The machine is equipped with the Power Saver mode that saves electricity by reducing power consumption.

The Power Saver feature has two modes: Low Power mode and Sleep mode.

#### **■ Low Power Mode**

In this mode, the power to the control panel is lowered to save power.

• When the machine enters the Low Power mode, the power supply to the fusing unit is suspended.

#### ■ Sleep Mode

In this mode, the power supply to devices such as hard disk drive is suspended and the power is lowered more than in the Low Power mode.

## **Entering the Power Saver Mode**

When the machine enters the Power Saver mode, the touch screen is lit off and the <Power Saver> button on the control panel is lit on.

The machine enters the Power Saver mode by the following instances:

- Pressing the <Power Saver> button
- The machine is not operated, data is not received, or a job is not processed until the machine enters the Power Saver mode.
- Smart WelcomEyes does not detect human presence until the machine enters the Power Saver mode.

For how to change the interval for entering the Power Saver mode, refer to "1 Before Using the Machine" > "Power Saver Mode" > "Changing the Interval for Entering Power Saver Mode" in the Administrator Guide.

#### Note

- When the machine displays an error such as paper jams, it does not enter the Power Saver mode.
- When the machine enters the Power Saver mode while a user is authenticated, the machine exits the authentication mode.
- When the <Power Saver> button is pressed, the machine enters the Power Saver mode after 5 seconds.
- When you press the <Power Saver> button soon after the touch screen is lit off and when the machine does not enter the Power Saver mode completely, it may take time to exit the mode. Wait a few seconds until the machine is ready to exit the Power Saver mode and push the <Power Saver> button again
- The machine will not enter the Power Saver mode when [Skip Blank Pages] is enabled. For information on [Skip Blank Pages], refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.
- Sufficient distance from the machine is required to keep the Power saving state after pressing the <Power Saver> button. When the specified period of time elapses after pressing the button, the human motion sensor of the machine starts to detect human presence and then releases the Power Saver mode.

## **Exiting the Power Saver Mode**

The machine exits the Power Saver mode by the following instances:

- Pressing the <Power Saver> button on the control panel
- Receiving jobs such as print and fax
- Selecting [Apply] in CentreWare Internet Services
- Setting a document in the document feeder
- · Opening the document cover
- Detecting human presence by the Smart WelcomEyes of the machine

Note

• When the machine is in the Sleep mode, it takes longer time to exit the Power Saver mode than when the machine is in the Low Power mode.

When the following device is connected to the machine and a user performs the following operation, the Low Power mode can be deactivated without pressing the <Power Saver> button.

• Touching the IC Card Reader (optional) with a card

Note

- The Sleep mode cannot be deactivated by the operation. When the above device is connected to the machine, you can make the machine exit the Power Saver mode without pressing the <Power Saver> button by setting longer time to elapse until the machine enters the Sleep mode.
- When the machine enters the Sleep mode with the IC Card Reader (optional) connected, it may take longer time to exit the Power Saver mode.

#### Making devices necessary to activate the machine exit the Power Saver mode

The machine is equipped with the feature to save electricity by supplying power only to the devices necessary to activate the machine when the machine exits the Power Saver mode.

When the <Power Saver> button is pressed, the touch screen is lit on, but the document feeder and the output devices do not exit the Power Saver mode. Afterwards, by selecting a service on the touch screen, the machine supplies power only to the devices necessary to activate the service.

Note

- When the machine receives jobs such as print and print fax, the touch screen does not lit on and only the output devices exit the Power Saver mode and start to print.
- When the machine receives jobs such as stored print (Secure print, Delayed print, Charge print, and Private charge print), direct fax, and fax using folder receive, and when you access a folder of the machine using CentreWare Internet Services, the touch screen does not lit on and only the hard disk exits the Power Saver mode.

The machine cannot load papers and replace consumables appropriately when the machine is in the Power Saver mode. Press the <Power Saver> button and then <Machine Status> button to load papers and replace consumables.

### **Smart WelcomEyes**

The machine provides human detection feature called Smart WelcomEyes. When Smart WelcomEyes detects human presence within the range of approximately 35 cm from the machine front, it operates as follows:

- Deactivation of the Power Saver mode without pressing the <Power Saver> button
   When the sensor detects human presence, the Power Saver mode is released and then exited.
- Prohibition of entering the Power Saver mode
   While the sensor is detecting human presence, the machine does not enter the Power Saver mode.
- Prohibition of Auto Clear

While the sensor is detecting human presence, Auto Clear does not work.


When the sensor detects human presence, the indicator of Smart WelcomEyes is lit on.


Note

- To suspend a part of entire feature of Smart WelcomEyes, refer to "5 Tools" > "Common Service Settings" > "Power Saver Settings" > "Smart WelcomEyes" in the Administrator Guide.
- If you wear the cloth which reflects light such as a lame clothing and a sequin clothing, the feature may not work properly.
- The detectable range of Smart WelcomEyes can be changed up to approximately 60 cm. For more information, contact our Customer Support Center.

## **Control Panel**

The following describes the names and functions of components on the control panel.

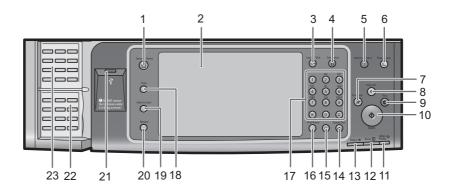

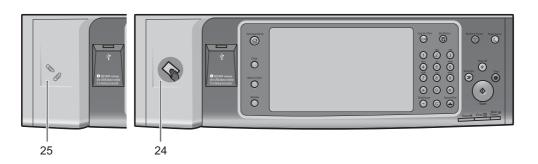

No.	Component	Function
1	<services home=""> button</services>	Press this button to display the Services Home screen.  You can change the services displayed on the Services Home screen. For more information, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Customizing the Button Layout" > "Services Home" in the Administrator Guide.
2	Touch screen	Displays messages required for operation, and buttons for various features. You can directly touch the touch screen to instruct operations and set features.
3	<log in="" out=""> button</log>	Lights up when a user is authenticated in the System Administration mode, the Authentication mode, or the Accounting mode. Displays the User ID entry screen for entering the System Administration mode, the Authentication mode, or the Accounting mode. Press this button to exit these modes.
4	<job status=""> button</job>	Press this button to check or cancel the current job, to check or print stored jobs, or to check completed jobs.
5	<machine status=""> button</machine>	Press this button to check the machine status and meters, to check the status of consumables, and to print reports.
6	<power saver=""> button</power>	When the machine is not used for a while, it enters the Power Saver mode to reduce power consumption. When the Power Saver mode is active, the <power saver=""> button lights up. Press this button to enter or exit the Power Saver mode.</power>

No.	Component	Function
7	<interrupt> button</interrupt>	Press this button to suspend a copy or print job in progress to have the machine process another job. During the Interrupt mode, the <interrupt> button lights up. Pressing the <interrupt> button again exits the Interrupt mode and resumes the suspended job.  For notes and restrictions on the Interrupt mode, refer to "16 Appendix" &gt; "Notes and Restrictions" &gt; "Notes and Restrictions on the Interrupt Mode" in the Administrator Guide.</interrupt></interrupt>
8	<clear all=""> button</clear>	Returns the settings you made to the default values. The machine returns to the same state as when it is powered on.
9	<stop> button</stop>	Press this button to pause the current job or communications.
10	<start> button</start>	Press this button to start scanning a document.
11	<main power=""> indicator</main>	Note  If the main power is not switched on, the machine will not be powered on even when the power is switched on.
12	<error> indicator</error>	Blinks if a system error occurs. This indicator lights up when a problem other than a system error occurs with the machine, including paper jams and running out of paper or toner. If the <error> indicator blinks, contact our Customer Support Center. If the <error> indicator lights up, refer to "15 Problem Solving" &gt; "Machine Trouble" in the Administrator Guide.</error></error>
13	<data> indicator</data>	Blinks when the machine is sending or receiving data to or from a client. This indicator lights up when data is stored in the machine's memory, when received faxes are waiting to be printed, or when faxes are stored in a folder. You can check stored scan files in a Folder List. For information on the Folder List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Folder List" in the Administrator Guide.  You can check stored fax files in a Stored File List. For information on the Stored File List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Job Status/Activity Report" > "Stored File List" in the Administrator Guide.  You can change the lighting pattern of the <data> indicator. For more information, refer to "5 Tools" &gt; "Common Service Settings" &gt; "Other Settings" &gt; "Data Indicator" in the Administrator Guide.</data>
14	<speed dial=""> button</speed>	Press this button to specify a recipient with an address number when sending a fax or e-mail.
15	<c (clear)=""> button</c>	Press this button to cancel a numerical value you have entered with the numeric keypad.
16	<dial pause=""> button</dial>	Press this button to insert a pause into a destination number.
17	Numeric keypad	Use the numeric buttons on the keypad to enter the number of copies, passcodes, and other numerical values.
18	<custom 1="" button=""> (Copy)</custom>	"Copy" is assigned to this button by default. Press this button to display the [Copy] screen. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the Custom Buttons" in the Administrator Guide.
19	<custom 2="" button=""> (Fax)</custom>	"Fax" is assigned to this button by default. Press this button to display the [Fax] screen.  Note  • The Fax Kit (optional) must be installed to use this button for Fax service. For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the Custom Buttons" in the Administrator Guide.


No.	Component	Function
20	<custom 3="" button=""> (Review)</custom>	"Review" is assigned to this button by default. On the [Review] screen, you can check a list of the status of Copy, Fax, and Scan services whose settings have been changed from the defaults. You can also check the details of fax and e-mail recipients.
		For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the Custom Buttons" in the Administrator Guide.
21	USB memory slot	Insert a USB 2.0 memory device directly here.
		Important • A memory card reader cable or a USB memory device cable cannot be directly connected to the machine. Use the USB Hub (optional) to connect a memory card reader or a USB memory device cable.
		Note  • This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
22	One-touch panels (Only available for machines with the Fax service)	Contains one-touch buttons.  Turn over the panels to display buttons 1 - 70, M01, and M02.  There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following:  • [Type 1]  The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.  • [Type 2]  The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01, and M02 are used for stored programs and they correspond to the
		registered stored programs 1 to 12.  Note • By default, [Type 1] is selected.
		This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
		For information on how to change the settings registered to the one-touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.
23	One-touch buttons (Only available for machines with the Fax service)	Turn over the panels to display buttons 1 - 70, M01, and M02.  There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following:  • [Type 1]  The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.  • [Type 2]  The buttons 1 to 60 are used for address numbers and they correspond to
		the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01, and M02 are used for stored programs and they correspond to the registered stored programs 1 to 12.
		Note • By default, [Type 1] is selected.
		This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
		For information on how to change the settings registered to the one-touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

No.	Component	Function
24	IC Card Reader (optional)	Used to authenticate a user using a smart card.  When you touch the smart card to the IC Card Reader, the machine reads the user information registered on the smart card and authenticates the user.
		• An optional component is required to use this feature. For more information, contαct our Customer Support Center.
		<ul> <li>When the machine is in the Power Saver mode, touching the smart card to the IC Card Reader deactivates the Power Saver mode. However, this operation does not deactivate the Sleep mode. For more information, refer to "Exiting the Power Saver Mode" (P.83).</li> </ul>
25	Paper clip tray	Used for placing paper clips and staples.

## Large Size Color UI

The following describes the names and functions on the Large Size Color UI.

• The Large Size Color UI does not have a one-touch panel and does not support specifying recipients Note with one-touch buttons.

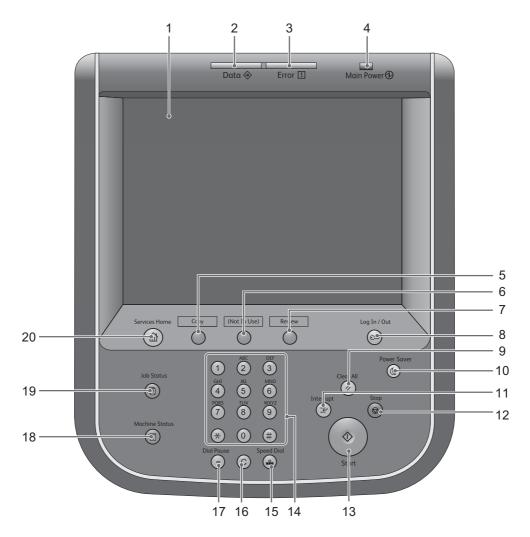

No.	Component	Function
1	Touch screen	Displays messages required for operation and buttons for various features. You can directly touch the touch screen to instruct operations and set features.
2	<data> indicator</data>	Blinks when the machine is sending or receiving data to or from a client. This indicator lights up when data is stored in the machine's memory, when received faxes are waiting to be printed, or when faxes are stored in a folder.
		You can check stored scan files in a Folder List. For information on the Folder List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Folder List" in the Administrator Guide.
		You can check stored fax files in a Stored File List. For information on the Stored File List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" > "Job Status/Activity Report" > "Stored File List" in the Administrator Guide.
		You can change the lighting pattern of the <data> indicator. For more information, refer to "5 Tools" &gt; "Common Service Settings" &gt; "Other Settings" &gt; "Data Indicator" in the Administrator Guide.</data>

No.	Component	Function
3	<error> indicator</error>	Blinks if a system error occurs. This indicator lights up when a problem other than a system error occurs with the machine, including paper jams and running out of paper. If the <error> indicator blinks, contact our Customer Support Center. For information on the remedies for paper jams and running out of paper, refer to "15 Problem Solving" in the Administrator Guide.</error>
4	<main power=""> indicator</main>	Lights up when the main power is switched on.  Note  • If the main power is not switched on, the machine will not be powered on
		even when the power is switched on.
5	<custom 1="" button=""> (Copy)</custom>	"Copy" is assigned to this button by default. Press this button to display the [Copy] screen.
		For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the Custom Buttons" in the Administrator Guide.
6	<custom 2="" button=""> (Fax)</custom>	"Fax" is assigned to this button by default. Press this button to display the [Fax] screen.
		Note • The Fax Kit (optional) must be installed to use this button for Fax service.
		For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the Custom Buttons" in the Administrator Guide.
7	<custom 3="" button=""> (Review)</custom>	"Review" is assigned to this button by default.  On the [Review] screen, you can check a list of the status of Copy, Fax, and Scan services whose settings have been changed from the defaults. You can also check the details of fax and e-mail recipients.
		For information on how to assign a service to the button, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Assigning Services to the Custom Buttons" in the Administrator Guide.
8	<log in="" out=""> button</log>	Lights up when a user is authenticated in the System Administration mode, the Authentication mode, or the Accounting mode. Displays the User ID entry screen for entering the System Administration mode, the Authentication mode, or the Accounting mode. Press this button to exit these modes.
9	<clear all=""> button</clear>	Returns the settings you made to the default values. The machine returns to the same state as when it is powered on.
10	<power saver=""> button</power>	When the machine is not used for a while, it enters the Power Saver mode to reduce power consumption. When the Power Saver mode is active, the <power saver=""> button lights up. Press this button to enter or exit the Power Saver mode.</power>
11	<interrupt> button</interrupt>	Press this button to suspend a copy or print job in progress to have the machine process another job. During the Interrupt mode, the <interrupt> button lights up. Pressing the <interrupt> button again exits the Interrupt mode and resumes the suspended job.  For notes and restrictions on the Interrupt mode, refer to "16 Appendix" &gt; "Notes and</interrupt></interrupt>
		Restrictions" > "Notes and Restrictions on the Interrupt Mode" in the Administrator Guide.
12	<stop> button</stop>	Press this button to pause the current job or communications.
13	<start> button</start>	Press this button to start scanning a document.
14	Numeric keypad	Use the numeric buttons on the keypad to enter the number of copies, passwords, and other numerical values.
15	<speed dial=""> button</speed>	Press this button to specify a recipient with an address number when sending a fax or e-mail.

No.	Component	Function
16	<c (clear)=""> button</c>	Press this button to cancel a numerical value you have entered with the numeric keypad.
17	<dial pause=""> button</dial>	Press this button to insert a pause into a destination number.
18	<machine status=""> button</machine>	Press this button to check the machine status and meters, to check the status of consumables, and to print reports.
19	<job status=""> button</job>	Press this button to check or cancel the current job, to check or print stored jobs, or to check completed jobs.
20	<services home=""> button</services>	Press this button to display the Services Home screen.  You can change the services displayed on the Services Home screen. For more information, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Customizing the Button Layout" > "Services Home" in the Administrator Guide.

## Screens and Buttons Displayed

You can register or change the services and buttons displayed on the touch screen. You can customize the following screens:

• The following settings may have been changed by the system administrator. Use the machine according to the changes that have been made.

#### **Setting the Initial Screen**

You can set the screen displayed after switching the power on or exiting the Power Saver

#### Setting the Screen Displayed after Auto Clear

You can select [Last Selection Screen] or Services Home for the screen to be displayed after Auto Clear.

#### **Assigning Services to the Custom Buttons**

You can assign services to the custom buttons on the control panel: Custom 1 to Custom 3.

By assigning frequently-used services to the custom buttons, you can switch to the services without returning to the Services Home screen.

Note

• By default, "Copy" is assigned to the <Custom Button 1>, "Fax" is assigned to the <Custom Button 2>, and "Review" is assigned to the <Custom Button 3>.

#### **Customizing the Services Home Screen**

You can customize the layout of services and buttons on the Services Home screen that is displayed when you press the <Services Home> button on the control panel.

For information on how to customize the Services Home screen, refer to "1 Before Using the Machine" > "Customizing the Control Panel" > "Customizing the Button Layout" > "Services Home" in the Administrator Guide.

## **About the Services Home Screen**

This section describes the fields and buttons on the Services Home screen, which is displayed by pressing the <Services Home> button.








\* WSD stands for Web Services on Devices.

#### Note

When operations such as flick and double-tap are disabled, the following home screen appears. In this case, you can switch pages by selecting the [▲][▼] button. For information on how to disable flick or double-tap, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

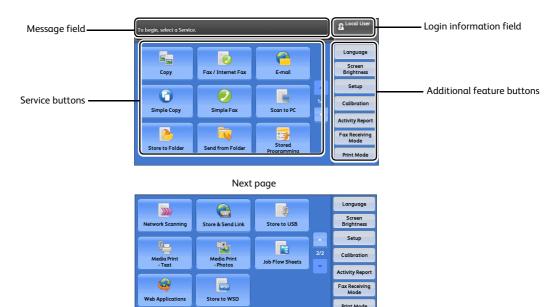

\* WSD stands for Web Services on Devices.

#### Message Field

Displays a message.

#### Login Information Field

Select this field in the upper right corner of the touch screen to display the User ID entry screen for entering the System Administration mode, the Authentication mode, or the Accounting mode.

When a user is authenticated, the login information is displayed in this field.

Note

- You can also press the <Log In/Out> button on the control panel to enter the Authentication mode.
- To exit the Authentication mode, press the <Log In/Out> button on the control panel. You can also select the login information field in the upper right corner of the touch screen, and select [Logout] from the pop-up menu to exit the Authentication mode.

For information on the Authentication or Accounting mode, refer to "14 Authentication and Accounting Features" in the Administrator Guide.

#### **Service Buttons**

Allows you to set the features for each service.

#### **■** Copy

You can set the features for the Copy service.

For more information, refer to "Copy" (P.103).

#### ■ Fax/Internet Fax

You can set the features for the Fax service.

For more information, refer to "Fax" (P.187).

#### ■ E-mail

You can scan documents and send the scanned data as an e-mail attachment.

For more information, refer to "E-mail" (P.296).

#### **■ Simple Copy**

You can set the features for the Copy service. Selecting [Simple Copy] allows you to easily specify the basic copy features on a single screen.

For more information, refer to "Simple Copy" (P.113).

#### ■ Simple Fax

You can set the features for the Fax service. Selecting [Simple Fax] allows you to easily specify the basic fax features on a single screen.

• This service does not appear on the screen when the Server Fax service is enabled.

For more information, refer to "Simple Fax" (P.214).

#### ■ Scan to PC

You can scan documents and send the scanned data to a network computer via the FTP or SMB protocol.

For more information, refer to "Scan to PC" (P.326).

#### ■ Store to Folder

You can scan documents and save the scanned data in a folder of the machine.

For more information, refer to "Store to Folder" (P.338).

#### ■ Send from Folder

You can operate files stored in a folder of the machine.

For more information, refer to "Send from Folder" (P.371).

#### ■ Stored Programming

You can operate stored programs.

Stored Programming is a service that allows you to store settings that you expect to use frequently and call them with a single button operation.

For more information, refer to "Stored Programming" (P.395).

#### ■ Network Scanning (ApeosPort Series Models only)

You can scan documents after specifying a file (job template) saving scanning conditions, information on the forwarding destination server, and others.

For more information, refer to "Network Scanning" (P.324).

#### ■ Store & Send Link

After you scan documents, the machine temporarily saves the scanned data and sends you e-mail attached with two URLs; one is for the location to retrieve the scanned data, and the other is for the location to delete the data.

For more information, refer to "Store & Send Link" (P.347).

• This service appears on the screen when the Authentication feature is enabled. Note

For information on how to display [Store & Send Link] on the Services Home screen, refer to "1 Before Using the Machine" > "Customizing the Control Panel" in the Administrator Guide.

#### ■ Store to USB

You can scan documents and save the scanned data to a USB memory device.

For more information, refer to "Store to USB" (P.340).

Note

• This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

#### ■ Media Print - Text

You can print document files (PDF, TIFF, XML Paper Specification (XPS), XDW (XBD), and JPG (JFIF)) after retrieving the files from a CompactFlash card or a USB memory device. You can also print the scan data stored with the Store to USB service.

For more information, refer to "Media Print - Text" (P.421).

Note

• This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

#### ■ Media Print - Photos

You can print image data (DCF1.0) taken with a digital camera. You can retrieve the data only from a CompactFlash card.

For more information, refer to "Media Print - Photos" (P.420).

Note

• This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

#### ■ Job Flow Sheets (ApeosPort Series Models only)

You can scan documents using a job flow sheet.

Job Flow Sheets is a service that allows you to set a flow of transfer settings for scanning data to enable efficient routine transfer.

For more information, refer to "Job Flow Sheets (ApeosPort Series Models Only)" (P.389).

#### ■ Web Applications (ApeosPort Series Models only)

You can access to web applications via a network using the browser on the machine in order to display and store data.

For more information, refer to "Web Applications (ApeosPort Series Models Only)" (P.405).

Note

• This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

#### ■ Store to WSD

You can scan documents set on the machine and save the scanned data by operating from a computer on the network. Also, you can save the scanned data to a computer on the network.

For more information, refer to "Store to WSD" (P.350).

Note

• WSD stands for Web Services on Devices.

#### **Additional Feature Buttons**

Allows you to set the additional features that are not related to jobs.

#### **■** Language

You can select the language to be displayed on the touch screen.

The setting here will be reset when the power is switched off and on.

Important • When you select [English], only ASCII characters can be used.

- When you set [Language] to [English] on the Services Home screen and an Address book entry or contents of [Details] of Job Flow Sheets is entered in double-byte characters, the characters may not be displayed properly. When you use CentreWare Internet Services to import a CSV file that includes double-byte characters other than a selected language, the characters in the file may be garbled or the import may fail.
- \* : CSV (Comma Separated Values) is a file format that is often used for saving data by spreadsheets and database programs.

Note

• Under [Default Language] in the System Administration mode, you can select the standard language displayed on the touch screen when the power is switched on. For more information on how to set [Default Language], refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" > "Default Language" in the Administrator Guide.

#### ■ Screen Brightness

You can adjust the screen brightness of the touch screen.

#### ■ Lock Out Printer/Release Printer

You can set the machine to temporarily enable printing during the printer lockout period or to temporarily disable printing while [Release Printer] is displayed.

Note

• You can assign this button when [Printer Lockout] is set to [On] under [Tools] > [Common Service Settings] > [Machine Clock/Timers] and the [Allow User to Lock Out] check box is selected. For information on how to assign the feature to the button, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

#### ■ Setup

You can create or update folders, job flows, and the Address Book.

For more information, refer to "5 Tools" > "Setup" in the Administrator Guide.

#### **■** Calibration

The machine can automatically calibrate colors when the reproducibility of density or color in copies and prints deteriorates.

For more information, refer to "3 Maintenance" > "Executing Calibration" in the Administrator Guide.

#### **■** Activity Report

You can print an Activity Report to check if a transmission is successfully completed.

For information on the contents listed in the Activity Report, refer to "16 Appendix" > "Activity Report" in the Administrator Guide.

## ■ Fax Receiving Mode

You can specify a mode for receiving faxes.

For more information, refer to "4 Machine Status" > "Machine Information" > "Fax Receiving Mode" in the Administrator Guide.

#### **■** Print Mode

You can register a print mode and change its settings.

For more information, refer to "4 Machine Status" > "Machine Information" > "Print Mode" in the Administrator Guide.

### **Touch Screen**

On the touch screen of the machine, you can switch pages and scroll a list by the following operations.

Note

- The touch screen of the control panel used in the machine is pressure-sensitive. Adjust the power to touch the screen. You can also use the stylus-pen.
- You can set whether to enable flick and double-tap or not. For more information, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

#### ■ Drag

Slide your finger to the position desired with your finger touched the touch screen.

Drag the touch screen from side to side to switch pages.



Drag the touch screen up and down to scroll a list.

Note

• During drag, scrolling stops when you move your finger away from the touch screen.



#### **■** Flick

Slide your finger quickly to the position desired and release it.

Flick the touch screen from side to side or up and down to switch pages.



Flick the touch screen up and down to scroll a list.

Note

 During flick, scrolling continues for a while even after you move your finger away from the touch screen.




#### ■ Tap

Touch the touch screen and move your finger away from the screen quickly. To tap the same position of the screen twice is called double-tap.

Tap the touch screen to switch the thumbnail bar to be displayed or not.

#### Note

• The operation of pinch in or pinch out (moving two fingers inward or outward) to zoom in or out screens is not supported.

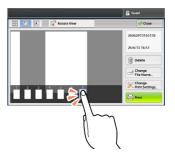

Double-tap a previewed image to enlarge the image.



## **Entering Text**

During operations, a screen for entering text sometimes appears. The following describes how to enter text.




You can enter the following characters: numerals, alphabets, and symbols.

Item	Description
Entering alphabets and numerals	To enter uppercase letters, select [Shift]. To return to the lowercase letters, select [Shift] again.
Entering symbols	Select [More Characters].
	Note  • Depending on the keyboard, you can select a symbol from the pull-up options displayed on the bottom left of the screen.
Entering a space	Select [Space].
Deleting characters	Select [Backspace] to delete one character at a time. Select [Delete Text] to delete all characters.


## **Installing the Tray Attachment on the Finisher-B1**

Setting the tray attachment on the finisher tray may help you deliver and stack A4 $\square$  and B5 sheets without staples more neatly on the finisher tray of Finisher-B1.

1 Remove the tray attachment from the rear of the finisher tray.

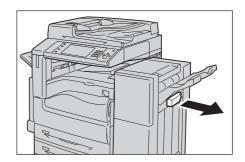

Install the tray attachment onto the middle of the finisher tray as shown in the diagram.

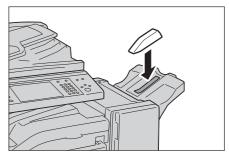

# 3 Сору

This chapter describes the basic operation and features for the Copy service.		
Copying Procedure	104	
Operations during Copying	110	
Simple Copy	113	
• Copy	118	
Image Quality	130	
Layout Adjustment	136	
Output Format	149	
Job Assembly	177	

## **Copying Procedure**

This section describes the basic copy procedures. The following shows the reference section for each procedure.

Step 1 Loading Documents	104
Step 2 Selecting Features	106
Step 3 Entering a Quantity	107
Step 4 Starting the Copy Job	108
Step 5 Confirming the Copy Job in Job Status	109

## **Step 1 Loading Documents**

The following two methods are available to load documents:

#### **■** Document Feeder

- Single sheet
- · Multiple sheets

#### ■ Document Glass

- Single sheet
- Bound documents, such as books

#### **Document Feeder**

The document feeder supports single and multiple sheet documents with sizes from 125 x 85 mm (Standard size: A5, A5 $\square$ ) to 297 x 432 mm (Standard size: A3, 11 x 17").

The document feeder automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying the Scan Size for the Document)" (P.140).

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

The document feeder accepts the following number of sheets.

Document Type (Weight)	Number of Sheets	
	Duplex Automatic Document Feeder B1-C	Duplex Automatic Document Feeder B1-PC
Lightweight paper (38 - 49 gsm)	110 sheets	130 sheets
Plain paper (50 - 80 gsm)	110 sheets	130 sheets
Heavyweight paper (81 - 128 gsm)	75 sheets	85 sheets

**Important** • To avoid paper jams, use the document glass for folded or wrinkled documents, cut-and-pasted documents, curled paper, or back carbon paper.

• When Duplex Automatic Document Feeder B1-C is installed, the lightweight paper of 38 - 49 gsm cannot be scanned 2 sided.


For information on how to copy mixed sized documents, refer to "Mixed Size Originals (Scanning Different Size Documents Simultaneously)" (P.141).

1 Remove any paper clips and staples before loading a document.


**2** Load the document face up (when the document is 2-sided, load the front side up) in the center of the document feeder.

Note


• The Confirmation indicator lights up when the document is loaded correctly. If the indicator does not light, load the document again.

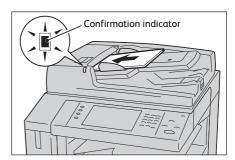

**3** Adjust the document guides to match the size of the document loaded.

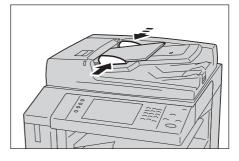

**4** Pull out the document stopper.

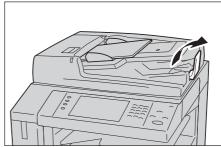

#### **Document Glass**

The document glass supports a single sheet, a book, or other similar documents with size 297  $\times$  432 mm (Standard size: A3, 11  $\times$  17").

**Important** • Always close the document cover after using the document glass.

The document glass automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying the Scan Size for the Document)" (P.140).


The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on the paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

## **CAUTION**


Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

**1** Open the document cover.

Important • Make sure that the touch screen is active, and then load a document. Otherwise, the machine may not properly detect the document size.

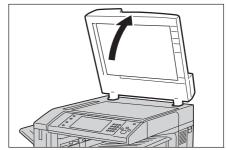

**2** Load the document face down, and align it against the top left corner of the document glass.

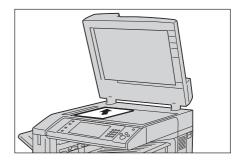

**3** Close the document cover.

Note

• When a standard size document is loaded on the document glass, the size of the document is displayed in the message field.

## Step 2 Selecting Features

The following two services are available to copy documents.

#### **■** Simple Copy

Allows you to only select basic features to copy documents.

#### ■ Сору


Allows you to make detailed settings to copy documents.

The following describes how to select features on the [Copy] screen.

For information on Simple Copy, refer to "Simple Copy" (P.113).

Note

- $\bullet$  The features displayed on the screen depend on the configuration of your machine .
- When the Authentication or Accounting feature is enabled, a user ID and passcode may be required. Ask your system administrator for the user ID and passcode.
- **1** Press the <Services Home> button.

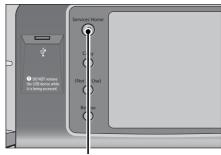


<Services Home> button

**2** Select [Copy].



**3** If the previous settings still remain, press the <Clear All> button.

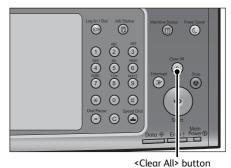

**4** Select each tab, and configure features as necessary.



The following shows the reference section for each tab.

"Copy" (P.118)

"Image Quality" (P.130)

"Layout Adjustment" (P.136)


"Output Format" (P.149)

"Job Assembly" (P.177)

## Step 3 Entering a Quantity


You can enter up to 999 sets.

**1** Enter the number of copies using the numeric keypad. The number of copies entered appears on the upper right of the touch screen.

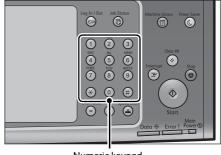

Numeric keypad

If you have entered an incorrect value, press the <C (Clear)> button and then enter the correct value.

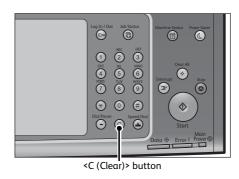


**Step 4 Starting the Copy Job** 

Press the <Start> button.

- **Important** If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.
  - Copies cannot be made if a copy protection code is detected. For information on copy protection codes, refer to "Secure Watermark (Managing Document Security)" (P.165).

Note

- If a problem occurs, an error message appears on the touch screen. Follow the instructions of the message to solve the problem.
- You can set the next job during copying.

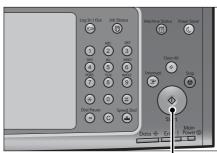

<Start> button

#### ■ If you have more documents

If you have more documents to copy, select [Next Original] on the touch screen while the current document is being scanned. This allows you to scan the documents as a single set of data.

**2** Select [Next Original] while scanning is in progress.


Note

- When using the document feeder, load the next document after the machine has finished scanning the first document.
- When [Next Original] is displayed on the screen shown on the right and no operation is performed for a certain period of time, the machine automatically assumes that there are no more documents.





**3** Load the next document.

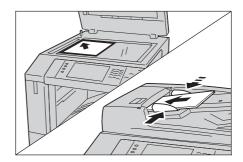


- **4** Press the <Start> button.
  If you have more documents, repeat steps 3 and 4.
- **5** When all documents have been scanned, select [Last Original].



# Step 5 Confirming the Copy Job in Job Status

If copies are not output after you start the copy job, the job may be in pending status. Use the following procedure to confirm the job status.

**1** Press the <Job Status> button.

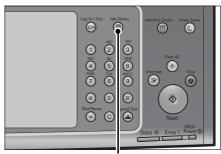


<Job Status> button

2 Confirm the job status.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

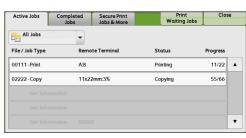

# **Operations during Copying**

This section describes available operations during copying. The following shows the reference section for each operation.

Stopping the Copy Job	11	10
Changing the Number of Copies	11	11
Interrupting the Copy Job	1	12

# **Stopping the Copy Job**

To cancel a copy job in progress, use the following procedure.

1 Press either the <Stop> button on the control panel or [Delete] on the touch screen.



<Stop> button




**2** Select [Delete].



### ■ If [Delete] does not appear on the screen:

**1** Press the <Job Status> button.

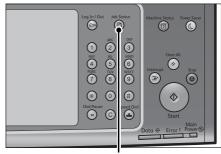


<Job Status> button

**2** Select the job to cancel.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

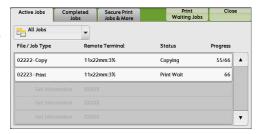

**3** Select [Delete].







# **Changing the Number of Copies**

To change the number of copy sets during scanning or copying, use the following procedure.

**1** Press either the <Stop> button on the control panel or [Delete] on the touch screen.



<Stop> button



**2** Select [Change Quantity].



- **3** Specify the number of copy sets with the numeric keypad. The new quantity must include the number of copies that have already been printed. You cannot enter a number less than the number of copies that have already been printed.
- Press the <Start> button.

Note

• If you enter the same value as the number of copies that have already been printed, the machine will not execute a copy job even when you press the <Start> button.


### Interrupting the Copy Job

You can temporarily stop the copy job to have the machine process another job.

Important • Press the <Interrupt> button only after all the documents have been scanned. The machine does not accept another job while it is scanning the documents, or when [Next Original] has been selected.

- Even when the <Interrupt> button is pressed, the machine may not accept another copy job if 10 sets or less are being copied using the document glass.
- **1** Press the <Interrupt> button.

The <Interrupt> button lights up to indicate that the machine is in the Interrupt mode.

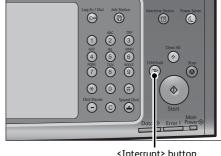

<Interrupt> button

- **2** Load a document and set features if necessary.
- **3** Specify the number of copy sets with the numeric keypad.
- **4** Press the <Start> button.
- **5** After you have finished making the interrupt copy, press the <Interrupt> button.

The <Interrupt> button goes out to indicate that the Interrupt mode is exited.

- If you used the document glass to copy the document, remove the document from the document glass.
- Press the <Start> button.

The suspended copy job is resumed.

You can select [Copy] or [Simple Copy] on the Services Home screen to set the features for the Copy service.

This section describes the features you can select on the [Simple Copy] screen. [Simple Copy] allows you to use only basic features to easily copy documents. The following shows the reference section for each feature.

**1** Select [Simple Copy] on the Services Home screen.



**2** Select a feature on the [Simple Copy] screen.



# Paper Supply (Selecting the Paper for Copying)

This feature allows you to select the paper tray for copying.

**1** Select [Paper Supply].



Select a paper tray to be used.

#### ■ Auto Select

Automatically determines the tray holding the appropriate paper, based on the document size and the specified copy ratio.

Note

• This cannot be selected together with [Auto %] under [Reduce/Enlarge].

# **▼** | | | | | | | |

#### Simple Copy 3 **■** A4 👍 Paper Supply Auto Select Auto Select 4∭ A4 Plain 1∭A4 Plain Reduce / Enlarge 2∭ A4 Plain 100% 2 Pages per 1 Staple

### ■ Trays 1 to 4, and 6 (optional)


Allows you to directly select the desired tray.

### ■ Tray 5 Bypass Auto Detect

Automatically detects the size of paper loaded in the bypass tray.

### Checking the Remaining Amount of Paper in the Paper Tray

The icon displayed in a tray allows you to check the remaining amount of paper loaded in the tray.

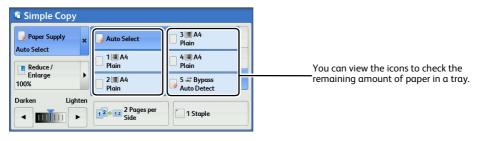

: Indicates that the remaining amount of paper is 25 to 100%. \_ = = =

: Indicates that the remaining amount of paper is 25% or less.

: Indicates that the tray has run out of paper, or no paper is loaded in the tray. 300

# Reduce/Enlarge (Making Enlarged/Reduced Copies)

This feature allows you to select a copy ratio to enlarge or reduce the size of copies.

Select [Reduce/Enlarge].



**2** Select a copy ratio.

#### **100%**

Copies at the same image size as the original document.

#### ■ Auto %

Automatically determines the copy ratio based on the document size and the paper size specified in [Paper Supply], and copies the document to fit into the paper.

• This cannot be selected together with [Auto Select] under [Paper Supply].

#### **■** Ratios

Allows you to select from preset copy ratios.

### 2 Sided Copying (Making 2 Sided Copies)

This feature allows you to copy 1-sided and 2-sided documents on one side or both sides of paper.

Simple Copy

Paper Supply

**■** 

Simple Copy

Paper Supply

Lighten

Tray 1 A4

Darken

Reduce /
Enlarge

**▼** 

Auto Select

100%

100%

70%

**3** 81%

\_\_\_. 1→2 Sided

2→2 Sided

1 2 0 12 Pages pe

**1** Select any option.

#### **■** 1 → 1 Sided

Makes a copy of a 1-sided document on one side of the paper.

#### **■** 1 → 2 Sided

Makes a copy of a 1-sided document on both sides of the paper.

### **■** 2 → 2 Sided

Makes a copy of a 2-sided document on both sides of the paper.

Note

• When you copy both sides of the 2-sided document to one side and the document size is bigger than A4, the orientation of the copied images may not be appropriate. To achieve the copy result with the correct orientation, scan Side 1 and Side 2 separately in different orientations, using the document glass.

# Auto / Color / Black & White (Selecting the Color for Copying)

This feature allows you to select a color mode.

**1** Select [Auto], [Color] or [Black & White].


#### ■ Auto

The machine automatically determines the colors of the original document and makes copies in full color if the original document is colored, and in single color (black) if the document is black-and-white.



Note

- If a color document is in one of the following conditions, the machine may copy the document in black and white.
  - The colored area is too small.
  - The colors are too light.

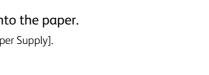

Auto

Black & White

1 Staple

✓ 122% A4→B4
 A5→B5
 ✓ 141% A4→A3
 B5→B4

In that case, change a level from the five levels which is used for the machine to recognize color. For more information, refer to "5 Tools" > "Common Service Settings" > "Image Quality Adjustment" > "Image Quality" > "Output Color Recognition" in the Administrator Guide.

#### **■** Color

Copies in full color.

#### ■ Black & White

Copies in black and white regardless of the colors in the original document.

Note

 If the use of certain colors is not allowed, the available colors will be restricted. For more information, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" > "Service Access" in the Administrator Guide.

# Lighten/Darken (Adjusting the Copy Density)

This feature allows you to select a copy-density level from seven levels.

1 Use [◀] and [▶] to set a density level.



# 2 Pages per Side (Copying Two Pages onto One Sheet)

This feature allows you to copy two pages of a document together onto one side of a single sheet of paper.

When you select [2 Pages per Side], [Auto %] is automatically selected in [Reduce/Enlarge]. The machine automatically sets the copy ratio and makes copies of the images so that they fit on the selected paper.

Note

- When you deselect [Auto %] in [Reduce/Enlarge] (when you select another copy ratio), image loss may occur depending on the image size of the document.
- Select a tray other than [Auto Select] in [Paper Supply]. When you select [Auto Select], the tray containing A4 paper is selected. If no tray contains A4 paper, the machine selects a tray based on the [Auto Paper Off] setting. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Auto Paper Off" in the Administrator Guide.
- When you copy both sides of the 2-sided document to one side and the document size is bigger than A4, the orientation of the copied images may not be appropriate. To achieve the copy result with the correct orientation, scan Side 1 and Side 2 separately in different orientations, using the document glass.

For information on how to copy four or eight pages of a document together onto one side of a single sheet of paper, refer to "Pages per Side (Copying Multiple Pages onto One Sheet)" (P.154).

**1** Select [2 Pages per Side].



# 1 Staple

This feature allows you to select whether to staple copied outputs at the top left corner.

The number of sheets that can be stapled is 2 - 50 (when 80 gsm paper is used). Available paper types are: Bond, Plain, Recycled, Plain Reload, Lightweight, Heavyweight, Heavyweight Reload, Extra Heavyweight (170 - 220 gsm), Extra Heavyweight (170 - 220 gsm) Reload, Gloss\*, Gloss Reload\*, Heavyweight Gloss (170 - 220 gsm)\*, Heavyweight Gloss (170 - 220 gsm) Reload\*, Punched, and Custom Paper 1 to 5.

\*: The paper types are not available for Finisher-A1.

Note

- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.
- **1** Select [1 Staple].



# Copy

You can select [Copy] or [Simple Copy] on the Services Home screen to set the features for the Copy service.

This section describes the features you can select on the [Copy] screen. The following shows the reference section for each feature.


Reduce/Enlarge (Making Enlarged/Reduced Copies)	118
Paper Supply (Selecting the Paper for Copying)	121
Output Color (Selecting the Color for Copying)	124
2 Sided Copying (Making 2 Sided Copies)	128
Copy Output (Specifying Finishing Options)	128
Pages per Side (Copying Multiple Pages onto One Sheet)	129
Lighten/Darken (Adjusting the Copy Density)	129

You can customize the layout of the features displayed on the [Copy] screen. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Tab - Features Allocation" in the Administrator Guide.

**1** Select [Copy] on the Services Home screen.



**2** Select a feature on the [Copy] screen.

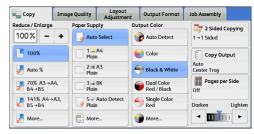

# Reduce/Enlarge (Making Enlarged/Reduced Copies)

This feature allows you to select a copy ratio to enlarge or reduce the size of copies.

Specify a copy ratio. You can use the numeric keypad to specify a value, or [+] and [-] to specify reduction/enlargement ratios directly.

### **100%**

Copies at the same image size as the original document.



#### ■ Auto %

Automatically determines the copy ratio based on the document size and the paper size specified in [Paper Supply], and copies the document to fit into the paper.

• This cannot be selected together with [Auto Select] under [Paper Supply].

#### ■ Ratios (3rd and 4th buttons)

Displays preset copy ratios.

You can change the copy ratio associated with each button. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Preset Buttons" > "Reduce/Enlarge - Button 3 - 4" in the Administrator Guide.

#### ■ More


Displays the [Reduce/Enlarge] screen on which you can set [Proportional %], [Independent X - Y%], and [Calculator %].

For information on the settings on the [Reduce/Enlarge] screen, refer to "When [Proportional %] is Selected" (P.119), "When [Independent X - Y%] is Selected" (P.120), or "When [Calculator %] is Selected" (P.120).

### When [Proportional %] is Selected

You can select a ratio from the standard copy ratios, or can enter a ratio directly.

Select a copy ratio, or specify a value.

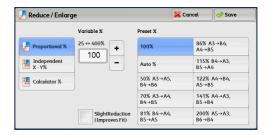

#### ■ Variable %

Specify a ratio in the range from 25 to 400 % in 1 % increments. To specify a value, use the numeric keypad or [+] and [-]. Specifying "100 %" allows you to make copies at the same image size as the original document.

When you make enlarged/reduced copies from standard sized documents on standard sized paper, the following copy ratios will be applied.

Copy / Original	А6	В6	<b>A</b> 5	B5	А4	B4	А3
A6	100 %	122%	141 %	173%	200 %	245%*	283%*
В6	81 %	100 %	115%	141 %	163 %	200%*	230%*
A5	70 %	86%	100%	122%	141 %	173%*	200%*
B5	57 %	70 %	81 %	100%	115%	141%*	163%*
A4	50 %	61 %	70%	86 %	100 %	122 %	141 %
В4	40 %	50%	57%	70 %	81 %	100 %	115%
А3	35 %	43%	50%	61 %	70 %	86 %	100 %

<sup>\*:</sup> Load a document in landscape orientation ( to match the paper orientation loaded in the tray.

How to load a document depends on the size and orientation of a document. For more information, refer to "Step 1 Loading Documents" (P.104).

For information on paper that can be loaded, refer to "2 Paper and Other Media" > "Paper Types" in the Administrator Guide.

#### ■ Preset %

Select a copy ratio from the following options.

• 100%

Copies at the same image size as the original document.

Auto %

Automatically determines the copy ratio based on the document size and the paper size specified in [Paper Supply], and copies the document to fit into the paper.

Note
 This cannot be selected together with [Auto Select] under [Paper Supply].

Preset ratios

Select from the preset ratios.

You can change the copy ratio associated with each button. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Reduce/Enlarge Presets" in the Administrator Guide.

### ■ Slight Reduction (Improves Fit)

Select this check box to slightly reduce the specified copy ratio to copy the complete image onto the paper.

Important • If you select [Slight Reduction (Improves Fit)] and you do not want to erase the edges of the document, set the amount of edge erase to 0 mm. Note that if the amount is set to 0 mm, the edges of the copied document may get dirty. You can set [Edge Erase] on the [Layout Adjustment] screen. For more information, refer to "Edge Erase (Erasing Edges and Margin Shadows of the Document)" (P.142).

### When [Independent X - Y%] is Selected


You can specify reduction/enlargement ratios for the width and length individually.

**1** Select any option.

#### ■ Variable %

• Width - X%, Length -Y%

Allows you to specify reduction/enlargement ratios for the width and length in the range from 25 to 400 % in 1 % increments. Use [+] and [-] or the numeric keypad to specify a ratio.

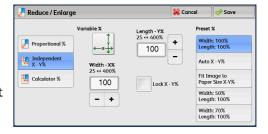

### ■ Lock X - Y%

Allows you to make the same ratio adjustment for the width and length at the same time.

### ■ Preset %

• 100%

Copies at the same image size as the original document.

• Auto X - Y %

Automatically determines the reduction/enlargement ratios for the width and length so that the document image fits in the paper.

• Fit Image to Paper Size X - Y %

Automatically determines the reduction/enlargement ratios for the width and length so that the document image fits in the paper, and then slightly reduces the ratios so that the complete image is copied onto the paper.

• Width: XX % Length: XX %

Allows you to specify the preset reduction/enlargement ratios.

### When [Calculator %] is Selected

You can specify values for the length and width individually.


If you specify both the original document size and the desired copy size, the copy ratios for the length and width are calculated automatically in the range from 25 to  $400\,\%$  according to the values that you entered.

Note

• Selecting [Calculator %] allows you to set copy ratios. The values entered in [Original Size] and [Copy Size] are used to calculate ratios, and do not reflect a scan size for the document or the paper size. Be sure to specify a scan size for the document. Also, select a paper tray if necessary.

For information on how to specify a scan size for the document, refer to "Original Size (Specifying the Scan Size for the Document)" (P.140). For information on how to select a paper tray, refer to "Paper Supply (Selecting the Paper for Copying)" (P.121).

1 Enter the width of the original document in [Original Size] of [Width - X %] using the numeric keypad.

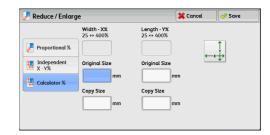

- **2** Enter the width of the output copy in [Copy Size] of [Width X %] using the numeric keypad.
- **3** In the same way, enter the length for [Original Size] and [Copy Size] of [Length Y%].

### ■ Width - X% / Length - Y%

Displays the ratios that are automatically calculated using the values set in [Original Size] and [Copy Size].

### ■ Original Size

Allows you to enter the width and length of the original document, in the range from 1 to 999 mm in 1 mm increments.

#### **■** Copy Size

Allows you to enter the width and length of output copies, in the range from 1 to 999 mm in 1 mm increments.

# Paper Supply (Selecting the Paper for Copying)

This feature allows you to select the tray that holds the paper you want to use.

**1** Select a paper tray.

#### ■ Auto Select

Automatically determines the tray holding the appropriate paper, based on the document size and the specified copy ratio.

Note

• This cannot be selected together with [Auto %] under [Reduce/Enlarge].



#### ■ Trays (2nd to 5th buttons)

Allows you to directly select the desired tray.

You can change the paper tray associated with each button on the [Copy] screen. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Preset Buttons" > "Paper Supply - Button 2 - 5" in the Administrator Guide.


#### ■ More

Displays the [Paper Supply] screen.

Refer to "[Paper Supply] Screen" (P.122).

### Checking the Remaining Amount of Paper in a Tray

The icon displayed in a tray allows you to check the remaining amount of paper loaded in the tray.

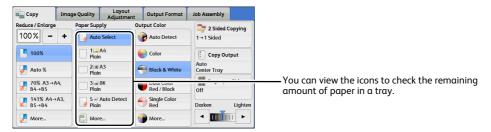

: Indicates that the remaining amount of paper is 25 to 100%.

1

: Indicates that the remaining amount of paper is 25% or less.

100

: Indicates that the tray has run out of paper, or no paper is loaded in the tray.


### [Paper Supply] Screen

This screen allows you to select a paper tray from all trays available on the machine.

### **1** Select a paper tray.

Note

• Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

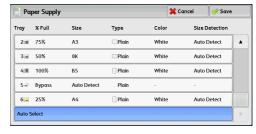

#### ■ Tray

Allows you to select a paper tray. When [Bypass] is selected, the [Tray 5] screen is displayed

where you can specify a paper type other than plain paper, and non-standard size paper.

For more information, refer to "[Tray 5] Screen" (P.123).

Note

• Tray 6 is optional.

### ■ % Full

Displays the remaining amounts of paper loaded in trays.

#### **■** Size

Displays paper sizes.

#### **■** Type

Displays paper types.

#### **■** Color

Displays paper colors.

For information on how to set [Paper Color], refer to "5 Tools" > "Common Service Settings" > "Paper Tray Settings" > "Paper Tray Attributes" in the Administrator Guide.

#### ■ Size Detection

Displays how the machine detects a paper size.

• The fixed paper sizes are set for Tray 3 and Tray 4. To change the paper sizes for Tray 3 and Tray 4, contact our Customer Support Center.

For information on how to set [Size Detection], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

### [Tray 5] Screen

Set the paper loaded in Tray 5.

The [Tray 5] screen appears when you load paper in Tray 5.

For information on paper that can be loaded in Tray 5, refer to "2 Paper and Other Media" > "Paper Types" in the Administrator Guide.

### ■ Paper Type & Paper Weight

Select a paper type and paper weight.

### ■ Adjust Paper Curl

For information on [Adjust Paper Curl], refer to "2 Paper and Other Media" > "Changing Paper Settings" in the Administrator Guide.

### ■ Alignment Adjustment

For information on [Alignment Adjustment], refer to "2 Paper and Other Media" > "Changing Paper Settings" in the Administrator Guide.


#### ■ Adjust Fold Position

For information on [Adjust Fold Position], refer to "2 Paper and Other Media" > "Changing Paper Settings" in the Administrator Guide.

### Select a paper size and a paper type.

Note

- Select [▲] to return to the previous screen or  $[ lackbox{ } lackbox{ } lackbox{ } ]$  to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- [Auto Detect] is available only when standard sized paper is loaded.

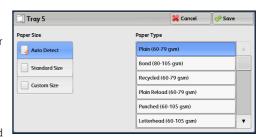

### ■ Paper Size

Select from [Auto Detect], [Standard Size], and [Custom Size].

When you select [Auto Detect], the paper size is identified automatically.

When you select [Standard Size] or [Custom Size], refer to "When [Standard Size] is Selected" (P.123) or "When [Custom Size] is Selected" (P.124), respectively.

### ■ Paper Type

Select a paper type.


### When [Standard Size] is Selected

Select [Standard Size], and from the lists displayed, select a paper size and then a paper type.

**1** Select a paper size and a paper type.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

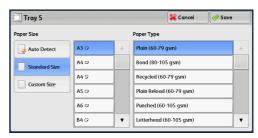


### When [Custom Size] is Selected

Enter the width and length of the original document on the fields displayed after selecting [Custom Size].

Specify the X (width) in the range from 98 to 483 mm, and the Y (length) in the range from 89 to 320 mm in 1 mm increments.

**Important** • If the X (width) of non-standard size paper is less than 140 mm, documents may not be copied properly.

- When copying on both sides of non-standard size paper, specify the size in the range from 140 to 483 mm for the X (width) direction and from 128 to 320 mm for the Y (length) direction.
- 1 Enter a paper size using [+] and [-] or the numeric keypad.

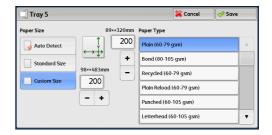

### 2 Select a paper type.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

# **Output Color (Selecting the Color for Copying)**

This feature allows you to select copy colors.

Note

- If the use of certain colors is not allowed, the available colors will be restricted. For more information, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" > "Service Access" in the Administrator Guide.
- Select a color mode.

#### ■ Auto Detect

The machine automatically determines the colors of the original document and makes copies in full color if the original document is colored, and in single color (black) if the document is black-and-white.



Note

- If a color document is in one of the following conditions, the machine may copy the document in black and white.
  - The colored area is too small.
  - The colors are too light.

In that case, change a level from the five levels which is used for the machine to recognize color.

For more information, refer to "5 Tools" > "Common Service Settings" > "Image Quality Adjustment" > "Image Quality" > "Output Color Recognition" in the Administrator Guide.

#### **■** Color

Copies in full color.

#### ■ Black & White

Copies in black and white regardless of the colors in the original document.

### ■ Dual Color Red/Black

Copies color documents using two colors.

You can change the two colors. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Defaults" > "Dual Color - Target Area Color" and "Dual Color - Non-target Area Color" in the Administrator Guide.

### ■ Single Color Red

Copies color documents using one color.

You can change the red color to another one on the screen displayed after selecting [More] > [Single Color] > [Color]. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Defaults" > "Single Color" in the Administrator Guide.

#### **■** More

Displays the [Output Color] screen.

For more information, refer to "[Output Color] Screen" (P.125).

### [Output Color] Screen

This screen allows you to make settings for full color, dual color, and single color.

### **1** Select [More].



**2** Select the desired output color mode.

#### ■ Auto Detect

Automatically determines the color of the original document and makes copies in full color if the original document is colored, or in single color (black) if the document is black-and-white.



### ■ Color

Copies in full color using all the four colors of toner: yellow, magenta, cyan, and black.

#### ■ Black & White

Copies in black and white regardless of the colors in the original document.

### ■ Dual Color

Separates the colors of your document into the source colors and the other colors, and then copies the document using two colors. Selecting [Dual Color] allows you to set the following:

#### Source Color

Displays the [Source Color] screen on which you can select one or more colors from your document to define them as source colors.

Refer to "[Source Color] Screen" (P.126).

Target Area Color

Displays the [Target Area Color] screen on which you can select the target color to be used in place of the selected source colors.

Refer to "[Target Area Color] Screen" (P.127).

Non-target Area Color

Displays the [Non-target Area Color] screen on which you can select the color to be used in place of the colors other than the selected source colors.

Refer to "[Non-target Area Color] Screen" (P.127).

### ■ Single Color

Copies in one specified color regardless of the color of the document.


Selecting this option displays [Color] on the screen. Select a color on the [Output Color - Color] screen which is displayed after selecting [Color].

Refer to "[Output Color - Color] Screen" (P.128).

### [Source Color] Screen

This screen allows you to select one or more colors from your document to define them as source colors.

**1** Select [Dual Color].

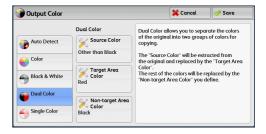

**2** Select [Source Color].



**3** Select [Other than Black] or [Color].

#### ■ Other than Black

The colors other than black will be the source colors.

#### **■** Color

Allows you to select one or more source colors from six preset options.



### [Target Area Color] Screen


This screen allows you to select the target color to be used in place of the source colors specified in [Source Color]. You can select one color from seven preset and six custom options.

For information on how to set custom colors, refer to "5 Tools" > "Copy Service Settings" > "Custom Colors" in the Administrator Guide.

**1** Select [Dual Color].



**2** Select [Target Area Color].

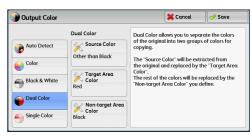

**3** Select any color.



### [Non-target Area Color] Screen


This screen allows you to select the color to be used in place of the colors other than the selected source colors. You can select one color from seven preset and six custom options.

For information on how to set custom colors, refer to "5 Tools" > "Copy Service Settings" > "Custom Colors" in the Administrator Guide.

**1** Select [Dual Color].



**2** Select [Non-target Area Color].

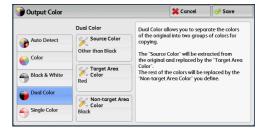

**3** Select any color.




### [Output Color - Color] Screen

This screen allows you to specify the color to be used for single-color copying regardless of the colors in the original document.


You can select one color from six preset and six custom options for [Single Color].

For information on how to set custom colors, refer to "5 Tools" > "Copy Service Settings" > "Custom Colors" in the Administrator Guide.


**1** Select [Single Color].

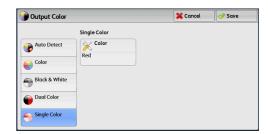

2 Select [Color].

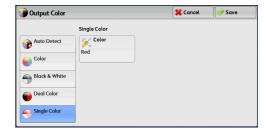

**3** Select any color.

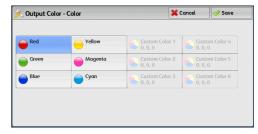

# 2 Sided Copying (Making 2 Sided Copies)

This feature is the same as [2 Sided Copying] on the [Layout Adjustment] screen. For more information, refer to "2 Sided Copying (Making 2 Sided Copies)" (P.136).

# **Copy Output (Specifying Finishing Options)**

This feature is the same as [Copy Output] on the [Output Format] screen.

For more information, refer to "Copy Output (Specifying Finishing Options)" (P.170).

# Pages per Side (Copying Multiple Pages onto One Sheet)

This feature is the same as [Pages per Side] on the [Output Format] screen.

For more information, refer to "Pages per Side (Copying Multiple Pages onto One Sheet)" (P.154).

# Lighten/Darken (Adjusting the Copy Density)

This feature allows you to select a copy-density level from seven levels.

Note • [Lighten/Darken] on the [Copy], [Image Quality] and [Simple Copy] screens is the same.

1 Use [◄] and [▶] to select from seven density levels.



# **Image Quality**

The section describes the features you can select on the [Image Quality] screen. The following shows the reference section for each feature.

Original Type (Selecting the Document Type)	130
Image Options (Adjusting Copy Density/Sharpness/Saturation of Images)	131
Image Enhancement (Erasing the Background Color of Documents/Adjusting Contrast)	132
Color Effects (Selecting an Image Quality)	133
Color Balance (Adjusting Color Balance)	134
Color Shift (Adjusting the Color Tone)	135

**1** Select [Copy] on the Services Home screen.



**2** Select a feature on the [Image Quality] screen.

Note


• If the color reproduction is unsatisfactory, perform calibration. For information on calibration, refer to "3 Maintenance" > "Executing Calibration" in the Administrator Guide



# Original Type (Selecting the Document Type)

This feature allows you to select the type of documents, such as text and photos. By selecting a document type, you can make copies at optimum image quality.

**1** Select [Original Type].

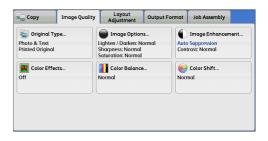

**2** Select any option.

### ■ Auto

Automatically sets the document type based on the setting made in the System Administration mode and the setting made in [Output Color] on the [Copy] screen.



### ■ Photo & Text

Select this option when the document contains both text and photos. The machine automatically distinguishes the text and photo areas of the document and sets the

appropriate image quality for each area. To process photo areas, select the photo type from [Printed Original], [Photograph], and [Photocopied Original].

· Printed Original

Select this option when the document contains printed photos, such as a brochure.

Photograph

Select this option when the document contains pasted photos. This option prevents the copy from being reproduced bluish.

• Photocopied Original

Select this option when the document is a copy or print made with a color copying machine such as this machine. This option prevents the copy from being reproduced faintly.

### **■** Text

Select this option to copy text areas of the document sharply. This option is suitable for graphs and illustrations.

Normal Text

Select this option for printed documents, or for documents written with ink.

· Light Text

Select this option for text that requires enhancement, such as handwritten pencil text.

• Text on See-Through Paper

Select this option to reduce blurs of tracing-paper documents or to suppress background shadows of lightweight documents.

[Text on See-Through Paper] may not be displayed depending on the setting in the System Administration mode. For information on how to display [Text on See-Through Paper], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Original Type See-Through Paper" in the Administrator Guide.

### **■** Photo

Select this option to make copies of photos. Select the photo type from the same options as [Photo & Text]: [Printed Original], [Photograph], and [Photocopied Original].

#### ■ Map

Select this option to make copies of documents that have text placed on color backgrounds, such as maps.

# Image Options (Adjusting Copy Density/Sharpness/Saturation of Images)

This feature allows you to adjust the copy density, sharpness, and saturation levels.

Note

- [Lighten/Darken] under [Image Options] is the same as [Lighten/Darken] on the [Copy] screen.
- If [Lighten/Darken], [Sharpness], or [Saturation] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.
- **1** Select [Image Options].



### **2** Adjust options.

### ■ Lighten/Darken

Allows you to select from seven copy density levels between [Lighten] and [Darken].

Selecting an upper cell on the bar makes the copy density lighter, and selecting a lower cell makes darker.



#### ■ Sharpness

Allows you to select from five sharpness levels between [Sharpen] and [Soften].

Selecting an upper cell on the bar makes the contours of images sharper, and selecting a lower cell makes softer.

#### ■ Saturation

Allows you to select from five saturation levels between [Vivid] and [Pastel].

Selecting an upper cell on the bar makes colors brighter, and selecting a lower cell makes less bright.

### **Image Enhancement**

## (Erasing the Background Color of Documents/Adjusting Contrast)

This feature allows you to suppress the background color of documents, such as newspaper and colored paper. You can also adjust the contrast.

Note

- [Image Enhancement] is not available when [Original Type] is set to [Photo].
- If [Suppress Background] or [Contrast] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.

**■** Image Enhancement

Select [Image Enhancement].




**2** Set [Suppress Background] and [Contrast].

### ■ Suppress Background

Scans document backgrounds with no filtering.

Auto Suppression

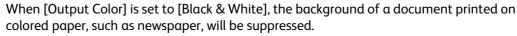

When [Output Color] is set to [Color], [Dual Color], or [Single Color], the color element on white-color paper such as the blot, the print on the other side which is seen through will be suppressed.

Note

• When [Output Color] is set to [Color], you can change the level of background suppression. For more information, refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Background Suppression (Photo & Text)" and "Background Suppression Level (Text)" in the Administrator Guide.

#### **■** Contrast

Auto Contrast

Automatically adjusts the brightness and hue of the original document to sharpen the

Note • [Auto Contrast] is not available when you use the document feeder.

Manual Contrast

Allows you to select from the five levels between [More] and [Less].

Selecting an upper cell on the bar makes the difference between light and dark areas greater; light areas become lighter and dark areas darker. In contrast, selecting a lower cell on the bar makes the difference between light and dark areas smaller.

### Color Effects (Selecting an Image Quality)

If you set this feature, the [Image Enhancement], [Image Options], [Color Shift], and [Color Balance] settings are automatically adjusted and copies are made at the specified quality.

**Important** • When the Color Effects feature is used, [Auto Contrast] is not available.

Note

• If other image-quality settings are made after you set [Color Effects], the setting made in [Color Effects] will be cleared.

Color Effects

**₩** Warm

**M** Cool

Shadow Suppression

M Off

**Eively** 

💥 Bright

### Select [Color Effects].



X Cancel Save

The image quality related affected feature

are: Sharpness, Saturation, Color Shift, Color Balance, Lighten / Darken, Background Suppression, and Contrast

### Select any option.

#### ■ Off

Copies with the [Image Enhancement], [Image Options], [Color Shift], and [Color Balance] settings at their defaults.

### **■** Lively

Reproduces fresher, livelier images with increased color saturation.

#### ■ Bright

Reproduces brighter images with enhanced contrast. This option is suitable for documents that are intended to attract people's attention, such as posters.

### ■ Warm

Reproduces brighter, warmer, more reddish images. This option is suitable when skin tones are to be reproduced more pinkish or when subdued images are to be reproduced more warmly.

#### ■ Cool

Reproduces clearer blue colors. This option is suitable for water and sky images, and is also suitable when smoky blue colors are to be reproduced more clearly.

### ■ Shadow Suppression

Suppresses the colors on the reverse side of the original document from being reproduced in the copy.

### Color Balance (Adjusting Color Balance)


This feature allows you to adjust the color balance of the four CMYK toner colors (cyan, magenta, yellow and black). You can select from seven levels for each density level: Highlights, Midtones, and Shadows.

The Color Balance feature finely adjusts the density level for each toner color to fine-tune the color balance, such as a reddish or bluish tint, while the Lighten/Darken feature adjusts the overall density level of four colors.

Note

• If [Color Balance] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.

### Select [Color Balance].

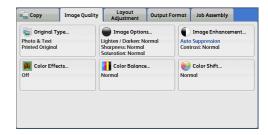

### 2 Select any option.


#### ■ Normal

Always copies a document with the density balance set to "0" for the four toner colors: yellow, magenta, cyan, and black.

### ■ Basic Color


Allows you to adjust the density level for each toner color: yellow, magenta, cyan, and black.



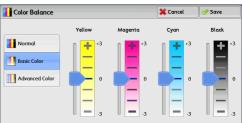

#### ■ Advanced Color

Allows you to adjust the density level for each toner color (yellow, magenta, cyan, black) which is divided to [Highlights], [Midtones], and [Shadows].

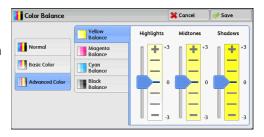

### **■** Highlights

Allows you to adjust the color strength of low-density areas.

#### Example

If low-density yellow is printed darker, adjust the color strength in the minus (-) direction under [Yellow Balance] > [Highlights].

#### **■** Midtones

Allows you to adjust the color strength of medium-density areas.

Example:

If medium-density yellow is printed lighter, adjust the color strength in the plus (+) direction under [Yellow Balance] > [Midtones].

#### ■ Shadows

Allows you to adjust the color strength of high-density areas.

Example:

If high-density yellow is printed lighter, adjust the color strength in the plus (+) direction under [Yellow Balance] > [Shadows].

### **Color Shift (Adjusting the Color Tone)**

This feature allows you to adjust the tone of the colors to be reproduced in copies, by a maximum of two levels in two directions.


On the screen, the [Original Color] slider represents the color tone of the original document, and the [Copy Color] slider represents the color tone of output copies. Selecting a button on the screen moves the [Original Color] slider to adjust the tone of the colors.

When the [Original Color] slider is moved to the left, the Y (yellow) cell on the [Original Color] slider becomes closer to the R (red) cell on the [Copy Color] slider, and thus a yellow fruit appears more reddish and riper-looking. At the same time, the tone of all the other colors changes. The red color appears more magentish, and the green color appears more yellowish.


Conversely, when the [Original Color] slider is moved to the right, the Y (yellow) cell on the [Original Color] slider becomes closer to the G (green) cell on the [Copy Color] slider, and thus a yellow fruit appears more greenish. At the same time, the tone of all the other colors changes. The magenta color appears more reddish, and the red color appears more yellowish.

Note

- Ensure that [Output Color] is set to [Color] on the [Copy] screen. [Color Shift] is not available when [Output Color] is set to [Black & White].
- If [Color Shift] is set concurrently with [Color Effects], the setting made in [Color Effects] will be cleared.
- **1** Select [Color Shift].

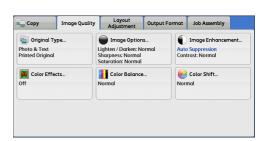

**2** Select a button to adjust the color tone.

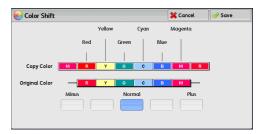

# Layout Adjustment

This section describes the features you can select on the [Layout Adjustment] screen. The following shows the reference section for each feature.

2 Sided Copying (Making 2 Sided Copies)	.136
Book Copying (Copying Facing Pages onto Separate Sheets)	138
2 Sided Book Copying (Making 2 Sided Copies of Facing Pages)	.139
Original Size (Specifying the Scan Size for the Document)	140
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	141
Edge Erase (Erasing Edges and Margin Shadows of the Document)	142
mage Shift (Adjusting the Image Position)	144
invert Image (Making Reversed Copies of Images)	146
Original Orientation (Specifying the Orientation of Loaded Documents)	.147
mage Rotation (Changing the Orientation of Images)	.147

**1** Select [Copy] on the Services Home screen.



**2** Select a feature on the [Layout Adjustment] screen.

Note

Select [▲] to return to the previous screen or
 [▼] to move to the next screen.

• Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).





# 2 Sided Copying (Making 2 Sided Copies)

This feature allows you to make copies of 1-sided and 2-sided documents on one side or both sides of paper.

Cancel Save

Head to Toe

Upright Image

Sideways Images

### **1** Select [2 Sided Copying].



7 2 Sided Copying

P 2→1 Sided

### 2 Select any option.

#### **■** 1 → 1 Sided

Makes a copy of a 1-sided document on one side of paper.

### **■** 1 → 2 Sided

Makes a copy of a 1-sided document on both sides of paper.

Select this option when you copy 1-sided documents on both sides of paper.

#### **■** 2 → 2 Sided

Makes a copy of a 2-sided document on both sides of paper.

#### ■ 2 → 1 Sided

Makes a copy of a 2-sided document on one side of paper.

### ■ Originals

This option is displayed when you select  $[2 \rightarrow 2 \text{ Sided}]$  or  $[2 \rightarrow 1 \text{ Sided}]$ .

· Head to Head

Select this option when the front and back sides of the document are in the same orientation.

· Head to Toe

Select this option when the front and back sides of the document are in opposite orientations.

### **■** Copies

This option is displayed when you select  $[1 \rightarrow 2 \text{ Sided}]$  or  $[2 \rightarrow 2 \text{ Sided}]$ .

· Head to Head

Select this option when you want the orientation of the front and back sides of the copy to be the same as that of the document.

· Head to Toe

Select this option when you want the orientation of the front and back sides of the copy to be the opposite of that of the document.

#### ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

### · Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

### · Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).


### **Book Copying (Copying Facing Pages onto Separate Sheets)**

This feature allows you to copy facing pages of a document on separate sheets of paper in page order.

This is useful when you need to make separate copies of facing pages of a bound document such as a booklet.

Note

- You cannot use the document feeder with this feature.
- A non-standard size document or undetectable-size document may not be separated into two accurately.
- Select [Book Copying].

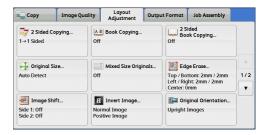

### **2** Select any option.


#### ■ Off

Does not copy as a bound document.




### ■ Left Page then Right

Copies the left page and then the right page of facing pages.

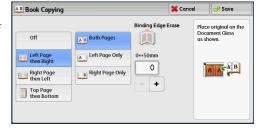

### ■ Right Page then Left

Copies the right page and then the left page of facing pages.

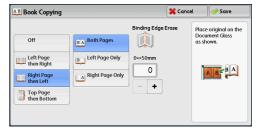

### ■ Top Page then Bottom

Copies the top page and then the bottom page of facing pages.



### ■ Both Pages

Copies both pages in page order.

### ■ Left Page Only

Copies the left page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

### ■ Right Page Only

Copies the right page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

### ■ Top Page Only

Copies the top page only. You can select this option when [Top Page then Bottom] is selected.

### ■ Bottom Page Only

Copies the bottom page only. You can select this option when [Top Page then Bottom] is selected.

### ■ Binding Edge Erase

Erases the shadow from the center section of the document. You can set the binding erase width in the range from 0 to 50 mm in 1 mm increments.

# 2 Sided Book Copying (Making 2 Sided Copies of Facing Pages)

This feature allows you to assign pages when making copies of facing pages in a bound document such as a booklet so that pages face each other in the same way as the document. You can also specify the starting and ending pages from the left and right of facing pages.

Note

- A non-standard size document or undetectable-size document may not be separated into two accurately.
- Use the document glass to load a document.
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

### **1** Select [2 Sided Book Copying].



**2** Select any option.

#### ■ Off

Disables this feature.

### ■ Left Page then Right

Scans the left page and then the right page of facing pages, to make 2-sided copies.

### ■ Right Page then Left

Scans the right page and then the left page of facing pages, to make 2-sided copies.

#### ■ Top Page then Bottom

Scans the top page and then the bottom page of facing pages, to make 2-sided copies.

### ■ Starting & Ending Page

Displays the [Starting & Ending Page] screen. Refer to "[Starting & Ending Page] Screen" (P.140).

### ■ Binding Edge Erase

Erases the shadow from the center section of the document. You can set the binding erase width in the range from 0 to 50 mm in 1 mm increments.

Starting Page

Left Page

Right Page

Ending Page

Left Page

Right Pag

B A A B

### [Starting & Ending Page] Screen

This screen allows you to set the starting and ending pages to be copied.

**1** Set [Starting Page] and [Ending Page].

### ■ Starting Page

• [Left Page] / [Right Page]

You can select these options when [Left Page then Right] or [Right Page then Left] is selected.

• [Top Page] / [Bottom Page]

You can select these options when [Top Page then Bottom] is selected.

### ■ Ending Page

• [Left Page] / [Right Page]

You can select these options when [Left Page then Right] or [Right Page then Left] is selected.

• [Top Page] / [Bottom Page]

You can select these options when [Top Page then Bottom] is selected.

# Original Size (Specifying the Scan Size for the Document)

This feature allows you to specify the scan size for a document.

Use this feature when a document is a non-standard size, or when you want to copy a document at a size different from the original size. You can also add margins, or delete unnecessary margins using this feature.



### **1** Select [Original Size].



2 Select the size of the document.
If you select a non-standard size, specify values for the X and Y directions.



#### **■** Auto Detect

Detects the document size automatically. The following table shows the document sizes that can be detected automatically.

Document Feeder	Document Glass
B5, B5①, B4, A5, A5①, A4, A4①, A3, 8.5 x 11", 8.5 x 11"①, 11 x 17", 16K①, 8K	B6, B5, B5□, B4, A6, A5, A5□, A4, A4□, A3

Note

• If the document size cannot be detected automatically, a screen to enter the document size appears.

The document sizes that can be automatically detected depend on [Paper Size Settings] in the System Administration mode. For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

#### ■ Standard Size

Select a document size from preset options.

You can change the sizes displayed on the screen. For information on the settings, refer to "5 Tools" > "Copy Service Settings" > "Original Size Defaults" in the Administrator Guide.

#### ■ Variable Size

Enter the desired scan size when scanning a non-standard size document or when making copies at a size different from the original document size. You can specify a value in the range from 15 to 432 mm for the width (X), and a value in the range from 15 to 297 mm for the length (Y), in 1 mm increments. To help you specify values, use the scales attached on the upper and left edges of the document glass.

**Important** • When the document is loaded in the document feeder, the base point in the Y (length) direction is the center of the edge. If you specify 100 mm, the scan length will be from 50 mm above to 50 mm below the center of the document.

# Mixed Size Originals (Scanning Different Size Documents Simultaneously)

You can scan documents of various sizes simultaneously and make copies of the corresponding sizes or of one selected size. To use this feature, load the documents in the document feeder.

Important • Load documents in landscape orientation. However, always load A5 documents in portrait

- When loading B5 documents together with A3 documents loaded in landscape orientation or A4 documents loaded in portrait orientation, load B5 documents in portrait orientation.
- If the top left corners of the documents are not aligned properly, the documents may not be scanned correctly.
- The recommended document size combinations are A4 portrait and A3 landscape, or B5 portrait and B4 landscape. If another combination of document sizes is used, the documents can be fed at an angle and may not be copied properly.


Mixed Size Original

💥 off

Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

### Select [Mixed Size Originals].

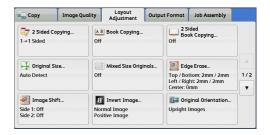

shown. just the Guides to just touch the gest size paper.

Load 5.5 x 8.5" and A5 originals in portra

Original Orientation

Sideways Images

← Upright Images

### Select [On].

#### ■ Off

Select this option when copying documents of the same size.

#### ■ On

When documents of different sizes are copied. the machine automatically detects the size of each document.

### ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

- The [Original Orientation] setting is based on the orientation of the first page of a document. Load the second and subsequent pages of the document based on this setting.
- If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

### Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

# Edge Erase (Erasing Edges and Margin Shadows of the Document)

When you copy a document with the document cover open or when you copy a book, the edges and center margin of the document may be printed as black shadows. The Edge Erase feature allows you to erase such shadows.

Note

- For 2-sided originals, the same edge erase amounts are set for the front and back sides.
- If you set [Reduce/Enlarge], the edge erase amounts will be reduced or enlarged in proportion to the ratio you specified.

🞇 Cancel 🥜 Save Original Orientation

M Upright Images

Sideways Images

Mirror Side 1

đ

Ω

- The binding shift specified in [Booklet Creation] will not affect the edge erase amounts.
- If the original document is placed on the document glass and  $[1 \rightarrow 2 \text{ Sided}]$  is selected when using 2 Sided Copying feature, symmetrical edge erase amounts on both sides are not applied to output even if [Individual Edges] is specified and [Mirror Side 1] is selected as [2 Sided Original - Side 2] option. To apply symmetrical edge erase amounts on both sides, select  $[2\rightarrow 2 \text{ Sided}]$  for 2 Sided Copying operation.

Edge Erase

**⚠** Normal

♣ All Edges

4

2

2

+

Even when the edge erase amount is set to 0 mm, full page copying cannot be made. For information on the areas that can actually be printed, refer to "16 Appendix" > "Printable Area" in the Administrator Guide.

### Select [Edge Erase].



☎

2

2

### Select any option.

#### ■ Normal

The edge width to erase is set to 2 mm for the top and bottom, and left and right edges.

### ■ All Edges

Erases the shadows of the four edges of a document, as well as the shadow in the center of the document if it is a bound document or a booklet. You can specify values for [All Edges] and [Center] individually.

### ■ Individual Edges

Erases the shadows of the top, bottom, left, and right edges of a document, as well as the shadow in the center of the document if it is a bound document or a booklet. You can specify values for [Top], [Bottom], [Left], [Right], and [Center] individually.

### ■ Parallel Edges

Erases the shadows of the top and bottom edges, and left and right edges of a document, as well as the shadow in the center of the document if it is a bound document or a booklet. You can specify values for [Top & Bottom], [Left & Right], and [Center] individually.

#### **■** Erase Value

Allows you to specify values to erase the edges of a document.

All Edges

Erases the shadows of the four edges of the document according to the orientation of the loaded document. You can specify the edge width you want to erase in the range from 0 to 50 mm in 1 mm increments.

Top & Bottom (Top/Bottom)

Erases the shadows of top and bottom edges of the document according to the orientation of the loaded document. You can specify the edge width you want to erase in the range from 0 to 50 mm in 1 mm increments.

Left & Right (Left/Right)

Erases the shadows of left and right edges of the document according to the orientation of the loaded document. You can specify the edge width you want to erase in the range from 0 to 50 mm in 1 mm increments.

#### Center

Erases the shadow in the center of facing pages of a bound document or a booklet. You can set the binding erase width in the range from 0 to 50 mm in 1mm increments.

### ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

### · Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

### ■ 2 Sided Original - Side 2

You can select this option when [Individual Edges] is selected. Set whether the same value is set to the edge erase amount of Side 1 and Side 2.

Same as Side 1

The same value is set to the edge erase amount of Side 1 and Side 2.

Mirror Side 1

The edge erase amounts of Side 1 and Side 2 are set symmetrically.

# Image Shift (Adjusting the Image Position)

This feature allows you to shift the position of document images so that the images are placed on the left, right, top, bottom, or center of paper. You can also adjust the amounts of the left, right, top, and bottom margins. If you make 2-sided copies, you can adjust the image positions for Side 1 and Side 2 individually.

Note

• The image shift amount is set in accordance with the paper, and does not affect the setting made in [Reduce/Enlarge].

### **1** Select [Image Shift].



### **2** Select any option.

#### ■ Off

Does not shift the position of document images.

### ■ Auto Center

Shifts document images so that they are placed in the center of paper.



#### ■ Margin Shift

Allows you to specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

Side 1

Displays the [Image Shift - Side 1] screen.

Refer to "[Image Shift - Side 1] Screen" (P.145).

• Side 2

Displays the [Image Shift - Side 2] screen.

Refer to "[Image Shift - Side 2] Screen" (P.146).

Mirror Side 1

Select this check box when you want the positioning of Side 2 to match the positioning of Side 1.

## ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

#### · Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

· Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

## [Image Shift - Side 1] Screen

This screen allows you to set the image shift for Side 1.

**1** Select any option.

#### ■ Off

Does not shift the position of document image.

## ■ Auto Center

Shifts document images so that they are placed in the center of paper.

Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

## **■** Corner Shift

Shifts document images so that they are placed at an edge or corner of paper. You can select from 8 shift directions.

Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

## ■ Margin Shift

Allows you to specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.



# [Image Shift - Side 2] Screen

This screen allows you to set the image shift for Side 2.

## **1** Select any option.

#### ■ Off

Does not shift the position of document image.

#### ■ Auto Center

Shifts document images so that they are placed in the center of paper.

Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

2 Image Shift - Side 2

0

**^** 

0

- +

Off

Auto Cente

Margin Shift

#### **■** Corner Shift

Shifts document images so that they are placed at an edge or corner of paper. You can select from 8 shift directions.

Specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

## ■ Margin Shift

Allows you to specify the amounts of the top and bottom, and left and right margins in the range from 0 to 50 mm in 1 mm increments.

# **Invert Image (Making Reversed Copies of Images)**

This feature allows you to reverse the left and right sides of the document image or to create a negative image of the document when making copies.

Note

- When [Output Color] is set to [Black & White] or [Single Color], the black color on the document is inverted to white, and the white color to black.
- When [Output Color] is set to [Color], the colors are inverted to their complementary colors.
- $\bullet \ When \ [Negative \ Image] \ and \ [Edge \ Erase] \ are set \ simultaneously, the \ edge \ erase \ area \ turns \ to \ white.$

## **1** Select [Invert Image].



#### 2 Select any option.

#### ■ Mirror Image

Reverses the left and right sides of the document image.

## ■ Negative Image

Creates a negative image of the document.



# Original Orientation (Specifying the Orientation of Loaded Documents)

This feature allows you to specify the orientation of a document so that the machine can identify the top of the document.

Note

- If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.
- **1** Select [Original Orientation].



2 Select [Upright Images] or [Sideways Images] according to the orientation of the document loaded.

## ■ Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.



## ■ Sideway Images


Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

# Image Rotation (Changing the Orientation of Images)

If the orientation of the paper currently loaded in the tray differs from that of the document loaded, the machine automatically rotates the document image so that the orientation of the image matches that of the paper. You can also select a reference position for image rotation if documents are of mixed orientations.

This feature is available only when you make copies on A4, 8.5 x 11", or smaller size paper.

**1** Select [Image Rotation].

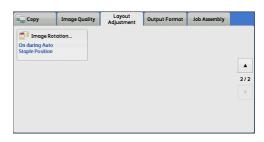


2 Select any option.

#### ■ Off

Copies documents as they are, even if the orientation of the images does not match that of the paper.

#### ■ Always On

Automatically rotates document images so that the orientation of the images matches that of the paper.

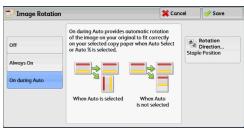

## ■ On during Auto

Automatically rotates document images so that the orientation of the images matches that of the paper only when [Auto %] is selected in [Reduce/Enlarge], or when [Auto Select] is selected in [Paper Supply].

#### ■ Rotation Direction

Displays the [Image Rotation - Rotation Direction] screen.

Refer to "[Image Rotation - Rotation Direction] Screen" (P.148).

## [Image Rotation - Rotation Direction] Screen

This screen allows you to set the reference position for rotation.

## **1** Select any option.

# ■ Staple Position

This option is displayed when the finisher is installed. If documents are of mixed orientations, the images will be rotated to match the stapling edge specified in the settings of the Staple feature.



## ■ Portrait Original - Left Edge

If documents are of mixed orientations, the images will be rotated so that the top edge of landscape documents is aligned with the left edge of portrait documents.

## ■ Portrait Original - Right Edge

If documents are of mixed orientations, the images will be rotated so that the top edge of landscape documents is aligned with the right edge of portrait documents.

# **Output Format**

This section describes the features you can select on the [Output Format] screen. The following shows the reference section for each feature.

2 Sided Copying (Making 2 Sided Copies)	149
Booklet Creation (Creating a Bound Booklet)	150
Covers (Attaching Covers to Copies)	153
Pages per Side (Copying Multiple Pages onto One Sheet)	154
Poster (Making Enlarged Copies Spread over Multiple Sheets)	155
Repeat Image (Making Multiple Copies on One Sheet)	156
Annotations (Adding a Comment/a Date/Page Numbers to Copies)	157
Watermark (Printing Control Numbers on the Background of Copies)	162
Secure Watermark (Managing Document Security)	165
Folding (Outputting Bi-Folded/Tri-Folded Paper)	167
Preset Repeat Image (Making Multiple Copies on a Single Sheet)	168
Transparency Options (Inserting Blank Sheets between Transparencies)	169
Copy Output (Specifying Finishing Options)	170
ID Card Copy (Copying Both Sides of an ID Card)	175

**1** Select [Copy] on the Services Home screen.




**2** Select a feature on the [Output Format] screen.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).



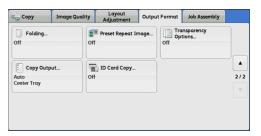

# 2 Sided Copying (Making 2 Sided Copies)

This feature is the same as [2 Sided Copying] on the [Layout Adjustment] screen. For more information, refer to "2 Sided Copying (Making 2 Sided Copies)" (P.136).

# Booklet Creation (Creating a Bound Booklet)

This feature lays out pages so that booklets are formed when the output sheets are folded in half. You can also set the binding shift and attach a cover when making booklets.


When the Booklet Maker Unit for Finisher-B1 (optional) is installed, you can also crease the output sheets in half, or staple the creased output sheets.

When the C3 Finisher with Booklet Maker (optional) is installed, you can also fold the output sheets in half, or staple the folded output sheets.


- Important Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.
  - When the Finisher-B1 is installed, do not remove outputs from the finisher tray until all the output sheets have been delivered.

Note

- The machine copies four pages of the document onto one sheet of paper. If the number of pages in the booklet is not a multiple of four, the remaining pages will be output as blank pages.
- If [Auto Select] is selected in [Paper Supply], a tray specified in [Auto Paper Off] is automatically selected. Change the setting if necessary. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" in the Administrator Guide.
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.
- Specify the orientation of the document in [Original Orientation] on the [Layout Adjustment] screen.

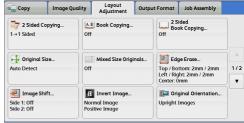

Select [Booklet Creation] on the [Output Format] screen.

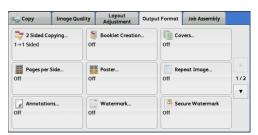

- Select any option.

Disables this feature.

## ■ Create Left/Top Bound Booklet

Copies are made to enable left binding or top binding.


#### ■ Create Right Bound Booklet


Copies are made to enable right binding.

#### **■** Copy Booklet

You can output the copies of scanned documents as they are by specifying [Fold & Staple]. Select this option when you do not need a document to be copied in booklet page order.

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

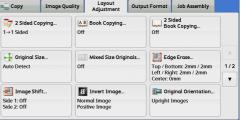

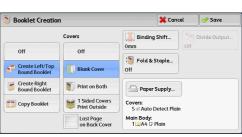

#### **■** Covers

You can attach covers to a booklet.

• Off

No cover is attached.

Blank Cover

A blank sheet of paper is attached as the cover.

Print on Both

The first and second pages of the document are copied on both sides of the cover.

• 1 Sided Covers Print Outside

The first and the last pages of the document is copied on the front side of the cover.

Last Page on Back Cover

Select this check box to copy the image of the last document page onto the last page of the copy sheets as a back cover. When you use [Divide Output] to divide a booklet into subsets, the image of the last document page will be copied onto the last page of the last subset.

Note

• Depending on the number of pages in the original document, a blank page may be inserted before the last page of a booklet.

#### **■** Binding Shift

Displays the [Booklet Creation - Binding Shift] screen.

Refer to "[Booklet Creation - Binding Shift] Screen" (P.151).

## **■** Divide Output

Displays the [Booklet Creation - Divide Output] screen.

Refer to "[Booklet Creation - Divide Output] Screen" (P.152).

#### ■ Fold & Staple

Displays the [Booklet Creation - Fold & Staple] screen.

Refer to "[Booklet Creation - Fold & Staple] Screen" (P.152).

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

#### ■ Paper Supply

Displays the [Booklet Creation - Paper Supply] screen.


Select the tray to be used for body pages from [Main Body Tray], and the tray for cover pages from [Cover Tray]. Select the same size of paper for [Main Body Tray] and [Cover Tray], and also select the trays with paper loaded in landscape orientation  $(\Box)$ .

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

## [Booklet Creation - Binding Shift] Screen

This screen allows you to specify the binding shift value in the range from 0 to 50 mm in 1 mm increments.

1 Use [+] and [-] or the numeric keypad to specify a binding shift value.

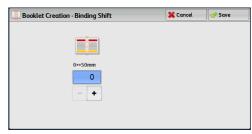


## [Booklet Creation - Divide Output] Screen

When you have a large number of originals, the originals are divided to create subsets to reduce the thickness of each booklet. The machine folds copies in half, and piles them up to form a booklet.

You can specify the number of sheets in the range from 1 to 50 in 1 sheet increments.

• When you specify the stapling feature, specify the dividing number of sheets in the range from 1 to 15.

**1** Select [On].

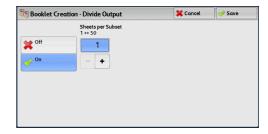

**2** Specify the number of sheets per subset using [+] and [-] or the numeric keypad.

#### [Booklet Creation - Fold & Staple] Screen

When the Booklet Maker Unit for Finisher-B1 (optional) is installed, [Fold Only] and [Fold & Staple] become available.

When the C3 Finisher with Booklet Maker (optional) is installed, [Fold Only] and [Fold & Staple] become available.


**1** Select any option.

## ■ Off

No finishing is carried out.

#### **■** Fold Only

This option is displayed when the Booklet Maker Unit for Finisher-B1 (optional) or the C3 Finisher with Booklet Maker (optional) is installed.

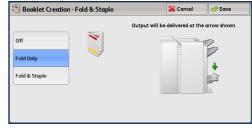

The copies are folded in half. The number of copies that can be folded is up to 5 (when 90 gsm paper is used). When the number is more than 5, the document is output by every 5 sheets.

#### ■ Fold & Staple

This option is displayed when the Booklet Maker Unit for Finisher-B1 (optional) or the C3 Finisher with Booklet Maker (optional) is installed.

The number of copies that can be folded and stapled is 2 to 16 (when 90 gsm paper is used). For the paper type and the number of sheets that can be stapled using the finisher, refer to "16 Appendix" > "The Paper Type and the Number of Sheets That Can Be Stapled" in the Administrator Guide.


# **Covers (Attaching Covers to Copies)**

This feature allows you to attach covers to copies.

You can use different types of paper (such as colored paper and heavyweight paper) as the front and back covers of copies.

Important • When you select this feature, if the number of pages scanned by the machine exceeds the maximum, the machine will not print the already-scanned data. In that case, follow the instructions of the message displayed on the screen to cancel the job. The maximum number of pages that the machine can scan is 999 pages per job.

**1** Select [Covers].

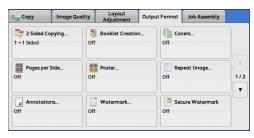

## 2 Select any option.

#### **■** Front Cover

Attaches a front cover to the copies.

Off

No front cover is attached.

Blank Cover

Blank sheets of paper are attached as front covers.

• Print on Side 1

The first page of the document is copied on the front side of the front cover.

• Print on Side 2

The first page of the document is copied on the back side of the front cover.

Print on Both

The first and second pages of the document are copied on the front and back sides of the front cover.

#### ■ Back Cover

Attaches a back cover to the copies.

• Off

No back cover is attached.

Blank Cover

Blank sheets of paper are attached as back covers.

• Print on Side 1

The first page of the document is copied on the front side of the back cover.

• Print on Side 2

The first page of the document is copied on the back side of the back cover.

Print on Both

The first and second pages of the document are copied on the front and back sides of the back cover.



## ■ Paper Supply

Displays the [Covers - Paper Supply] screen.

Select a tray to be used.

Front Cover Tray

Select the tray used for front covers.

· Back Cover Tray

Select the tray used for back covers.

Main Body Tray

Select the tray used for the body pages of the document.

When you use the bypass tray, select [Bypass] on the [Covers - Paper Supply] screen. When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

Note

- If [Covers] is set, [Auto Detect] cannot be selected in [Tray 5].
- If other than [Off] is selected in [Covers], [Auto Detect] cannot be selected in [Tray 5].

## ■ Front Cover Quantity

This option is displayed when you select [Blank Covers] in [Front Cover]. Specify the number of blank sheets to be used as front covers.

## ■ Back Cover Quantity

This option is displayed when you select [Blank Covers] in [Back Cover]. Specify the number of blank sheets to be used as back covers.

# Pages per Side (Copying Multiple Pages onto One Sheet)

This feature allows you to copy two, four, or eight pages of a document together onto a single sheet of paper.

When you set [Pages per Side], [Auto %] is automatically selected in [Reduce/Enlarge]. The machine automatically sets the copy ratio and makes copies of the images so that they fit on the selected paper.

Note

- When you deselect [Auto %] in [Reduce/Enlarge] (when you select another copy ratio), image loss may occur depending on the image size of the document.
- When [Image Shift] is set, the image shift amounts are applied to the whole document. For this reason, image loss may occur depending on the image size of the document.
- When [Edge Erase] is set, the edge erase amounts are applied to each document page.
- Select a tray other than [Auto Select] in [Paper Supply] on the [Copy] screen. If [Auto Select] is selected in [Paper Supply], a tray specified in [Auto Paper Off] is automatically selected. Change the setting as necessary. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Auto Paper Off" in the Administrator Guide.

## 1 Select [Pages per Side].



**⊘** Save Original Orientation

Upright Images

Sideways
Images

💢 Cancel

## **2** Select any option.

Disables this feature.

#### ■ 2 Pages

Copies two document pages onto one side of a single sheet of paper.

## ■ 4 Pages

Copies four document pages onto one side of a single sheet of paper.

#### ■ 8 Pages

Copies eight document pages onto one side of a single sheet of paper.

## ■ Reading Order

Allows you to select how to lay out images on a page.

## ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

🔡 Pages per Side

Off

2 Pages

4 Pages 8 Pages

1 Left->Right / Top->Botton

21 Right→Left

#### Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

## Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

# Poster (Making Enlarged Copies Spread over Multiple Sheets)

An enlarged copy of a document can be made spread over multiple sheets.

This feature allows you to create a large poster by pasting together the copies spread over multiple sheets. Copied sheets are provided with a paste margin so that they can be pasted together. The paste margin is fixed to 10 mm.

Important • Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.

Note • You cannot use the document feeder with this feature.

#### Select [Poster].



Select any option.

#### ■ Off

No enlarged copies are made.

## **■** Output Size

Allows you to select the paper size.

## **■** Enlargement %

Refer to "When [Enlargement %] is Selected" (P.156).

## ■ Paper Supply

Displays the [Paper Supply] screen.

Select the paper tray to be used.

• When you use the bypass tray, select [Bypass] on the [Paper Supply] screen.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

Poster

M Off Output Size

Enlargement %

A0

A1

A2

## When [Enlargement %] is Selected

This screen allows you to specify a different ratio for the width and length.

Use [+] and [-] to specify the copy ratios for the width and length.

## ■ Width - X% / Length- Y%

Allows you to specify the copy ratios for the width and length in the range from 100 to 400% in 1% increments.

#### **X** Cancel Poster Length - Y% 100 ↔ 400% off 100 + Output Size Width - X% 100 ↔ 4009 100 Lock X - Y% +

**⊘** Save

#### ■ Lock X - Y%

Allows you to make the same ratio adjustment for the width and length at the same time.


# Repeat Image (Making Multiple Copies on One Sheet)

This feature allows you to copy a document image on one sheet of paper repeatedly for a specified number of times.

When [Reduce/Enlarge] is set to [Auto %], the repeated copies of the image are reduced to fit on the selected paper. You can also specify how the repeated copies of the image are arranged.

Note

- When making copies at the same size as the document image, the number of repeats is specified so that the copies fit on the paper.
- If [Auto Select] is selected in [Paper Supply], a tray specified in [Auto Paper Off] is automatically selected. Change the setting if necessary. For information on [Auto Paper Off], refer to "5 Tools" > "Copy Service Settings" > "Copy Control" > "Auto Paper Off" in the Administrator Guide.
- Select [Repeat Image].

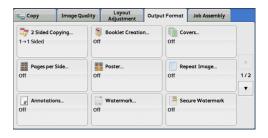



Side by Side

## **2** Select any option.

#### ■ Off

Disables this feature.

## ■ Auto Repeat

Automatically determines the number of the repeated copies according to the document size, paper size, and copy ratio, and then repeatedly copies the document image onto the paper.

• Copies cannot be made when the document image is larger than the specified paper size.

#### ■ Variable Repeat

Allows you to specify how many copies to place along each of the long and short edges of paper. You can specify a value between 1 and 23 in the Y direction, and a value between 1 and 33 in the X direction.

Repeat Image

## ■ Image Layout

Evenly Spaced

The specified number of images are evenly arranged on the paper.

· Side by Side

The specified number of images are arranged with no space on the paper.

# Annotations (Adding a Comment/a Date/Page Numbers to Copies)

This feature allows you to add a comment, date, and page numbers onto copies.


You can select a comment, date, and page numbers, and their print positions from preset formats.

Important • When you select this feature, if the number of pages scanned by the machine exceeds the maximum, the machine will not print the already-scanned data. In that case, follow the instructions of the message displayed on the screen to cancel the job. The maximum number of pages that the machine can scan is 999 pages per job.

Note

- The setting in [Reduce/Enlarge] does not affect the annotation image and text sizes.
- If you specify a comment, date, and page numbers together, make sure that their print positions do not overlap before making copies.
- When [Pages per Side] is set, an annotation is added to the combined image.
- When [Repeat Image] or [Booklet Creation] is set, an annotation is added to each copy image.
- If a layout template is specified in [Apply Layout Template to Copy/Print Jobs] under [Force Annotation] in the System Administration mode, the comment, date, and page number specified here are overlapped with the text on the layout template when printed. For information on [Force Annotation], refer to "5 Tools" > "Common Service Settings" > "Force Annotation" in the Administrator Guide.
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

## Select [Annotations].

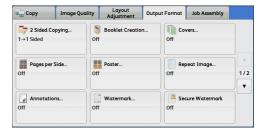

## **2** Select any option.

#### **■** Comment

Displays the [Comment] screen. Refer to "[Comment] Screen" (P.158).

## ■ Date

Displays the [Date] screen. Refer to "[Date] Screen" (P.159).

## ■ Page Numbers

Displays the [Page Numbers] screen.

Refer to "[Page Numbers] Screen" (P.159).

## ■ Bates Stamp

Displays the [Bates Stamp] screen.

Refer to "[Bates Stamp] Screen" (P.161).

## ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

 If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

#### · Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

## Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

🌦 Comment

Selected Comme

💥 off

Stored Comments

CONFIDENTIAL

Copy Prohibited

URGENT

IMPORTANT

Ignore Side 2

**않** Cancel **⊘** Save

All Pages

Top Right Same as Side 1

Size: 48 Points Font Color: Black

Apply To..

## [Comment] Screen

This screen allows you to select a comment style and its position.

**1** Select any option.

#### ■ Off

No comment is added.

## ■ On

A comment is added.

# ■ Stored Comments


Allows you to select comment text from eight preset options, or text set in the System Administration mode.

For information on how to register text, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Custom Watermark 1 to 3" in the Administrator Guide.

#### ■ Apply To

Displays the [Apply Comment To] screen.

You can select whether to add a comment onto the first copy page only, or onto each copy page.

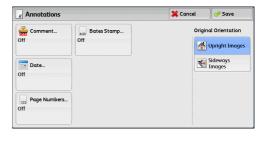

#### **■** Position

Displays the [Comment - Position] screen.

You can select a comment position from nine options. For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

#### ■ Format & Style

Displays the [Comment - Format & Style] screen.

You can select a font size from three options, or can directly specify the size in the range from 6 to 64 points in 1 point increments. You can also select a font color from seven options.

Note

• When both [Date] and [Page Numbers] are set, or when [Force Annotation] is set, a comment color is set to [Black].

## [Date] Screen

This screen allows you to add a date onto copies. The date shows when you started copying the document.

You can change the date format. For more information, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Date Format" in the Administrator Guide.

## Select any option.

#### ■ Off

No date is added.

#### ■ On

A date is added.

## ■ Apply To

Displays the [Apply Date To] screen.

You can select whether to add a date onto the first copy page only, or onto each copy page.

## **■** Position

Displays the [Date - Position] screen.

You can select a date position from six options.

For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

#### **■** Font Size

Displays the [Date - Font Size] screen.

You can select a date size from three options, or can directly specify a size in the range from 6 to 24 points in 1 point increments.

## [Page Numbers] Screen

This screen allows you to select a page-number style and its position.


## **1** Select any option.

#### ■ Off

No page number is added.

#### ■ On

Page numbers are add onto copies.

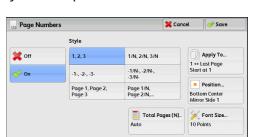



## ■ Style

• 1, 2, 3

Adds page numbers only.

• -1-, -2-, -3-

Adds page numbers, and hyphens before and after each page number. (Example: -1-, -2-)

Page 1, Page 2, Page 3

Adds page numbers, and the text "Page" before each page number. (Example: Page 1, Page 2)

• 1/N, 2/N, 3/N

Adds page numbers, and the total number of pages to the right of each page number. (Example: 1/50, 2/50)

When you select [1/N, 2/N, 3/N], the value specified in [Total Page (N)] is used.

• -1/N-, -2/N-, -3/N-

Adds page numbers followed by the total number of pages, and hyphens before and after the numbers.

(Example: -1/50-, -2/50-)

When you select [-1/N-, -2/N-, -3/N-], the value specified in [Total Page (N)] is used.

• Page 1/N, Page 2/N

Adds page numbers followed by the total number of pages, and the text "Page" before each page number.

When you select [Page 1/N, Page 2/N], the value specified in [Total Page (N)] is used.

Total Pages (N)

Displays the [Total Pages (N)] screen.

- Auto

Automatically calculates the total number of pages.

- Enter Number

Allows you to specify the total number of pages in the range from 1 to 999.

## ■ Apply To

Displays the [Apply Page Numbers To] screen.

Refer to "[Apply Page Numbers To] Screen" (P.160).

#### **■** Position

Displays the [Page Numbers - Position] screen.

You can select a page-number position from six options.

For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

#### **■** Font Size

Displays the [Page Numbers - Font Size] screen.

You can select a page-number size from three options, or can directly specify a size in the range from 6 to 24 points in 1 point increments.

## [Apply Page Numbers To] Screen

This screen allows you to specify a page range to add page numbers.

## Select any option.

## ■ All Pages

Adds page numbers to all copy pages.

## ■ Starting Page Number

Allows you to specify the start page to add a page number, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the start page number.

## ■ Ending Page Number

Allows you to specify the end page to add a page number, in the range from 1 to 999. The start page is fixed to "1".

• Use [+] and [-], or the numeric keypad to enter the end page number.

## ■ Start & End Page Numbers

Allows you to specify the start and end pages to add page numbers, in the range from 1 to 999.

Note • Use [+] and [-], or the numeric keypad to enter the start and end page numbers.

## ■ Include Covers/Separators

This option is available when you select [All Pages]. Select this check box to include covers and separators.

## ■ Starting Number

Allows you to specify a starting page number to add page numbers, in the range from 1 to 999.

... Bates Stamp

X Off

**Note** • Use [+] and [-], or the numeric keypad to enter a starting page number.

#### [Bates Stamp] Screen

This screen allows you to add prefix text and page numbers onto copies.

**1** Select any option.

#### ■ Off

Does not add prefix text and page numbers onto copies.

#### ■ On

Adds prefix text and page numbers onto copies.

#### ■ Prefix

Allows you to enter prefix text with up to 16 characters, using the displayed keyboard.

## ■ Number of Digits

Displays the [Bates Stamp - Number of Digits] screen.

You can select [Auto Assign] or [Manual Assign]. When you select [Manual Assign], you can specify the number of digits to be used for page numbers in the range from 1 to 9 in 1 digit increments.

## ■ Apply To

Displays the [Apply Bates Stamp To] screen.



💢 Cancel 🥜 Save

1 ↔ Last Page Start at 1

K Font Size.

Refer to "[Apply Bates Stamp To] Screen" (P.162).

#### **■** Position

Displays the [Bates Stamp - Position] screen.

You can select a prefix and page-number position from six options. For side 2 of copy sheets, you can select [Same as Side 1] or [Mirror Side 1].

#### **■** Font Size

Displays the [Bates Stamp - Font Size] screen.

You can select a prefix and page-number size from three options, or can directly specify a size in the range from 6 to 24 points in 1 point increments.

## [Apply Bates Stamp To] Screen

This screen allows you to specify a page range to add prefix text and page numbers.

**1** Select any option.

## ■ All Pages

Adds prefix text and page numbers to all pages.

## ■ Starting Page Number

Allows you to specify the start page to add prefix text and a page number, in the range from 1 to 999.

Note • Use [+] and

• Use [+] and [-], or the numeric keypad to enter the start page number.

#### ■ Ending Page Number

Allows you to specify the end page to add prefix text and a page number, in the range from 1 to 999. The start page is fixed to "1".

Note • Use [+] and [-], or the numeric keypad to enter the end page number.

#### ■ Start & End Page Numbers

Allows you to specify the start and end pages to add prefix text and page numbers, in the range from 1 to 999.

• Use [+] and [-], or the numeric keypad to enter the start and end page numbers.

#### ■ Include Covers/Separators

This option is available when you select [All Pages]. Select this check box to include covers and separators.

#### ■ Starting Number

You can specify a starting page number in the range from 1 to 999999999 when you do not set [Number of Digits], or can specify a starting page number of up to the allowable number of digits specified in [Number of Digits].

Note • Use [+] and [-], or the numeric keypad to enter the starting page number.

**Important** • If the page number exceeds the specified value (999999999 when [Number of Digits] is not set) during copying, the copy job will be canceled.

# Watermark (Printing Control Numbers on the Background of Copies)

This feature allows you to faintly print a sequential control number in the background of each copy page.



Original Orientation

Upright Imag

Sideways Images

> Watermark Effect...

If you set "1" as the starting number, "1" is printed on each page of the first copy set and "2" is printed on each page of the second set.


To prevent, for instance, the duplication of confidential documents that are to be distributed at a conference, you can use this feature to add sequential numbers to the copies, and associate the numbers with the conference members.

Important • When you select this feature, if the number of pages scanned by the machine exceeds the maximum, the machine will not print the already-scanned data. In that case, follow the instructions of the message displayed on the screen to cancel the job. The maximum number of pages that the machine can scan is 999 pages per job.

Note

- If a layout template is specified in [Apply Layout Template to Copy/Print Jobs] under [Force Annotation] in the System Administration mode, the watermark specified here is overlapped with the text on the layout template when printed. For information on [Force Annotation], refer to "5 Tools" > "Common Service Settings" > "Force Annotation" in the Administrator Guide.
- When [Force Watermark Copy] is set to [On], [Watermark] is fixed to [On], which cannot be changed. For more information on Watermark, refer to "5 Tools" > "Common Service Settings" > "Watermark" in the Administrator Guide.

## Select [Watermark].

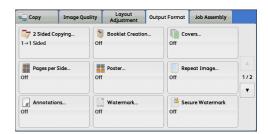

## **2** Select any option.

#### **■** Control Number

- Do Not Add
   No control number is printed.
- Add

A control number is printed. Enter the starting number of the control number. You can specify a value in the range from 1 to 9999, using [+] and [-] or the numeric keypad.

Do Not Add

Serial N

## ■ Stored Watermarks

Displays the [Stored Watermarks] screen.

Refer to "[Stored Watermarks] Screen" (P.164).

## **■** User Account Number

Allows you to select whether to print a user account number when the Authentication or Accounting feature is enabled. However, if a user is not authenticated, the account number will not be printed.

Note

- [User Account Number] is the No. (User Administration Number) registered by users with the Authentication and Accounting feature.
- You can see if a user is authenticated by checking that the <Log In/Out> button lights up.

#### ■ Date & Time

Allows you to select whether to print the date and time when the copy job started.

For information on the date format, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Date Format" in the Administrator Guide.

#### ■ Serial Number

Allows you to select whether to print the serial number of the machine.

ર ર

## ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

#### Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

## • Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

#### ■ Watermark Effect

Displays the [Watermark Effect] screen.

Refer to "[Watermark Effect] Screen" (P.164).


Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

## [Stored Watermarks] Screen

This screen allows you to select text to print on copies.

1 Select [On].

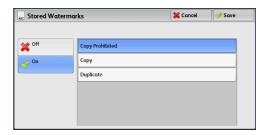

#### **2** Select any text.

#### ■ Off

No text is printed.

#### ■ On

Text is printed. Select the text to be used for watermark. You can specify text from three preset options, or text registered in the System Administration mode.

For information on how to register text, refer to "5 Tools" > "Common Service Settings" > "Watermark" > "Custom Watermark 1 to 3" in the Administrator Guide

#### [Watermark Effect] Screen

This screen allows you to set the Watermark Effect feature.

If you enable the Watermark Effect feature, the text strings specified in [Control Number], [Stored Watermarks], [User Account Number], [Date & Time], and [Serial Number] on the [Watermark] screen are embedded in the background of each copy. When you copy a document that has been copied with Watermark Effect, the text embedded in the background is printed as embossed or outline text depending on the option you select on the [Watermark Effect] screen.

Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

**X** Cancel

# Select Embossed or Outline option to be applied to the watermark image. Definition of the property of the faint watermark image on the output will be visible when it is used as originals to make copies. Outline

Watermark Effect

## **1** Select any option.

#### ■ Off

Prints the text specified in [Stored Watermarks] as it is.

#### ■ Embossed

When you copy a document that has been copied with Watermark Effect, the text embedded in the background of the copy is printed as embossed text.

#### **■** Outline

When you copy a document that has been copied with Watermark Effect, the text embedded in the background of the copy is printed as outline text.

You can specify the size, density, and other settings for the text to be printed with Watermark in the System Administration mode. For more information, refer to "5 Tools" > "Common Service Settings" > "Watermark" in the Administrator Guide.

# **Secure Watermark (Managing Document Security)**

Secure Watermark is a security management feature to embed a copy protection digital code into a document, to restrict the document to be duplicated. The digital code enables you to analyze "when", "from which machine", and "by whom" the document was output.

**Important** • This feature is only supported on Fuji Xerox manufactured machines that are compatible to Secure Watermark.

- The copy protection of a document, the analysis function of digital codes, and the restrictive effect of hidden text using the Secure Watermark feature is not warranted to always function. The feature may not function depending on the document or settings. For more information, contact our Customer Support Center.
- We assume no responsibility for a damage caused by using or not being able to use the Secure Watermark feature.
- $\bullet$  Using the Secure Watermark feature may degrade print quality as follows:
  - Colors may become darker.
  - Text in documents may become hard to read.
  - Dots such as decimal characters and periods may become hard to read.
- The Secure Watermark feature may not work properly for a document if its size is smaller than A5, if its background color is not white, or if the Watermark or Secure Watermark feature has already been used for the document.
- In some cases, a document may not be printed even if the Secure Watermark feature has not been used for the document. This happens because the machine incorrectly detects a copy protection code from the document. In that case, ask the system administrator to temporarily disable [Secure Watermark Detection] for copy protection codes.
- If a layout template is specified in [Apply Layout Template to Copy/Print Jobs] under [Force Annotation] in the System Administration mode, an embedded copy protection code is overlapped with the text on the layout template. For information on [Force Annotation], refer to "5 Tools" > "Common Service Settings" > "Force Annotation" in the Administrator Guide.
- Analyzing output paper allows the system administrator to grasp the identification information of the user who requested the job. Note that we assume no responsibility for a privacy issue of the user caused by using the Secure Watermark feature.
- If you use the Secure Watermark feature to a document that a protection code of the Secure Watermark feature (including the Copy Management Expansion Kit (optional)) has already been embedded, the copy protection of a document, the analysis function of digital codes, and the restrictive effect of hidden text will be ineffective.
- When [Secure Watermark Detection] is set to [On], it takes longer time for the first page of a document to be copied than usual as the machine detects a copy protection code.
- The following settings for the Secure Watermark Effect of the Secure Watermark Kit (optional) are set to fixed and cannot be changed: print density, embedded text display (outline), and the font size.

• The Watermark and Secure Watermark features cannot be used simultaneously.

Note

• To analyze digital codes, an application, ApeosWare Secure Watermark Analyzer (sold separately), is required. For information on how to use ApeosWare Secure Watermark Analyzer, refer to the documentation provided with the application.

Secure Watermark

Protection Code Off

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

## Select [Secure Watermark].



Select any option.

#### ■ Off

Does not manage document security.

#### ■ On

Manages document security. Specify any option if necessary.

#### **■** Protection Code

Off

Does not prevent document duplication. Protection code is not embedded while digital code is embedded into copies.

• Prevent Duplication

Prevents document duplication. Protection code and digital code are embedded into copies.

**Important** • This setting also affects fax and scan operation.

## ■ Stored Secure Watermarks

Displays the [Stored Secure Watermarks] screen.

Refer to "[Stored Secure Watermarks] Screen" (P.166).

## [Stored Secure Watermarks] Screen

This screen allows you to embed hidden text into documents.

With this hidden text feature, the specified text is embedded in the entire sheet.

When you copy a document that has been copied with this hidden text feature, the embedded text on the output appears in white regardless of whether or not the Secure Watermark Kit (optional) is installed.

Select any option.

#### ■ Off

Does not print hidden text.

#### ■ On

Prints hidden text.



Allows you to specify text from three preset texts, or text registered in the System Settings.

For information on how to register text, refer to "5 Tools" > "Common Service Settings" > "Secure Watermark" > "Secure Watermark 1 to 3" in the Administrator Guide.

## ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

## · Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

· Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

# Folding (Outputting Bi-Folded/Tri-Folded Paper)

This feature allows you to fold copies in half or in three.

When the C3 Finisher with Booklet Maker (optional) is installed, [Single Fold] is available.


When the Booklet Maker Unit for Finisher-B1 (optional) is installed, you can also crease the output sheet in half.

When the Folder Unit CD1 (optional) is installed, [Z Fold] and [C Fold] are also available.

Note

- ullet The supported paper orientation is only lacksquare. Select the tray whose orientation is set to lacksquare.
- [Z Fold] and [C Fold] can only be applied to A4 and 8.5 x 11" paper.
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

## 1 Select [Folding].

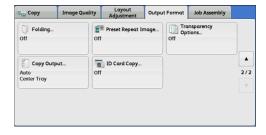


## 2 Select any option.

#### ■ Off

Does not fold copies.

#### ■ Z Fold

Folds copies in three with the printed side inside or outside.

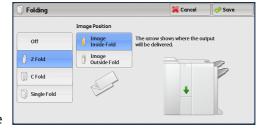



printing surface comes inside

printing surface comes outside

#### ■ C Fold

Folds copies in three with the printed side inside or outside.





#### ■ Single Fold

Folds copies in half.

## ■ Single Fold (Creased)

This option is displayed when the Booklet Maker Unit for Finisher-B1 (optional) is installed. Creases copies in half.


# ■ Image Position

- Image Inside Fold
   Folds copies so that the image is printed inside after you select [Z Fold], [C Fold], or [Single Fold].
- Image Outside Fold
   Folds copies so that the image is printed outside after you select [Z Fold], [C Fold], or [Single Fold].

# Preset Repeat Image (Making Multiple Copies on a Single Sheet)

This feature allows you to repeatedly copy one original onto equally divided areas according to the specified number of copies.


You can select the number of the times the original is copied onto one sheet from [2 Times], [4 Times], or [8 Times].

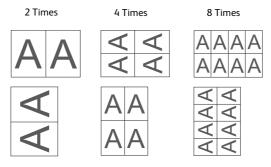

Note

• When you select an option other than [Auto %] in [Reduce/Enlarge], image loss may occur depending on the image size of the document.

#### **1** Select [Preset Repeat Image].

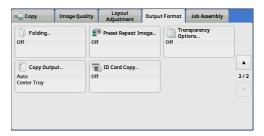

## **2** Select any option.

#### ■ Off

Disables this feature.

#### ■ 2 Times

Makes two copies of the document image on a single sheet of paper.

#### ■ 4 Times

Makes four copies of the document image on a single sheet of paper.

#### ■ 8 Times

Makes eight copies of the document image on a single sheet of paper.

# Transparency Options (Inserting Blank Sheets between Transparencies)

This feature allows you to insert blank separators between output transparency sheets. At the same time, you can make copies for handouts.

Important • Using transparency sheets for color (with white border) may cause a malfunction or paper jam.

Note

- When loading A4 size transparencies on Tray 5 (Bypass), we recommend that you load them in portrait orientation.
- Load transparency sheets in a tray in the same orientation as the paper to be used for handouts and separators.


Transparency Optio

Preset Repeat Image

Off 2 Times

8 Times

## Select [Transparency Options].

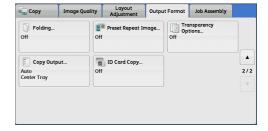

X Cancel

1≣ A4 Plain

3≣B4 Plain

More.

5 = Auto Detect

1 ■ A4 Plain 2. A3 Plain

3.≣B4 Plain

More..

## **2** Select any option.

#### ■ Off

Does not insert separators.

## **■** Blank Transparency Separators

Inserts a separator each time a transparency is copied. Only one set of copies can be made.

## ■ Blank Separators & Handouts

Inserts a separator each time a transparency is copied. At the same time, the required number of copies is made for handouts.

#### ■ Transparency Set & Handouts

Makes copies on transparencies. At the same time, the required number of copies is made for handouts.

#### **■** Transparency Tray

Allows you to select the paper tray to be used for the transparencies.



Select [More] to display the [Paper Supply - Transparency] screen on which you can select a tray.

Note

- When you use the bypass tray, select [Bypass] on the [Paper Supply Transparency] screen. Select an option other than [Auto Detect] for [Paper Size] on the [Tray 5] screen.
- For [Transparency Tray], select one of the paper trays. Auto Paper Select feature is not available.
- The paper tray that you selected for [Transparency Tray] cannot be selected for [Separator Tray], [Separator & Handout], or [Handout Tray] at the same time.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

#### ■ Separator Tray

Allows you to select the paper tray to be used for the separators.

Select [More] to display the [Paper Supply - Separator] screen on which you can select a tray.

Note

- When you use the bypass tray, select [Bypass] on the [Paper Supply Separator ] screen. Select an option other than [Auto Detect] for [Paper Size] on the [Tray 5] screen.
- For [Separator Tray], select one of the paper trays. Auto Paper Select feature is not available.
- The paper tray that you selected for [Transparency Tray] cannot be selected for [Separator Tray] at the same time.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

## ■ Separator & Handout

Allows you to select the paper tray to be used for the separators and handouts.

Select [More] to display the [Paper Supply - Separator & Handout] screen on which you can select a tray.

Note

- When you use the bypass tray, select [Bypass] on the [Paper Supply Separator & Handout] screen. Select an option other than [Auto Detect] for [Paper Size] on the [Tray 5] screen.
- For [Separator & Handout], select one of the paper trays. Auto Paper Select feature is not available.
- The paper tray that you selected for [Transparency Tray] cannot be selected for [Separator & Handout] at the same time.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

## ■ Handout Tray

Allows you to select the paper tray to be used for the handouts.

Select [More] to display the [Paper Supply - Handout] screen on which you can select a tray.

Note

- When you use the bypass tray, select [Bypass] on the [Paper Supply Handout] screen. Select an option other than [Auto Detect] for [Paper Size] on the [Tray 5] screen.
- For [Handout Tray], select one of the paper trays. Auto Paper Select feature is not available.
- The paper tray that you selected for [Transparency Tray] cannot be selected for [Handout Tray] at the same time.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

# **Copy Output (Specifying Finishing Options)**

This feature allows you to select finishing options.

Note


- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.
- The items displayed vary depending on the options installed.

If any finisher (optional) is installed, each set of copies can be stapled and then output If the 2/4 Hole Punch Kit or US 2/3 Hole Punch Kit for Finisher-B1, or 2/4 Hole Punch Kit or US 2/3 Hole Punch Kit for C3 Finisher (optional) is installed, the output can be punched.

If the Folder Unit CD1 (optional) is installed, the output can be Z-folded.

# **∴** CAUTION

- Waste staples may come out with output paper. Be careful not to get injured by the staples.
- Do not staple punched holes of paper. Sharp points of a staple may cause injuries.
- **1** Select [Copy Output].

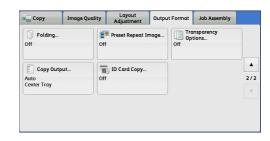

**%** Cancel

Original
Orientation...

Output / Offset

Upright Image

Hole Punch

2 Holes 🗀

2 Holes

2 Holes

## 2 Select any option.

#### ■ Auto

Copies are collated when the originals are loaded in the document feeder.

Copies are also collated when originals are loaded on the document glass and any of the following features is used: 2 Sided Book Copying, Covers, [Blank Separators & Handouts]

or [Transparency Set & Handouts] of Transparency Options, Booklet Creation, Stapling, Build Job, Sample Set, and Combine Original Sets.

Copy Output

1 Staple

2 Staples

2 Staples

🛺 Auto

#### ■ Collated

The machine outputs sheets sorted into sets that are arranged in page order.

#### ■ Uncollated

The machine outputs the specified number of copies and sorts sheets by page.

## ■ Uncollated with Separators

The machine outputs copies with inserting blank sheets as a separator and sorts sheets by page.

#### ■ Separator Tray

When you select [Uncollated with Separators], select the paper tray to be used for the separators.

When [Bypass] is selected, the [Tray 5] screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

#### ■ Staple

Specify the position for stapling. The number of sheets that can be stapled is 2 to 50 (when 80 gsm paper is used). If the C3 Finisher Staple Unit 65 Sheets (optional) is installed, the maximum number of sheets that can be stapled is 65 (when 90 gsm paper is used and thickness of bundled paper is 5.7 mm or less). Available paper types are as follows:

#### Finisher-A1

Bond, Plain, Recycled, Plain Reload, Lightweight, Heavyweight, Heavyweight Reload, Extra Heavyweight, Extra Heavyweight Reload, Punched, and Custom Paper 1 to 5.

Finisher-B1

Bond, Plain, Recycled, Plain Reload, Lightweight, Heavyweight, Heavyweight Reload, Extra Heavyweight, Extra Heavyweight Reload, Punched, Gloss, Gloss Reload, Heavyweight Gloss, Heavyweight Gloss Reload, and Custom Paper 1 to 5.

• C3 Finisher/C3 Finisher with Booklet Maker

Bond, Plain, Recycled, Plain Reload, Lightweight, Heavyweight, Heavyweight Reload, Extra Heavyweight, Extra Heavyweight Reload, Punched, Gloss, Gloss Reload, Heavyweight Gloss, Heavyweight Gloss Reload, and Custom Paper 1 to 5.

**Important** • Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.

In the following cases, the actual stapling position differs from the stapling position displayed on the screen:

- When [Original Orientation] is set to [Upright Images], and [Staple] is set to one position at the right side.
- When [Original Orientation] is set to [Sideways Images], and [Staple] is set to one position at the left side.

#### **■** Hole Punch

Sets the position for punching.

The positions for punching vary depending on a finisher installed.

The C3 Finisher and C3 Finisher with Booklet Maker offer nine different punch positions: 2 Holes, 2 Holes Top, 2 Holes Right, 3 Holes, 3Holes Top, 3Holes Right, 4 Holes, 4 Holes Top, 4 Holes Right.

**Important** • Ensure that the actual orientation of the original document matches the [Original Orientation] setting on the [Layout Adjustment] screen.

#### ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

· Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

#### ■ Z Fold Half Sheet

The machine folds the output copies in Z fold. Z fold can be applied to B4, A3,  $11 \times 17$ ". If you have mixed sized documents, the width (vertical direction) of the paper must be the same, such as a combination of A4 (portrait) and A3 (landscape), and a combination of B5 (portrait) and B4 (landscape). When you have the combinations, the Z fold is only applied to the larger papers (A3(landscape) and B4 (landscape)).

#### ■ Output/Offset

Allows you to select the output destination tray and offset operation.

Offset Stacking

Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

# **Paper Size and Stapling Position**

# • Finisher-A1

	1 Staple	1 Top Right
A4①, B5①, 7.25 x 10.5"①, 8.5 x 11"①, 16K①	Report	Report
A4, A3, B4, 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 17", 8K	Report	Report

## • Finisher-B1

	1 Staple	1 Top Right	2 Staples	2 Top	2 Right
A4ᠿ, B5ᠿ, 7.25 x 10.5㎡, 8 x 10㎡, 8.5 x 11㎡, 16Kᠿ	Report	Report / Loode	IReport I	Report	Reporti
A4, A3, B4, 8.5 x 11", 8.5 x 13", 8.5 x 14", 11 x 15", 11 x 17", 8K	Report *	Report 1 *	Report I	Report	Report I

 $<sup>^{*}</sup>$ : The staple orientation displayed on the touch screen differs from the actual staple orientation. Outputs are stapled in the orientation shown in the above table.

## • C3 Finisher/C3 Finisher with Booklet Maker

	1 Staple	1 Top Right	2 Staples	2 Top	2 Right
A4☐, B5☐, 8 x 10"☐, 8.5 x 11"☐, 16K☐	Report	Report	IReport I	Report	Reporti
A4, 8 x 10", 8.5 x 11", 8.5 x 13", 8.5 x 14"	Report *	Report 1*	Report I	Report	Report I
A4, B4, 11 x 17", 8K	Report	Report			

\* : The staple orientation displayed on the touch screen differs from the actual staple orientation. Outputs are stapled in the orientation shown in the above table.

## Paper Size and Punching Position (Finisher-B1, C3 Finisher, C3 Finisher with Booklet Maker)

This feature is available when the Punch Unit 2/4H CD1 (optional) or the Punch Unit US 2/3H CD1 (optional) is installed.

Note

- The distance between the two holes of the Punch Unit 2/4H CD1 is 80 mm for both 2 and 4 holes.
- The distance between the two holes of the Punch Unit US 2/3H CD1 is 70 mm for 2 holes and 108 mm for 3 holes.

#### • 2 holes

	2 Holes	2 Holes Top	2 Holes Right
A4ᠿ, B5ᠿ, 7.25 x 10.5"ᠿ, 8 x 10"ᠿ, 8.5 x 11"ᠿ, 16Kᠿ	oReport o	o o Report	Reporto
A4, A3, B4, 8 x 10", 8.5 x 11", 8.5 x 13", 11 x 15", 8.5 x 14", 11 x 17", 8K	o Report	o o Report	Report o

#### • 3 holes


	3 Holes	3 Holes Top	3 Holes Right
A4凸, B5凸, 7.25 x 10.5"凸, 8 x 10"凸, 8.5 x 11"凸, 16K凸	Report o	o o o Report	Report o
A3, B4, 11 x 15", 11 x 17", 8K	o Report	o o o Report	Report o

## • 4 holes


	4 Holes	4 Holes Top	4 Holes Right
A4凸, 7.25 x 10.5"凸, 8.5 x 11"凸, 16K凸	Report	o o o o o Report	Report o
A3, 11 x 15", 11 x 17", 8K	o Report	Report	Report 0

# ID Card Copy (Copying Both Sides of an ID Card)

This feature allows you to copy both sides of a small undetectable original, such as an ID card, onto one side of paper.

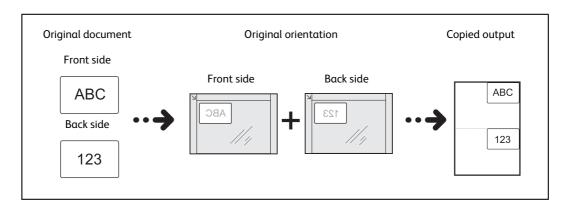


1 Specify the orientation of the document in [Original Orientation] on the [Layout Adjustment] screen.

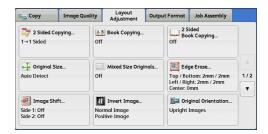

- **2** Place the document slightly away from the top left corner of the document glass, and close the document glass.
  - **Important** Always use the document glass when copying. You cannot use the document feeder with this feature.
    - Specify the orientation of the original document correctly.
    - If the edges of the image are missing, slightly move the card inward on the document glass so that the whole image can be scanned.
    - When the reduced size is specified to copy an ID card, the machine may copy the ID card in a different orientation from the original orientation depending on the magnification ratio specified. For information on the copy magnification ratio for ID Card Copy, refer to "5 Tools" > "Common Service Settings" > "Copy Service Settings" > "Copy Control" > "ID Card Copy Reduce/Enlarge" in the Administrator Guide.

For information on how to specify the orientation of a document, refer to "Original Orientation (Specifying the Orientation of Loaded Documents)" (P.147).

**3** Select [ID Card Copy] on the [Output Format] screen.

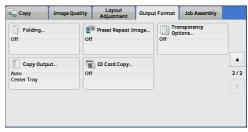

- 4 Select [On].
  - Off
    Disables ID card copying.
  - On
    Enables ID card copying.



# **Job Assembly**


This section describes the features you can select on the [Job Assembly] screen. The following shows the reference section for each feature.

Build Job (Processing Documents Scanned with Different Settings as One Job)177Sample Job (Checking the Finished Output of the Copy)181Combine Original Sets (Adding Originals)182Delete Outside/Delete Inside (Deleting Outside or Inside of the Selected Area)183Stored Programming (Calling a Stored Program for Build Job)185

**1** Select [Copy] on the Services Home screen.



**2** Select a feature on the [Job Assembly] screen.

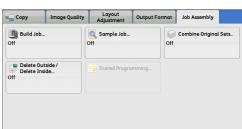


# **Build Job**


# (Processing Documents Scanned with Different Settings as One Job)

This feature allows you to apply different copy settings to each document page or each document stack, and then output the copies as one job.

**1** Select [Build Job].

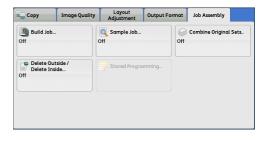

**2** Select [On].

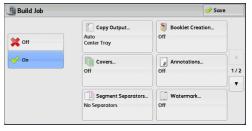

**3** Select any option.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

#### ■ Off

Build Job is not applied.

#### ■ On

Build Job is applied. The feature buttons appear. Specify any option if necessary.

**Important** • The features selected here cannot be canceled or changed while the machine executes a copy job. For information on features available in Build Job, refer to "Features that can be set in Build Job" (P.178).

#### Features that can be set in Build Job

## **■** Copy Output

For more information, refer to "Copy Output (Specifying Finishing Options)" (P.170).

#### ■ Booklet Creation

For more information, refer to "Booklet Creation (Creating a Bound Booklet)" (P.150).

#### **■** Covers

**Important** • The machine does not copy on a cover when using the Build Job feature. For more information, refer to "Covers (Attaching Covers to Copies)" (P.153).

#### **■** Annotations

For more information, refer to "Annotations (Adding a Comment/a Date/Page Numbers to Copies)" (P.157).

#### ■ Segment Separators

For more information, refer to "[Segment Separators] Screen" (P.180).

#### ■ Watermark

For more information, refer to "Watermark (Printing Control Numbers on the Background of Copies)" (P.162).

## ■ Secure Watermark

For more information, refer to "Secure Watermark (Managing Document Security)" (P.165).

## [Copy] Screen When Build Job is in Progress

The following describes the screen that appears while the Build Job is being executed.

## ■ Chapter Start

Displays the [Build Job - Chapter Start] screen. Refer to "[Build Job - Chapter Start] Screen" (P.179).

#### ■ Insert Separators


Displays the [Segment Separators] screen. Refer to "[Segment Separators] Screen" (P.180).

## ■ Change Quantity

Displays the [Change Quantity] screen on which you can change the number of copy sets using the numeric keypad.

## ■ Change Settings

Displays the [Copy] screen on which you can change the settings for the next document. After changing the settings, press the <Start> button on the control panel to start scanning of the document. To return to the previous screen, press the < # > button.

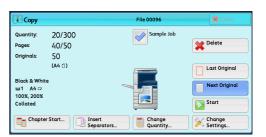

When using a stored program for Build Job

While the machine makes copies using the Build Job feature, you can use a stored program.

- 1) Select [Change Settings].
- 2) Select the [Job Assembly] tab.
- 3) Select [Stored Programming].
- 4) Select the number of the stored program that contains the features you want to use. For information on how to register a stored program, refer to "Registering Stored Programs for Build Job" (P.400).

#### **■** Delete

Clears the document data stored by the Build Job feature, and cancels the job.

Note

- You can also press the <C (Clear)> or <Clear All> button on the control panel to perform the same operation.
- While the machine is scanning the loaded document, [Delete] is displayed. Select [Delete] to pause scanning. Select [Start] on the touch screen, or press the <Start> button on the control panel to resume scanning.

## ■ Last Original

Select this button to end scanning of documents. The build job starts.

## ■ Next Original

Select this button when you have another document. This button is always selected when you use the Build Job feature.

#### ■ Start

After loading the next document, select this button to scan the next document.

• You can also press the <Start> button on the control panel to perform the same operation.

#### ■ Sample Job

When making multiple sets of copies, you can print a sample set to check the finished output and then print the remaining copy sets. You can select to continue or cancel the job after the confirmation.

#### [Build Job - Chapter Start] Screen

This screen allows you to set the chapter start.

#### **1** Select any option.

#### ■ Off

The next stack of documents is copied after the previous stack.

#### ■ On

The next stack of documents is copied from Side 1 of a new sheet of paper.

## ■ Pages per Side - New Page

When [Pages per Side] is set, even if all documents are divided for every chapter before all of them are assembled in the Pages per Side feature, the next stack of document is copied from Side 2 of the paper.



## [Segment Separators] Screen

This screen allows you to insert a sheet of paper as a separator in between each stack of documents. You can specify the number of separators to insert in the range from 1 to 99 as necessary.

Note

• You can specify different settings for each stack of documents. If you do not specify particular settings for each stack of documents, the previously specified settings are applied.

## **1** Select any option.



## ■ No Separators

Does not insert any separators.

## ■ Blank Separators

Inserts blank separators.

If you select this option, load documents, and press the <Start> button, the blank separators are inserted before the copies of the documents.

## ■ 1 Sided Side 1 Only

A first page of the loaded documents is copied on the front side of a separator, and the rest of the pages are copied on the paper other than a separator.

When [Pages per Side] is set, the number of pages (2 pages, 4 pages, or 8 pages) that you selected to copy onto one side of a single sheet, starting from the first page of the loaded documents, are copied onto the front page of a separator.

When you load a single sheet document, the document is copied onto a separator.

#### ■ 1 Sided Side 2 Only

A first page of the loaded documents is copied on the back side of a separator, and the rest of the pages are copied on the paper other than a separator.

When [Pages per Side] is set, the number of pages (2 pages, 4 pages, 8 pages) that you selected to copy onto one side of a single sheet, starting from the first page of the loaded documents, are copied onto the back side of a separator.

When you load a single sheet document, the document is copied onto a separator.

#### ■ 2 Sided Separators

First two pages of the loaded documents are copied onto each side of a separator, and the rest of the pages starting from the third page are copied onto the paper other than a separator.

When [Pages per Side] is set, the number of pages (2 pages, 4 pages, 8 pages) that you selected to copy onto one side of a single sheet, starting from the first page of the loaded documents, are copied onto each side of a separator.

When you load two-sheet documents, both sheets are copied onto each side of a separator.

Note

• When you have two separate documents, a single sheet document and multiple sheet documents, if you want to copy this single sheet document and the first page of the multiple sheet documents onto each side of a separator, when loading the multiple sheet documents, select [No Separators] in [Segment Separators]. If you do not select [No Separators], the machine processes these two

documents separately under different separator settings, the single-sheet document is copied onto a separator, and the first page (or first two pages) of the multiple sheet documents is copied onto another separator.

## ■ Segment Separator Tray

Allows you to select the tray, which is loaded with paper to be used as a separator. When [Bypass] is selected, the [Tray 5] Screen is displayed. For more information, refer to "[Tray 5] Screen" (P.123).

## ■ Separator Quantity

This option is available when you select [Blank Separators]. You can specify the number of separators in the range from 1 to 99.

# Sample Job (Checking the Finished Output of the Copy)

When making multiple sets of copies, you can print a sample set to check the finished output and then print the remaining copy sets. You can select whether to continue or cancel the job after the confirmation. This feature also allows you to change the number of copy sets. The sample copy is included in the total number of copy sets.


Note

• After a sample set is output, the machine automatically outputs the data remained if the machine is left uninstructed for the period specified in [Auto Job Release]. For more information on [Auto Job Release], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Job Release" in the Administrator Guide.

🔍 Sample Job

🧼 On

## **1** Select [Sample Job].

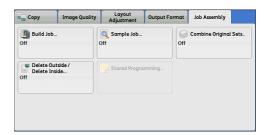

Sample Job will print out your first copy for you to check to see if the output is what you expected. You may then change the programming if desired, or submit the rest of the job to be print

## 2 Select [On].

#### ■ Off

No sample set is made.

#### ■ On


A sample set is made.

# [Copy] Screen When Sample Job is in Progress

After the sample set is copied, the machine pauses the job and displays the [Copy] screen.

#### **■** Change Quantity

Displays the [Change Quantity] screen on which you can change the number of copies entered before. Enter a new quantity using the numeric keypad. The new value must include the number of the sample set that has already been

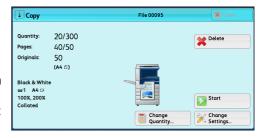

printed. When reducing the quantity, specify a value between 1 (sample set) and the number of copies entered before.

Note

• If you specify "1" as a new quantity and then press the <Start> button, the machine will not process the job.



## **■** Change Settings

Displays the [Change Settings] screen. To cancel the settings you have made, deselect the check box for the feature you want to cancel.

#### **■** Delete

The remaining copies are canceled.

#### ■ Start

The remaining copies are made.

Note • You

• You can also press the <Start> button on the control panel to perform the same operation.

## Combine Original Sets (Adding Originals)

Use this feature when you copy a document that has too many pages to be loaded into the document feeder at one time, or when you scan each document page using the document glass and have the machine process the pages as one job.

When you use this feature, [Next Original] is always selected on the screen during scanning documents with the document feeder or the document glass.

If [Copy Output] is set to [Auto], the output is automatically sorted.

When all documents have been scanned, select [Last Original].

Note

After the first original set is copied, the machine automatically outputs the data remained if the
machine is left unused for the period specified in [Auto Clear]. For more information on [Auto Clear],
refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Clear" in the
Administrator Guide.

Combine Original Sets

XX off

## Select [Combine Original Sets].



Use this feature if the number of your originals exceeds the capacity of the Document Feeder.

te: If you want to select different features

The sets will be combined into one job.

Original Orientation

⚠ Upright Images

Sideways Images

#### **2** Select [On].

## ■ Off

Disables this feature.

## ■ On

Enables this feature.

#### ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Not

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

## • Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.



X Clos

Delete

Last Original

File 12345

Change Quantity.

## Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

20/300

40/50 10

ш1 A4 □ 100%, 200%

## [Copy] Screen When Combine Original Sets is in Progress

The [Copy] screen is displayed when copying starts.

#### **■** Delete

Clears the document data stored with the Combine Original Sets feature, and cancels copying.

Note

 You can also press the <C (Clear)> or <Clear All> button on the control panel to perform the same operation.

# ■ Last Original

Select this button to end scanning documents.

### ■ Next Original

Select this button when you have more documents to copy. This button is always selected when the Combine Original Sets feature is used.

#### ■ Start

After loading the next document, select this button to scan the next document.


Note

• You can also press the <Start> button on the control panel to perform the same operation.

# Delete Outside/Delete Inside (Deleting Outside or Inside of the Selected Area)

This feature allows you specify the areas to be deleted from a document image. Up to three areas can be specified.

**1** Select [Delete Outside/Delete Inside].

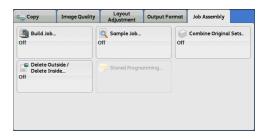

## **2** Select any option.

#### ■ Off

No area is deleted.

#### ■ Delete Outside

Deletes the outside of the selected area.

## **■** Delete Inside

Deletes the inside of the selected area.



#### ■ Area Settings

Displays the [Delete Outside/Delete Inside - Area 1 (Area 2 or Area 3)] screen. You can specify up to three areas.

Refer to "[Delete Outside/Delete Inside - Area 1 (Area 2 or Area 3)] Screen" (P.184).

#### ■ Originals

When the original document is a 2-sided document, specify from which side the specified area is to be deleted.

Both Sides

Applies the settings to both sides of the document.

• Side 1 Only

Applies the settings to Side 1 of the document.

• Side 2 Only

Applies the settings to Side 2 of the document.

## ■ Original Orientation

Allows you to specify the orientation of the document so that the machine can identify the top of the document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.


#### [Delete Outside/Delete Inside - Area 1 (Area 2 or Area 3)] Screen

This screen allows you to specify the area to be deleted. The area is defined by the rectangle formed between the points X1, Y1 and X2, Y2. The origin point is the top right corner of a document.

You can specify a value in the range from 0 to 432 mm for the width (X) and the length (Y) in 1 mm increments.

Note

- $\bullet$  Specify the 2 coordinates from the top right corner of the document.
- $\bullet$  When specifying multiple areas, the specified areas can overlap each other.
- When [Reduce/Enlarge] is set, the specified area will be reduced or enlarged accordingly.
- **1** Select [Area 1], [Area 2], or [Area 3].
- **2** Select the text box for [X1], and enter the value for X1 using the numeric keypad.
- **3** Select the text box for [Y1], and enter the value for Y1 using the numeric keypad.
- 4 Select the text box for [X2], and enter the value for X2 using the numeric keypad.

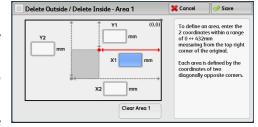

5 Select the text box for [Y2], and enter the value for Y2 using the numeric keypad.

Note

- If all of [X1], [Y1], [X2], and [Y2] are set to [0], the area will be invalid. If no other area is specified, the Delete Outside/Delete Inside feature cannot be used.
- $\bullet$  Pressing the <C (Clear)> button clears the value you have entered.

## ■ Clear Area 1 (Area 2 or Area 3)

Clears all the values set for Area 1 (Area 2 or Area 3).

# Stored Programming (Calling a Stored Program for Build Job)

This feature allows you to call a stored program for Build Job.

This feature is the same as "8 Stored Programming" > "Calling a Stored Program" > "Calling a Stored Program for Build Job".

For more information, refer to "Calling a Stored Program for Build Job" (P.404).

# 4 Fax

This chapter describes the basic operations and features for the Fax services.

Note

- $\bullet$  LINE 2 (Line 2), LINE 3 (Line 3), and IP Fax (SIP) are optional.
- The Fax services are not available for some models. An optional component is required. For more information, contact our Customer Support Center.

•	Fax Procedure	188
•	Operations during Faxing	195
•	About Internet Fax	200
•	About IP Fax (SIP)	207
•	About Server Fax	212
•	Simple Fax	214
•	Fax/Internet Fax	219
•	Layout Adjustment	237
•	Fax/Internet Fax Options	243
•	More Options	261
•	Broadcast	267
•	Receiving Faxes	275
•	Facsimile Information Services	278

## **Fax Procedure**

This section describes the basic fax procedures. The following shows the reference section for each procedure.

Step 1 Loading Documents	188
Step 2 Selecting Features	190
Step 3 Specifying Destinations	191
Step 4 Starting the Fax Job	193
Step 5 Confirming the Fax Job in Job Status	194

## **Step 1 Loading Documents**

The following two methods are available to load documents:

#### **■** Document Feeder

- Single sheet
- · Multiple sheets

#### ■ Document Glass

- Single sheet
- Bound documents, such as books

#### **Document Feeder**

The document feeder supports single and multiple sheet documents with sizes from 125 x 85 mm (Standard size: A5, A5 $\stackrel{\frown}{\Box}$ ) to 297 x 600 mm (long) (Standard size: A3, 11 x 17").

The document feeder automatically detects documents of standard-size widths.

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

The sizes on the left are detected as the sizes shown on the right as follows.

Original Document Size	Document Size Detected by the Document Feeder
8-inch width document	B5 width document
10-inch width document	B4 width document

The document feeder accepts the following number of sheets.

	Number of Sheets		
Document Type (Weight)	Duplex Automatic Document Feeder B1-C	Duplex Automatic Document Feeder B1-PC	
Lightweight paper (38 - 49 gsm)	110 sheets	130 sheets	
Plain paper (50 - 80 gsm)	110 sheets	130 sheets	
Heavyweight paper (81 - 128 gsm)	75 sheets	85 sheets	

**Important** •To avoid paper jams, use the document glass for folded or wrinkled documents, cut-and-pasted documents, curled paper, or back carbon paper.


• When Duplex Automatic Document Feeder B1-C is installed, the lightweight paper of 38 - 49 gsm cannot be scanned 2 sided.

For information on how to fax mixed sized documents, refer to "Mixed Size Originals (Scanning Different Size Documents Simultaneously)" (P.238).


- 1 Remove any paper clips and staples before loading document.
- 2 Load the document face up (when the document is 2-sided, place the front side up) in the center of the document feeder.

Note


• The Confirmation indicator lights up when the document is loaded correctly. If the indicator does not light, the machine may be detecting the document on the document glass. Load the document again.

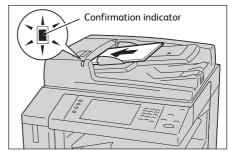

**3** Adjust the document guides to match the size of the document loaded.

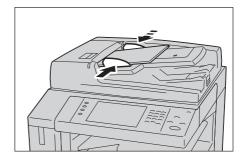

**4** Open the document stopper.

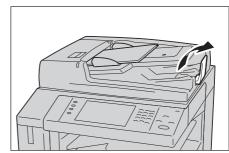

## **Document Glass**

The document glass supports a single sheet, a book, or other similar documents with size 297  $\times$  432 mm (Standard size: A3, 11  $\times$  17").

**Important** • Always close the document cover after using the document glass.

The document glass automatically detects standard size documents.


The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

## **<u>^</u>**CAUTION

Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

## Open the document cover.


Important • Ensure that the touch screen is active, and then load a document. Otherwise, the machine may not properly detect the document size.

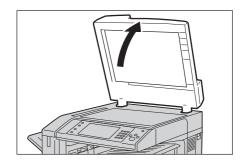

**2** Load the document face down, and align it against the top left corner of the document glass.

Note

• When you load a A5, B5 or A4 document on the document glass in portrait orientation, the scanned image is transmitted with 180 degrees rotated.

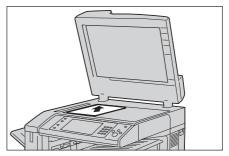

Close the document cover.

Note

• When a standard size document is loaded on the document glass, the size of the document is displayed in the message field.

## Step 2 Selecting Features

The following two services are available to send faxes.

## ■ Simple Fax

Allows you to only select basic features to send faxes.

## **■** Fax/Internet Fax

Allows you to make detailed settings to send faxes.

The following procedure uses [Fax/Internet Fax] to describe how to select features.


You can select the Fax or Internet Fax service, or the Server Fax service on the Services Home screen.

For information on the Simple Fax feature, refer to "Simple Fax" (P.214).

**Important** • The Fax and Internet Fax services are not available while the Server Fax service is enabled.

Note

- The features to be displayed on the screen depend on your machine configuration.
- When the Authentication or Accounting feature is enabled, a user ID and passcode may be required. Ask your system administrator for the user ID and passcode.
- Press the <Services Home> button.

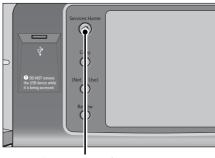

<Services Home> button

**2** Select [Fax/Internet Fax].



**3** If the previous settings still remain, press the <Clear All> button.



<Clear All> button

**4** Select each tab, and select a feature as necessary.

When you press the <Power Saver> button while configuring the features, you can select whether to enable the 2 Sided (Skip Blank Pages) feature. For more information on [2 Sided (Skip Blank Pages)], refer to "2 Sided (Skip Blank Pages)" (P.218).


The following shows the reference section for each tab.

"Fax/Internet Fax" (P.219)

"Layout Adjustment" (P.237)

"Fax/Internet Fax Options" (P.243)

"More Options" (P.261)

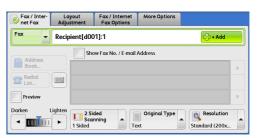

# **Step 3 Specifying Destinations**

Three methods are available to specify recipients: by phone number, by address number, and by group dial number. The following shows input methods supported by each method.

	Numeric Keypad	One-Touch buttons	Address Book
Phone Number	0	X	Х
	4 digits (0001 to 2000)		
Address Number (Speed Dialing)	3 digits + * (nnn0 to nnn9) 2 digits + * (nn00 to nn99)	2 digits (1 to 70) or (1 to 60) <sup>*</sup>	From the list tab and index
Group Dial Number	#+2 digits	Х	0

O :Available

X :Not available

<sup>\*:</sup> There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following:

## [Type 1]

The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.

#### [Type 2]

The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01, and M02 are used for stored programs and they correspond to the registered stored programs 1 to 12.

\*: By default, [Type 1] is selected. For information on how to change the settings registered to the one-touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.

**Important** • When using the Server Fax service, you cannot specify address numbers using the numeric keypad or use one-touch buttons.

You can specify multiple recipients (Broadcast Send) using the above methods. You can also use a combination of the methods.

If the same recipient was specified for several pending documents, you can send the documents with a single phone call. This feature is called Batch Send. Note that you cannot use Batch Send with Broadcast Send, Relay Broadcast, Remote Folder, and Delay Start when prior to the specified time. When using a redial, resend, or delayed start send transmission job, or authentication feature, to send to the same address from different users, then Batch Send is not possible.


**Important** • Confirm recipients before sending a fax.

For information on Broadcast Send, refer to "Broadcast Send (Transmitting to Multiple Recipients)" (P.267).

To specify a line to send a fax when the Additional G3 Port Kit 2 (optional) is installed, refer to "Specifying a Line (Port)" (P.230).

The following describes how to enter a phone number with the numeric keypad as an example.

1 Enter a fax number using the numeric keypad.

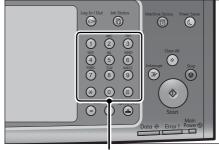

Numeric keypad

**2** To specify multiple recipients, select [+ Add] on the touch screen.

Note

• Select [Reconfirm Recipients] in the message field to check the entered value. You can hide [Reconfirm Recipients] to show the remaining memory capacity. For more information, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" > "Reconfirm Fax/Internet Fax Button" in the Administrator Guide.



- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.
- Depending on the settings, a screen to re-enter the recipient may be displayed after you specify the recipient and then select [+ Add]. In such case, re-enter the recipient.
- You can combine the fax numbers registered in the one-touch buttons, speed dial, and the Address Book respectively and the numbers entered using the numeric keypad to specify as one recipient. This is called Chain Dial. Select [+ Add] when you finish combining. You can set whether the chain dial is used or not in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Chain Dial" in the Administrator Guide.

• When the [Preview] checkbox is checked, you can preview the read images while reading. For more information, refer to "Previewing the Read Images during a Fax Job" (P.196).

For information on how to specify a fax number using the Address Book, refer to "Specifying a Destination Using the Address Book" (P.220).

For information on how to specify a fax number using the speed dialing, refer to "Speed Dialing (Specifying a Destination Using an Address Number)" (P.225).

For information on how to specify a fax number using one-touch-buttons, refer to "Specifying a Destination Using a One-Touch Button" (P.228).

For information on the Internet Fax, refer to "About Internet Fax" (P.200).

For information on the IP Fax (SIP), refer to "Internet Fax / Fax / IP Fax (SIP) (Selecting Internet Fax / Fax / IP Fax (SIP))" (P.219).

## Step 4 Starting the Fax Job

The following describes how to start a fax job.

Press the <Start> button.

- **Important** If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.
  - Fax cannot be sent if a copy protection code is detected.

Note

- Depending on the settings, the screen to reenter the recipient may be displayed after pressing the <Start> button. In this case, reenter the recipient.
- If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.



<Start> button

## ■ If you have more documents

If you have more documents to fax, select [Next Original] on the touch screen while the current document is being scanned. This allows you to send the documents as one set of data.

**2** While documents are being scanned, select [Next Original].

Note


- When using the document feeder, load the next document after the machine has finished scanning the first document.
- When [Next Original] is displayed on the screen shown on the right and no operation is performed during a certain period of time, the machine automatically assumes that there are no more documents.



• You can change the scan settings of the next document by selecting [Resolution], [Original Size] and [Lighten/Darken] that are displayed after selecting [Next Original].

1 Store Fox

**3** Load the next document.

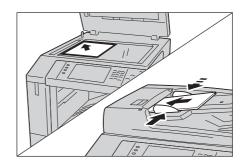


- 4 Press the <Start> button.
  If you have more documents, repeat steps 3 and 4.
- **5** When all documents have been scanned, select [Send (Last Original)].



# Step 5 Confirming the Fax Job in Job Status

The following describes how to confirm the status of a fax job.

1 Press the <Job Status> button.

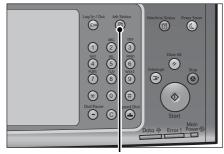


<Job Status> button

**2** Confirm the job status.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- From the drop-down menu, you can select [Scan, Fax, & Internet Fax Jobs] and display the desired job.

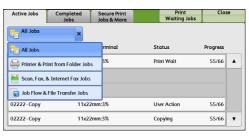

#### ■ If undelivered faxes exist

You can confirm undelivered faxes on the [Job Status] screen or in an Activity Report.

For information on how to resend or delete undelivered faxes, refer to "Job Status" (P.423).

# **Operations during Faxing**

This section describes the available operations during faxing. The following shows the reference section for each operation.

Stopping the Fax Job	195
Previewing the Read Images during a Fax Job	196
Changing the Scan Settings	198

# Stopping the Fax Job

To cancel scanning a fax document, use the following procedure.

1 Press either the <Stop> button on the control panel or [Delete] on the touch screen.



<Stop> button




2 Select [Delete].



## ■ If [Delete] does not appear on the screen:

**1** Press the <Job Status> button.

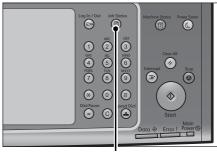

<Job Status> button

**2** Select the job to cancel.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- **3** Select [Delete].





4 Select [Delete].



# Previewing the Read Images during a Fax Job

Before sending a fax, you can preview the read images while reading the next document.

Note

- A previewed image cannot be rotated.
- When [Pages per Side] is [On], the document cannot be previewed. For the Pages per Side feature, refer to "Pages per Side (Combining Multiple Pages into One Sheet)" (P.252).
- 1 When a document starts to be read with [Preview] is checked on the [Simple Fax] or [Fax/Internet Fax] screen, the screen on the right is displayed. After the document is read, select [Preview]. A preview screen is displayed and the first page of the lastly read document is displayed.



Note


- To send a job, select [Send (Last Original)] or select [Send] on the preview screen. Selecting [Start] does not send the current job.
- When [Store for Free Polling] or [Store for Secure Polling] is selected, [Save (Last Original)] is displayed instead of [Send (Last Original)].
- Depending on the setting of Skip Blank Pages, [Preview] cannot be selected and the first page of the last read document is not displayed. for Skip Blank Pages, refer to "5 Tools" > "Fax Service settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.
- When this screen or the preview screen is displayed and the time of [Auto Clear] lapsed without any
  operation, the read document is automatically sent. For Auto Clear, refer to "5 Tools" > "Common
  Service Settings" > "Machine Clock/Timers" > "Auto Clear" in the Administrator Guide.

**⊘** Close

**X** Cancel

Sαve

## **2** Select any option.

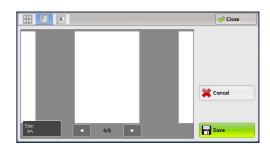

# ■ (Thumbnail view)

A previewed image is displayed in a thumbnail view. In the thumbnail view, the following operations are available:

- Drag or flick the preview area up and down to switch pages.
- Tap a thumbnail to move to the entire view.

Note

• For information on how to drag or flick, refer to "Touch Screen" (P.98).


# ■ (Entire view)

An entire previewed image is displayed.

When the page switching buttons are displayed



• When the thumbnail bar is displayed

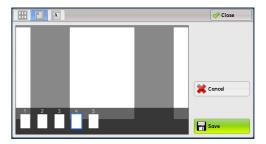


In the entire view, the following operations are available:

- Drag or flick the preview area side to side to switch pages.
- Double-tap the previewed image to move to the enlarged view.
- Tap the preview area to switch whether to display the page switching buttons or thumbnail bar.
- Tap the previous or next page displayed on the preview area to display the tapped page on the center of the screen.
- Drag the thumbnail bar side to side to scroll thumbnails. Tap the desired thumbnail to be displayed.

# ■ (Enlarged view)

A previewed image is enlarged or reduced.

• When the slider is displayed

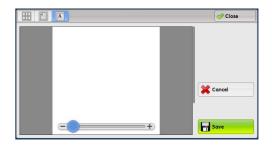

• When the thumbnail bar is displayed



In the enlarged view, the following operations are available:

- Drag or flick the enlarged image side to side or up and down to move the position to be displayed.
- Double-tap a previewed image to change the ratio of the image size.
- Tap the preview area to switch whether to display the slider or thumbnail bar.
- Drag the slider to change the ratio of the image size.
- Drag the thumbnail bar side to side to scroll thumbnails. Tap the desired thumbnail to be displayed.

#### ■ Cancel

Cancels the current job.

#### ■ Send

Sends the current job.

Note

- Closing a preview screen by selecting [Close] returns to step1. Selecting [Send (Last Original)] in the screen sends a job.
- When [Store for Free Polling] or [Store for Secure Polling] is selected, [Save] is displayed. Selecting [Save] or selecting [Save (Last Original)] in step1, the current job is stored to the public folder or private folder on the machine.

# Changing the Scan Settings

You can change the scan settings while scanning a document.

X Cancel

**→ □ □ □** 

**⊘** Save

**1** Select [Next Original].



Select [Change Settings].



Change Settings

Fine (200 dpi)

Superfine (400 dpi)

Superfine (600 dpi)

Auto Detect

A4 🗆

A4 ()

Resolution

Set [Resolution], [Original Size], and [Lighten/ Darken].

For each setting, refer to "Resolution (Specifying the Scanning Resolution)" (P.236), "Original Size (Specifying the Scan Size for the Original)" (P.238), or "Lighten/Darken (Adjusting Fax Density)" (P.233).

Select [Save].



Press the <Start> button.

## About Internet Fax

Unlike general fax communications using public phone lines, Internet Fax uses corporate intranets and the Internet to send or receive scanned documents as e-mail attachments.

Because Internet Fax uses existing corporate intranets and the Internet, the transmission is less expensive than general fax transmission.

Note

- This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
- To use Internet Fax, various settings are required to display [Internet Fax] from the drop-down menu on the [Fax/Internet Fax] screen. For more information, consult your system administrator.
- Internet Fax does not support color documents. If the machine receives color documents for Internet Fax (Profile: TIFF-C), the documents are converted to black-and-white documents and printed. To send and receive color documents, use the E-mail service.

For information on how to connect the machine to a network and how to set the network environment, refer to "5 Tools" > "Connectivity & Network Setup" in the Administrator Guide, and the manual included in the Driver CD Kit.

Internet Fax Features	200
Sending Internet Fax	202
Receiving Internet Fax	203
Useful Features	204

## **Internet Fax Features**

The following describes the Internet Fax features of the machine.

## Sending Internet Fax

The Internet Fax service allows you to send documents scanned by the machine as TIFFformat attachments to Internet Fax-compatible machines.

- Important The TIFF file profiles that can be processed differ depending on the Internet Fax-compatible machine of the recipient. Confirm the profile that can be processed by the recipient's Internet Faxcompatible machine before specifying a profile. For more information, refer to "Sending Internet Fax" (P.202). For information on profiles, refer to "Internet Fax Profile (Specifying Internet Fax Profiles)" (P.259).
  - If a document is sent to a computer using the Internet Fax service, it cannot be opened in some cases. When you send a document to a computer, use the E-mail service.

#### ■ Using Direct Internet Fax feature

You can send an Internet fax directly to the Internet Fax-compatible machines without going through the SMTP server.

Note

• You can switch between Internet Fax and Direct Internet Fax in the System Administration mode. These two features cannot be enabled simultaneously. For information on how to switch them, refer to "5 Tools" > "Fax Service Settings" > "Internet Fax Control" > "Internet Fax Path" in the Administrator Guide.

#### ■ Registering e-mail addresses in address numbers

Once you register a recipient's e-mail address in an address number, you do not need to enter the e-mail address each time you send Internet Fax to the recipient.

• To address numbers, you can also register the Internet Fax profile and other settings required for transmission

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

## ■ Using the Broadcast Send feature

You can send an Internet fax to multiple destinations by specifying multiple e-mail addresses. Also, you can mix regular fax recipients and Internet Fax recipients to send a broadcast transmission for fax and Internet Fax.

Note

• Up to three broadcast transmissions can be performed. The subsequent jobs will be sent in the sequential order after the former jobs are finished.

For information on how to specify recipients, refer to "Step 3 Specifying Destinations" (P.191) and "Specifying a Destination Using the Address Book" (P.220).

## ■ Forwarding files stored in folders

By enabling the forwarding feature and registering a forwarding e-mail address for a folder in advance, the faxes stored in the folder are automatically forwarded to the specified computer, as e-mail attachments. The user, therefore, does not need to walk up to the machine to pick up the faxes.

For more information, refer to "Forwarding Files Stored in a Folder" (P.206).

### ■ Sending Internet Fax to regular fax machines via a relay station

By specifying e-mail addresses in a specific format, you can send faxes from a machine on the network via an Internet Fax-compatible machine (fax gateway) to fax machines that do not support the Internet Fax service.

**Important** • This feature is available only when the e-mail reception method on the fax gateway is set to SMTP. For information on the fax gateway feature, refer to "Sending Internet Fax to regular fax machines via a relay station" (P.205).

### ■ Precautions when sending Internet Fax

The message "Files Sent" displayed on the [Job Status] screen of the machine, the Job History Report, and a Transmission Report indicates that the transmission to the SMTP server configured on the machine has been successful. The Internet Fax transmission to the recipient may not complete if there is a problem on the Internet. In such case, the machine will not be notified of such transmission error. After sending an important e-mail, we suggest that you confirm it is received, such as by calling the recipient.

You can receive an e-mail of the transmission result if you set Read Receipts and Delivery Receipt when transmitting. For more information, refer to "Acknowledgement Report (Confirming Transmission Results)" (P.243).

## Receiving Internet Fax (Printing Internet Fax)

The machine automatically prints Internet Fax documents that are sent by e-mail from an Internet Fax-compatible machine.

Note

• The following TIFF file formats and profiles are available for e-mail reception. File format: TIFF-FX (RFC2301) Profile: TIFF-S, TIFF-F, TIFF-J, and TIFF-C. If an unsupported profile is received, the machine may not be able to print the file. For more information, refer to "Receiving Internet Fax" (P.203).

#### Restrictions on the E-mail Server

Depending on the system environment, such as restrictions on the e-mail server, large-size e-mails cannot be sent or received. Before you set the data-split feature, therefore, check the system environments of the sending and receiving ends.

If data is split into multiple data but each data size is still too large, change the image quality or resolution of each data to make its size even smaller.

## Features Unavailable for Sending Internet Fax

The following features are available for regular fax transmission, but are not available for Internet Fax transmission.

- Starting Rate
- Priority Send
- · Delay Start
- Cover Page
- Recipient Print Sets
- F Code
- · Remote Folder
- Remote Polling
- Manual Send
- · Relay Broadcast
- Sorting received faxes by folder (Folder Selector)
- Direct Fax

If you are using the fax gateway feature, you can set Starting Rate and F Code. For more information on the fax gateway feature, refer to "Sending Internet Fax to regular fax machines via a relay station" (P.205).


# Sending Internet Fax

The following describes how to send Internet Fax.

Important • The Cc, Bcc, and Reply To features are not available for Internet Fax.

• The machine converts documents to the TIFF format and then sends them as e-mail attachments.

**1** Select [Internet Fax].

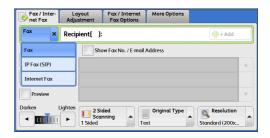

**2** Select the keyboard button.



**3** Specify a recipient with up to 128 characters using the keyboard displayed on the touch screen.

Important • If you specify a fax number, the data will not be sent.

- To specify an e-mail address for Direct Internet Fax, use the following format:
  - When specifying a host name, enter FQDN to the right of the @ symbol.
     Example: local-part@device.domain.com



- When specifying an IP address, enter the IP address with brackets ("[", "]") to the right of the @

Example: local-part@[192.0.2.1]

Note

• You can use address numbers, one-touch buttons, group dial numbers, or the Address Book to specify e-mail addresses. For more information, refer to "Speed Dialing (Specifying a Destination Using an Address Number)" (P.225), "Specifying a Destination Using a One-Touch Button" (P.228), and "Specifying a Destination Using the Address Book" (P.220).

## Enter a subject and message if necessary.

For information on how to enter the subject, refer to "Internet Fax Subject (Specifying the Internet Fax Subject)" (P.250). For information on how to enter the message, refer to "Internet Fax Message (Editing the Internet Fax Mail Contents)" (P.250).

**Important** • If the hard disk of the machine becomes full during scanning of a document, a screen appears to prompt you to select whether to send the job up to the stored pages or to cancel the job. Select one of the processes.

Note

- If the hard disk of the machine becomes full during Internet Fax transmission, the transmission is canceled and the document data is deleted.
- If TIFF-J is specified for the profile, the recipient's computer may not be able to display the attached TIFF file properly. In this case, specify the TIFF-S or TIFF-F profile.
- If the Internet Fax-compatible machine of a recipient is not the same model as this machine, it may not print data received from this machine. Confirm the Internet Fax features supported by the destination machine before sending data to it.
- When specifying an address from the Address Book for Internet Fax / IP Fax (SIP), make sure that the address does not contain a prohibited domain name. If it does, it cannot be used.

## **Receiving Internet Fax**

#### ■ Reception method

When the machine receives e-mail from an Internet Fax-compatible machine, the received document is printed automatically.

The machine also accepts e-mails addressed to folders on the machine, such as "BOX123@myhost.example.com".

For information on folders, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide. For information on job flow sheets, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" in the Administrator Guide.

Note

- If domains for receiving e-mail are restricted by CentreWare Internet Services, you will only receive Internet Fax from the permitted domains. For information on the domain filtering, refer to "5 Tools" > "Connectivity & Network Setup" > "Other Settings" > "Domain Filtering" in the Administrator Guide.
- You can confirm the domain setting status in a Domain Filter List. For information on the Domain Filter List, refer to "4 Machine Status" > "Machine Information" > "Print Reports" in the Administrator Guide.

## ■ Printing size

Internet Fax documents received on the machine are printed at the same size as the original documents of the senders.

• When [TIFF-S] is selected for the profile, the printing size will be A4.

When the loaded paper is not the same size as the sent document or when the paper tray used for printing received documents is restricted, the receiving process will be the same as that for regular faxes.

## ■ Receiving e-mail

Each e-mail header and attachment (TIFF file) of received e-mail will be printed.

• Split documents sent by e-mail

If a document scanned by the machine is split into segments according to the [Maximum Number of Pages per Split Send] setting made with CentreWare Internet Services, each segment will be treated as individual e-mail and attached with the details of split data.

Attachments (TIFF format)

If an unsupported attachment file is received, the file is deleted. You can confirm the error in a Job History Report.

• When the folder number is not registered

If the specified folder is not registered, the received data is deleted. You can confirm the cause of the problem in a Job History Report.

Folder operations

If the hard disk space of the machine is insufficient while printing e-mail or storing e-mail to the folder, the page being processed will be deleted at the point in time when the machine runs out of hard disk space.

### ■ Restricting incoming e-mail

The machine can be configured to accept or reject e-mails received from specified domains. This feature is called "Domain Filtering". You can register up to 50 domains as permitted or rejected domains.

When receiving an e-mail, the machine checks the Domain Filtering settings. If the domain is registered as a rejected domain, or if the domain is not registered as an accepted domain, the machine will not receive the e-mail. You can confirm the result in the Job History Report. The job history of any rejected e-mail is not stored.

For information on the Domain Filtering, refer to "5 Tools" > "Connectivity & Network Setup" > "Other Settings" > "Domain Filtering" in the Administrator Guide.

#### Useful Features

#### Using an E-mail Address to Send Internet Fax to a Folder

By specifying the e-mail address of a folder on this machine, you can send Internet Fax from an Internet Fax-compatible machine to the folder.


When Internet Fax data is received, the machine stores it in the target folder and prints a Folder Report.

This feature is available only when the recipient's machine can receive e-mail via SMTP. To use this feature, the recipient's machine must have a folder that does not have a passcode. For information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

**1** Select [Internet Fax].



- 2 Select any option.
- **3** Enter the e-mail address of the target folder in the following format:

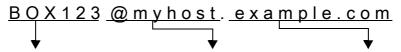

BOX (fixed characters to indicate folder) + folder number

@ + host name of the receiving machine

Domain name of the receiving machine

Example: Folder number 123

(Enter the digits of the folder number to

match those of the recipient)

Host name of the receiving machine myhost

Domain name of the receiving machine example.com

**Important** • If the hard disk of the machine becomes full during Internet Fax transmission, the transmission is canceled and the document data is deleted.

Note

• If the hard disk of the machine becomes full during scanning of a document, a screen appears to prompt you to select whether to send the job up to the stored pages or to cancel the job. Select one of the processes.

## Sending Internet Fax to regular fax machines via a relay station


By specifying e-mail addresses in a specific format, you can send a document to regular fax machines (that do not support the Internet Fax service) via a network.

This feature enables the machine to first send a document to an Internet Fax-compatible machine (fax gateway) by e-mail via the Internet. The e-mail document is then converted to a fax document on the Internet Fax-compatible machine, and is forwarded to its destinations. If you locate the fax gateway and regular fax machines within an area where the same local rate applies, the fax transmission costs can be reduced.

Important • This feature is available only when the fax gateway can receive e-mail via SMTP.

Note

- The e-mail received by the fax gateway is deleted even if the fax was not correctly sent.
- The setting specified in [Starting Rate] on the [Fax/Internet Fax Options] screen is used as the communication mode from the fax gateway to the destination fax machine.
- You can restrict fax forwarding in [Fax Transfer from Address Book] and [Fax Transfer Maximum Data Size] in the System Administration mode.
- **1** Select [Internet Fax].
- **2** Select any option.
- **3** Enter the e-mail address of the receiving machine in the following format:

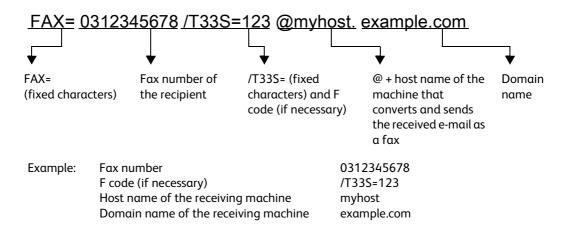

**Important** • If the hard disk of the machine becomes full during Internet Fax transmission, the transmission is canceled and the document data is deleted.

Note

• If the hard disk of the machine becomes full during scanning of a document, a screen appears to prompt you to select whether to send the job up to the stored pages or to cancel the job. Select one of the processes.

## Forwarding Files Stored in a Folder

You can automatically forward faxes stored in a folder, as e-mail attachments.

Faxes sent to folders using the fax signal method (proprietary communication procedures), F Code method, or DTMF method, and faxes stored in folders by the Folder Selector feature can be forwarded as e-mail attachments.

**Important** • This feature is available only when the mail receiving protocol is SMTP.

For information on how to forward files in a folder, send files to a folder, use the Folder Selector to receive files in a folder, and print or delete files received in a folder, refer to "Checking/Operating Files in a Folder" (P.375).

For information on how to set the Folder Selector feature, refer to "5 Tools" > "Fax Service Settings" > "Fax Received Options" in the Administrator Guide.

### **■** Forwarding Internet Fax

The machine can automatically forward faxes received in a folder or faxes stored in a folder by using the Folder Selector feature to the forwarding address specified for the folder as email.

With this forwarding feature, you can receive Internet Fax documents on your computer without having to walk up to the machine to pick them up. You can also save paper by displaying the documents on your computer screen.

#### ■ How to forward Internet Fax

The following operations are required for using the forwarding feature of Internet Fax.

On the machine sending a fax

Sending faxes to the folder using the fax signal method (proprietary communication procedure), F Code method, or DTMF method.

For information on the transmission method, refer to "More Options" (P.261).

On the machine receiving the fax in a folder and forwarding an Internet fax
 Creating a job flow sheet to specify a forwarding address and then making a link between the job flow sheet and the folder.

For information on how to create a job flow, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" in the Administrator Guide.

**Important** • Do not set the address of the machine as the forwarding address.

Note

- You can register up to 100 forwarding addresses.
- [Folder Number] and [Passcode] are required by the sender. Inform the sender of the settings.
- If the fax you received is a JBIG-compressed image, and if the Internet Fax profile of the forwarding destination is set to TIFF-F, the image is converted into MH format when forwarding. Also, if the Internet Fax profile is TIFF-S, the fax image is forwarded as is without changing the size and resolution settings.
- If the hard disk in the machine becomes full while the machine is receiving an Internet fax, the reception is canceled and the partly received file is deleted.
- If there is a problem with the data during Internet Fax forwarding, the forwarding is canceled and the received file is stored in the folder.
- If forwarding using SMTP fails, the received file is stored in the folder.
- You can confirm the forwarding result in a Job History Report.


## **About IP Fax (SIP)**

IP Fax (SIP) refers to the process of sending and receiving faxes using an IP Network in a corporate intranets.

The process is compliant with the T.38, an ITU recommendation. Because IP Fax (SIP) uses existing corporate intranets, the transmission is less expensive than G3 fax transmission using public telephone network.

Note

ullet The communication between IP Fax (SIP) devices is available for our compatible machines in a corporate intranet. (Able 1407  $\lambda$  is not available.) For information on the compatible machines, contact our Customer Support Center.

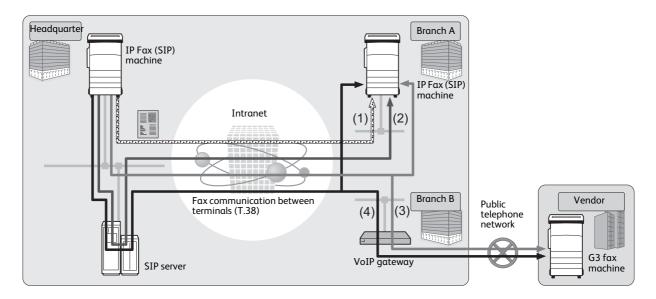

IP Fax (SIP) can be configured with SIP server and VoIP Gateway. The functions of the devices are as follows:

#### **■ SIP Server**

Using a SIP Server, IP Fax designation can be designated by SIP user name and telephone number. Main features of a SIP server are:

- Receives address information of the machine in the IP network, and registers the address in the database (register server).
- Relays request and response from the SIP client (proxy server).

## ■ VoIP Gateway

VoIP gateway allows the machine to relay fax communications between the IP network and the public telephone network. A VoIP gateway is required for communicating with a G3 Fax device.

Note

- Cisco MCS 7800 series (Cisco Unified Communications Manager 6.0/6.1/7.1/8.0 is installed) is validated as a SIP server available for the machine.
- Cisco ISR 2800 series (Cisco IOS 12.4 is installed) is validated as a VoIP gateway available for the machine.
- For more information on configuration of SIP server and VoIP gateway, contact our Customer Support Center.
- The communication mode supported by IP Fax (SIP) is G3.

IP Fax (SIP) can be used in the following four connection configurations:

Method to input IP Fax destination differs depending on the connection configuration.

## ■ IP Fax (SIP) Device Only

IP Fax (SIP) devices communicate with each other directly, using IP network (Intranet).

The SIP device address of the communication target shall be designated as an IP Fax (SIP) between the IP Fax (SIP) devices. For example, 1111@192.0.2.1 (address of the SIP device).

#### **■ SIP Server Installed**

IP Fax (SIP) devices communicate via a SIP server, using an IP network (Intranet).

Since SIP server utilizes address translation, IP Fax (SIP) can be sent to IP Fax (SIP) devices by a designated SIP user name or telephone number. For example, 1111 (SIP user name) or 0312345678 (telephone number).

#### ■ VoIP Gateway Installed

In addition to direct communication between IP Fax (SIP) devices in an IP network (Intranet), communication with a G3 Fax device, which does not have IP Fax (SIP) feature, is possible using a VoIP gateway.

IP Fax (SIP) can be sent in the following two methods:

- For IP Fax (SIP) device, designate the SIP device address of the communication target. For example, 1111@192.0.2.1 (SIP device address).
- For G3 Fax device, designate the telephone number. For example, 0312345678 (telephone number).

### ■ SIP Server and VoIP Gateway Installed

In addition to the communication between an IP Fax (SIP) device using a SIP server in an IP network (Intranet), communication with a G3 Fax device, which does not have a IP Fax (SIP) features, is possible using a VoIP gateway.

Since SIP server utilizes address translation, an IP Fax (SIP) can be sent to an IP Fax (SIP) device by designating the SIP user name or telephone number.

For G3 Fax device, IP Fax can be sent by designating telephone number.

For example, 1111 (SIP user name) or 0312345678 (telephone number).

## **IP Fax (SIP) Features**

The following describes the IP Fax (SIP) features.

#### Operations similar to operating regular fax

By selecting [IP Fax (SIP)] and entering address in the appropriate form, you can send and receive fax documents in a manner similar to operating regular fax.

Also, you can use most features available for regular fax such as redial feature, remote folder, and others.

For other available features, refer to "Feature Comparison with Regular Fax" (P.210).

For operations of fax documents received by using the Remote Folder, refer to "Fax/Internet Fax" (P.219).

## Reduction of telecommunication fee

Within an intranet, communication between IP Fax (SIP) devices requires no telecommunication fee. For this reason, IP Fax (SIP) is suitable for sending and receiving fax documents between head office and branches in an intranet.

By using a VoIP gateway, you can reduce the telecommunication cost for sending fax documents to the outside of the intranet.

# ΩX

## Communication with regular fax machines

When a VoIP gateway is installed and configured for IP Fax (SIP), you can have fax communication with G3 fax machines connected to the public telephone network.

Note

- $\bullet$  For the configuration of a VoIP gateway, check with your network administrator.
- The Starting Rate supported in IP Fax (SIP) is G3.

#### **Direct Fax**

You can use the Direct Fax feature to fax documents created with your computer applications directly in the same manner as printing.

For the Direct Fax feature, refer to "Sending Fax" (P.454).

## Forwarding feature registered in job flow sheet

By registering job flow, you can forward documents in stored folder or scanned documents via IP Fax (SIP).

## Registering in the Job Memory

By storing a setting you frequently use in IP Fax (SIP), you can call the setting with a single button operation.

# Feature Comparison with Regular Fax

The feature comparison between the IP Fax (SIP) and the regular fax is as follows:

		IP Fax (SIP)		
Features	Regular fax <sup>*1</sup>	IP Fax (SIP) only	SIP server	VoIP Gateway
Redial List	0	0	0	0
Relay Broadcast	0	Х	Х	X*2
Local Name	0	0	0	Х
Starting Rate	0	0	0	0
Priority Send	0	0	0	0
Delay Start	0	0	0	0
Cover Page	0	0	0	0
Recipient Print Sets	0	0	0	Х
Remote Folder	0	O*3	O*3	X*2
F Code	0	0	0	0
Remote Polling	0	O*4	O*4	O*4
On-hook	0	Х	Х	Х
Manual Send	0	Х	Х	Х
Manual Receive	0	Х	Х	Х
Direct Fax	0	0	0	0
Folder Selector Setup	0	0	0	0
Output Destination Setup	0	0	0	0

O :Available

X :Not available


- $^{\star}1~$  : Refers to G3 fax machines connected to the public telephone network.
- \*2 : Available for the Remote Folder and the Relay Broadcast using F code.
- $^{*}3$  : Available for the Remote Folder using fax signal method. Unavailable for DTMF method.
- $^{*}4$  : Available for the Remote Polling and the Store for Secure Polling. Unavailable for the On-hook.

Note • The buttons of some unavailable features are not displayed on the control panel.

# Sending IP Fax (SIP)

The following describes the procedure of sending IP Fax (SIP).

**1** Select [IP Fax (SIP)] from the options for fax type.

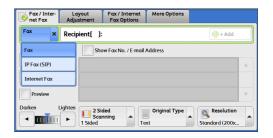

Recipient[d001]:0312345678

Redia List...

Show Fax No. / E-mail Address

## **2** Configure features as necessary.

For available features, refer to "Fax/Internet Fax" (P.219).

**3** Specify a recipient.

### Example:

• Telephone number: 0312345678

• SIP user name: 1111

SIP device address: 1111@192.0.2.1

Important • The method to input IP Fax (SIP) destination differs depending on the fax type of a recipient or the connection configuration. For these differences, refer to "About IP Fax (SIP)" (P.207).

• Check the recipient information before sending the fax.

For the method to specify a recipient using keyboard, refer to "Entering Text" (P.100).

For other methods to specify a recipient, refer to "Fax/Internet Fax" (P.219).


For the broadcast sending, refer to "Broadcast" (P.267).

#### Press the <Start> button.

- **Important** If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.
  - Fax cannot be sent if a copy protection code is detected.

Note

- $\bullet$  Depending on the settings, a screen to reenter the recipient may be displayed after you specify the recipient. In such case, reenter the recipient.
- If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.

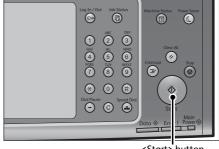

<Start> button

If a fax cannot be sent, refer to "15 Problem Solving" > "Trouble during Faxing" in the Administrator Guide.

For the method to cancel sending fax, refer to "Stopping the Fax Job" (P.195).

# Receiving IP Fax (SIP)

Received fax documents are printed automatically in a manner similar to that of a regular fax.

For information on operations of the Remote Folder, refer to "Receiving Faxes" (P.275).

## **About Server Fax**

If your machine supports the Scan service, installing the Server Fax Kit (optional) allows you to use the Fax service of a Server Fax server.

When your machine does not support the Fax service and supports the Server Fax service only, the Server Fax service will be enabled automatically.

When your machine supports both the Fax and Server Fax services, manually switch to the Server Fax service in the System Administration mode.

With this Server Fax service, you can transfer image data received by the machine to the Server Fax server and can transfer image data received by the Server Fax server to the machine via a network based on the settings you made.

The Server Fax service supports the SMB, FTP, and SMTP protocols.

For information on how to connect the machine to a network and how to set the network environment, refer to the Administrator Guide, and the manual included in the Driver CD Kit.

Important • While the Server Fax service is enabled, the Fax service is detected as "not installed" even if the Fax Kit 2 (optional) is installed on the machine. During that time, therefore, fax transmission and reception are disabled and printed reports show that the machine does not support the Fax service.

Note

- The Server Fax service cannot be used together with the Fax or Internet Fax service.
- This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

## Sending Server Fax

**1** Select [Fax] on the Services Home screen.



**2** Use the keyboard to directly enter a destination, or use the Address Book to specify a destination.

For information on how to use the keyboard, refer to "Specifying a Destination Using the Keyboard Screen" (P.229). For information on how to use the Address Book, refer to "Specifying a Destination Using the Address Book" (P.220).

**Important** • When the Server Fax service is used for fax transmission, the attributes other than [Fax Number], [Name], and [Index] are ignored in the Address Book.

## Features Unavailable for Sending Server Fax

The following features are available for regular faxes, but are not available for server faxes.

Screen	Features
Fax	Resolution
Transmission Options	Priority Send
	Cover Page
	Recipient Print Sets
	Remote Folder
	F Code
More Options	Remote Polling
	Store for Polling
	On-hook

<sup>\*:</sup> When the SMB or FTP protocol is used, the available options are [Standard (200 x 100 dpi)] and [Fine (200 dpi)], and the resolution of data that is sent to a final destination depends on the resolution setting on the fax server. When the SMTP protocol is used, the available option is [Fine (200 dpi)] only.

You can specify the following settings of the Server Fax service under [Tools] > [System Settings] > [Scan Service Settings] > [Scan Defaults]:

- Background Suppression
- Lighten/Darken
- Sharpness

## Features Available for Sending Server Fax (When SMTP is Used)

When the SMTP protocol is used, the Server Fax service is compliant with the E-mail settings configured in the System Administration mode. The following E-mail settings, however, are not available for the Server Fax service:

- · Read Receipts
- · Reply To

# Simple Fax

You can select [Fax/Internet Fax] or [Simple Fax] on the Services Home screen to set the features for the Fax service.

This section describes the features you can select on the [Simple Fax] screen. [Simple Fax] allows you to use only basic features to easily send faxes. The following shows the reference section for each feature.

Specifying a Destination Using the Numeric Keypad	214
Speed Dialing (Specifying a Destination Using an Address Number)	215
Specifying a Destination Using a One-Touch Button	216
Previewing the Read Images during a Simple Fax Job	216
Resolution (Specifying the Scanning Resolution)	217
Original Type (Selecting the Document Type)	217
2 Sided Scanning (Transmitting 2-sided Originals)	218

1 Select [Simple Fax] on the Services Home screen.

Note


• [Simple Fax] is not displayed on the Services Home screen when the Server Fax service is enabled



**2** Select a feature on the [Simple Fax] screen.

Note

• For the Simple Fax service, you can only set [Resolution], [Original Type], and [2 Sided Scanning]. In addition, when you use this service, [Mixed Size Originals] is set to [On], and [Transmission Header Text] is set to [Display Header]. If you want to set the other options, use [Fax/Internet Fax] on the Services Home screen to send faxes.

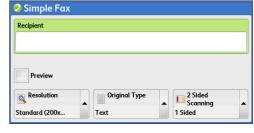

• You cannot switch between [Fax/Internet Fax] and [Simple Fax]. To switch one to another, you must return to the Services Home screen. Once you return to the Services Home screen, the settings you have made in [Fax/Internet Fax] or [Simple Fax] will be cleared.


# Specifying a Destination Using the Numeric Keypad

Specify a destination using the numeric keypad.


**1** Enter a fax number using the numeric keypad.

Note


• If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.

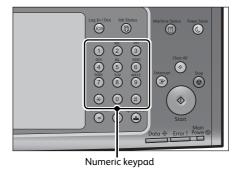

214

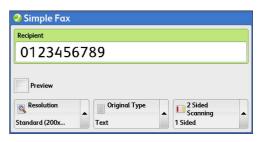

**2** Press the <Start> button.

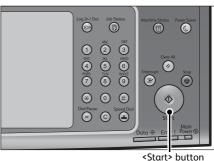

# Speed Dialing (Specifying a Destination Using an Address Number)

You can use address numbers to specify recipients. Register the address numbers for speed dialing in advance.


When you specify address numbers, confirm that the corresponding fax numbers are correctly registered on the machine. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

Note


- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.
- You can specify only fax recipients using address numbers for the Simple Fax service. The number registered for the Internet Fax service and IP Fax (SIP) cannot be specified.
- Press the <Speed Dial> button, and enter a 4digit address number.

Note

• If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value.

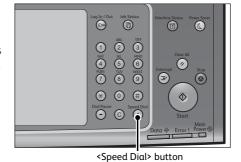

**2** Press the <Start> button.

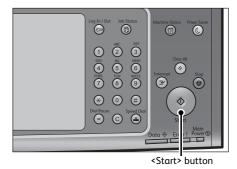

**3** Confirm the destination displayed on the touch screen, and then select [Yes].

# Specifying a Destination Using a One-Touch Button

You can use the one-touch buttons to specify recipients. One-touch buttons correspond to the address numbers from 0001 to 0070, or 0001 to 0060. For example, when the number you want to dial is registered to the address number 0001, press one-touch button <1>.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


#### Note


- There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following. By default, [Type 1] is selected.
- [Type 1] The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.
- [Type 2] The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01, and M02 are used for stored programs and they correspond to the registered stored programs 1 to 12.
- Press a one-touch button. Confirm that the recipient (fax number) specified with the onetouch button is displayed on the touch screen.

- **Important** The one-touch buttons have a sensor to detect which page of one-touch buttons (1 -24, 25 - 48, 49 - M02) is currently opened. Before pressing a one-touch button, turn over the one-touch panel completely, and take off your hand from the panel. Do not press the button while you are turning over the panel.
  - Do not place any objects near the one-touch buttons or spill any liquid over them.

Note

- Turn the one-touch panel over to press the one-touch buttons 25 and above.
- If you have entered an incorrect value, press the <C (Clear)> button and enter the correct value
- Press the <Start> button.

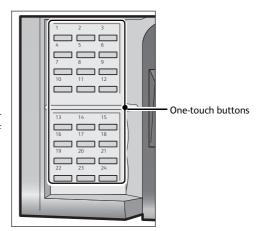

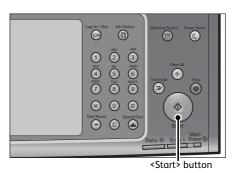


Confirm the destination displayed on the touch screen, and then select [Yes].

# Previewing the Read Images during a Simple Fax Job

Before sending a fax, you can preview the read images while reading the next document.

# 1 Check [Preview], set each item and press the <Start> button.

For more information, refer to "Previewing the Read Images during a Fax Job" (P.196).

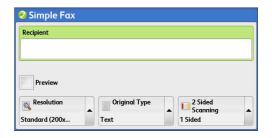

**2** Preview the scanned images while scanning the next document.

# **Resolution (Specifying the Scanning Resolution)**

You can set the resolution for the documents to be scanned.

Note

- The machine scans a document at the specified resolution, but if the recipient's machine does not support the resolution, the machine automatically changes the resolution to one supported by the recipient's machine and there is a corresponding loss in quality.
- The higher the resolution, the lower the transmission speed. Usually, we recommend that you select [Superfine (400 dpi)] or lower.
- Only [Fine (200 dpi)] is available for the Server Fax service.

You can specify the resolution for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

**1** Select [Resolution].

# ■ Standard (200 x 100 dpi)

Select this option when transmitting standard documents.

(200 x 100 pels/25.4 mm)

### ■ Fine (200 dpi)

Select this option when transmitting documents with small text or detailed images.  $(200 \times 200 \text{ pels/}25.4 \text{ mm})$ 

### ■ Superfine (400 dpi)


Select this option when transmitting documents with fine images.  $(400 \times 400 \text{ pels}/25.4 \text{ mm})$ 

### ■ Superfine (600 dpi)

Select this option when transmitting documents with extremely fine images.  $(600 \times 600 \text{ pels/}25.4 \text{ mm})$ 

# Original Type (Selecting the Document Type)

You can select the type of the original document, such as text and photo documents.

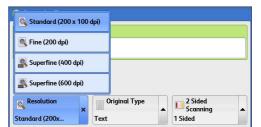

# Select [Original Type].

#### ■ Text

Select this option when transmitting a document that contains only text.

#### ■ Photo & Text

Select this option when transmitting a document that contains both text and photos.

The machine automatically distinguishes the text and photo areas and sets the appropriate image quality for each area of the document.

Simple Fax

Preview

Standard (200x

012345678

Photo & Text

Original Type

2 Sided Scannir

1 Sided

Photo

Text

#### ■ Photo

Select this option when transmitting a document that contains only photos.

Note

• If reduced in size, the scan documents may have stripes in their photo areas.

# 2 Sided Scanning (Transmitting 2-sided Originals)

You can scan a 1-sided or 2-sided document on one or both sides of paper for fax transmission.

Note

• The image on the back side of a 2-sided document is rotated so that it is placed in the same orientation as the image on the front side.

### Select [2 Sided Scanning].

#### ■ 1 Sided

Select this option to scan one side of the document.

### ■ 2 Sided

Select this option to scan both sides of the document.

# ■ 2 Sided (Skip Blank Pages)

Select this option to scan only the document pages that are not blank. You do not need to take into account which side is the front when sending documents.

- Important If you select [2 Sided (Skip Blank Pages)] in [2 Sided Scanning] when the Skip Blank Pages feature is enabled, image loss may occur on the fax document depending on the recipient's machine. For example, when you select [2 Sided (Skip Blank Pages)] to send an A4 fax document, image loss may occur in the area where the edge erase amounts is set when the fax is printed on an A4 document by the recipient's machine.
  - When you select [2 Sided (Skip Blank Pages)] on the [Simple Fax] screen, the machine is set to select [100%] in [Reduce/Enlarge] automatically. When you select an option other than [2 Sided (Skip Blank Pages)], the machine is set to select [Auto %] in [Reduce/Enlarge] automatically.

Note

- When [2 Sided (Skip Blank Pages)] is selected, the setting of [Original Type] changes to [Text].
- You can switch whether to enable [2 Sided (Skip Blank Pages)] by pressing the <Power Saver> button while setting the fax features.
- The level of accuracy in which the machine determines whether a page is blank or not differs depending on a document. For example, if a blank page has background shadows, the machine may not determine the page as a blank page.

[2 Sided (Skip Blank Pages)] is displayed only when [Skip Blank Pages] is enabled. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.



# Fax/Internet Fax

You can select [Fax/Internet Fax] or [Simple Fax] on the Services Home screen to set the features for the Fax service.

This section describes the features you can select on the  $[Fax/Internet\ Fax]$  screen. The following shows the reference section for each feature.

Internet Fax / Fax / IP Fax (SIP) (Selecting Internet Fax / Fax / IP Fax (SIP))	219
+ Add (Sending Faxes to Multiple Recipients)	220
Specifying a Destination Using the Address Book	220
Address Book (Specifying a Destination Using the Address Book [Type 1])	221
Address Book (Specifying a Destination Using the Address Book [Type 2])	224
Speed Dialing (Specifying a Destination Using an Address Number)	225
Add New Address (Registering a Destination on the Address Book)	226
Specifying a Destination Using a One-Touch Button	228
Specifying a Destination Using the Keyboard Screen	
Specifying a Destination Using the Redial Feature	230
Specifying a Line (Port)	230
Entering Specific Symbols	232
Removing/Confirming a Recipient	232
Previewing the Read Images during a Fax/Internet Fax Job	233
Lighten/Darken (Adjusting Fax Density)	233
2 Sided Scanning (Transmitting 2-sided Originals)	234
Original Type (Selecting the Document Type)	235
Resolution (Specifying the Scanning Resolution)	236

You can customize the layout of features displayed on the [Fax/Internet Fax] screen. For more information, refer to "5 Tools" > "Fax Service Settings" > "Screen Defaults" in the Administrator Guide.

Select [Fax/Internet Fax] on the Services Home screen.



**2** Select a feature on the [Fax/Internet Fax] screen.

Note

• Depending on the settings for [Fax Screen Default] in the System Administration mode, the [Fax Address Book] screen is displayed. For more information, refer to "5 Tools" > "Fax Service Settings" > "Screen Defaults" > "Fax Screen Default" in the Administrator Guide.


# Internet Fax / Fax / IP Fax (SIP) (Selecting Internet Fax / Fax / IP Fax (SIP))

You can switch between Internet Fax, Fax and IP Fax (SIP) as necessary.

Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

**1** Select [Fax], [IP Fax (SIP)], or [Internet Fax] from the drop-down menu.

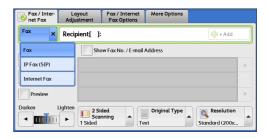

# + Add (Sending Faxes to Multiple Recipients)

The Broadcast Send feature allows you to transmit the same document to multiple recipients in a single operation. There is no need to repeat the same operation for each recipient.

For information on the Broadcast Send feature, refer to "Broadcast Send (Transmitting to Multiple Recipients)" (P.267)

# Specifying a Destination Using the Address Book

The following describes how to use the Address Book to specify recipients.

The Address Book shows the fax numbers registered in the address numbers.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

**Important** • When the Server Fax service is used for fax transmission, the attributes other than [Fax Number], [Name], and [Index] are ignored in the Address Book.

Note


• Select [Add New Address] on the [Fax Address Book] screen to register a destination. For more information, refer to "Add New Address (Registering a Destination on the Address Book)" (P.226).

# Types of the Address Book

The machine provides two different ways of displaying the Address book: [Type 1] and [Type 2]. The Address Book [Type1] or [Type2] will be displayed depending on the setting of [Address Book Type] in the System Administration mode.

For information on how to set the Address book type, refer to "5 Tools" > "Address Book Settings" > "Address Book Type" in the Administrator Guide.

[Type 1]

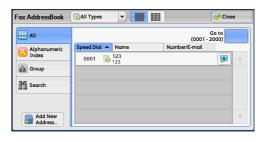

[Type 2]



ξQ

4

1

# Address Book (Specifying a Destination Using the Address Book [Type 1])

The following describes how to specify a destination using the Address Book [Type 1].

# **1** Select [Address Book].



All Types

0001 6 123

# 2 Select the item you want to set for the recipient.

Important • When specifying an address from the Address Book for Internet Fax / IP Fax (SIP), make sure that the address does not contain a prohibited domain name. If it does, it cannot be used.

Note • To switch the Address Book entry type, select

[Public Entries] or [Network Entries] from the drop-down menu on the [Fax Address Book] screen. The methods that appear on the drop-down menu depend on the settings in the System Administration mode.

All

M Search

Add Nev

 $\bullet$  You can sort recipients in alphabetical order or registered number order.

# **Using the Address Book**

You can search for the fax numbers of recipients using [Public Entries] and [Network Entries]. You can use [Simple Search] with keywords or [Advanced Search] with multiple attributes for each Address Book searching.

### **■** Public Entries

Displays the list of registered recipients.

### **■ Network Entries**

Allows you to search for fax numbers not in the local Address book but the one registered in a server on a network.

### ■ Address types

Select from [All Types], [Fax], [IP Fax (SIP)], and [Internet Fax].

The features to be displayed on the screen depend on your machine configuration.

### ■ Next


This item is displayed when [Chain Dial] is set to [Yes] in the System Administration mode. Select [Next] to specify another recipient.

### ■ When you select [Public Entries]

**1** Select at least one recipient.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- During scrolling the list, is not displayed.
   When scrolling stops, it is displayed again.

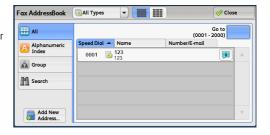

• You can sort recipients in alphabetical order or registered number order.

You can specify the starting numbers of address numbers in the System Administration mode. For information on how to change the settings, refer to "5 Tools" > "Address Book Settings" > Fax Speed Dial Default" in the Administrator Guide.

#### ■ Go to

Enter the desired speed dial number with the numeric keypad. The corresponding address appears at the top of the list.

### ■ 🗐 🏢 (List/Thumbnail)

Press this button to switch the display between the list (five recipients) and the thumbnails (15 recipients).

# ■ Speed Dial

Displays the speed dial numbers.

#### ■ Name

Displays the recipient names.

# 1

Displays the details on the recipient.

#### ■ Add New Address

Allows you to add a new recipient. To add a new recipient, use the screen keyboard or current recipients.

For more information on how to add a new address, refer to "Add New Address (Registering a Destination on the Address Book)" (P.226).

#### ■ All

Lists all the registered recipients for Fax or Internet Fax.

### ■ Alphanumeric Index

Lists the registered recipients with alphanumeric index character in alphabetical order.

#### **■** Group

Lists all the registered Fax Group Recipients.

For more information on how to register groups dial numbers, refer to "5 Tools" > "Setup" > "Create Fax Group Recipients" in the Administrator Guide.

#### ■ Search

Allows you to set [Simple Search] or [Advanced Search].

Searches by the keyword specified for [Simple Search], or by search entries for [Advanced Search].

Note

- For [Advanced Search], you can set multiple search entries.
- For [Simple Search], you can set a keyword for [Name], [Fax Number], or [E-mail Address].

# ■ When you select [Network Entries]

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

Note

• Enable filters from the [Custom Filters] screen using CentreWare Internet Services to search with keywords (Simple Search) without [Name], [Fax Number], or [Custom Item]. For more information, refer to the help of CentreWare Internet Services.

Select a search target from the drop-down menu on the left.

You can select [Name], [Fax Number], [Internet Fax Address], [IP Fax (SIP) Number] for a search target.

2 Select an advanced search condition from the drop-down menu on the right.

You can select [Begins With], [Ends With], [Contains], [Equals], or [Registered] for search entries of the Advanced Search.





**3** When you select a button other than [Registered], select the box and enter the text. For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Search Entries

Select the check boxes to enable the search condition.

#### ■ Add Search Entries

Select the check box to create a new search entry.

Note

• When you have multiple search entries, select [Match All Entries (AND)] or [Match Any Entry (OR)] from the drop-down menu.

### ■ Name

Searches with a recipient name as a keyword. After you set an advanced search condition, select the box to display the screen for entering the keyword. Up to 32 characters are allowed.

Example: Smith

#### ■ Fax Number

Searches with a fax number as a keyword. After you set an advanced search condition, select the box to display the screen for entering the keyword. Up to 60 characters are allowed.

### ■ Internet Fax Address

Searches with an Internet fax address as a keyword. After you set an advanced search condition, select the box to display the screen for entering the keyword. Up to 128 characters are allowed.

Example: myhost@example.com

# ■ IP Fax (SIP) Number

Searches with a telephone number, SIP user name, or SIP device address as a keyword.

After you set an advanced search condition, select the box to display the screen for entering the keyword.

Up to 128 characters are allowed.

Example: Telephone number: 0312345678

SIP user name: 1111

SIP device address: 1111@192.0.2.1

#### ■ Search

The search starts. The searched results are listed on the screen.

# Address Book (Specifying a Destination Using the Address Book [Type 2])

The following describes how to specify a destination using the Address Book [Type 2].

1 Select [Address Book].



i

✓ Close

Select the item you want to set for a recipient, and select [Add].

**Important** • When specifying an address from the Address Book for Internet Fax / IP Fax (SIP), make sure that the address does not contain a prohibited domain name. If it does, it cannot be used.

Note

- To specify multiple recipients, specify them continuously.
- To switch the Address Book entry type, select [List all public entries], [Retrieve entries using index], [List all group entries], or [Search Network] from the drop-down menu on the [Fax Address Book] screen. The methods that appear on the drop-down menu depend on the settings in the System Administration mode.

Fax Address Book

List all public entries... ed Dial 🔺 Name

- Depending on the network settings, [Search Network] may not appear in the drop-down menu. For information on the Network settings, refer to "5 Tools" > "Connectivity & Network Setup" > "Remote Authentication / Directory Service" > "LDAP Server / Directory Service Settings" in the Administrator
- You can sort recipients in alphabetical order or registered number order.

### **Using the Address Book**

You can search for the fax numbers of recipients using [List all public entries], [Retrieve entries using index], [List all group entries], and [Search Network].

You can specify the starting numbers of the address numbers in the System Administration mode. For information on how to change the settings, refer to "5 Tools" > "Address Book Settings" > "Fax Speed Dial Default" in the Administrator Guide.

# ■ List all public entries

Displays the list of registered recipients.

Select  $[ \blacktriangle ]$  to return to the previous screen or  $[ \blacktriangledown ]$  to move to the next screen.

Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

Select items you want to set for a recipient, and select [Add].

### ■ Retrieve entries using index

Allows you to search for the fax numbers or group names of recipients using texts and numbers specified when registering address numbers. Select items you want to set for a recipient, and select [Add].

### ■ List all group entries

Allows you to search for the pre-registered group dial numbers.

Select [▲] to return to the previous screen or [▼] to move to the next screen.

Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

Select items that you want to specify for a recipient, and select [Add].

For more information on how to register groups dial numbers, refer to "5 Tools" > "Setup" > "Create Fax Group Recipients" in the Administrator Guide.

#### ■ Search Network

Allows you to search for fax numbers not in the local Address book but the one registered in a server on a network. Set any items for [Name], [Fax Number], [Custom Item], and select [Search]. Select items you want to specify for a recipient, and select [Add].

# ■ Go to

Enter the desired speed dial number with the numeric keypad. The corresponding address appears at the top of the list.

#### 1

Select an item of which details you want to check, and select  $\blacksquare$ .

#### ■ Chain Dial

Allows you to combine the fax numbers registered in one-touch button, speed dial, and Address book respectively and the numbers entered using the numeric keypad to specify as one recipient. You do not select [Add].

#### ■ Show Fax No. / E-mail Address

By selecting this check box, you can hide the recipient's name in the recipient field.

# Speed Dialing (Specifying a Destination Using an Address Number)

You can use address numbers to specify recipients. Register the address numbers for speed dialing in advance.

Note

- Select [Add New Address] on the [Fax Address Book] screen to register a destination. For more information, refer to "Add New Address (Registering a Destination on the Address Book)" (P.226).
- In the address numbers included in groups or wildcards, even though there are lines used for destination are already specified, when the lines are specified by selecting [Line Selection] in the [Fax / Internet Fax] screen, a fax job will be transmitted in the setting of [Line Selection]. For more information, refer to "Specifying a line (port) using [Line Selection] (Type 2 (T2) model only)" (P.231).

You can use wildcards (the <\*> button on the numeric keypad or [\*] on the keyboard screen) for the last digit or last two digits of address numbers.

The following tables show examples of using the wildcards to specify multiple recipients.

# ■ When using a wildcard for the last digit

How to Enter Wildcard	Target Address Numbers	The Number of Target Addresses
000*	0001 - 0009	9
001*	0010 - 0019	10
010*	0100 - 0109	10

How to Enter Wildcard	Target Address Numbers	The Number of Target Addresses
100*	1000 - 1009	10

### ■ When using wildcards for the last two digits

How to Enter Wildcard	Target Address Numbers	The Number of Target Addresses
00**	0001 - 0099	99
01**	0100 - 0199	100
10**	1000 - 1099	100

When you specify address numbers, confirm that the corresponding fax numbers are correctly registered on the machine. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

### Note

- The maximum number of recipients that you can specify at one time is as follows: Using address numbers only: 600 locations. Using the numeric keypad in combination with address numbers: 600 locations.
- An address number is always displayed in four digits. If [Auto Validation of Speed Dial Entry] is set to [Validate entry after a fixed time] in the System Administration mode, and for example when you enter "\*\*", "0" is automatically added to the beginning of the wildcards to display "00\*\*". For more information, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Auto Validation of Speed Dial Entry" in the Administrator Guide.
- You can use wildcards only for the last digit or last two digits of address numbers. The following is not available: "\*100", "\*\*10", and "1\*00"
- Press the Speed Dial button, and enter a 4digit address number. Repeat this step for each additional recipient.



<Speed Dial> button

# Add New Address (Registering a Destination on the Address Book)

You can register destinations on the Address Book. The current destinations specified on the First Tab screen can also be registered.

### Note

• [Add New Address] is not displayed depending on the settings in the System Administration mode or the number of registered addresses. For details on the settings and the number of addresses, ask your system administrator.

**1** Select [Add New Address].



**2** Select a method to register a recipient.

#### ■ New

Enter a new recipient using the keyboard.

#### ■ Add From Redial

Select a recipient to be registered from the Redial list.

Note

• This item does not appear on the screen when the Server Fax service is enabled.

Add New Addres

Add current recipient

• This item cannot be selected when no telephone number is on the Redial List.

### ■ Add current recipient

Select a recipient to be registered from the current recipients specified on the First Tab screen.

Note

• This item cannot be selected if no recipient is specified on the First Tab screen.

### When [New] is selected

- **3** Use the keyboard displayed on the screen to enter a fax number with up to 128 digits.
- Select [Next].

Note • To return to the previous screen, select [Back].

# When [Add From Redial] is selected

**3** Select a recipient to be registered.

Note • Speed Dial, Group, and Broadcast Recipients cannot be selected.

4 Select [Next].

Note

• To return to the previous screen, select [Back].

# When [Add current recipient] is selected


**3** Select a recipient to be registered.

Note • Speed Dial, Group, and Broadcast Recipients cannot be selected.

**4** Select [Next].

Note • To return to the previous screen, select [Back].

**5** Select [Name], enter a name using the keyboard displayed on the screen, and then select [Save].

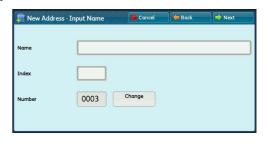

For information on how to enter characters, refer to "Entering Text" (P.100).

**6** To change the index, select [Index], select a new character from the keyboard displayed on the screen, and then select [Save].

You can register a single alphanumeric index character for use as a keyword to search with the Address Book.

For information on how to enter characters, refer to "Entering Text" (P.100).

- **7** To the address number, select [Change], select a number from the list, and then select [Save].
- 8 Select [Next].

• To return to the previous screen, select [Back].

**9** Select an item to set and set.

The following items appear:

- Address Type
- Fax Number
- E-mail Address
- Name
- Index
- Extension / Outside Line
- Relay Station Setup
- Starting Rate
- Resolution
- Cover Page
- Maximum Image Size
- Delay Start
- · Remote Folder
- F Code
- Relay Broadcast
- Billing Day Time, Billing Night Time, Billing Midnight
- Internet Fax Profile
- S/MIME Certificate (ApeosPort Series Models Only)

Note • The items to be displayed on the screen depend on the Address Book entry type.

• To delete the input data and return to the [Fax Address Book] screen, select [Cancel].

For more information on the setting items, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

**10** When the settings are completed, select [Registered].

Note • To return to the previous screen, select [Back].

# Specifying a Destination Using a One-Touch Button

You can use the one-touch buttons to specify recipients. One-touch buttons correspond to the address numbers from 0001 to 0070, or 0001 to 0060. For example, when the number you want to dial is registered to the address number 0001, press one-touch button <1>.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.




#### Note

- There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following. By default, [Type 1] is selected.
  - [Type 1] The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.
  - [Type 2] The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01, and M02 are used for stored programs and they correspond to the registered stored programs 1 to 12.
- The Large Size Color UI (optional) does not support the one-touch buttons.
- **1** Press a one-touch button. Confirm that the recipient (fax number) specified with the onetouch button is displayed on the touch screen.
  - **Important** The one-touch buttons have a sensor to detect which page of one-touch buttons (1 -24, 25 - 48, or 49 - M02) is currently opened. Before pressing a one-touch button, turn over the one-touch panel completely, and take off your hand from the panel. Do not press the button while you are turning over the panel.
    - Do not place any objects near the one-touch buttons, nor spill any liquid over them.

Note

- To specify multiple recipients, press the onetouch buttons continuously.
- Turn the one-touch panel over to press the one-touch buttons 25 and above.

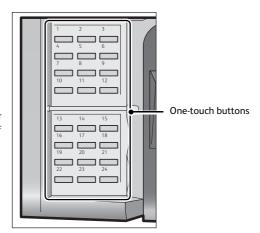

# Specifying a Destination Using the Keyboard Screen

You can specify recipients using the keyboard screen.

Important • When transmission to a certain recipient is prohibited in the System Administration mode, the keyboard button cannot be used.

Select the keyboard button.



Specify a recipient with up to 128 characters using the keyboard displayed on the touch screen.

Note

• When the Server Fax service is used, a destination must be less than 50 characters long. The available characters are as follows:



Numeric characters 0 to 9

Pause

A starting character for a group number

- A delimiter for private data. Using this character before and after private data hides the destination string.
- S A character for password verification
- : DTMF signal
- A character to wait for dial tones
- + Available, but ignored
- (Space) Available, but ignored

For more information, refer to the documentation provided with the Server Fax Kit.


• Even though a line is specified in the above keyboard screen, when the lines are specified by selecting [Line Selection] in the [Fax /Internet Fax] screen, a fax job will be transmitted in the setting of [Line Selection]. For more information, refer to "Specifying a line (port) using [Line Selection] (Type 2 (T2) model only)" (P.231).

# Specifying a Destination Using the Redial Feature


You can specify recipients using the Redial feature.

**Important** • When transmission to a certain recipient is prohibited in the System Administration mode, [Redial List] cannot be used.

1 Select [Redial List].

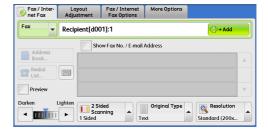

**2** Select items you want to specify for a recipient, and select [Close].

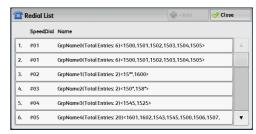

# Specifying a Line (Port)

When the Additional G3 Port Kit 2 (optional) is installed, you can specify the line (port) and send faxes. Local terminal information can be registered to each line. You can use each line for a different purpose.

You can specify a line (port) using the keyboard screen or [Line Selection].

**Important** • When transmission to a certain recipient is prohibited in the System Administration mode, the keyboard button cannot be used.

Note • [Line Selection] can be used with the Type 2 (T2) model only.

For information on how to set [Local Terminal Information], refer to "5 Tools" > "Fax Service Settings" > "Local Terminal Information" in the Administrator Guide.

# Specifying a line (port) using the keyboard screen

Press the keyboard button.

**2** Select [Shift], and enter in the following format: "<", "port number", ">", "recipient's telephone number".


The following shows the corresponding lines to each port.

<1>: Line 1

<2>: Line 2

<3>: Line 3

Example when using Line 1: <1>XXXXXXXXXXX

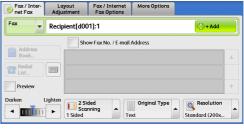







### Specifying a line (port) using [Line Selection] (Type 2 (T2) model only)


You can specify a line using [Line Selection].

Select [Line Selection].

Note

- To display [Line Selection], the System Administrator setting is required. For more information, refer to "5 Tools" > "Fax Service Settings" > "Screen Defaults" > "Fax Screen Default" in the Administrator Guide.
- When [Line Selection] is displayed, [Lighten / Darken] cannot be displayed. In this case, you can set the fax density on the [Layout Adjustment] tab. For more information, refer

to "Lighten / Darken (Adjusting Fax Density) (Type 2 (T2) Model Only)" (P.242).

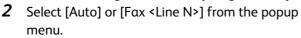

Note

- When [Fax <Line N>] is selected, a fax job is transmitted to all specified recipients using the selected line.
- When selecting [IP Fax (SIP)] as the address type, [Line Selection] is selectable, however, the setting is invalid and a fax job cannot be transmitted using the selected line.
- You can set a line name as you intended. The line name can be set within 13 single-byte characters. For more information, refer to "5 Tools" > "Fax Service Settings" > "Screen Defaults" > "Fax Screen Default" in the Administrator Guide.





# **Entering Specific Symbols**

When specifying a recipient, you can use the following features to enter specific symbols on the touch screen.

Feature	Button	Function	Input method
Enter pause	- or <pause> (-)</pause>	Used to enter a pause. One pause is 3 seconds. You can enter pauses of 6 seconds, 9 seconds, etc. with additional button presses.	Press the <pause> button. (Example) 0-123 0123</pause>
Transmit using a password	S	When a password has been set, transmission will start only if the password matches the ID number on the remote terminal.	<ol> <li>Select the keyboard button on the [Fax/Internet Fax] screen to display the keyboard.</li> <li>Select [S]. (Example)</li> <li>0312345678S12345678</li> </ol>
Transmit DTMF signal	!	Used to transmit the DTMF signal.	<ol> <li>Select the keyboard button on the [Fax/ Internet Fax] screen to display the keyboard.</li> <li>Select [More Characters].</li> <li>Select [!].</li> <li>(Example)</li> <li>0311123456!123#</li> </ol>

When using the DTMF method, use specific symbols. For information on the DTMF method, refer to "Remote Folder (Using Remote Folder)" (P.252) and "Broadcast" (P.267).

# Removing/Confirming $\alpha$ Recipient

You can remove or confirm recipients from the pop-up menu.

Select the recipient to be removed or confirmed from the selected recipients.



- **2** Select any option from the pop-up menu.
  - **■** Remove

Removes the recipient.

### ■ Details

Displays the [Details] screen. You can confirm recipients or address numbers.

#### **■** Close Menu

Hides the pop-up menu.

# [Details] Screen

This screen allows you to confirm recipients.

### ■ Starting Rate

Allows you to select a communication mode according to the features of recipient.



# Previewing the Read Images during a Fax/Internet Fax Job

Before sending a fax, you can preview the read images while reading the next document.

**1** Check [Preview].

For more information "Previewing the Read Images during a Fax Job" (P.196).



**2** The message screen on the right will be displayed. Configure each settings and press the <Start> button.

Note

• This message is displayed for the Type 2 (T2) model only.



3 Preview the read images while reading the next document.

# Lighten/Darken (Adjusting Fax Density)

You can adjust fax density from seven levels.

1 Use [◀] and [▶] to adjust a density level.



# 2 Sided Scanning (Transmitting 2-sided Originals)

You can scan a 1-sided or 2-sided document on one or both sides of paper for fax transmission.

Note

- The image on the back side of a 2-sided document is rotated so that it is placed in the same orientation as the image on the front side.
- Select a scan option.

#### ■ 1 Sided

Select this option to scan one side of the document.

### ■ 2 Sided (Head to Head)

Select this option when both sides of the 2-sided document are in the same orientation.



Select this option when both sides of the 2-sided document are in opposite orientations.

2 Sided Scanning

Head to Hea

Head to Toe

#### ■ More

Displays the [2 Sided Scanning] screen. Refer to "[2 Sided Scanning] Screen" (P.234).

# [2 Sided Scanning] Screen

Select whether the document is one-sided or two-sided. When [2 Sided] or [2 Sided (First Page 1 Sided)] is selected, also select the orientation of the document.

### ■ 1 Sided

Select this option to scan one side of the document.

### ■ 2 Sided

Select this option to scan both sides of the document.

### ■ 2 Sided (First Page 1 Sided)

Select this option to scan the front side of the first page and both sides of the remaining pages. Use this option when the back side of the first page is blank.

# ■ 2 Sided (Skip Blank Pages)

Select this option to scan only the document pages that are not blank. You can send documents without concerning for which side is the front.

Important • If you select [2 Sided (Skip Blank Pages)] in [2 Sided Scanning] when the Skip Blank Pages feature is enabled, image loss may occur on the fax document depending on the recipient's machine. For example, when you select [2 Sided (Skip Blank Pages)] to send an A4 fax document, image loss may occur in the area where the edge erase amounts is set when the fax is printed on an A4 document by the recipient's machine.

Note

• When [2 Sided (Skip Blank Pages)] is selected, the settings change as follows: [Original Type]: [Text] [Lighten / Darken]: [Normal] [Reduce/Enlarge]: [100%]



- You can switch whether to enable [2 Sided (Skip Blank Pages)] by pressing the <Power Saver> button while setting the fax features.
- The level of accuracy in which the machine determines whether a page is blank or not differs depending on a document. For example, if a blank page has background shadows, the machine may not determine the page as a blank page.

[2 Sided (Skip Blank Pages)] is displayed only when [Skip Blank Pages] is enabled. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Skip Blank Pages" in the Administrator Guide.

# ■ Originals

Select [Head to Head] when both sides of the documents are in the same orientation. Select [Head to Toe] when the front and back sides of the documents are in opposite orientations.

# Original Type (Selecting the Document Type)

You can select the type of the original document, such as text and photo documents.

**1** Select the original type.

#### **■** Text

Select this option when transmitting a document that contains only text.

#### ■ Photo & Text

Select this option when transmitting a document that contains both text and photos.

The machine automatically distinguishes the text and photo areas and sets the appropriate image quality for each area of the document.

### **■** Photo

Select this option when transmitting a document that contains only photos.

Note • If reduced in size, the scan documents may have stripes in their photo areas.



# **Resolution (Specifying the Scanning Resolution)**

You can set the resolution for the documents to be scanned.

Note

- The machine scans a document at the specified resolution, but if the recipient's machine does not support the resolution, the machine automatically changes the resolution to one supported by the recipient's machine and there is a corresponding loss in quality.
- The higher the resolution, the lower the transmission speed. Usually, we recommend that you select [Superfine (400 dpi)] or lower.
- Only [Fine (200 dpi)] is available for the Server Fax service.

You can specify the resolution for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

### 7 Select the resolution.

# ■ Standard (200 x 100dpi)

Select this option when transmitting standard documents.

(Approx. 200 x 100 pels/25.4 mm)



# ■ Fine (200 dpi)

Select this option when transmitting documents with small text or detailed images. (Approx.  $200 \times 200 \text{ pels/}25.4 \text{ mm}$ )

### ■ Superfine (400 dpi)

Select this option when transmitting documents with fine images.  $(400 \times 400 \text{ pels}/25.4 \text{ mm})$ 

### ■ Superfine (600 dpi)

Select this option when transmitting documents with extremely fine images.  $(600 \times 600 \text{ pels/25.4 mm})$ 

# **Layout Adjustment**

This section describes the features you can select on the [Layout Adjustment] screen. The following shows the reference section for each feature.

2 Sided Scanning (Transmitting 2-sided Originals)	237
Original Type (Selecting the Document Type)	237
Resolution (Specifying the Scanning Resolution)	237
Original Size (Specifying the Scan Size for the Original)	238
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	238
Book Faxing (Scanning Facing Pages onto Separate Sheets)	239
Reduce/Enlarge (Specifying a Scan Ratio)	240
Stamp (Adding a Stamp when Scanning a Document)	241
Lighten / Darken (Adjusting Fax Density) (Type 2 (T2) Model Only)	242

**1** Select [Fax/Internet Fax] on the Services Home screen.



**2** Select a feature on the [Layout Adjustment] screen.



# 2 Sided Scanning (Transmitting 2-sided Originals)

This feature is the same as [2 Sided Scanning] on the [Fax/Internet Fax] screen.

For more information, refer to "2 Sided Scanning (Transmitting 2-sided Originals)" (P.234).

# Original Type (Selecting the Document Type)

This feature is the same as [Original Type] on the [Fax/Internet Fax] screen.

For more information, refer to "Original Type (Selecting the Document Type)" (P.235).

# Resolution (Specifying the Scanning Resolution)

This feature is the same as [Resolution] on the [Fax/Internet Fax] screen.

For more information, refer to "Resolution (Specifying the Scanning Resolution)" (P.236).

# Original Size (Specifying the Scan Size for the Original)

You can specify the scan size for fax transmission.


Use this feature when a document is a non-standard size, or when you want to scan a document at a size different from the original size. You also can add margins, or delete unwanted margins.

You can change the default values for buttons other than [Auto Detect] in the System Administration mode. For information on how to change the default values, refer to "5 Tools" > "Fax Service Settings" > "Original Size Defaults" in the Administrator Guide.

**1** Select [Original Size].



2 Select any option.

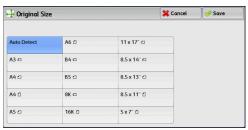

### **■** Auto Detect

Detects the document size automatically.

	Document Feeder	Document Glass
Auto-detectable  Document Sizes	B5, B5①, B4, A5, A5①, A4, A4①, A3, 8.5 x 11", 8.5 x 11" ②, 11 x 17, 16K①, 8K	B6, B5, B5십, B4, A6, A5, A5십, A4, A4십, A3

• If the document size cannot be detected automatically, a screen to enter the document size appears.

The document sizes that can be automatically detected depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

### ■ Standard Size

Select the original size from preset sizes.

You can change the sizes displayed on the screen. For more information, refer to "5 Tools" > "Fax Service Settings" > "Original Size Defaults" in the Administrator Guide.

# Mixed Size Originals (Scanning Different Size Documents Simultaneously)

You can scan documents of various sizes simultaneously and send faxes of the corresponding sizes or of one selected size. To use this feature, load the documents in the document feeder.

**Important** • Load documents in landscape orientation. However, always load A5 and B5 documents in portrait orientation so that the machine can detect the size of the documents automatically.


- When loading documents, align the top left corners of the documents properly. Otherwise, a paper jam may occur.
- The recommended document size combinations are A4 portrait and A3 landscape, or B5 portrait and B4 landscape. If another combination of document sizes is used, the documents can be fed at an angle and may not be scanned properly.

Note

- Be sure to set [Original Size] to [Auto Detect] on the [Layout Adjustment] screen, when using the Mixed Size Originals feature.
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.
- **1** Select [Original Size].



**2** Confirm that [Auto Detect] is selected, and select [Save]. If [Auto Detect] is not selected, select [Auto Detect] and then [Save].

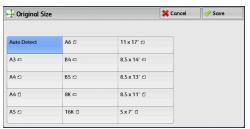

**3** Select [Mixed Size Originals].



- 4 Select [On].
  - Off

Select this option when all documents are of the same size.

#### ■ On

When scanning documents of different sizes, the machine automatically detects the size of each document.



# **Book Faxing (Scanning Facing Pages onto Separate Sheets)**

You can scan the left and right pages of a bound document separately to fax them. This feature is useful if you want to separately scan facing pages of a bound document.

Note

- You cannot use the document feeder with this feature.
- A non-standard size document or undetectable-size document may not be separated into two accurately.

# **1** Select [Book Faxing].



A Left Page Only

B Right Page Only

💢 Cancel

Place original on the Document Glass as shown.

B A B

AB Book Faxing

Off

Left Page

Right Page then Left

Top Page then Botton

### 2 Select any option.

#### ■ Off

Does not scan as a bound document.

### ■ Left Page then Right

Scans the left page and then the right page of facing pages.

### ■ Right Page then Left

Scans the right page and then the left page of facing pages.

### ■ Top Page then Bottom

Scans the top page and then the bottom page of facing pages.

### ■ Both Pages

Scans both pages in page order.

# ■ Left Page Only

Scans the left page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

# ■ Right Page Only

Scans the right page only. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

### ■ Top Page Only

Scans the top page only. You can select this option when [Top Page then Bottom] is selected.

### ■ Bottom Page Only

Scans the bottom page only. You can select this option when [Top Page then Bottom] is selected.

# Reduce/Enlarge (Specifying a Scan Ratio)

This feature enlarges or reduces scanned images with a specified ratio.

**Important** • Some destination machines may not be able to receive faxes at the specified ratio.



86% A3→B4, A4→B5

115% B4→A3, B5→A4

122% A4→B4, A5→B5

141% A4→A3, B5→B4

200% A5→A3, B6→B4

# **1** Select [Reduce/Enlarge].



Preset %

100%

Auto %

50% A3→A5, B4→B6

70% A3→A4, B4→B5

81% B4→A4, B5→A5

Reduce / Enlarge

50 ↔ 400

# Select a preset ratio, or specify a value.

Note

• If a magnification is specified in [Reduce/ Enlarge], [Rotate 90 degrees] does not function.

#### ■ Variable %

Specify a ratio in the range from 50 to 400 % in 1% increments. To specify a value, use the numeric keypad or [+] and [-].

### ■ Preset %

• 100%

Scans at the same size as the original.

Auto %

If the scan width of the document exceeds the maximum image size, the scanned image is rotated or reduced to fit the maximum size.

When the speed dialing is used, the maximum image size will be the size registered in the Address Number. When speed dialing is not used, the maximum size will be A3.

Note

- You can specify whether to rotate documents in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Rotate 90 degrees" in the Administrator Guide.
- Preset ratios

Select from preset scan ratios.

You can change the default values of scan ratios other than [100%] and [Auto %]. For more information, refer to "5 Tools" > "Fax Service Settings" > "Reduce/Enlarge Presets" in the Administrator Guide.

# Stamp (Adding a Stamp when Scanning a Document)

This feature stamps a circle mark at the bottom corner of each document page when it is fed through the document feeder. This helps you easily check if each page of the documents has been scanned correctly.

**Important** • Stamps cannot be affixed on the following documents:

- Documents loaded on the document glass
- Documents suspended by pressing the <Stop> button
- Documents suspended by paper jams
- 1-sided documents longer than 600 mm
- 2-sided documents longer than 431.8 mm
- Documents not fed into the document feeder
- Documents suspended due to memory overflow
- Documents that were being scanned when an immediate transmission is suspended

Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

Select [Stamp].



- Select [On].
  - Off No stamp is affixed.
  - On A stamp is affixed.



# Lighten / Darken (Adjusting Fax Density) (Type 2 (T2) Model Only)

This feature is the same as [Lighten / Darken] on the [Fax / Internet Fax] screen. For more information, refer to "Lighten/ Darken (Adjusting Fax Density)" (P.233).

# **Fax/Internet Fax Options**

This section describes the features you can select on the [Fax/Internet Fax Options] screen. The following shows the reference section for each feature.

Acknowledgement Report (Confirming Transmission Results)	243
Starting Rate (Selecting a Communication Mode)	245
Priority Send/Delay Start (Specifying Send Priority/Send Time)	246
Transmission Header Text (Adding Sender Name and Phone Number to Faxes)	248
Cover Page (Transmitting Documents With a Cover Page)	248
Internet Fax Subject (Specifying the Internet Fax Subject)	250
Internet Fax Message (Editing the Internet Fax Mail Contents)	250
Recipient Print Sets (Printing Multiple Sets at the Remote Machine)	251
Pages per Side (Combining Multiple Pages into One Sheet)	252
Remote Folder (Using Remote Folder)	252
F Code (Using F Code Transmission)	255
Internet Fax Profile (Specifying Internet Fax Profiles)	259
Encryption (Sending Internet Fax Encrypted by S/MIME)	260
Digital Signature (Sending Internet Fax with a Digital Signature by S/MIME)	260

Select [Fax/Internet Fax] on the Services Home screen.



**2** Select a feature on the [Fax/Internet Fax Options] screen.

Note

• Only [Delay Start] is available for the Server Fax service.



# Acknowledgement Report (Confirming Transmission Results)

You can check fax and Internet Fax transmission results.

To receive fax transmission results, select [On] in [Confirmation Options] on the [Acknowledgement Report] screen. By enabling this feature, the machine automatically prints a Transmission Report when fax transmission completes successfully, and prints a Transmission Report - Job Undelivered when fax transmission ends unsuccessfully.

To confirm Internet Fax transmission results, the following two types are available: [Read Receipts] and [Delivery Receipts].

Selecting [Delivery Receipts] allows you to check whether or not the Internet Fax you sent was delivered successfully to the recipient's folder.

Selecting [Read Receipts] allows you to check whether or not the Internet Fax you sent was correctly delivered and the attached files were correctly processed.

Note

- The optional component is required to use the Read Receipts and Delivery Receipts features. For information, contact our Customer Support Center.
- Read Receipts (MDN) and Delivery Receipts (DSN) are available when the recipient's machine supports MDN and DSN, respectively.
- You can select either [Read Receipts] or [Delivery Receipts] in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Internet Fax Control" > "Delivery Confirmation Method" in the Administrator Guide.
- You can only use the Delivery Receipts (DSN) feature to check the delivery of e-mail to servers that support this feature. Furthermore, if any of the e-mail servers on the transmission route do not support DSN, you cannot verify the delivery of the e-mail, even if the e-mail has been delivered successfully. For this reason, the result of the Delivery Receipts may differ from the actual delivery
- If [Confirmation Options] is set to [On] and the transmission completes unsuccessfully, a Transmission Report - Job Undelivered will be printed.

The following procedure uses the Read Receipts feature as an example. The procedure is the same for the Delivery Receipts feature.

Select [Acknowledgement Report].



Read Receipts

X Off

On

The Confirmation Options feature automatically prints a report after each Internet Fax transmission.

The Read Receipts feature requests the Internet Fox recipient to send a confirma to the sender indicating the result of the transmission. The recipient's server must support the MDN standard.

# Select any option.

# **■** Confirmation Options

Off

No Transmission Report is printed.

• On

A Transmission Report is automatically printed when the transmission completes successfully. If the transmission does not end successfully, a Transmission Report - Job Undelivered is printed.

off

#### ■ Read Receipts

Off

Disables the Read Receipts feature.

• On

Enables the Read Receipts feature. You can check whether the Internet Fax you sent was correctly delivered and the attached files were correctly processed.

### **■** Delivery Receipts

Off

Disables the Delivery Receipts feature.

Enables the Delivery Receipts feature. You can check whether the Internet Fax you sent was correctly delivered to the destination folder.

# Starting Rate (Selecting a Communication Mode)


You can select a communication mode based on the features of the remote machine.

G3 is the international standard for facsimile transmissions established by the ITU-T.

When you use speed dialing, one-touch buttons, group dial number or Address book to specify a recipient registered in an address number, the communication mode currently set to the address number is set and cannot be changed. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide

You can change the default mode of [Starting Rate] in the System Administration mode. For information on how to change the default mode, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Starting Rate" in the Administrator Guide.

# **1** Select [Starting Rate].

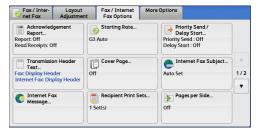

# 2 Select any option.

#### ■ G3 Auto

Select this mode if the remote machine is G3 compatible. This mode is normally selected.

Depending on the reception capabilities of the remote machine, the machine automatically switches modes in the following order: G3 Unique ECM  $\rightarrow$  G3 Unique  $\rightarrow$  ITU-T G3 ECM  $\rightarrow$  ITU-T G3.



# ■ Forced 4800 bps

Select this mode when transmitting over noisy or poor telephone lines, as can be the case with overseas calls.

Also select this mode when transmitting over noisy or poor telephone lines domestically.

### ■ G4 Auto

This setting is applied to the transmission speed between the fax gateway and destination fax for the Internet Fax.


### **About Forced 4800 bps**

You can communicate with faxes overseas via telephone company exchanges, etc.


Note

- The international telephone networks are originally designed for voice communications. Noise that does not really affect voice communications causes a problem with fax communications. It may result in the deterioration of images quality, the inability to transmit a fax, or even terminate the transmission. Regardless of whether transmission is successful, you are charged for the call once the line is connected. For information on line trouble and call charges, contact your telephone company.
- If you select [Forced 4800 bps], the transmission time may be longer because transmission is performed at 4800 bps or less to ensure transmission is successful.

**1** Select [Starting Rate].

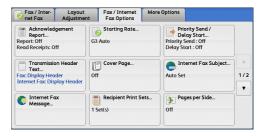

**2** Select [Forced 4800 bps], and then select [Save].

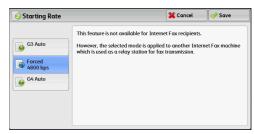

**3** Enter the recipient fax number in the same manner as when you make an international call. The following is an example:



Important • In some areas, you may need to enter a pause after the telephone company ID number.

Note • For information on the telephone company ID number, contact your telephone company.


# Priority Send/Delay Start (Specifying Send Priority/Send Time)

The Priority Send feature allows you to give priority to a fax or polling job over other jobs.

The Delay Start feature allows you to specify when to send your fax. This feature is useful for sending faxes when communication charges are low, such as during night time.

Note

- [Priority Send/Delay Start] is not available for Internet Fax.
- The Priority Send feature is not available for Server Fax.
- For Server Fax, [Delay Start] is available when the FTP or SMB protocol is used, but not when the SMTP protocol is used.
- When [Delay Start] is set for Server Fax, this setting applies to transmission from the Server Fax server to a final destination, but not from the machine to the Server Fax server.
- [Priority Send] can be set in combination with [Delay Start]. If both features are set, Priority Send is performed at the time specified in [Delay Start].
- **1** Select [Priority Send/Delay Start].

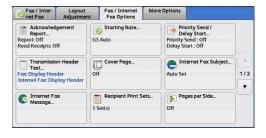

9:00 PM

# **2** Select any option.

# ■ Priority Send

Off

Priority Send is not applied.

• On

Priority Send is applied.

Note

- If the Priority Send feature is selected during transmission, the fax will be sent after the current transmission ends.
- In redial mode, the fax will be resent preferentially after the specified redial interval.
- The Priority Send feature cannot be set separately for each recipient of Broadcast and multi-polling iobs

Priority Send / Delay Start

You can give priority to a pending job. For more information, refer to "Job Status" (P.423).

### ■ Delay Start

Off

Delay Start is not applied.

· Specific Time

Delay Start is applied.

Note

- You can specify a time within 24 hours in 1 minute increments. You cannot specify a date.
- You can set [Delay Start] independently for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide
- If you use address numbers or group dial numbers to specify recipients for the Broadcast Send feature, the [Delay Start] setting specified for each address number is invalid.
- If the fax cannot be sent at the specified time because, for example, the telephone line is busy, it will be sent as soon as the line becomes available.

### **■** Specific Time

Displays the [Delay Start - Specific Time] screen.

Refer to "[Delay Start - Specific Time] Screen" (P.247).

### [Delay Start - Specific Time] Screen

This screen allows you to specify the start time for fax transmission.

Note

• You can change the default value of [Delay Start - Specific Time] in the System Administration mode. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Delay Start - Specific Time" in the Administrator Guide.

### **1** Select [AM] or [PM].



### **2** Set [Hours] and [Minutes].

**Important** • If you press the <Start> button after the specified time, the stored document will be sent at the specified time on the following day.



# Transmission Header Text (Adding Sender Name and Phone Number to Faxes)

The Transmission Header Text feature adds the start time, sender name, recipient name, G3 ID, and number of pages onto the transmitted document.

This feature enables the recipient to confirm when and from whom the fax was sent.

**Important** • Header information is printed at the top of the document, so an area of about 3 to 5 mm may not be printed at the top of each page at the remote machine.


#### Note

- If the document is resent, "Resend" is printed at the left of the date and time indication.
- If this feature is enabled for Broadcast Send, header information is attached to faxes for all the recipients.
- The start time is printed in the format set on the machine (12 or 24 hour clock). For information on how to set the time, refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" in the Administrator Guide.
- The recipient name is only added if it has been registered in the address number.
- If you specify the line to send a fax, the sender name registered for the selected line is printed. If you do not specify a line, the sender name (company logo) of the machine is printed, but not the sender name of the line.

For information on the sender name and G3 ID, refer to "5 Tools" > "Fax Service Settings" > "Local Terminal Information" in the Administrator Guide.

You can change the default value of [Transmission Header Text] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Transmission Header Text" in the Administrator Guide.

Select [Transmission Header Text].

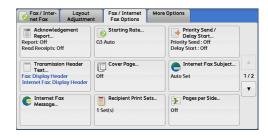

- 2 Select [Display Header].
- Off

No header information is attached.

# ■ Display Header

Header information is attached.



# Cover Page (Transmitting Documents With a Cover Page)

This feature allows you to attach a cover page to the document.

The cover page includes the recipient name, comment, sender name, machine fax number, number of pages, and date and time of transmission.

You can specify whether to attach a cover page for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.


#### Note

- This feature is not available for the Server Fax service.
- When [Transmission Header Text] is set, the header information is not printed on the cover page.
- You cannot use the Cover Page feature for Broadcast transmission using the numeric keypad. To use this feature for Broadcast transmission, register recipients to address numbers.
- The size and resolution of the cover page is based on the first page of the document.

**≭** Cancel 

✓ Sαve

# **1** Select [Cover Page].

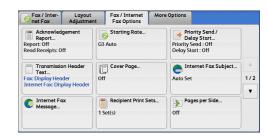

Comments

Fax Cover Page

(Name as in Address Book)

(Company Logo)

2 Select [Print Cover Page].

#### ■ Off

No cover page is added.

### ■ Print Cover Page

A cover page is added.

### **■** Comments

Displays the [Cover Page - Comments] screen. Refer to "[Cover Page - Comments] Screen" (P.249).

# [Cover Page - Comments] Screen

This screen allows you to select comments to be added to the recipient and sender fields.


Cover Page

off

**1** Select any option.

### ■ Recipient's Comment

Displays the registered comments in the recipient field. Select a comment to be used. Select [None] when no comment is added to this field.

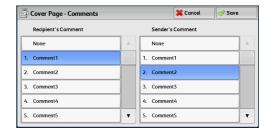

### ■ Sender's Comment

Displays the registered comments in the sender field. Select a comment to be used. Select [None] when no comment is added to this field.

For information on how to register comments, refer to "5 Tools" > "Setup" > "Add Fax Comment" in the Administrator Guide.

### **About the Cover Page**

### ■ To

When an address number is used, the recipient name registered for the address number is printed. This field is blank if no recipient name is registered for the address number.

#### ■ Recipient's Comment

Prints the comment selected in [Recipient's Comment].

#### ■ From

Prints the registered sender name.

### ■ Sender's Comment

Prints the comment selected in [Sender's Comment].

### ■ Fax Number

Prints the fax number of the machine. For G3 communications, "G3 ID" is printed.

### ■ Number of Pages

Prints the number of pages.

#### ■ Send Date and Time

Prints the transmission date and time.

### ■ Remarks

Prints remarks when the document is sent using Broadcast, Folder, Relay Broadcast, or Redial Mode.

# Internet Fax Subject (Specifying the Internet Fax Subject)

You can specify an Internet Fax subject. If no subject is specified, the preset subject is automatically entered.


Note

• This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

**1** Select [Internet Fax Subject].



**2** Select [Keyboard].

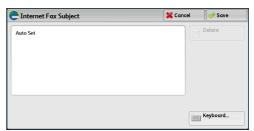

**3** Enter a subject with up to 128 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.100).

Note

• If no subject is entered, the following will be automatically entered as a subject: [InternetFAX;<From>; <Send Date and Time>].

# Internet Fax Message (Editing the Internet Fax Mail Contents)

You can edit Internet Fax comments. Enter text using the keyboard or use a pre-registered comment.

Note


• This feature is not available for some models. The optional component is required. For more information, contact our Customer Support Center.

For information on how to register comments, refer to "5 Tools" > "Setup" > "Add Fax Comment" in the Administrator Guide.

Keyboard...

Add Comment

**1** Select [Internet Fax Message].

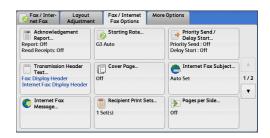

**2** Select any option.

#### **■** Delete Text

Deletes the comment displayed on the screen.

### ■ Keyboard

Allows you to enter body text using the displayed keyboard. Up to 256 characters can be entered.

You can also select [Add Comment] to select a registered comment and edit it. For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Add Comment

Allows you to insert a registered comment. Select this button to display the [Add Comment] screen.

C Message

Refer to "[Add Comment] Screen" (P.251).

# [Add Comment] Screen


This screen allows you to select a comment to be added.

1 Select any option.

### **■** Select Comment

Displays the registered comments.

For information on how to register comments, refer to "5 Tools" > "Setup" > "Add Fax Comment" in the Administrator Guide.

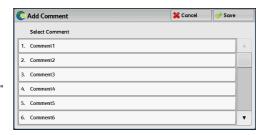


# Recipient Print Sets (Printing Multiple Sets at the Remote Machine)

This feature allows you to print multiple sets of a fax document at the remote machine.

Note • This feature is not available for the Server Fax service.

7 Select [Recipient Print Sets].

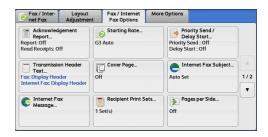

# Select any option.

### ■ 1 Set

The remote machine will output one set of the fax document.

### **■** Multiple Sets

Allows you to specify the number of print sets the remote machine will output, in the range

from 2 to 99 in 1 set increments. Use [+] and [-] or the numeric keypad to specify the value.

• The number of print sets the remote machine will output cannot be specified when using IP Fax (SIP).

Recipient Print Sets

2

# Pages per Side (Combining Multiple Pages into One Sheet)

This feature allows you to send a fax by combining multiple pages of a document into one side of a single sheet of paper. For example, if you have a document of 12 pages, and you specify 3, the machine combines the scan data into 4 pages. You can specify a value for [Pages per Side] in the range from 2 to 9.

Important • If the length of each resultant page is too long, the output data may be split on the recipient's machine.


> • If the number of pages of documents is smaller than the specified pages, the scanned number of pages will be only combined and transmitted.

> > Pages per Side

Note

• This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

# Select [Pages per Side].

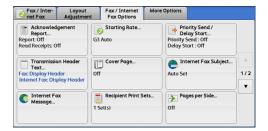

Save

### 2 Select [On].

### ■ Off

The Pages per Side feature is not applied.

### ■ On

Allows you to scan multiple pages of a document onto one side of a single sheet of paper for fax transmission. Specify the number

of pages in [Originals] to fit onto one sheet. Use [+] and [-] or the numeric keypad to specify the value.

# Remote Folder (Using Remote Folder)

This feature allows you to send or receive confidential documents that you do not want others to see.

Note

- This feature is not available for the Server Fax service.
- The Fax signal method and the F code method are available for IP Fax (SIP). For the method to use remote folder using F code method, refer to "F Code (Using F Code Transmission)" (P.255).



• In the IP Fax (SIP) using VoIP Gateway, remote folder using Fax signal method is not available. Only the F code method is available, for more information, refer to "Copy" (P.103)

# ■ Sending to Folder (Fax Signal Method)

This feature allows you to send a file directly to a folder on the remote machine. The file can be printed on the remote machine. To use this feature, you need the folder number and passcode of the remote folder.

# ■ Secure Polling (Fax Signal Method)

This feature allows you to retrieve a file from a folder on a remote machine by sending a polling request from your machine. To use this feature, you need the folder number and passcode of the remote folder.

The retrieved file is stored in a folder on the machine. When a file is received in a folder, the <Data> indicator lights up and a Folder Report is printed. The Folder Report lists the folder number and name.

**Important** • You cannot use polling to retrieve files from multiple remote folders simultaneously.

• The DTMF method is available for Remote Folder. The supported signals are numerals, "\*", and "#"

For information on how to print files received in a folder, refer to "Printing Files in a Folder" (P.380).

Files received in folders can be automatically printed depending on the folder settings. For information on the folder settings, refer to "Configuring/Starting Job Flow" (P.383).

Depending on the report print settings, a Folder Report may not be printed even after a file is received in a folder. For information on the Folder Report setting, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Folder Report" in the Administrator Guide.


# ■ Sending to Folder (DTMF Method)

To send a fax to a folder using the DTMF method, you need the folder number of the remote folder. Two DTMF methods are available: Auto and Manual.

🚴 Remote Folder

# Sending to Folder (Fax Signal Method)

**1** Select [Remote Folder].

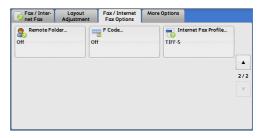

# **2** Select [On].

#### ■ Off

Disables the Remote Folder feature.

## ■ On

Enables the Remote Folder feature. Enter a folder number in [Remote Folder Number].

#### ■ Remote Folder Number

Select the [Remote Folder Number] box, and enter a 3-digit folder number of the remote machine using the numeric keypad.

## ■ Folder Passcode

Select the [Folder Passcode] box, and enter the 4-digit passcode of the remote folder using the numeric keypad. If a passcode is not set, leave this box blank.

# Secure Polling (Fax Signal Method)

**1** Select [More Options] tab to display the [More Options] screen.




- **2** Select [Remote Polling].
- **3** Select [Poll a Remote Device].



- 4 Select [Save].
- 5 Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen, and select [▼] to display the next page.



6 Select [Remote Folder].

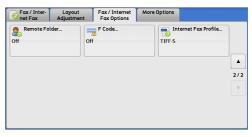

- **7** Select [On].
  - Off


Disables the Secure Polling feature.

■ On

Enables the Secure Polling feature. Enter a folder number in [Remote Folder Number].

## ■ Remote Folder Number

Select [Remote Folder Number] box, and enter a 3-digit folder number of the remote machine using the numeric keypad.

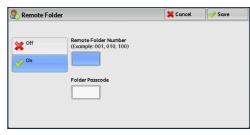

#### ■ Folder Passcode

Select [Folder Passcode] box, and enter the 4-digit passcode of the remote folder using the numeric keypad. If a passcode is not set, leave this box blank.

# Format for Auto Send (DTMF Method)

**1** Select the keyboard button on the [Fax/Internet] screen to display the keyboard on the touch screen, and enter the destination and passcode in the following format.



# Format for Manual Send (DTMF Method)

**1** Select [On-hook (Manual Send/Receive)] on the [More Options] screen to display the keyboard on the touch screen, and enter the destination and passcode in the following format.



Note

- Use the keyboard on the touch screen to enter symbols such as "!" and "\*". For information on how to enter characters, refer to "Entering Text" (P.100).
- Enter a passcode only if necessary.
- You can specify any machine that supports our DTMF method feature.

By registering destinations in address numbers using the above dialing formats, you can use the address numbers for the Secure Polling feature. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

# F Code (Using F Code Transmission)

F Code is the transmission procedure set by the Communications and Information Network Association of Japan and is the T.30 (communication protocol) method for using subaddresses that was standardized by the ITU-T. The F Code feature enables various features to be used with transmission among F Code-compatible machines regardless of their manufacturers.

When using F Code transmission, use an F Code and password. The F Code, which is also called a sub-address by other companies, must be registered (entered). Set the password if necessary.

Note

- This feature is not available for the Server Fax service except when an F code is included in a dialing number.
- To use the F Code feature, you need to confirm the F Code of the recipient's machine in advance.
- If you perform Sending to Folder or Secure Polling between machines of this model, we recommend that you use the fax signal method.

You can set the F Code and password for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

You can use the Relay Broadcast and Remote Relay Broadcast features with F Code transmission. For information on Relay Broadcast and Remote Relay Broadcast, refer to "Relay Broadcast (Transmitting Documents Through a Relay Station)" (P.268) and "Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)" (P.271), respectively.

You can use the following features with F Code transmission.

# ■ Sending to Folder (F Code Method)

When a folder is set on a remote machine, you can send a document directly to the folder by specifying the F code (sub-address) and password (if set up) of the folder.

Obtain the F code (sub-address) and password of the remote folder in advance.

Example of specifying a destination:

F Code (sub-address) : 0 (to designate an F Code transmission) and the folder number

of a folder on the remote machine

Password (if set up) : The password of the remote folder

# ■ Secure Polling (F Code Method)

When a folder is set on a remote machine, you can perform secure polling for the folder by specifying its F code (sub-address) and password (if set up).

If you use your machine to perform secure polling for a folder on a remote machine, obtain the F Code (sub-address) and password of the target folder.

If you use a remote machine to perform secure polling for a folder on your machine, give the following information.

F Code (sub-address) : 0 (to designate an F Code transmission) and the folder number

of the target folder

Password (if necessary) : The password of the target folder

• The DTMF method is available for Remote Folder. The supported signals are numerals, "\*", and "#"

only.


A file received in the folder can automatically be printed depending on the folder settings. For information on the folder settings, refer to "Configuring/Starting Job Flow" (P.383).

Depending on the report print settings, a Folder Report may not be printed even after a file is received in a folder. For information on the Folder Report setting, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Folder Report" in the Administrator Guide.


For information on how to print files received in a folder, refer to "Printing Files in a Folder" (P.380).

# Sending to Folder (F Code Method)

**1** Select [F Code]

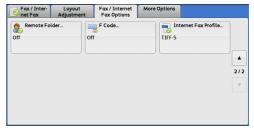

**2** Select [On].

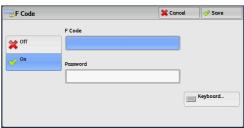

**3** Select the [F Code] box, and enter an F code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F code.

4 If necessary, select the [Password] box, and enter a password using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the password.

#### ■ Off

The F code transmission is not used.

#### ■ On

The F code transmission is used. Enter the F Code.

## **■** F Code

Select the [F Code] box, and enter the F code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

## ■ Password

Select the [Password] box, and enter the password using the displayed keyboard or the numeric keypad. If a password is not set, leave this box blank.

Note • You can enter up to 20 digits for the password.

# ■ Keyboard


Enter the F code or the password using the displayed keyboard.

For information on how to enter texts, refer to "Entering Text" (P.100).

**5** Specify a destination, and then press the <Start> button.

# **Secure Polling (F Code Method)**

Select the [More Options] tab to display the [More Options] screen.

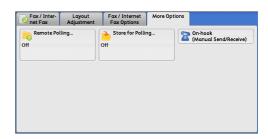


- **2** Select [Remote Polling].
- **3** Select [Poll α Remote Device].



4 Select [Save].

5 Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen.

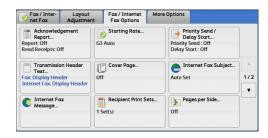

**6** Select [F Code].



**7** Select [On].



Select the [F Code] box, and enter the F Code using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

**9** If necessary, select the [Password] box, and enter a password using the displayed keyboard or the numeric keypad.

Note • You can enter up to 20 digits for the password.

# ■ Off

Disables the Secure Polling feature.

## ■ On

Enables the Secure Polling feature.

## **■** F Code

Select the [F Code] box, and enter the F code using the displayed keyboard or the numeric keypad.

• You can enter up to 20 digits for the F Code.

# ■ Password

Select the [Password] box, and enter the password using the numeric keypad. If a password is not set, leave this box blank.

• You can enter up to 20 digits for the password.

## ■ Keyboard

Enter the F code or the password using the displayed keyboard.

For information on how to enter texts, refer to "Entering Text" (P.100).

**10** Specify a destination, and then press the <Start> button.

# **Internet Fax Profile (Specifying Internet Fax Profiles)**

A profile is specified to restrict attribute information such as image resolution and paper size for transmissions between Internet Fax-compatible machines.


Note

- The profiles that can be processed differ depending on the Internet Fax-compatible machine of the recipient. Before specifying a profile, confirm the profiles the Internet Fax-compatible machine of the recipient can process.
- If inconsistency occurs between a profile, and stored document size and resolution, priority is given to the settings specified in the profile.
- If the profile differs for each recipient when using Broadcast Send, the smallest size becomes the maximum image size.


You can set an Internet Fax profile for each address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

You can change the default value of [Internet Fax Profile] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Internet Fax Profile" in the Administrator Guide.

**1** Select [Internet Fax Profile].

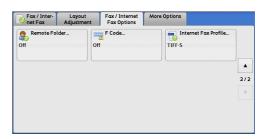

**2** Select any option.

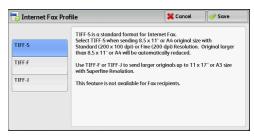

# **■ TIFF-S**

This profile is the Internet Fax standard. For documents that are larger than A4, the size is reduced automatically to A4 for transmission.

Encoding method : MHStored document size : A4

• Resolution : Standard (200 x 100 dpi), Fine (200 dpi)

Note

• [TIFF-S] is not available when [Superfine (400 dpi)] or [Superfine (600 dpi)] is selected in [Resolution] on the [Fax/Internet Fax] screen.

## **■ TIFF-F**

Select this profile when you specify super-fine for the resolution or when you send A3 or B4 documents.

• Encoding method : MMR

• Stored document size : A4, B4, A3

 Resolution : Standard (200 x 100 dpi), Fine (200 dpi), Superfine (400 dpi), Superfine (600 dpi)

Note

• When a fax is sent to a machine that does not support TIFF-F, the recipient's machine will not be able to display or print the images.

#### **■ TIFF-J**

Select this profile for sending documents in JBIG.

• Encoding method : JBIG

• Stored document size : A4, B4, A3

Resolution : Standard (200 x 100 dpi), Fine (200 dpi),

Superfine (400 dpi), Superfine (600 dpi)

Note

• When a fax is sent to a machine that does not support TIFF-J, the recipient's machine will not be able to display or print the images.

# Encryption (Sending Internet Fax Encrypted by S/MIME)

You can send Internet Fax encrypted by S/MIME.

When sending encrypted Internet Fax, select an e-mail address associated with a certificate that can be encrypted, from the Address Book.

Note

- This feature is supported only by the ApeosPort series models.
- To send Internet Fax encrypted by S/MIME, register certificates of the machine and the recipient's machine in advance. For information on certificates, refer to "12 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.
- You can change the default value of [Internet Fax Encryption] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Defaults" > "Internet Fax Encryption" in the Administrator Guide.

#### ■ Disabled

Sends Internet Fax without encryption.

## ■ Enabled

Sends encrypted Internet Fax.

# Digital Signature (Sending Internet Fax with a Digital Signature by S/MIME)

You can send Internet Fax with a digital signature by S/MIME.

Digital Signature allows a recipient to confirm whether the contents of the Internet Fax are changed, or whether the Internet Fax is sent from the proper sender.

Note

- This feature is supported only by the ApeosPort series.
- To send Internet Fax with a digital signature by S/MIME, register certificates of the machine and the recipient's machine in advance. For information on certificates, refer to "12 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.
- When [Digital Signature Outgoing Internet Fax] is set to [Do not add signature] or [Always add signature] in the System Administration mode, depending the selected option, [On] or [Off] is displayed on the [Digital Signature] screen, which cannot be changed. For information on [Digital Signature Outgoing Internet Fax], refer to "5 Tools" > "Connectivity & Network Setup" > "Security Settings" > "S/MIME Settings" in the Administrator Guide.

# ■ Off

Sends Internet Fax without a digital signature.

#### ■ On

Sends Internet Fax with a digital signature.

# **More Options**

This section describes the features you can select on the [More Options] screen. The following shows the reference section for each feature.

Select [Fax/Internet Fax] on the Services Home screen.



**2** Select a feature on the [More Options] screen.



# Remote Polling (Retrieving Files from Remote Machines)

Remote Polling is a feature that allows your machine to retrieve a file stored in a remote machine. You are charged for the transmission fee.

This feature is used for Facsimile Information Services.

For information on Facsimile Information Services, refer to "Receiving Faxes" (P.275).

Note

- The Remote Polling feature may not be available depending on the remote machine.
- This feature is not available for the Server Fax service.
- When you specify polling in combination with [Delay Start] on the [Fax/Internet Fax Options] screen, you can retrieve a file at a specified time.

## ■ Remote Polling

You can retrieve a file stored on a remote machine by sending a polling request from your machine. You can also retrieve files from multiple machines. This is called Multi-Polling.

# ■ Secure Polling (DTMF Method)

You can retrieve a file from a folder on a remote machine by sending a request from your machine. A folder must be created on the remote machine. If the folder is passcode-protected, you can retrieve a file confidentially.

**Important** • You cannot use polling to retrieve files from multiple remote folders simultaneously.

Note • The DTMF method is not available for the IP Fax (SIP).

# **Remote Polling**

1 Select [Remote Polling].



off

To retrieve files from a folder of a remote device, select "Poll a Remote Device" on this screen and specify the remote folder number using the Remote Folder feature.

This feature is unavailable for Internet Fax recipients.

**2** Select [Poll a Remote Device].

Note • To use Multi-Polling, specify multiple recipients.

■ Off

Disables the Remote Polling feature.

■ Poll a Remote Device

Enables the Remote Polling feature.

**3** Specify a destination, and then press the <Start> button.


# **Secure Polling (DTMF Method)**

Select the keyboard button on the [Fax/ Internet Fax] screen to display the keyboard on the touch screen.




- **2** Enter a format corresponding to Auto Send or Manual Send, and then select [Close].
- **3** Select the [More Options] tab to display the [More Options] screen.



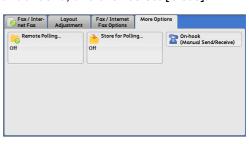



# **5** Select [Poll α Remote Device].

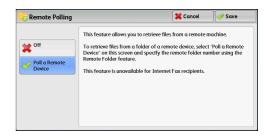

**X** Cancel

To retrieve files from a folder of a remote device, select "Poll a Remote Device" on this screen and specify the remote folder number using the Remote Folder feature.

6 Select [Save].

#### ■ Off

Disables the Secure Polling feature.


# ■ Poll a Remote Device

Enables the Secure Poling feature.

## ■ Format for Auto Send



#### ■ Format for Manual Send

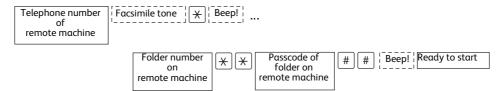

Note

• Use the keyboard on the touch screen to enter symbols such as "!" and "\*". For information on how to enter characters, refer to "Entering Text" (P.100).

Remote Polling

off

- Enter a passcode only if necessary.
- You can specify any machine that supports our DTMF method feature.

By registering destinations in address numbers using the above dialing formats, you can use the address numbers for the Secure Polling feature. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

# **Store for Polling**


# (Storing Files on the Machine that a Remote Machine can Retrieve)

Store for Polling is a feature that store a file on your machine so that a remote machine can retrieve it from your machine. The following two methods are available for Store for Polling: Store for Free Polling and Store for Secure Polling.

The machine can be set to automatically delete files after they are retrieved with polling. For more information, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Polled Files - Auto Delete" in the Administrator Guide.

Note • This feature is not available for the Server Fax service.

**1** Select [Store for Polling].

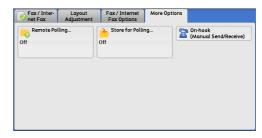

2 Select any option.

#### ■ Off

Disables the Store for Polling feature.

# ■ Store for Free Polling

Stores a file in a public folder on the machine. The file in the public folder can be retrieved by a remote machine.



# ■ Store for Secure Polling

Stores a file in a private folder on the machine. If the folder is passcode-protected, the file can be retrieved by a remote machine confidentially.

You need to create a private folder in advance. For more information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

# ■ Save in:

• When [Store for Free Polling] is selected [Public Folder] is displayed. Selecting this button displays the [Public Folder] screen. Refer to "[Public Folder] Screen" (P.264).

When [Store for Secure Polling] is selected
 [Private Folder] is displayed. Selecting this button displays the [Folder] screen. Select a folder to store files in for Secure Polling.

For information on how to select a folder, refer to "Selecting a Folder" (P.374). For information on how to check files for Secure Polling, refer to "Checking/Operating Files in a Folder" (P.375).

**3** Press the <Start> button.


## [Public Folder] Screen

This screen allows you to print and delete files stored for Free Polling.

**1** Select the file to be printed or deleted. You can select either one file or all files.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

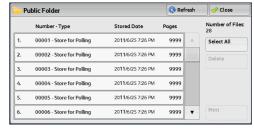

#### ■ Refresh

Refreshes the information about files stored in the public folder.

## ■ Select All

Selects all files stored in the public folder.

#### **■** Delete

Deletes the selected file. Selecting this button displays a confirmation screen. Select [Delete] on the screen to delete the file.

## **■** Print

Prints the selected file.

# On-hook (Confirming Remote Machine Response Prior to Transmission)

Use this feature when using Manual Send.

Manual Send is the transmission method that allows you to send a fax after you make a phone call to a remote machine and then check that the connection is established. This feature can be used with the receiver either off-hook or on-hook.

We recommend that you set the line monitor volume to "Loud".

Note

- If an error occurs during transmission of, for example, the second page, the transmission of the first page may also end abnormally.
- The On-hook feature is not available for the IP Fax (SIP).

You can change the volume of the line monitor in the System Administration mode. For information on how to change the volume, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Line Monitor Volume" in the Administrator Guide.

Pick up the telephone receiver, or select [On-hook (Manual Send/Receive)].



**2** Select any option.



# ■ Manual Send / Manual Receive

Use the drop-down menu to switch between [Manual Send] and [Manual Receive].

Manual Send : Allows you to check if connection is established before

sending a fax.

Manual Receive : Allows you to receive a fax manually, such as Facsimile

Information Services.

# ■ Entering a destination

Use alphanumeric characters to specify a destination.

• Some touch-tone services may not be available even if you set your telephone to send tones.

• When the line type is set to a tone line, [:] (Tone) is not displayed on the screen. If you want to send tones (or to use the touch-tone services) while using a pulse line, select [:] (Tone).

# ■ More Characters

Select this button to display a symbol screen, allowing you to use symbols to specify a destination.

# **■** Line Cut

Cuts the line connected.

# **Broadcast**

This section describes how to set Broadcast Send and Relay Broadcast.

Broadcast Send (Transmitting to Multiple Recipients)	267
Relay Broadcast (Transmitting Documents Through a Relay Station)	.268
Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)	.271

# **Broadcast Send (Transmitting to Multiple Recipients)**

The Broadcast Send feature allows you to transmit the same document to multiple recipients in a single operation. There is no need to repeat the same operation for each recipient.

When the Additional G3 Port Kit 2 (optional) is installed, you can use the extra lines to make multiple transmissions simultaneously with Broadcast Send.

If you specify Broadcast Send, the machine prints a Broadcast/Multi-Poll Report after the Broadcast Send operation finishes.

Note

- You can use Broadcast Send by specifying recipients from Fax, Internet Fax and IP Fax (SIP) for a single job. (Mix Broadcast).
- The maximum number of recipients that you can specify at one time is as follows: Using the numeric keypad: 200 locations; using address numbers: 600 locations; and using the numeric keypad in combination with address numbers: 600 locations.
- In multiple addresses, even though there are lines used for destination are already specified, when the lines are specified by selecting [Line Selection] in the [Fax / Internet Fax] screen, a fax job will be transmitted in the setting of [Line Selection]. For more information, refer to "Specifying a line (port) using [Line Selection] (Type 2 (T2) model only)" (P.231).
- The address numbers 0001 0070, or 0001 0060 correspond to the one-touch buttons 1 70, or 1 60. For more information on the one-touch buttons, refer to "Control Panel" (P.85).
- When using Broadcast Send, the Cover Page and Remote Folder features are not available even if they are enabled on the control panel. If you want to use [Cover Page] and [Remote Folder], set them when registering each recipient in an address number.
- [Confirmation Options] is not available. Check a Broadcast/Multi-Poll Report to see transmission results

# ■ Show Fax No./E-mail Address

If you select this check box, the recipient's name will not be displayed in the recipient field.

#### ■ Enable Broadcast

To prevent missending a fax to multiple recipients, you can set whether to use Broadcast Send prior to specifying multiple recipients. Select the [Enable Broadcast] check box to specify multiple recipients.

[Enable Broadcast] is displayed only when [Broadcast Checkbox on 1st Tab] is set to [Enabled]. For more information on the setting, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Broadcast Checkbox on 1st Tab" in the Administrator Guide.

# **1** Select the first recipient.

Note

 When you specify recipients from Fax and Internet Fax for a single job (Mix Broadcast), select the fax type for each recipient from the drop-down menu.



# 2 Select [+ Add].

- **3** Select the next recipient.
- 4 Repeat Step 2 and Step 3.
- **5** Press the <Start> button.
- **6** Select [Yes] on the confirmation screen to start transmission.

# Relay Broadcast (Transmitting Documents Through a Relay Station)

The Relay Broadcast feature transmits documents to multiple recipients via other fax machines (relay stations). When a document is to be transmitted over a long distance to multiple recipients, it is first transmitted to one relay station and from there to multiple recipients. When you transmit documents over a long distance to many recipients, using Relay Broadcast can save on transmission cost.

Furthermore, multiple Relay Broadcast operations can be performed simultaneously. This is called Multiple Relay Broadcast.

• For IP Fax (SIP), only Relay Broadcast with the F Code method is available.

The following three methods are available for Relay Broadcast:

# ■ Fax Signal Method

This method employs a Fuji Xerox proprietary communication procedure that is only for use with specific machines that have the Relay Broadcast feature.

#### **■ DTMF Method**

G3 fax machines that support Manual Send can perform Relay Broadcast for the machine.

#### **■** F Code Method

This method can be used among machines that support the F Code and the Relay Broadcast features.

# Before using the Relay Broadcast Feature

Before using the Relay Broadcast feature, register the following information.

• Select [Add New Address] on the [Fax Address Book] screen to register the destination. For more information, refer to "Add New Address (Registering a Destination on the Address Book)" (P.226).

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

Where	Contents
Initiating Station	<ul> <li>Fax Signal Method</li> <li>Assign the relay station to an address number (0001 to 2000) to set up the Relay Broadcast feature.</li> <li>Register the last two digits of the address number of the initiating station (which is already registered at a relay station) as a relay station ID for the Relay Broadcast operation.</li> <li>Register the address numbers or group dial number of the relay recipients (which are registered at a relay station) as broadcast recipients. The wildcard "*" can be used.</li> <li>DTMF Method (G3)/F Code Method</li> <li>No registration is required. The dialing format can be registered to an address number.</li> </ul>

For information on the setting items to be registered in relay stations, refer to the documentation provided with relay stations.

# Fax Signal Method

**1** Select an address number or group dial number to which a relay broadcast is registered, and press the <Start> button.

To perform Multiple Relay Broadcast, repeat this step.

# **DTMF Method**

The following two types are available in the DTMF method: Auto Send and Manual Send.

# ■ Auto Send (Transmitting without picking up the receiver)

**1** Select the keyboard button to display the keyboard on the touch screen and enter in the following format.



Password

A pre-registered two-digit number

Note

- By default, no password is set. For setting a password, contact our Customer Support Center. If a password is not set, you do not need to enter one.
- · Relay station ID

The last two digits of the initiating station address number registered at the relay station

Address number

An address number for the relay recipients registered at the relay station

The wildcard "\*" can also be used.

You can register the above dialing format in an address number to send using the address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

2 Select [+ Add] to perform Multiple Relay Broadcast.

Note • You can specify up to 20 locations for relay recipients.

**3** Press the <Start> button.

# ■ Manual Send (Transmitting with picking up the receiver or on-hook)

- **1** Select the [More Options] tab to display the [More Options] screen.
- **2** Pick up the telephone receiver, or select [Onhook (Manual Send/Receive)].



3 Select [Manual Send] from the drop-down menu.



**4** Use the keyboard displayed on the touch screen to enter numbers in the following format.



Note

• You can specify up to 20 locations for relay recipients.

# F Code Method


You can perform Relay Broadcast by registering the relay station's F code and password (if necessary) to the machine.

Note

- When performing Relay Broadcast with the F Code method, you can use a password if you set a receive password for the relay station.
- When performing Relay Broadcast between Fuji Xerox manufactured machines that can be used as both an initiating station and a relay station, we recommend that you use the fax signal method.
- Confirm the F code (sub-address) and password of the target relay station.
- Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen.



2 Select [F Code].

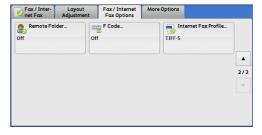

3 Select [On].



4 Select the [F Code] box, and enter the F code with the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

Relay Broadcast Directive Relay Station ID Address Number Address Number ...

Up to 20 digits

# · Relay Broadcast

The number of digits of the relay station ID:

- 1: When the relay station IDs and address numbers are two digits
- 2: When the relay station IDs and address numbers are three digits

#### Print Directive

Printing/not printing at the relay station

- 1: Printing at the relay station
- 0: Not printing at the relay station

## Relay Station ID

An address number for an initiating station registered at the relay station

When the relay station ID is set, the initiating station is notified of the results of a Relay Broadcast.

When the relay station ID is "00" or "000", the initiating station is not notified of the results of a Relay Broadcast.

## Address Number

The address number assigned to the relay recipient

The following shows an example of F Code that indicates printing at the relay station, notifying the initiating station (100) of the results, and performing Relay Broadcast to relay recipients (200, 201, 202, and 203).

F Code example: 21100200201202203

**5** If necessary, enter the password using the numeric keypad.

# Remote Relay Broadcast (Performing Relay Broadcast to Remote Locations)

The Remote Relay Broadcast feature combines two or more Relay Broadcast operations and use Broadcast Send.

This feature is more economical than Relay Broadcast in transmitting documents to multiple remote machines.

Note

- Multiple Relay Broadcast can be performed from a secondary relay station.
- For IP Fax (SIP), only Relay Broadcast with the F Code method is available.

The following three methods are available in Remote Relay Broadcast:

# ■ Fax Signal Method

This method employs a Fuji Xerox proprietary communication procedure that is only for use with specific machines that support the Relay Broadcast feature.

## **■ DTMF Method**

G3 fax machines that support Manual Send can perform Remote Relay Broadcast for the machine.

## **■** F Code Method

This method can be used among machines that support the F Code and the Relay Broadcast features.

# Fax Signal Method

Register the following information in the address numbers of initiating stations in advance.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

Where	Contents
Initiating Station	Assign the relay station to an address number (0001 to 2000) to set up the Relay Broadcast feature.  Register the last two digits of the address number of the initiating station (which is already registered at a primary relay station) as a relay station ID.  Register the address numbers or group dial number of the secondary relay stations (which are registered at a primary relay station) as broadcast recipients.

For information on the setting items to be registered in a primary relay station and a secondary relay station, refer to the documentations provided with them.

**1** Select an address number or group dial number to which a remote relay broadcast is registered, and press the <Start> button.

## **DTMF Method**

The following two types are available in the DTMF method: Auto Send and Manual Send.

For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

For information on the setting items to be registered in a primary relay station and a secondary relay station, refer to the documentations provided with them.

Note • You can specify any machine that supports our DTMF method feature.

# ■ Auto Send (Transmitting without picking up the receiver)

**7** Select the keyboard button to display the keyboard on the touch screen and enter in the following format.



Password

A pre-registered 2-digit number

Note

• By default, no password is set. For setting a password, contact our Customer Support Center. If a password is not set, you do not need to enter one.

· Relay Station ID

The last two digits of the initiating station address number registered at the primary relay station

Address Number


The address number for the secondary relay station registered at the primary relay station

You can register the above dialing format in an address number to send using the address number. For information on how to register address numbers, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

2 Select [+ Add] to perform Multiple Relay Broadcast.

# ■ Manual Send (Transmitting with picking up the receiver or on-hook)


- 1 Select the [More Options] tab to display the [More Options] screen.
- **2** Pick up the telephone receiver, or select [Onhook (Manual Send/Receive)].

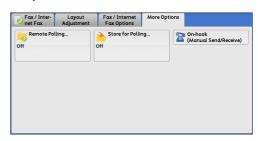

**3** Select [Manual Send] from the drop-down menu.



4 Use the keyboard displayed on the touch screen to enter numbers in the following format.

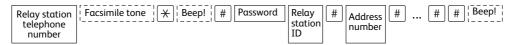

Note

• You can specify up to 20 locations for relay recipients.

# **F Code Method**

When using the machine as the initiating station for performing Remote Relay Broadcast, confirm the F Code and the password (if necessary) for the primary relay station.

**Important** • When using the F Code method for Remote Relay Broadcast, the primary relay stations and secondary relay stations must support our F Code method and the Relay Broadcast feature.


Note

• When performing Relay Broadcast with Fuji Xerox manufactured machines that can be used as both an initiating station and a relay station, we recommend that you use the fax signal method.

Select the [Fax/Internet Fax Options] tab to display the [Fax/Internet Fax Options] screen.



2 Select [F Code].

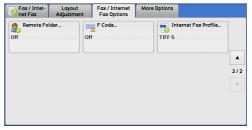


**3** Select [On].



4 Select the [F Code] box, and enter the F Code with the numeric keypad.

Note • You can enter up to 20 digits for the F Code.

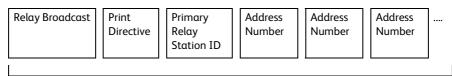

Up to 20 digits

Relay Broadcast

The number of digits of the primary relay station ID:

- 1: When the primary relay station IDs and address numbers are two digits
- 2: When the primary relay station IDs and address numbers are three digits
- Print Directive

Printing/not printing at the primary relay station

- 1: Printing at the primary relay station
- 0: No printing at the primary relay station
- Primary Relay Station ID

The address number for the initiating station registered at the primary relay station

When the primary relay station ID is set, the initiating station is notified of the results of the Remote Relay Broadcast.

When the primary relay station ID is "00" or "000", the initiating station is not notified of the results of a Remote Relay Broadcast.

Address Number

The address number assigned to the secondary relay station

**5** If necessary, enter the password using the numeric keypad.

# **Receiving Faxes**

Two modes are available for receiving faxes: Auto Receive and Manual Receive.

In the Auto Receive mode, reception of a fax from a remote machine begins automatically.

In the Manual Receive mode, reception of a fax from a remote machine is manual. This mode is convenient for confirming the sender or using an external telephone to confirm whether it is a fax before beginning reception.

Using G3 ID allows the machine to reject faxes from specific fax numbers or unknown fax numbers. You can register up to 50 fax numbers as rejected fax numbers.

• Rejecting faxes from specific fax numbers:

The machine rejects faxes when the G3 ID sent from the sender's machine is included in the registered fax numbers to be rejected.

Rejecting faxes from unknown fax numbers:

The machine rejects faxes when the G3 ID is not sent from the sender's machine.

G3 ID contains a phone number and other information that are registered in the sender's machine.

Note • For IP Fax (SIP), the Manual Receive mode is not available.

You can change the default value of [Fax Receiving Mode] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Fax Receiving Mode" in the Administrator Guide.

For information on how to reject faxes from specific fax numbers or unknown fax numbers, refer to "5 Tools" > "Fax Service Settings" > "Fax Control" > "Block Inbound Faxes" and "Block Unknown Fax Numbers" in the Administrator Guide.

# Switching between Auto Receive and Manual Receive

- **1** Press the <Machine Status> button.
- 2 Select [Fax Receiving Mode] on the [Machine Information] screen.



**3** Select [Manual Receive] or [Auto Receive].

## ■ Manual Receive

Reception of a fax from a remote machine is manual. This mode is convenient for confirming the sender or using an external telephone to confirm whether it is a fax before beginning reception.



When extra lines are added to the machine,

[Fax Receiving Mode] is set to [Auto Receive] even when [Manual Receive] is selected.

# ■ Auto Receive

Reception of a fax from a remote machine begins automatically.

# **Using Auto Receive**

When [Fax Receiving Mode] is set to [Auto Receive] on the [Machine Information] screen, the following two methods are available to receive a fax:

# ■ When the machine automatically switches to fax reception

When there is an incoming call, the machine automatically receives a fax after it rings for a certain period of time.

# ■ When the machine automatically switches between a call and fax reception

When there is an incoming fax, the machine automatically receives a fax. When there is an incoming call, pick up the telephone receiver to talk while the machine is ringing.

# **Using Manual Receive**

When [Fax Receiving Mode] is set to [Manual Receive], and the machine rings to notify of an incoming call, pick up the receiver of the external telephone or select [On-hook] on the screen displayed.

Note

- We recommend that you set the monitor volume to [Loud] when using the On-hook feature. For information on how to change the volume of the line monitor, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Line Monitor Volume" in the Administrator Guide.
- When the machine rings, the receiving screen appears.
  If there is a telephone, pick the receiver up. If not, select [On-hook] on the receiving screen.
- **2** Confirm whether the call is from a telephone or a fax machine.

If the call is from a telephone, use the receiver to talk.

If the call is from a fax machine, you will hear the sound of a fax machine.

Note

- If you select [On-hook], you will hear the sound from the machine speaker. However, you cannot talk to the other party.
- **3** Press the <Start> button.
- 4 If you picked up the receiver, place it back in the cradle when the <Data> indicator lights up on the control panel.

**Important** • Make sure to place the receiver back in the cradle properly. Otherwise, the line will remain "busy" with the receiver being left off the cradle.

# **Using Folder Receive**

Files received using Folder Receive are stored in a folder. After a file is received in a folder, the <Data> indicator lights up and the machine prints a Folder Report. The Folder Report lists the folder number and folder name.

To receive files in a folder using the F Code method, notify the sender of the following information:

- F Code (sub-address): 0 (to designate F Code transmission) and the folder number to store the file in
- Password (if necessary): the passcode of the folder to store the file in

Note

- For IP Fax (SIP), the fax signal method and the F code method are available.
- For IP Fax (SIP), in communicating via VoIP gateway, the Sending to Folder with the fax signal method is not available. Only the Sending to Folder with the F code method is available.
- The DTMF method is available for Remote Folder. The supported signals are numerals, "\*", and "#".

Depending on the report print settings, a Folder Report may not be printed even after a file is received in a folder. For more information on the Folder Report settings, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Folder Report" in the Administrator Guide.


For information on how to print a file stored in a folder, refer to "Printing Files in a Folder" (P.380).

# **Facsimile Information Services**

For information on subscriptions and advanced operating procedures, contact the corresponding facsimile information service.

# **Using the Receiver**

**1** Pick up the telephone receiver.

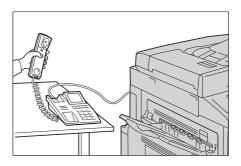

- **2** Select [Manual Receive] from the drop-down menu.
- **3** Specify the fax number of the facsimile information service.
  - You can use the numeric keypad, address numbers, or one-touch buttons to specify the call destination, but cannot use the Address Book.
  - You can use the keyboard displayed on the screen to specify the call destination. Selecting [More Characters] on the screen displays symbols.

Note

- When the line type is set to a tone line, [:] (Tone) is not displayed on the screen. If you want to send tones (or to use the touch-tone services) while using a pulse line, select [:] (Tone).
- Some touch-tone services may not be available even if you set your telephone to send tones.
- 4 When the machine connects to the service, you will hear voice prompts. Follow the voice prompts to enter the required numbers.
- **5** After entering the numbers, press the <Start> button.
  - Note The <Data> indicator lights up on the control panel, and reception begins.
- **6** Place the receiver back in the cradle.

Important • Make sure to place the receiver back in the cradle properly. Otherwise, the line will remain "busy".


# When Not Using a Receiver

**1** Adjust the volume of the line monitor.

We recommend that you set the volume of the line monitor to [Loud] so that you can hear the voice prompts clearly.

For information on how to change the volume of the line monitor, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Line Monitor Volume" in the Administrator Guide.

**2** Select [On-hook (Manual Send/Receive)] on the [More Options] screen.

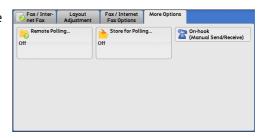

- **3** Select [Manual Receive] from the drop-down menu.
- **4** Specify the fax number of the facsimile information service.
  - You can use the numeric keypad, address numbers, or one-touch buttons to specify the call destination, but cannot use the Address Book.
  - You can use the keyboard displayed on the screen to specify the call destination. Selecting [More Characters] on the screen displays symbols.

Note

- When the line type is set to a tone line, [:] (Tone) does not appear. If you want to send tones (or to use the touch-tone services) while using a pulse line, select [:] (Tone).
- Some touch-tone services may not be available even if you set your telephone to send tones.
- **5** When the machine connects to the service, you will hear voice prompts. Follow the voice prompts to enter the required numbers.
- **6** After entering the numbers, press the <Start> button.

# 5 Scan

This chapter describes the basic operations and features for the Scan services.

• The Scan services are not available for some models. An optional component is required. For more information, contact our Customer Support Center.

To use the Scan services, network settings are required. For information on the network settings, refer to "9 Scanner Environment Settings" in the Administrator Guide.

•	Scanning Procedure	282
•	Operations during Scanning	290
•	E-mail	296
•	Network Scanning	324
•	Scan to PC	326
•	Store to Folder	338
•	Store to USB	340
•	Store & Send Link	347
•	Store to WSD	350
•	Advanced Settings	353
•	Layout Adjustment	357
•	E-mail Options/Filing Options	364

# **Scanning Procedure**

This section describes the basic scanning procedure. The following shows the reference section for each procedure.

Step 1 Loading Documents	282
Step 2 Selecting the Features	284
Step 3 Starting the Scan Job	287
Step 4 Confirming the Scan Job in Job Status	288
Step 5 Saving the Scanned Data	289

# **Step 1 Loading Documents**

The following two methods are available to load documents:

## **■** Document Feeder

- Single sheet
- Multiple sheets

## ■ Document Glass

- Single sheet
- Bound documents, such as books

#### **Document Feeder**

The document feeder supports single and multiple sheet documents with sizes from 125 x85 mm (Standard size: A5, A5 (1) to 297 x 432 mm (Standard size: A3, 11 x 17").

The document feeder automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.

• The document feeder is optional for some models. For more information, contact our Customer Support Center.

For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying a Scan Size)" (P.359).

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

The document feeder accepts the following number of sheets.

	Number of Sheets					
Document Type (Weight)	Duplex Automatic Document Feeder B1-C	Duplex Automatic Document Feeder B1-PC				
Lightweight paper (38 - 49 gsm)	110 sheets	130 sheets				
Plain paper (50 - 80 gsm)	110 sheets	130 sheets				
Heavyweight paper (81 - 128 gsm)	75 sheets	85 sheets				

Important • To avoid paper jams, use the document glass for folded or wrinkled documents, cut-and-pasted documents, curled paper, or back carbon paper.


> • When Duplex Automatic Document Feeder B1-C is installed, the lightweight paper of 38 - 49 gsm cannot be scanned 2 sided.

For information on how to scan mixed sized documents, refer to ""Mixed Size Originals (Scanning Different Size Documents Simultaneously)" (P.360).


- 1 Remove any paper clips and staples before loading a document.
- 2 Load the document face up (when the document is 2-sided, place the front side up) in the center of the document feeder.

Note


• The Confirmation indicator lights up when the document is loaded correctly. If the indicator does not light, the machine may be detecting a document on the document glass. Load the document again.

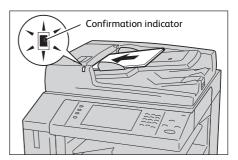

**3** Adjust the document guides to match the size of the document loaded.

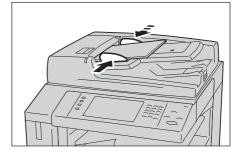

**4** Open the document stopper.

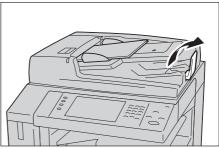

# **Document Glass**

The document glass supports a single sheet, a book, or other similar documents with a size  $297 \times 432 \text{ mm}$  (Standard size: A3, 11 x 17").

 $\textbf{Important} \ \bullet \text{Always close the document cover after using the document glass}.$ 

The document glass automatically detects standard size documents. For non-standard size documents, enter the size on the [Original Size] screen.


For information on document sizes that can be detected automatically and how to enter a non-standard document size, refer to "Original Size (Specifying a Scan Size)" (P.359).

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on the paper size settings, refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.



Do not apply excessive force to hold thick document on the document glass. It may break the glass and cause injuries.

Important • Ensure that the touch screen is active, and then load a document. Otherwise, the machine may not properly detect the

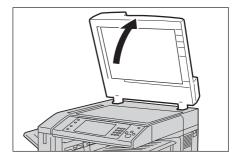

**2** Load the document face down, and align it against the top left corner of the document glass.

document size.



3 Close the document cover.

# Step 2 Selecting the Features

On the Services Home screen, you can select the following Scan services: [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store to USB], [Store & Send Link], and [Store to WSD]. You can select features for each service.

Note

- WSD stands for Web Services on Devices.
- The features to be displayed on the screen depend on the configuration of your machine.
- When the Accounting feature is enabled, a user ID and passcode may be required. Ask your system administrator for the user ID and passcode.
- To use the Scan services, network settings are required. For information on the network settings, refer to "9 Scanner Environment Settings" in the Administrator Guide.

## ■ E-mail

Scans a document and sends the scanned data as an e-mail attachment after converting the data to TIFF, JPEG, PDF, DocuWorks, or XML Paper Specification (XPS).

#### **■** Store to Folder

Scans a document and saves the scanned data in a folder on the machine.

You need to create a folder in advance. For information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide

## ■ Network Scanning

Scans a document using a job template created on CentreWare Internet Services.

For information on how to create a job template, refer to the help of CentreWare Internet Services.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

## ■ Scan to PC

Scans a document and sends the scanned data to a network computer via the FTP or SMB protocol.

When Scan to My Folder is enabled and the Remote Access feature is available, the scanned data can be transferred to a different destination according to an authenticated user.

## **■** Store to USB

Scans a document and saves the scanned data to a USB memory device.

## ■ Store & Send Link

Scans a document and temporarily saves the scanned data on the machine. The user is notified by e-mail of the URL to the location where the scanned data is stored. Then, the user can access the URL to retrieve the scanned data.

## **■** Store to WSD

You can scan documents on the machine and save the scanned data to your computer. You can also save the scanned data to another computer on the network.

• WSD stands for Web Services on Devices.

The following table shows file formats available for each Scan service.

	File Format can be Selected When	File Format							
Scan Service		PDF	Docu- Works	XPS <sup>*1</sup>	TIFF	JPEG	ВМР	PNG	Micro- soft <sup>®</sup> Office
E-mail	Using the control panel when	O*2	O*3	0	0	0	Х	Х	0
Scan to PC	scanning	O*2	O*3	0	0	0	Х	Х	0
Store to USB		O*2	O*3	0	0	0	Х	Х	0
Store & Send Link		0*2	O*3	0	0	0	Х	Х	0
Store to Folder	Using CentreWare Internet Services	o*2	O*3	0	0	0	Х	Х	Х
	Using Stored File Manager 3 <sup>®</sup>	Х	х	Х	0	0	Х	Х	Х
	Using DocuWorks*4	Х	O*3	Х	Х	Х	Х	Х	Х
	Using Acrobat <sup>®*4</sup>	O*2	Х	Х	Х	Х	Х	Х	Х
Job Flow Sheets (ApeosPort Series Models only)	Creating a job flow	O*2	O*3	0	0	0	х	х	Х
Network Scanning	Creating a job template	0	Х	0	0	0	Х	Х	Х
Store to WSD	Using [Scan Profiles] of Windows <sup>®*5</sup>	Х	х	0	0	0	0	0	х

O :Available

X :Not available

\*1 :XPS stands for XML Paper Specification.

\*2 :Supported on Acrobat 4.0 or later

\*3 :Supported on DocuWorks Ver.4 or later

\*4 :TWAIN compatible application


\*5 : Windows Vista® Service Pack 2 or later

Note

• If you do not specify a file name for the document to be saved, a file name is automatically assigned to the scanned date. The date (DDMMYYYY) of [DDMMYYYYHHMMSS] is the order set in the [System Settings] > [Common Service Settings] > [Machine Clock/Timers] > [Date].

The following describes how to store scanned data into a folder as an example.

**1** Press the <Services Home> button.

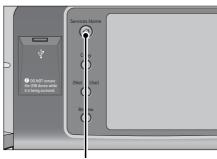


<Services Home> button

**2** Select [Store to Folder].



**3** If the previous settings still remain, press the <Clear All> button.

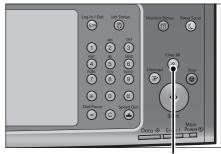


<Clear All> button

**4** Specify a folder to save the data in.



**5** Select each tab, and configure features as necessary.

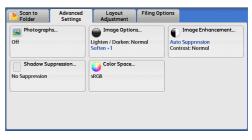

The following shows the reference section for each tab.

"Store to Folder" (P.338)

"Advanced Settings" (P.353)

"Layout Adjustment" (P.357)

"E-mail Options/Filing Options" (P.364)

When you use another Scan service, [Store to Folder] is replaced with [E-mail], [Network Scanning], [Scan to PC], [Store to USB], [Store & Send Link], or [Store to WSD].

Note

WSD stands for Web Services on Devices.

The following shows the reference section for each service.

"E-mail" (P.296)

"Scan to PC" (P.326)

"Store to USB" (P.340)

"Store & Send Link" (P.347)

"Network Scanning" (P.324)

"Store to WSD" (P.350)

# Step 3 Starting the Scan Job

The following describes how to start a scan job.

For information on how to start a scan job on the [Store to WSD] screen, refer to "Store to WSD" (P.350).


Note • WSD stands for Web Services on Devices.

#### Press the <Start> button.

- **Important** If the document has been loaded in the document feeder, do not hold down the document while it is being conveyed.
  - ullet If a copy protection code is detected, the machine will not scan the document.

Note

- If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.
- You can set the next job during scanning.

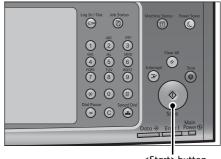

<Start> button

# ■ If you have more documents

If you have more documents to scan, select [Next Original] on the touch screen while the current document is being scanned. This allows you to scan the documents as a single set of data.

Up to 999 pages can be stored.

Note

• If the number of pages scanned by the machine exceeds the maximum, the machine stops scanning. Follow the message displayed on the screen, and either abort the operation or save the already-scanned data as a single set of data.

For information on how to set the maximum number of pages stored for a scan document, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Maximum Stored Pages" in the Administrator Guide.


# **2** While documents are being scanned, select [Next Original].

Note


- When using the document feeder, load the next document after the machine has finished scanning the first document.
- When [Next Original] is displayed on the screen shown on the right and no operation is performed for a certain period of time, the machine automatically assumes that there are no more documents.
- Store to Folde File 00009 ve in: Folder 001 - User 1 e Name: 2307201322582:

• You can change the scan settings of the next document by selecting [Change Settings] that is displayed after selecting [Next Original].

**3** Load the next document.

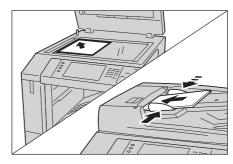

4 Press the <Start> button.
If you have more documents, repeat steps 3 and 4.

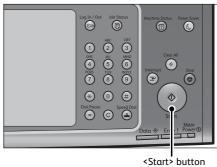


**5** When all documents have been scanned, select [Save (Last Original)].



# Step 4 Confirming the Scan Job in Job Status

The following describes how to confirm the status of a scan job.

**1** Press the <Job Status> button.

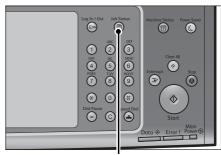


<Job Status> button

**2** Confirm the job status.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- From the drop-down menu, you can select [Scan, Fax, & Internet Fax Jobs] and display the desired job.

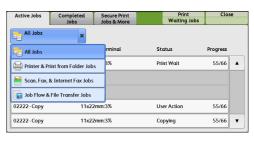

## Step 5 Saving the Scanned Data

When you used the Store to Folder service, you can use the following methods to import the file stored in a folder of the machine to your computer:

## ■ Import using an application

Use Network Scanner Driver.

Refer to "Importing to a TWAIN Compatible Application" (P.457).

## ■ Import using Stored File Manager 3

Use Stored File Manager 3 (Fuji Xerox application software).

Refer to "Importing Using Stored File Manager 3" (P.459).

## ■ Import using CentreWare Internet Services

Use CentreWare Internet Services.

Refer to "Importing Using CentreWare Internet Services" (P.462).

## **Operations during Scanning**


The following describes the operations available during scanning. The following shows the reference section for each operation.

Stopping the Scan Job	290
Previewing the Scanned Images during a Scan Job	29
Changing Scan Settings	294

## Stopping the Scan Job

To cancel scanning a document, use the following procedure.

1 Press either the <Stop> button on the control panel or [Delete] on the touch screen.

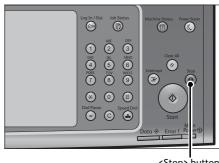

<Stop> button




2 Select [Delete].



## ■ If [Delete] does not appear on the screen:

**1** Press the <Job Status> button.

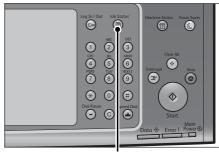

<Job Status> button



**3** Select [Delete].



4 Select [Delete].

Note

• If you cancel the job, the scanned data stored in the folder will also be deleted.



## Previewing the Scanned Images during a Scan Job

You can preview the scanned images while scanning the document.

1 When a document starts to be read with [Preview] is checked on a Scan screen, the screen on the right is displayed. After the document is read, select [Preview]. A preview screen is displayed and the first page of the lastly read document is displayed.



Note

- When this screen or the preview screen is displayed and the time of [Auto Clear] lapsed
- without any operation, the read document is automatically sent. For Auto Clear, refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Clear" in the Administrator Guide.
- When [Store to Folder] or [Store to USB] is selected, [Save (Last Original)] is displayed instead of [Send (Last Original)].
- **2** Select an option.



## **■** (Thumbnail view)

A previewed image is displayed in a thumbnail

In the thumbnail view, the following operations are available:


- Drag or flick the preview area up and down to switch pages.
- Tap a thumbnail to move to the entire view. For information on how to drag or flick, refer to "Touch Screen"

(P.98).

## ■ (Entire view)

An entire preview image is displayed.

• When the page switching buttons are displayed

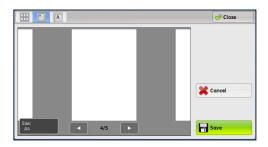

Close

**X** Cance

Save

When the thumbnail bar is displayed



In the entire view, the following operations are available:

- Drag or flick the preview area side to side to switch pages.
- Double-tap a previewed image to move to the enlarged view.
- Tap the preview area to switch whether to display the page switching buttons or thumbnail bar.
- Tap the previous or next page displayed on the preview area to display the tapped page on the center of the screen.
- Drag the thumbnail bar side to side to scroll thumbnails. Tap the desired thumbnail to be displayed.

## i

When an output does not match a preview image, 🗓 is displayed. Pressing 🗓 enables you to confirm the detailed information.

When Microsoft® Word or Microsoft® Excel® is selected for file format and [Auto Upright Orientation] is set for [Page Orientation], the message regarding Auto Upright Orientation is displayed.

When PDF, DocuWorks, or XPS is selected for file format, the items which are not reflected in a preview image are displayed. The items are as follow:

Note • XPS stands for XML Paper Specification.



- MRC High Compression
  - Displayed when [On] is set for [MRC High Compression] on the [File Format] screen.
- Specific Color
  - Displayed when [Specific Color] is selected.
- Auto Upright Orientation
  - Displayed when [PDF], [DocuWorks], or [XPS] is set for [File Format], when [Auto Upright Orientation] is set for [Searchable Page Orientation], and when [Searchable] is set for [Searchable Text].


Note • XPS stands for XML Paper Specification.

For information on how to set [Searchable - Page Orientation], refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Searchable - Page Orientation" in the Administrator Guide.

## ■ 🔝 (Enlarged view)

A previewed image is enlarged or reduced.

• When the slider is displayed

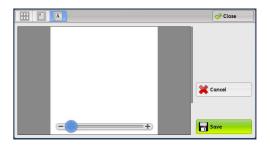

• When the thumbnail bar is displayed



In the enlarged view, the following operations are available:

• When [Store to Folder] is selected, [TIFF] or [JPEG] is set for [File Format], or job flow sheets are used, the [Rotate Left], [Rotate Right], and [Rotate Page] buttons are not displayed.

- Drag or flick the enlarged image side to side or up and down to move the position to be displayed.
- Double-tap a previewed image to change the ratio of the image size.
- Tap the preview area to switch whether to display the slider or thumbnail bar.
- Drag the slider to change the ratio of the image size.
- Drag the thumbnail bar side to side to scroll thumbnails. Tap the desired thumbnail to be displayed.

## ■ (Rotate Left)

Rotates the page 90 degrees left.

Note • You cannot select the [Rotate Left] button in the thumbnail view.

## ■ 🙌 (Rotate Right)

Rotates the page 90 degrees right.

Note • You cannot select the [Rotate Right] button in the thumbnail view.

Rotate Page

Rotates all pages 90 degrees right.

Note • You cannot select the [Rotate Page] button in the enlarged view.

#### ■ Cancel

Cancels the current job.

#### ■ Save/Send

When [Store to Folder] or [Store to USB] is selected, [Save] is displayed. Select [Save] to save the current job.

When [E-mail], [Store & Send Link], or [Scan to PC] is selected, [Send] is displayed. Select [Send] to send the current job.

Note

• Closing a preview screen by selecting [Close] returns to step1. When [Store to Folder] or [Store to USB] is selected, selecting [Save (Last Original)] saves a job.

When [Store to Folder] or [Store to USB] is selected, selecting [Save (Last Original)] saves a job. When [E-mail], [Store & Send Link], or [Scan to PC] is selected, selecting [Send (Last Original)] sends a job.


## **Changing Scan Settings**

You can change scan settings while scanning the document.

Note • For [Store to WSD]\*, you cannot change the scan settings while scanning the document.

\*: WSD stands for Web Services on Devices.

**1** Select [Next Original].

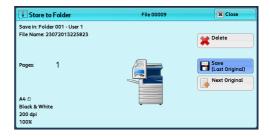

**2** Select [Change Settings].



**3** Set [Color Scanning], [Original Type], [Resolution], [Lighten/Darken], [Original Orientation], [2 Sided Scanning], and [Original size].

The following shows the reference section for each feature.

"Color Scanning (Selecting an Output Color)" (P.310)

"Original Type (Selecting the Document Type)" (P.312)

"Resolution (Specifying a Scanning Resolution)" (P.357)

"Image Options (Adjusting Scan Density and Image Sharpness)" (P.354)

"Original Orientation (Specifying the Orientation of the Loaded Document)" (P.363)

"2 Sided Scanning (Scanning Both Sides of a Document)" (P.358)

4 Press the <Start> button.

## E-mail

This section describes the features you can select on the [E-mail] screen. The E-mail service allows you to scan a document and send the scanned data as an e-mail attachment. The following shows the reference section for each feature.

Address Book	297
Address Book (Specifying a Destination Using the Address Book [Type 1])	297
Address Book (Specifying a Destination Using the Address Book [Type 2])	300
Add New Address (Registering a Recipient on the Address Book)	303
Specifying a Destination Using a One-Touch Button	304
New Recipient (Specifying an E-mail Address)	305
Add Me (Adding the Sender's Address)	306
Recipient(s) (Editing a Recipient)	307
From (Setting the Sender's Address)	308
Subject (Setting the Subject)	309
Message (Entering the E-mail Body)	309
Preview (Previewing the Scanned Images during a Scan Job)	310
Color Scanning (Selecting an Output Color)	310
2 Sided Scanning (Scanning Both Sides of a Document)	
Original Type (Selecting the Document Type)	312
File Format (Selecting a File Format for Output Data)	312

Note

• You can encrypt e-mail or send it with a digital signature by S/MIME. To use this feature, you need to register certificates of the machine and the recipient's device in advance. For information on certificates, refer to "12 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.

You can customize the layout of the features displayed on the [E-mail] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "1st Tab - Features Allocation" in the Administrator Guide.

You can set [First Tab] or [Address Book] for the screen displayed when you select [E-mail] on the Service Home screen. For more information, refer to "5 Tool" > "Scan Service Settings" > "Screen Defaults" > "Email Screen Default" in the Administrator Guide.

**1** Select [E-mail] on the Services Home screen.



## **2** Select a feature on the [E-mail] screen.

**Important** • You can only specify recipients registered for e-mail, but not for faxes.

- You cannot use address numbers using the numeric keypad, one-touch buttons, or group numbers to specify recipients.
- [New Recipient] and [Add Me] may not be displayed depending on the settings in the System Administration mode.
- Depending on the settings for [Email Screen Default] set in the System Administration mode, the [Email Address Book] screen is displayed. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "Email Screen Default" in the Administrator Guide.

## **Address Book**

The following describes the Address Book.

When you select a recipient using the Address Book, the following restrictions should be noted.

- Only the recipients set for mail service can be used. The recipients set for fax service cannot be used.
- You cannot use address numbers input by the numeric keypad or group numbers to specify the recipients registered in the Address book.
- When an address contains a domain that is not permitted for use, the address cannot be used.
- When sending an encrypted e-mail, select an e-mail address associated with a certificate
  that can be encrypted, from the Address Book. To use this feature, an e-mail address
  associated with a certificate for S/MIME must be registered in the Address Book in
  advance.

For more information, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

To verify the validity of a certificate, prior settings are required.

For information on the settings, refer to "5 Tools" > "Connectivity & Network Setup" > "Security Settings" > "Certificate Revocation Retrieval Settings" in the Administrator Guide.

## Types of the Address Book

The machine provides two different ways of displaying the Address book: [Type 1] and [Type 2].

Address Book [Type1] or [Type2] will be displayed depending on the setting of [Address Book Type] in the System Administration mode.

For information on how to set the Address book type, refer to "5 Tools" > "Address Book Settings" > "Address Book Type" in the Administrator Guide.

[Type 1]

E-mail Address Book

Go to
(0001 - 2000)

Alphanumeric
Index

Search

Add New
Address...

[Type 2]



## Address Book (Specifying a Destination Using the Address Book [Type 1])

The following describes how to specify a destination using the Address Book [Type 1].


**1** Select [Address Book].



**2** Select a recipient from the address list, and then select [To], [Cc], or [Bcc] from the dropdown menu.

Note

• The items that appear in the screen depend on the settings in the System Administration mode.

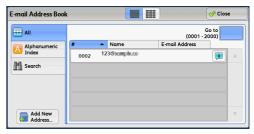

#### **■ Public Entries**

Displays the local address list.

Refer to "When [Public Entries] is Selected" (P.298).

#### ■ Network Entries

Searches recipients in the remote address list.

Note

• To display [Search Network], a prior setting is required in the System Administration mode. For more information, refer to "When [Network Entries] is Selected" (P.299).

## ■ Smart Card E-mail Address

Displays the addresses specified on the certificate in the Smart Card.


Note • This item is displayed when the Smart Card Reader is connected.

## When [Public Entries] is Selected

Select a recipient from a list under [Name].

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can sort recipients in alphabetical order or address number order.

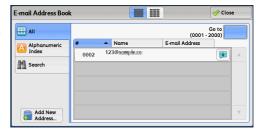

## ■ 📳 🏢 (List/Thumbnail)

Allows you to switch the number of the recipients displayed from list (five items) or thumbnail (15 items).

#### ■#

Displays the list of speed dials.

#### ■ Name/E-mail Address

Lists names and their e-mail addresses.

#### ■ Go to

Enter an address number using the numeric keypad to display the e-mail address at the top of the list.



Displays detailed information on the recipient.

#### ■ Add New Address

Allows you to add a new recipient. To add a new recipient, use the screen keyboard or current recipients.

For more information on how to add new address, refer to "Add New Address (Registering a Destination PC on the Address Book)" (P.330).

#### ■ All

Lists all the registered recipients for E-mail.

## ■ Alphanumeric Index

Lists the registered recipients with alphanumeric index character in alphabetical order.

#### ■ Search

Allows you to set [Simple Search] or [Advanced Search].

Searches by specified keyword for [Simple Search], or by search entries for [Advanced Search].

Note • For [Advanced Search], you can set multiple search entries.

## When [Network Entries] is Selected

Select a search target from the drop-down menu on the left.

You can select [Name], [E-mail Address], or [Custom Item X] for a search target (X represents a number between 1 and 3.

**Important** • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.



• Enable filters from the [Custom Filters] screen using CentreWare Internet Services to search with keywords ([Simple Search]) without [Name], [E-mail Address], or [Custom Item]. For more information, refer to the help of CentreWare Internet Services.

Network Entries 💌

M Search

The items to show on the drop-down menu can be changed. For more information, refer to "5 Tools" > "Address Book Settings" > "Directory Service" in the Administrator Guide.

**2** Select an advanced search condition from the drop-down menu on the right.

You can select [Begins With], [Ends With], [Contains], [Equals], or [Registered] for search entries of the Advanced Search.



Add Search Entries

**3** When you select a button other than [Registered], select the box and enter the text.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Search Entries

Select the check boxes to enable the search condition.

### ■ Add Search Entries

Select the check box to create a new search entry.

Note

• When you have multiple search entries, select [Match All Entries (AND)] or [Match Any Entry (OR)] from the drop-down menu.

#### ■ Name

Searches with a recipient name as a keyword. After you set an advanced search condition, select the box to display the screen for entering the keyword. Up to 32 characters are allowed.

Example: Smith

#### ■ E-mail Address

Searches with an e-mail address as a keyword. After you set an advanced search condition, select the box to display the screen for entering the keyword. Up to 128 characters are allowed.

Example: myhost@example.com

#### **■** Custom Item

Searches with a custom item as a keyword. After you set an advanced search condition, select the box to display the screen for entering the keyword. Up to 60 characters are allowed.

The names of the custom items depend on the settings specified for [Attribute Name of Custom Items 1, 2, and 3] in the System Administration mode.

For more information, refer to "5 Tools" > "Connectivity & Network Setup" > "Remote Authentication/Directory Service" > "LDAP Server/Directory Service Settings (ApeosPort Series Models Only)" in the Administrator Guide.

#### ■ Search

The search starts. The searched results are listed on the screen.

## Address Book (Specifying a Destination Using the Address Book [Type 2])

The following describes how to specify a destination using the Address Book [Type 2].

**1** Select [Address Book].



Cc →

Clos

Show E-mail Address

E-mail Address Book

all
blic entries...

Name / E-mail Address

**2** Select a recipient from the address list, and then select [To], [Cc], or [Bcc].

Not

• The items that appear in the screen depend on the settings in the System Administration mode.

### ■ List all public entries

Displays the local address list.

Refer to "When [List all public entries] is Selected" (P.301).

### ■ Retrieve entries using index

Specify an alphanumeric index character set when registering speed dials to retrieve the addresses or a speed dial to display at the top of the address list.



#### ■ Search Public

Searches recipients in the local address list.

Refer to "When [Search Public] or [Search Network] is Selected" (P.302).

#### ■ Search Network

Searches recipients in the remote address list.

Note

- To search for a recipient with a keyword without setting [Name], [E-mail Address], or [Custom Item], enable the search filters on the [Custom Filters] screen of CentreWare Internet Services ([Simple Search]). For more information, refer to the help of CentreWare Internet Services.
- This feature is supported only by the ApeosPort series models.
- To display [Search Network], the prior setting is required in the System Administration mode.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

## ■ Name/E-mail Address

Lists names and their e-mail addresses.

#### ■ To

Sets the selected address as a recipient.

#### ■ Cc

Sets the selected address as Cc.

#### ■ Bcc

Sets the selected address as Bcc.

#### ■ Go to

Enter an address number using the numeric keypad to display the e-mail address at the top of the list.

#### ■ [1] button

Displays detailed information on the selected recipient.

#### ■ Show E-mail Address

Select this check box to display only e-mail addresses in the list.

## When [List all public entries] is Selected

Select a recipient from a list under [Name/Email Address].

Note

- Select [▲] to return to the previous screen or
- You can sort recipients in alphabetical order or registered number order.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).



## When [Retrieve entries using index] is Selected

Specify an alphanumeric index character or a speed dial.



## When [Search Public] or [Search Network] is Selected

**1** Enter keywords to search for an address.

Note

- The screen on the right appears when [Search Public] is selected.
- When multiple keywords are used, the address is searched with the AND clause.

For information on how to enter characters, refer to "Entering Text" (P.100).



#### ■ Name

Searches with a recipient name as a keyword. Selecting the field for [Name] under [Keyword] displays the screen for entering the keyword. Up to 32 characters are allowed.

Example: John Smith

#### ■ E-mail Address

Searches with an e-mail address as a keyword. Selecting the field for [E-mail Address] under [Keyword] displays the screen for entering the keyword. Up to 128 characters are allowed. Example: myhost@example.com

#### **■** Custom Item

Select this option to search with a keyword item other than a recipient name and e-mail address.

Select any option from [Custom Item] and then select the box under [Keyword] to display a screen for entering a keyword. You can enter the keyword with up to 60 characters.

Note • You can select only one custom item.

None

No custom item is used for the keyword search.

Custom Item 1 (Telephone Number)

[Telephone Number] is set by default. When selected, a telephone number is used for the keyword search.

Custom Item 2 (Office)

[Office] is set by default. When selected, an office name is used for the keyword search.

Custom Item 3 (Department)

[Department] is set by default. When selected, a department name is used for the keyword search.

Attribute names of custom items differ depending on the setting of [Attribute Name of Custom Items 1, 2, and 3] in the System Administration mode. For more information, refer to "5 Tools" > "Connectivity & Network Setup" > "Remote Authentication/Directory Service" in the Administrator Guide.

#### ■ Keyword

Select a keyword item, and then enter the keyword.

#### ■ Search

The search starts. The searched results are listed on the screen.

## Add New Address (Registering a Recipient on the Address Book)

You can register addresses on the Address Book. The current recipients specified on the First Tab screen can also be registered.


Note

• [Add New Address] is not displayed depending on the settings in the System Administration mode or the number of registered recipients. For details on the settings and the number of registered recipients, ask your system administrator.

👨 Add New Addres

Add current recip

Select [Add New Address].

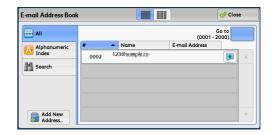

Select a method to register a recipient.

## ■ New

Enter a new recipient using the keyboard.

## ■ Add current recipient

Select a recipient to be registered from the current recipients specified on the First Tab screen.

Note

• This item cannot be selected if no recipient is specified on the First Tab screen.

## When [New] is selected

- 3 Use the keyboard displayed on the screen to enter an e-mail address with up to 128 singlebyte characters.
- Select [Next].

Note • To return to the previous screen, select [Back].

### When [Add current recipient] is selected


- Select a recipient to be registered.
- Select [Next].

Note

• To return to the previous screen, select [Back].

**5** Select [Name], enter a name using the keyboard displayed on the screen, and then select [Save].

For information on how to enter characters, refer to "Entering Text" (P.100).

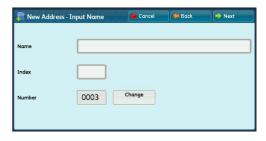

**6** To change the index, select [Index], select a new character from the keyboard displayed on the screen, and then select [Save].

You can register a single alphanumeric index character for use as a keyword to search with the Address Book.

For information on how to enter characters, refer to "Entering Text" (P.100).

- **7** To change the address number, select [Change], select a number from the list, and then select [Save].
- **8** Select [Next].
- 9 Select an item to set.

The following items appear:

- Address Type
- E-mail Address
- Name
- Index
- Surname
- · Given Name
- Custom Item 1
- · Custom Item 2
- Custom Item 3
- S/MIME Certificate (ApeosPort Series Models Only)

Note • To delete the input data and return to the [E-mail Address Book] screen, select [Cancel].

For more information on the setting items, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator

**10** When the settings are completed, select [Registered].

Note • To return to the previous screen, select [Back].

## Specifying a Destination Using a One-Touch Button

You can use the one-touch buttons to specify the e-mail address, the name of the user who can decrypt an encrypted file, and other information from the Address Book.

One-touch buttons correspond to the address numbers from 0001 to 0070, or 0001 to 0060.

For example, when the number you want to dial is registered to the address number 0001, press one-touch button <1>.

Note

- One-touch buttons can be used when the Fax service is available.
- There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following. By default, [Type 1] is selected.
  - [Type 1]



The buttons 1 to 70 are used for address numbers and correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.


- [Type 2]
  The buttons 1 to 60 are used for address numbers and correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 to 12.
- One-touch button is available when the machine displays the [E-mail] screen, the [Advanced Settings] screen, the [Layout Adjustment] screen, or the [E-mail Options] screen. The button is not available when the pop-up menu is displayed, or when the other screen is displayed after an item is selected.

When you press a one-touch button when the machine displays the [Advanced Settings] screen, the [Layout Adjustment] screen, or the [E-mail Options] screen, the screen switches to the [E-mail] screen automatically.

Press a one-touch button. Confirm that the recipient (e-mail address) specified with the one-touch button is displayed on the touch screen.


Important • The one-touch buttons have a sensor to detect which page of one-touch buttons (1 - 24, 25 - 48, or 49 - M02) is currently open.

Before pressing a one-touch button, turn over the one-touch panel completely, and take off your hand from the panel. Do not press the button while you are turning over the panel.

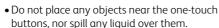

• Turn the one-touch panel over to press the one-touch buttons 25 and above.

• If you have entered an incorrect value, select the recipient (e-mail address) displayed on the touch screen, select [Remove] on the pop-up menu, and enter the correct value.

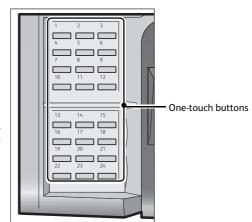

# New Recipient (Specifying an E-mail Address)

Note

You can specify the recipient's e-mail address using the keyboard. Enter a part of the address and search the Address Book, or directly enter the full address.

### Entering a Part of the E-mail Address

Select [New Recipient].

**2** Enter a part of the e-mail address, and then select **a**.

The search result appears. For information on how to select the recipient, refer to "Address Book" (P.297).





Note

• The e-mail address will be searched in the Address Book selected for [Address Book Default - Scan], [Public Entries] or [Network Entries]. For more information, refer to "5 Tools" > "Address Book Settings" in the Administrator Guide.

## **Entering the Full E-mail Address**

**1** Select [New Recipient].



1 2 3 4 5 6 7 8 9 0

z x c v b n m

✓ Close

**2** Enter the full e-mail address with up to 128 characters.

#### ■ To/Cc/Bcc

Allows you to switch the recipient type (To/Cc/ Bcc) from the drop-down menu.

#### ■ + Add

Allows you to add e-mail addresses to send emails to multiple recipients (Broadcast).

## **■** Delete Text

Deletes all the entered e-mail addresses.

### **■** Backspace

Moves the cursor back to delete one character.

#### ■ Shift

Used for switching uppercase characters and lowercase characters.

## ■ More Characters

Displays symbols. Use this button to enter symbols for the e-mail address.

## Add Me (Adding the Sender's Address)

The sender's address can be added to [To], [Cc], or [Bcc].

Select [Add Me].





**2** Select any option.

#### ■ To

Adds the sender's address to To.

#### ■ Cc

Adds the sender's address to Cc.

#### ■ Bcc

Adds the sender's address to Bcc.



## Recipient(s) (Editing a Recipient)

You can confirm, delete, or edit recipients using the pop-up menu displayed.

**1** From the [Recipient(s)] list, select the recipient to be deleted, confirmed, or edited.



**2** Select any option from the pop-up menu.

#### **■** Remove

Removes the selected recipient.

#### ■ Edit

Displays the [Edit Recipient] screen on which you can confirm or edit the recipient.

**Note** • The recipient cannot be edited depending on the settings in the System Administration mode. Refer to "[Edit Recipient] Screen" (P.307).


## ■ Close Menu

Hides the pop-up menu.

## [Edit Recipient] Screen

This screen allows you to confirm and change the settings of the recipient.

- **1** Select the item to be changed.
- 2 Select [Edit].

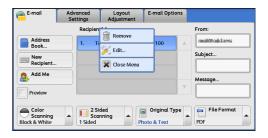

**3** Select any option.

### ■ E-mail Address

To change the e-mail address, select [E-mail Address] and enter a new address on the displayed keyboard.

#### ■ Name

To change the recipient name, select [Name] and enter a new name on the displayed keyboard.

When you specify a recipient from the Address Book and the recipient name is registered in the Address Book, that recipient name is displayed.

Edit Recipient

1. E-mail Address

2. Name

Current Settings

molt address 100 that ju

Mail Address Name 100

#### ■ S/MIME Certificate

Certificates which is linked to the e-mail address is displayed.

If S/MIME is enabled, and a certificate is linked to the e-mail address, you can check the contents of the S/MIME certificate by selecting [S/MIME Certificate].

Note • This feature is supported only by the ApeosPort series models.

For information on S/MIME communication, refer to "12 Encryption and Digital Signature Settings" > "Configuration of Email Encryption/Digital Signature" in the Administrator Guide.

## From (Setting the Sender's Address)

Specify a sender's e-mail address. You can specify only one address as a sender's address.

Note

 When [Login to Local Accounts] is selected, the e-mail address registered in user information is automatically set as a sender's address. For more information on user information, refer to "5 Tools"
 "Accounting" > "Create/View User Accounts" in the Administrator Guide.


Book...

Add Me

- $\bullet$  [From] may not be editable depending on the setting in the System Administration mode.
- When you send an e-mail with a digital signature, the items used in the signature are different depending on the settings in the System Administration mode.

For information on a digital signature, refer to "12 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.

### **1** Select [From].

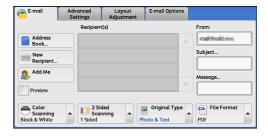

Address Book..

Keyboard..

X Close Menu

2 Select any option from the pop-up menu displayed.

#### ■ Address Book

Allows you to select the sender's e-mail address from the Address Book.

For information on the Address Book, refer to "Address Book" (P.297).

### ■ Keyboard

Allows you to enter the sender's e-mail address with up to 128 characters using the displayed keyboard.



For information on how to search the Address Book by entering a part of the e-mail address, refer to "New Recipient (Specifying an E-mail Address)" (P.305).

### **■ Close Menu**

Hides the pop-up menu.

## **Subject (Setting the Subject)**

You can specify the e-mail subject using the following procedure.

#### ■ Auto Set

Automatically sets the subject to [Scan data from XXX] (where XXX is the host name of the machine).

## ■ To set a user-defined subject

- **1** Select [Subject].
- **2** Enter a subject with up to 128 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.100).

## Message (Entering the E-mail Body)

You can enter the e-mail body using the following procedure.

- **1** Select [Message].
- **2** Enter a message with up to 512 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.100).

## Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.


1 Check [Preview].



**2** The message screen on the right will be displayed. Configure each settings and press the <Start> button.

Note

• This message is displayed for the Type 2 (T2) model only.

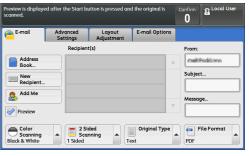

3 Preview the scanned images after the document is scanned.

## Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

Note

- [Color Scanning] is not displayed on the [E-mail] screen depending on the settings in the System Administration mode. In that case, set [Color Scanning] from the [Advanced Setting] screen.
- **1** From the menu displayed by selecting [Color Scanning], select any option.

#### ■ Auto Detect

The color of the document is determined automatically; the machine scans in full color when the document is colored, otherwise scans in monochrome.



Note

• When you select [Auto Detect], the available features on the [Advanced Settings] screen are the same as when you select [Color] in [Color Scanning] for color documents, or the same as when you select [Black & White] in [Color Scanning] for monochrome documents.

#### **■** Color

Select this option to scan a color document.

### ■ Black & White

Scans a document in monochrome two tones. You can select the document type in [Original Type].

Note

• [Black & White] is not selectable when [MRC High Compression] is set to [On] on the [File Format] screen or Microsoft® Office format is selected.

## ■ Grayscale

Scans a document in grayscale. Adds shades to monochrome, creating intermediate tones that change gradually. Suited to documents containing gradations that cannot be reproduced with monochrome (2-color tone).

## 2 Sided Scanning (Scanning Both Sides of a Document)

You can scan a 1-sided or 2-sided document on one or both sides of paper.

By setting the binding style, both sides are scanned in the same orientation.

Note

- [2 Sided Scanning] is not displayed on the [E-mail] screen depending on the settings in the System Administration mode. In that case, set [2 Sided Scanning] from the [Layout Adjustment] screen.
- **1** From the menu displayed by selecting [2 Sided Scanning], select any option.

#### ■ 1 Sided

Select this option to scan only one side of the document.

## ■ 2 Sided (Head to Head)

Select this option when both sides of the 2-sided document are in the same orientation.

### ■ 2 Sided (Head to Toe)

Select this option when both sides of the 2-sided document are in opposite orientations.

#### ■ More

Displays the [2 Sided Scanning] screen.

Refer to "[2 Sided Scanning] Screen" (P.311).

## [2 Sided Scanning] Screen

This screen allows you to select the status and orientation of original documents.

2 Sided Scanning

Head to Toe

1 Sided

2 Sided

**1** Select any option.

#### ■ 1 Sided

Select this option to scan only one side of the document.

#### ■ 2 Sided

Select this option to scan both sides of the document.

#### ■ Originals


This option is displayed when [2 Sided] is selected.

· Head to Head

Select this option when both sides of the 2-sided document are in the same orientation.

• Head to Toe

Select this option when both sides of the 2-sided document are in opposite orientations.

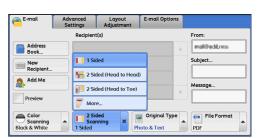

Cancel

Original Orientation

Upright Images

Sideways Images

## ■ Original Orientation

Specify the orientation of the loaded document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

### · Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or the document feeder.

## Original Type (Selecting the Document Type)


You can select the scanned image type.

Note

- [Original Type] is not displayed on the [E-mail] screen depending on the settings in the System Administration mode. In that case, set [Original Type] from the [Advanced Settings] screen.
- From the menu displayed by selecting [Original Type], select any option.

#### ■ Photo & Text

Select this option when scanning a document that contains both text and photos. The machine automatically identifies text and photo areas to scan each area with optimum quality.

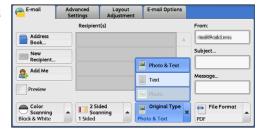

### ■ Text

Select this option when scanning text clearly.

#### **■** Photo

Select this option when scanning photos.

Note

• [Photo] is not selectable when [Searchable Text] is set to [Searchable] on the [File Format] screen.

## File Format (Selecting a File Format for Output Data)

You can select a file format for scanned data.

Note

- When [File Format] is not displayed on the [E-mail] screen according to the settings set in the System Administration mode, select [File Format] on the [E-mail Options] screen.
- **1** From the menu displayed by selecting [File Format], select any option.

#### **■ TIFF/JPEG Auto Select**

Automatically selects JPEG or TIFF. The file format is determined for each page: [JPEG] for full-color and grayscale pages, and [TIFF] for monochrome pages.



#### **■** TIFF

Saves scanned data in TIFF format.

#### **■ JPEG**

Saves scanned data in JPEG format. This option is selectable when either [Color] or [Grayscale] is selected in [Color Scanning].

#### **■** PDF

Saves scanned data in PDF format.

• The version of PDF files is Acrobat<sup>®</sup> 4.0 (PDF 1.3).

#### ■ DocuWorks

Saves scanned data in DocuWorks format.

Note

- To browse or print DocuWorks files on a computer, one of the following software is required:
  - DocuWorks 4.0 or later
  - DocuWorks Viewer Light 4.0 or later
  - DocuWorks Viewer Light for Web 4.0 or later

#### ■ More

Displays the [File Format] screen.

Refer to "[File Format] Screen" (P.313).

## [File Format] Screen

This screen allows you to select all available options for File Format.

**1** Select any option.

#### **■ TIFF/JPEG Auto Select**

Automatically selects JPEG or TIFF. The file format is determined for each page: [JPEG] for full-color and grayscale pages, and [TIFF] for monochrome pages.



\* XPS stands for XML Paper Specification.

#### **■ TIFF**

Saves scanned data in TIFF format.

#### **■** JPEG

Saves scanned data in JPEG format. This option is selectable when either [Color] or [Grayscale] is selected in [Color Scanning].

## ■ PDF

Saves scanned data in PDF format.

• The version of PDF files is Acrobat<sup>®</sup> 4.0 (PDF 1.3).

#### ■ DocuWorks

Saves scanned data in DocuWorks format.

Note

- $\bullet$  To browse or print DocuWorks files on a computer, one of the following software is required:
  - DocuWorks 4.0 or later
  - DocuWorks Viewer Light 4.0 or later
  - DocuWorks Viewer Light for Web 4.0 or later

## ■ XPS

Saves scanned data in XPS format.

Note • XPS stands for XML Paper Specification.

## ■ Microsoft® Office Format

Saves the scanned data in the Microsoft® Word (doc) / Microsoft® Excel® (xls) format.

Displays the [Microsoft® Office Format] screen. For more information, refer to "[Microsoft® Office Format] Screen" (P.323).

**Important** • Microsoft<sup>®</sup> Office formats other than doc or xls are not available for this feature.

- This feature utilizes the OCR (Optical Character Recognition) technology. Depending on the original conditions, an error in recognition or loss of graphical information may occur.
- This is useful for editing texts or images of the document scanned and converted into the Microsoft® Office format. Note that the strict reproducibility of the texts, tables, images, and pictures of the original document may not be ensured due to the scope of this feature.

Note

- This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.
- To browse, edit, or print Microsoft® Word / Microsoft® Excel® files on a computer, one of the following software is required:
  - For Windows 8:
  - Microsoft® Office 2013
  - For Windows 7:
  - Microsoft® Office 2010
  - For Windows Vista:
  - Microsoft® Office 2007
  - For Windows XP:
  - Microsoft® Office 2003, Microsoft® Office XP
- This feature is available when [Color Scannina] is set to [Auto Detect], [Color], or [Grayscale], and [Resolution] is set to [300 dpi].

### ■ Compression Method

Allows you to select a compression method for scanned image data.

Note

- When you select [Auto], the following compression methods will be used:
  - When [Original Type] is set to [Photo & Text] or [Text] for black-and-white images: MMR
  - When [Original Type] is set to [Photo] for black-and-white images: MH
  - For grayscale and color images: JPEG
- When you select [TIFF], [DocuWorks], or [XPS]\* and then select [Manual Select] in [Compression Method] under [File Format], you can select a compression method from [MH] and [MMR] under
- If you select [PDF] and then select [Manual Select] in [Compression Method] under [File Format], you can select a compression method from [MH], [MMR], [JBIG2 Arithmetic Encoded], and [JBIG2 Huffman Encoded] under [Black & White Pages], and one from [JPEG] and [Flate] under [Grayscale/ Color Pages]. Selecting [Flate] saves the image data with higher compression than [JPEG].
- $\bullet \ \ When you select [Microsoft @Office Format], [Compression Method] \ cannot \ be selected.$
- You cannot retrieve grayscale or color images in uncompressed (Raw) format.
- \*: XPS stands for XML Paper Specification.

## ■ MRC High Compression

Allows you to save PDF, DocuWorks, and XPS files with high compression.

- Important If you use the E-mail or Scan to PC service to scan a document with [MRC High Compression] enabled, the image quality of the scanned data may differ from when you use CentreWare Internet Services to retrieve the scanned data from a folder with [MRC High Compression] enabled.
  - DocuWorks 5.0.x and earlier versions (including trial version) do not support high-compressed DocuWorks files.

Note

- XPS stands for XML Paper Specification.
- To browse or print DocuWorks files on a computer, one of the following software is required:
  - DocuWorks 6.0 or later
  - DocuWorks Viewer Light 5.1 or later
  - DocuWorks Viewer Light for Web 5.1 or later

• This feature is available when [Color Scanning] is set to [Auto Detect], [Color], or [Grayscale], when [Resolution] is set to [200 dpi] or [300 dpi], and when [File Format] is set to [PDF], [DocuWorks], or [XPS].

#### ■ Searchable Text

Allows you to specify whether to perform character recognition in PDF and DocuWorks files. When [Searchable Text] is set to [Searchable], select a language to identify the text. Refer to "[File Format - Searchable Text] Screen" (P.317).

Setting :	Item	When [MRC High Compression] is Set to [Off]	When [MRC High Compression] is Set to [On]
E-mail/ Store to Folder/ Network Scanning/ Scan to PC/ Store & Send Link/ Store to USB	Color Scanning	Black & White <sup>*1</sup> , Auto Detect, Color, Grayscale	Auto Detect, Color, Grayscale
	Original Type	Photo & Text, Text	
	File Format	PDF, DocuWorks	
Advanced Settings	Color Space <sup>*2</sup>	sRGB	
Layout Adjustment	Resolution	200 dpi, 300 dpi	
	Reduce/Enlarge*3	100%	

<sup>\*1 :</sup> An optional component is required to select options other than [Black & White]. For more information, contact our Customer Support Center.

## **■** Specific Color

Allows you to scan documents containing a small number of colors and save the scanned data with compression. Selecting this check box enables the file size to be smaller than selecting [MRC High Compression].

Note

- This feature is available when [Color Scanning] is set to [Color], when [Resolution] is set to [200 dpi] or [300 dpi], and when [File Format] is set to [PDF] or [DocuWorks].
- To browse or print DocuWorks files on a computer, one of the following software is required:
  - DocuWorks 6.0 or later
  - DocuWorks Viewer Light 5.1 or later
  - DocuWorks Viewer Light for Web 5.1 or later

#### ■ Add Thumbnail

Allows you to attach thumbnails to DocuWorks and XPS files when [DocuWorks] or [XPS] is selected. A thumbnail is a reduced, small file size image that helps you check the file contents.

Note • XPS stands for XML Paper Specification.

#### ■ Single File for Each Page

Saves each page as a single file in the specified format.

Note • When you use the Store to Folder and Job Flow Sheets service, files cannot be split.

### **■ PDF Security**

Displays the [File Format - PDF Security] screen.

Allows you to configure security on the data saved as a PDF file to prevent unauthorized access.

<sup>\*2 :[</sup>Color Space] may not appear for some models, or may not appear on the screen depending on the setting in the System Administration mode. For more information, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Color Space" in the Administrator Guide, and "Color Space (Specifying the Color Space)" (P.356).

<sup>\*3 :[</sup>Auto %] is not supported.

Refer to "[File Format - PDF Security] Screen" (P.317).

## ■ PDF Signature

Displays the [File Format - PDF Signature] screen.

A visible signature added to a file enables to detect alterations in the file, or to prevent impersonation of the sender.

To verify the signature with Acrobat $^{\otimes}$ , select [Digital Signatures] under [Preferences] on Acrobat, and then select the following option for [When Verifying].

- Acrobat 6.0.x: Windows Digital Certificate Security
- Acrobat 7.0.x: Adobe Default Security
- Acrobat 8.0.x : Adobe Default Security
- Off

No visible signature is added.

• On

Adds a visible signature using the certificate of the machine.

Note

• The items used in the signature are different depending on the machine configuration and settings in the System Administration mode.

Signature Location

Select the position where the signature is displayed when you select [On] in [PDF Signature].

When you select [Invisible Signature], an invisible signature is added using the certificate of the machine.

Note

- The certificate of the machine is used for PDF digital signature. A user certificate cannot be used for the digital signature.
- This feature is supported only by the ApeosPort series models.

## ■ Optimize For Quick Web View

Optimizes the PDF file so that it is displayed faster on a web browser.

## **■** DocuWorks Security

Displays [File Format - DocuWorks Security] screen.

Allows you to configure security on the data saved as a DocuWorks file to prevent unauthorized access.

Refer to "[File Format - DocuWorks Security] Screen" (P.319).

## ■ DocuWorks Signature

Displays the [File Format - DocuWorks Signature] screen.

A visible signature added to a file enables to detect alterations in the file, or prevent impersonation of the sender.

Off

No visible signature is added.

On

Adds a visible signature using the certificate of the machine.

Note

• The items used in the signature are different depending on the machine configuration and settings in the System Administration mode.

## Signature Location

Select the position where the signature is displayed when you select [On] in [DocuWorks Signature].

Note • This feature is supported only by the ApeosPort series models.

## ■ XPS Signature

Displays the [File Format - XPS Signature] screen.

A visible signature added to a file enables to detect alterations in the file, or prevent impersonation of the sender.

Off

No visible signature is added.

Adds a visible signature using the certificate of the machine.

Note

- XPS stands for XML Paper Specification.
- This feature is supported only by the ApeosPort series models.
- The items used in the signature are different depending on the machine configuration and settings in the System Administration mode.

File Format - Searchable Text

English

## [File Format - Searchable Text] Screen

Allows you to select whether to perform character recognition in PDF and DocuWorks files.

Select any option.

## ■ Language of the Original

Allows you to select a language to identify the text on the original document.

Note

• This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

### **■** Text Compression

Allows you to select whether to compress the text areas of the document when using the Searchable Text feature.

**Important** • Note the following when [Searchable Text] is set to [Searchable].

- When the text on the document is small (10 points or smaller), scan the document with high resolution (300 dpi).
- Color scanning is recommended when the document has text with white outline or text placed on a dark background.
- If you use the E-mail or Scan to PC service to scan a document with both [MRC High Compression] and [Searchable Text] enabled, the recognition rate of the scanned data may differ from that of the data retrieved from a folder with both [MRC High Compression] and [Searchable Text] enabled, using CentreWare Internet Services.
- In the following cases, the Searchable Text feature may not function properly.
  - If the document is not loaded correctly and thus the text is slanted, or if the text on the document is in different orientations
  - If the text on the document is decorated (italic, hatching, strike-through, etc.)
  - If the document has background patterns or noise
  - If the text on the document is handwritten

Note

• This feature is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

## [File Format - PDF Security] Screen

This screen allows you to encrypt a PDF file with a password, and assign the access privileges for the file operation.



## Select any option.

The file is not encrypted, and no access privilege is assigned.

#### ■ Password

Encrypts the file using a password.

## **■** Encryption Algorithm

Allows you to specify the encryption method.

• 128-bit RC4

Encrypts the file by the 128-bit RC4 method. Files encrypted by this method can be opened with Acrobat® 5.0 or later.

🖟 File Formαt - PDF Security

128-bit RC4

256-bit AES

Acrobat 5.0 or late

Important • When the 128-bit RC4 method is used to encrypt a file, and [PDF Signature] is selected, files can be opened only with Acrobat® 6.0 or later.

128-bit AES

Encrypts the file by the 128-bit AES method. Files encrypted by this method can be opened with Acrobat<sup>®</sup> 7.0 or later.

256-bit AES

Encrypts the file by the 256-bit AES method. Files encrypted by this method can be opened with Acrobat® 9.0 or later.

## **■** Supported Version

Displays the supported versions of Acrobat<sup>®</sup> for encryption.

### ■ File Open Password

Displays the [PDF Security - File Open Password] screen.

If you select [On] and set a password, the password is required to open the file.

You can enter a password with up to 32 characters.

## **■** Permissions

Displays the [PDF Security - Permissions] screen.

Refer to "[PDF Security - Permissions] Screen" (P.318).

## [PDF Security - Permissions] Screen

This screen allows you to assign access privileges to a file.

Select [Permissions].





## **2** Select [Security Password].



- **3** Select [On].
- **4** Enter the security password, and select [Save].
- **5** Likewise, re-enter the security password, and select [Save].
- **6** Select any option.

## ■ Security Password

Displays the [PDF Security - Security Password] screen.

[Security Password] allows to assign access privileges to files. The password is required to change the access privileges or to perform unauthorized operations.

You can enter a password with up to 32 characters.

## **■** Printing

Displays the [Permissions - Printing] screen.

Specify whether to allow printing the file. If allowed, select the print resolution.

## ■ Changes Allowed

Displays the [Permissions - Changes Allowed] screen.

Specify whether to allow changing the file contents, such as inserting pages or adding notes.

## ■ Allow Contents Copying and Extraction

Displays the [Allow Contents Copying and Extraction] screen.

Specify whether to allow copying the file contents, such as text and images.

## ■ Text Editing by Screen Reader

Displays the [Text Editing by Screen Reader] screen.

Select [Allowed] to use application software, such as a screen reader, that reads out PDF documents for the visually handicapped.

## [File Format - DocuWorks Security] Screen

This screen allows you to encrypt a DocuWorks file with a password, and assign the access privileges for the file operation.

**1** Select any option.

#### ■ Off

The file is not encrypted, and no access privilege is assigned.



#### ■ Password (V4 or later)

Encrypts the file by the 56 bit AES method using a password. Files encrypted by this method can be opened with DocuWorks Ver. 4.0 or later. Select [Open Password] to set a password.

#### ■ Password (V5 or later)

Encrypts the file by the 128 bit AES method using a password. Files encrypted by this method can be opened with DocuWorks Ver. 5.0 or later. Select [Open Password] to set a password.

### ■ Password (V8 or later)

Encrypts the file by the 256 bit AES method using a password. Files encrypted by this method can be opened with DocuWorks Ver. 8.0 or later. Select [Open Password] to set a certificate.

Important • If you encrypt a file using a certificate without Basic Constraints, you cannot use DocuWorks Ver. 5.0.1 and Ver. 6.0.1 to open the file. To use such certificates, use DocuWorks Ver. 5.0.2, or Ver. 6.0.2

Note

- This feature is supported only by the ApeosPort series models.
- When you select [Full Access Password] or [Open Password] in [Digital Certificate (V4 Incompatible)], the same certificate name may be redundantly displayed in [Security Settings] of  $\alpha$ DocuWorks document to be generated, in the following conditions. However, this does not affect the operation.
  - When you created a job flow on the machine, the same certificate was selected redundantly.
  - The certificate data was obtained from an LDAP server, and the same certificate was selected redundantly.

## ■ Digital Certificate (V5 or later)

Encrypts the file by the 128 bit AES method using a certificate. Files encrypted by this method can be opened with DocuWorks Ver. 5.0 or later.

Select [Certificate] to set a certificate.

Note • This feature is supported only by the ApeosPort series models.

#### ■ Digital Certificate (V8 or later)

Encrypts the file by the 256 bit AES method using a certificate. Files encrypted by this method can be opened with DocuWorks Ver. 8.0 or later.

Select [Certificate] to set a certificate.

Note • This feature is supported only by the ApeosPort series models.

### **■** Encryption Algorithm

Displays the encryption methods.

## ■ Restricted Operations

Select file operations to assign access privileges. When assigning access privileges, set [Full Access Password].

### ■ Open Password

Displays the [DocuWorks Security - Open Password] screen.

If you select [On] and set a password, the file is encrypted. To open the file, the password is required. The access privileges set in [Restricted Operations] are assigned.

You can enter a password with up to 32 characters.

#### **■** Full Access Password

Displays the [DocuWorks - Full Access Password] screen.

If a password is set, the password is required to change the access privileges set in [Restricted Operations].

You can enter a password with up to 32 characters.

#### ■ Certificate

Displays the [DocuWorks Security - Certificate] screen.

Note

- This feature is supported only by the ApeosPort series models.
- When you select [Certificate], the Address Book [Type1] or [Type2] will be displayed depending on the setting of [Address Book Type] in the System Administration mode. For more information, refer to "5 Tools" > "Address Book Settings" > "Address Book Type" in the Administrator Guide.

Refer to "[DocuWorks Security - Certificate] Screen" (P.321).

## [DocuWorks Security - Certificate] Screen

This screen allows you to specify parties to whom the encrypted file is disclosed, and addresses to which privileges are assigned.

Note

- You can specify up to 50 parties to whom the encrypted file is disclosed, on the [DocuWorks Security Certificate] screen.
- This feature is supported only by the ApeosPort series models.

## ■ When the Address Book Type 1 is Displayed

#### ■ List all certificates

Displays all the certificates currently configured on the machine. Select  $[\blacktriangle]$  to return to the previous screen or  $[\blacktriangledown]$  to move to the next screen.

• Certificate Type Name / E-mail Address

For [Certificate Type], select [Open File] to open the file, or select [Full Access] to allow all operations such as editing the file.

When selecting a certificate, a pop-up menu appears. Select [Delete], [Change Rights], [Certificate Details], or [Cancel].

Select [Certificate Details] to display [Certificate Details] screen. You can confirm certificate information, such as issuer, expiration date, and persons to whom the certificate is issued on the screen.

Delete All

Deletes all the certificates currently configured on the machine.

Add Certificate

Displays the [Certificate Address Book] screen.

#### ■ [Certificate Address Book] screen

Select a certificate from the certificate Address book.

Note

- To switch the Address Book entry type, select [Public Entries], [Network Entries], [Smart Card E-mail Address], or [Device Certificate] from the drop-down menu on the [Certificate Address Book] screen.
- $\bullet$  The items on the drop-down menu depend on the settings in the System Administration mode.

#### **■ Public Entries**

Displays the local addresses.

• All

Lists all the registered recipients for using SMB or FTP protocol.

Alphanumeric Index

Lists the registered recipients with alphanumeric index character in alphabetical order.

#### Search

Allows you to set [Simple Search] or [Advanced Search].

Searches by the keyword specified for [Simple Search], or by search entries for [Advanced Search].

Note • For [Advanced Search], you can set multiple search entries.

#### #/Name/E-mail Address

Displays the list of names, registered numbers, and E-mail addresses.

• Go to

Enter a recipient number using the numeric keypad to display the recipient at the top of the list.

## • [1] button

Certificate information, such as issuer, expiration date, and persons to whom the certificate is issued, is displayed.

#### ■ Network Entries

Searches recipients in the remote address list.

**Important** • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

• To search for a recipient with a keyword without setting [Name], [E-mail Address], or [Custom Item], enable the search filters on the [Custom Filters] screen of CentreWare Internet Services ([Simple Search]). For more information, refer to the help of CentreWare Internet Services.

Note

• To display [Search Network], prior settings are required in the System Administration mode.

#### ■ Smart Card Certificate

Searches recipients in the remote address list.

Note • This item is displayed when the Smart Card Reader is connected.

## ■ Device Certificate

Searches recipients in the remote address list.

• This item is displayed when the machine stores a certificate.

## ■ When the Address Book Type 2 is Displayed

## ■ List all public entries

Displays the local address list.

#### ■ Retrieve entries using index

Specify an alphanumeric index character set when registering speed dials to retrieve the addresses or a speed dial to display at the top of the address list.

### ■ Search Public

Searches recipients in the local address list.

## ■ Search Network

Searches recipients in the remote address list.

Note • To display [Search Network], prior settings are required in the System Administration mode.

#### ■ [1] button

Displays the [Certificate Details] screen.

Certificate information, such as issuer, expiration date, and persons to whom the certificate is issued, is displayed.

#### ■ Name/E-mail Address/DN

Lists names and their e-mail addresses.

#### ■ Add

Select this button to add the certificate as one of the certificates of persons who are allowed to open the file.

#### ■ Grant full access to this file

Configure certificates of persons who are allowed to change access privileges including editing or operating the file (full access).

## [Microsoft® Office Format] Screen

This screen allows you to select the scan options and the format of the scanned data.

## **1** Select any option.

## ■ Microsoft<sup>®</sup> Word / Microsoft<sup>®</sup> Excel<sup>®</sup>

Select Microsoft<sup>®</sup> Word format or Microsoft<sup>®</sup> Excel<sup>®</sup> format.

## **■** Text Settings

Displays the [Text Settings] screen.

For more information, refer to "[Text Settings] Screen" (P.323).

## ■ Page Orientation

Select the page orientation for the file; the orientation when loading/placing the original document or the upright orientation for the recognized text with OCR feature.

#### ■ Image Area Format

Select the image format from [AutoShapes] or [Picture Object] for image areas of the original document.

### [Text Settings] Screen

This screen allows you to select a language to identify the text on the original document and a font to be used for the recognized text.

#### ■ Language of the Original

Select the language of the original document from the following options: Japanese, Korean, Traditional Chinese, Simplified Chinese, and English.


## ■ Font for Language of the Original

Select the font from the two to four available types for each language of the original document.

## ■ Alphanumeric Font

Select the alphanumeric font of the original document when using a different font from the font for the language of the original.

Note • This item is available for Microsoft<sup>®</sup> Word format.

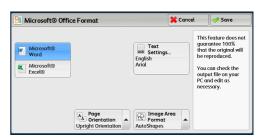

## **Network Scanning**

This section describes the procedure to select features on the [Network Scanning] screen. On the [Network Scanning] screen, you can scan documents after specifying a file (job template) saving scanning conditions, information on the forwarding destination server, and others.

This feature creates job templates on a computer using CentreWare Internet Services. Scanned data is converted to the format specified in a job template, and is automatically sent to a server. The machine allows you to automatically retrieve job templates stored in a server. The following describes features available on the [Network Scanning] tab.

Note

- If characters not supported by the machine are used in names or descriptions of job templates sheets, the characters will not be displayed or will be garbled on the screen. For information on characters available for use, refer to "16 Appendix" > "Notes and Restrictions" > "Notes and Restrictions on the Use of the Machine" in the Administrator Guide.
- This service is supported only by the ApeosPort series models.

**Important** • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

**1** Select [Network Scanning] on the Services Home screen.



\* WSD stands for Web Services on Devices.

**2** Select a job template, and then select a feature on the [Network Scanning] screen.

#### ■ Job Template

Select a job template for the scan job.

The default job template is used as a base template when a new template is created on CentreWare Internet Services. This template cannot be deleted. It can be edited and



returned to the factory-default template only by the system administrator.

For information on how to use CentreWare Internet Services, refer to the help of CentreWare Internet Services.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

#### ■ Go to

Use the numeric keypad to enter a 3-digit job template number. The job template then appears at the top of the list.

#### **■** Template Description

Displays the [Template Description] screen on which you can view the description of the job template. This button is displayed only when the description has been added to a job template.

### ■ Update Templates

Refreshes the information. If a created job template has not been displayed, selecting [Update Templates] will display the job template.

# Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.310).

# Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.310).

# 2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.311).

# Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.312).

# File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.312).

# Scan to PC

This section describes the procedure to select features on the [Scan to PC] screen. The Scan to PC service allows you to scan documents and send the scanned data to a network computer via the FTP or SMB protocol. The following describes features available on the [Scan to PC] tab. The following shows the reference section for each feature.

Transfer Protocol (Selecting a Transfer Protocol)	
Address Book	327
Address Book (Specifying a Destination Using the Address Book [Type 1])	328
Address Book (Specifying a Destination Using the Address Book [Type 2])	329
Add New Address (Registering a Destination PC on the Address Book)	330
Specifying a Destination PC Using a One-Touch Button	332
Browse (Specifying a Destination PC by Browsing Your Network)	333
Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)	334
Preview (Previewing the Scanned Images during a Scan Job)	336
Color Scanning (Selecting an Output Color)	336
2 Sided Scanning (Scanning Both Sides of a Document)	336
Original Type (Selecting the Document Type)	336
File Format (Selecting a File Format for Output Data)	337

#### Note

- Before scanning, you must create a shared folder on your computer to save scanned data in. Furthermore, if you use the FTP protocol, you must set the FTP service. For information on the computer settings, refer to the documentation provided with your operating system. For information on how to configure the FTP settings on Mac OS X 10.7 Lion or OS X 10.8 Mountain Lion, refer to the official website of Apple, Inc.. For information on supported operating systems, refer to "16 Appendix" > "Specifications" in the Administrator Guide.
- If you use Mac OS X 10.7 Lion or OS X 10.8 Mountain Lion, contact our Customer Support Center to ask if it is supported.
- Scan to My Folder feature in which the scanned document can be transferred to a different destination according to an authenticated user when you select [Scan to PC] on the [Service Home] screen. The authenticated user's information such as the user name or storage location of the scanned document, is automatically determined and displayed.

You can customize the layout of the features displayed on the [Scan to PC] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "1st Tab - Features Allocation" in the Administrator Guide.

You can set [First Tab] or [Address Book] for the screen displayed when you select [Scan to PC] on the Service Home screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "Scan to PC Screen Default" in the Administrator Guide.

Select [Scan to PC] on the Services Home screen.



**2** Select a feature on the [Scan to PC] screen.

#### Note

- Depending on the settings for [Scan to PC Screen Default] in the System Administration mode, the [Server Address Book] screen is displayed. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "Scan to PC Screen Default" in the Administrator Guide.
- Fields displayed on the screen vary depending on the protocol you have selected.



# Transfer Protocol (Selecting a Transfer Protocol)

You can select a transfer protocol using the following procedure.

Select [Transfer Protocol].



- Transfer Protocol

- Select any option.
  - **FTP**

Transfers using the FTP protocol.

Transfers using the SMB protocol.

#### ■ SMB (UNC Format)

Transfers using the SMB protocol (UNC Format).

UNC stands for Universal Naming Convention and its format is as follows: \\host name\shared name\directory name

#### **Address Book**

The following describes the Address Book.

When you select a recipient using the Address Book, the following restrictions should be noted.


You cannot use address numbers input by the numeric keypad or group numbers to specify the destination registered in the Address book.

# **Types of the Address Book**


The machine provides two different ways of displaying the Address book: [Type 1] and [Type 2]. The Address Book [Type1] or [Type2] will be displayed depending on the setting of [Address Book Type] in the System Administration mode.

For information on how to set the Address book type, refer to "5 Tools" > "Address Book Settings" > "Address Book Type" in the Administrator Guide.

[Type 1]

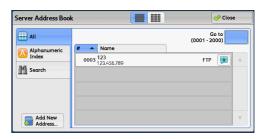

[Type 2]

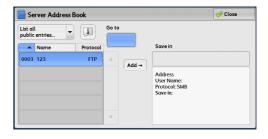

# Address Book (Specifying a Destination Using the Address Book [Type 1])

The following describes how to specify a destination using the Address Book [Type 1].

**1** Select [Address Book].



FTP 🔢


0003 123 123.456.789

**2** Select the destination to store the data in.

**Important** • You can only use destinations configured for SMB or FTP.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

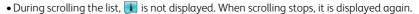

M Search

Add New

#### ■ | | | | | (List/Thumbnail)

Allows you to switch the number of the recipients displayed from list (five items) or thumbnail (15 items).

#### ■ Name

Lists recipient names and protocols.

#### ■ Go to

Enter a recipient number using the numeric keypad to display the recipient at the top of the list.



Allows you to confirm information such as [Name] and [Server Name/IP Address], on the screen displayed.

#### ■ All

Lists all the registered recipients for using SMB or FTP protocol.

#### ■ Alphanumeric Index

Lists the registered recipients with alphanumeric index character in alphabetical order.

#### ■ Search

Allows you to set [Simple Search] or [Advanced Search].

[Simple Search] searches by the specified keyword, and [Advanced Search] searches by the search entries.

Note • For [Advanced Search], you can set multiple search entries.

#### ■ Add New Address

Allows you to add a new recipient. To add a new recipient, use the screen keyboard or current locations.

For more information on how to add new address, refer to "Add New Address (Registering a Destination PC on the Address Book)" (P.330).

# Address Book (Specifying a Destination Using the Address Book [Type 2])

The following describes how to specify a destination using the Address Book [Type 2].

**1** Select [Address Book].



#### **2** Select the destination to store the data in.

Note

• To switch the Address Book entry type, select [List all public entries], or [Retrieve entries using index] from the drop-down menu on the [Server Address Book] screen.



#### **3** Select [Add].

Important • You can only use destinations configured for SMB or FTP.

Note

- $\bullet$  Select [  $\blacktriangle$  ] to return to the previous screen or [  $\blacktriangledown$  ] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

#### ■ List all public entries

Displays the local address list.

Select  $[\blacktriangle]$  to return to the previous screen or  $[\blacktriangledown]$  to move to the next screen.

Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

Select items you want to set for a recipient, and select [Add].

#### ■ Retrieve entries using index

Specify an alphanumeric index character set when registering speed dials to retrieve the addresses or a speed dial to display at the top of the address list.

#### ■ Name/Protocol

Lists recipient names and protocols.

#### ■ Add

Adds a selected recipient to the [Save in] box.

#### ■ Save in

Displays a selected recipient.

#### ■ Go to

Enter a recipient number using the numeric keypad to display the recipient at the top of the


#### ■ [1] button

Allows you to confirm information, such as [Name] and [Server Name/IP Address], on the screen displayed.

# Add New Address (Registering a Destination PC on the Address Book)

You can register destination PC on the Address Book. The current Destination PC specified on the First Tab screen can also be registered.

- [Add New Address] is not displayed depending on the settings in the System Administration mode or the number of registered recipients. For details on the settings and the number of registered recipients, ask your system administrator.
- Select [Add New Address].

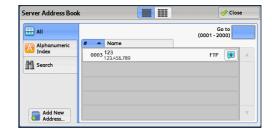

**2** Select a method to register a recipient.

#### ■ New

Enter a new recipient using the keyboard.

#### ■ Add from current location

Select a location to be registered from the current locations specified on the First Tab screen.

Note

• When you select this item, the location information will be displayed. This item cannot be selected if no location is specified on the First Tab screen.

Add New Addre

#### When [New] is selected

**3** Select a transfer protocol.

For more information on Transfer Protocol, refer to "Transfer Protocol (Selecting a Transfer Protocol)" (P.327).

For more information on [Browse], refer to "Browse (Specifying a Destination PC by Browsing Your Network)" (P.333).



Select an item and set.



#### ■ When [FTP] is selected

The following items appear:

- Server
- Save in
- User Name
- Password

#### ■ When [SMB] is selected

The following items appear:

- Server
- Shared Name
- Save in
- User Name
- Password

#### ■ When [SMB (UNC Format)] is selected

The following items appear:

- Save in
- User Name
- Password

For more information on the setting items, refer to "Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)" (P.334).

**5** Select [Next].

Note • To return to the previous screen, select [Back].

#### When [Add from current location] is selected

**3** Select an item to set and set if you change a setting.

**Note** • [Transfer Protocol] cannot be changed.
For more information on the setting items, refer to "Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)" (P.334).



4 Enter each item using the keyboard displayed on the screen, and then select [Save].


For more information on the setting items, refer to "Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)" (P.334).

**5** Select [Next].

Note • To return to the previous screen, select [Back].

**6** Select [Name], enter a name using the keyboard displayed on the screen, and then select [Save].

For information on how to enter characters, refer to "Entering Text" (P.100).

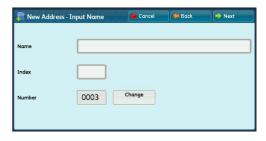

**7** When you change the index, select [Index], select a new character from the keyboard displayed on the screen, and then select [Save].

You can register a single alphanumeric index character for use as a keyword to search with the Address Book.

For information on how to enter characters, refer to "Entering Text" (P.100).

- **8** When you change the address number, select [Change], select a number from the list, and then select [Save].
- **9** Select [Next].

• To return to the previous screen, select [Back].

**10** Select an item to set and set.

The following items appear:

- Address Type
- Name
- Index
- Transfer Protocol
- Server Name / IP address
- Shared Name (SMB Only)
- Save in
- User Name
- Password
- Port Number

Note • To delete the input data and return to the [Server Address Book] screen, select [Cancel].

For more information on the setting items, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide

**11** When the settings are completed, select [Registered].

• To return to the previous screen, select [Back].

# Specifying a Destination PC Using a One-Touch Button

You can use the one-touch buttons to specify the server name, the user name used for logging in to the destination server or other computers, and other information from the Address Book.

One-touch buttons correspond to the address numbers from 0001 to 0070, or 0001 to 0060.

For example, when the number you want to dial is registered to the address number 0001, press one-touch button <1>.

Note

- One-touch buttons can be used when the Fax service is available.
- There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following. By default, [Type 1] is selected.



- [Type 1]

The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and correspond to the registered stored programs 1 and 2.

- [Type 2]


The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01 and M02 are used for stored programs and correspond to the registered stored programs 1 to 12.

**1** Press a one-touch button. Confirm that the recipient (destination PC) specified with the one-touch button is displayed on the touch

- **Important** The one-touch buttons have a sensor to detect which page of one-touch buttons (1 -24, 25 - 48, and 49 - M02) is currently opened. Before pressing a one-touch button, turn over the one-touch panel completely, and take off your hand from the panel. Do not press the button while you are turning over the panel.
  - Do not place any objects near the one-touch buttons, nor spill any liquid over them.

Note


- Turn the one-touch panel over to press the one-touch buttons 25 and above.
- If you have entered an incorrect value, select the recipient (destination PC) displayed on the touch screen, select [Remove] on the pop-up menu, and enter the correct value.

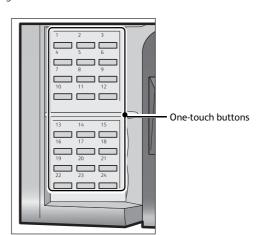

# Browse (Specifying a Destination PC by Browsing Your Network)

This feature displays a hierarchy consisting of server names and folders. You can specify a save destination by tracing the hierarchy.

Select [Browse].

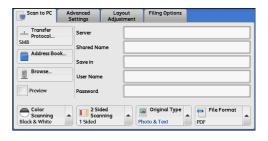

1\3\4

**a** 1

**2** 

<u></u>3

**2** Select the destination to save the data in. Select [Previous] or [Next] to move to another level.

**Important** • You can specify recipients for SMB only.

Note

• Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

#### ■ Save in

Shows the current location in the hierarchy.

#### ■ Add to Address Book

Displays the [Add to Address Book] screen. Refer to "[Add to Address Book] Screen" (P.334).

#### **■** Previous

Allows you to move to the upper directory.

Note • This button is grayed out if there is no upper directory.

#### ■ Next

Allows you to move to the lower directory.

• This button is available when a folder is selected.

#### [Add to Address Book] Screen

This screen allows you to register the save destination specified in [Browse], in the Address Book.

Add to Address Book

0001 K Edit

1/2

(Not Set)

- Select [Add to Address Book].
- Select [Save].

#### ■ Address

To change the address number, select [Edit] and then the desired number.

#### ■ Name

To change the recipient name, enter a new name with the keyboard displayed by selecting [Name].

Note

• The recipient name may not be displayed depending on the settings.

# Specifying a Destination (Specifying a Destination PC Using the Screen Keyboard)

Enter information in the fields provided for the selected protocol, to specify a forwarding destination.

Important • When using the My Folder feature in computer environment earlier than Windows 98/Windows NT®, a destination user name in the earlier format (domain name\user name) will not be determined automatically. Before scanning, change the user name with which you can log in


Note

• When you select [Login to Remote Accounts] for [Login Type] and select [Enabled] for [Scan to My Folder] using CentreWare Internet Services, the scanned document can be transferred to a different destination. You can select [Enabled] for [Scan to My Folder] only when [Login to Remote Accounts] and [SMB] are selected for [Login Type] and [Transfer Protocol] respectively. For information on configuration procedure, refer to the help of CentreWare Internet Services.

#### Select the item to be set.

Note

- You can also select [Address Book] to enter information.
- Fields displayed on the screen vary depending on the selected protocol.

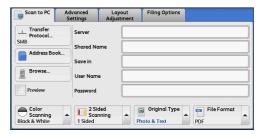



**⊘** Save

Delete Text

**X** Cancel

# **2** Enter information using the keyboard displayed on the screen.

For information on how to enter characters, refer to "Entering Text" (P.100).

Note

• To delete characters, select [Backspace].

#### ■ Server

This option is displayed when you select [FTP] or [SMB] in [Transfer Protocol]. Enter a server name or IP address. When the save location is in the DFS namespace on Windows, enter a domain name or server name. Up to 64 characters are allowed.

The following are examples:

Note

• When Scan to My Folder feature is enabled, [Server] is automatically determined on the [Scan to PC] screen. If you change the setting of [Server], the [Scan to My Folder] feature is disabled. You can use the [Scan to My Folder] feature again by selecting [Scan to My Folder] for [Transfer Protocol].

Server

1 2 3 4 5 6 7 8 9 0

Space

q w e r t y u i o p [ ]
α s d f g h j k l ; ' @

z x c v b n m , . / Shift

• For [FTP]:

Server name: myhost.example.com

(myhost: host name, example.com: domain name)

IP address: 192.0.2.1

• For [SMB]:

Server name: myhost IP address: 192.0.2.1

#### ■ Shared Name

This option is displayed when you select [SMB] in [Transfer Protocol]. Enter a shared name. When the save location is in the DFS namespace on Windows, enter a root name. Up to 64 characters are allowed.

Note

• When using the My Folder feature is enabled, [Shared Name] is automatically determined on the [Scan to PC] screen. If you change the setting of [Shared Name], the [Scan to My Folder] feature is disabled. You can use the [Scan to My Folder] feature again by selecting [Scan to My Folder] for [Transfer Protocol].

#### ■ Save in

This option is displayed when you select [FTP] or [SMB] in [Transfer Protocol]. Enter a directory path. When the save location is in the DFS namespace on Windows, enter a folder name. Up to 128 characters are allowed.

Note

- The folder name is the same as the link name for Windows Server® 2003.
- When Scan to My Folder feature is enabled, [Save in] is automatically determined on the [Scan to PC] screen. If you change the setting of [Save in], the [Scan to My Folder] feature is disabled. You can use the [Scan to My Folder] feature again by selecting [Scan to My Folder] for [Transfer Protocol].
- For [FTP]:

Example: mydoc/Scan

• For [SMB]:

Example: mydoc\Scan

#### ■ Save in

This option is displayed when you select [SMB (UNC Format)] in [Transfer Protocol].

Enter the following directory path: "\\Host Name\\Shared Name\\Directory Name". When the save location is in the DFS namespace on Windows, enter "\\Domain Name\\Root

Name\Folder Name" or "\\Server Name\Root Name\Folder Name". Up to 260 characters are allowed.

#### ■ User Name

Enter the user name of the computer you are forwarding to. When a user name is not required for the destination, this field can be skipped.

When you select [FTP] in [Transfer Protocol], up to 97 characters are allowed.

When you select [SMB] in [Transfer Protocol], use one of the following formats:

• When Scan to My Folder feature is enabled, [User Name] is automatically determined on the [Scan

• For Active Directory:

User name@Domain name (user name: up to 32 characters, domain name: up to 64 characters)

Example: fuji@example.com (fuji: user name, example.com: domain name)

• For Windows NT® Domain:

to PC] screen.

Domain name\User name (domain name: up to 64 characters, user name: up to 32 characters)

Example: example\fuji (example: domain name, fuji: user name)

· For workgroups:

Local user (up to 32 characters)

Example: Fuji-Taro

#### ■ Password

Enter the password for the user name. Up to 32 characters are allowed.

Note

• When Scan to My Folder feature is enabled, [Password] is automatically determined on the [Scan to PC] screen. If a user ID is authenticated without a password, this item is not displayed.

# Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.339).

# **Color Scanning (Selecting an Output Color)**

You can set the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.310).

# 2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.311).

# Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.312).

# File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.312).

## Store to Folder

This section describes the procedure to select features on the [Store to Folder] screen. You can scan documents and save the scanned data in a folder of the machine.

The following describes features available on the [Store to Folder] tab.

Note

- When [Store to Folder] is selected, [File Format] is disabled.
- When you use CentreWare Internet Services to retrieve a file from a folder, you can set [Searchable Text] if all scanned images of the file in the folder are set as follows:
  - Image Size: 15 x 15 mm to 309 x 432 mm
  - Color Scanning: Auto Detect, Color, Grayscale, Black & White
  - Original Type: Photo & Text, Text
  - Color Space: sRGB
  - Resolution: 200dpi, 300dpi
  - Reduce/Enlarge: 100%

You need to create a folder in advance. For more information on how to create a folder, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

You can customize the layout of the features displayed on the [Store to Folder] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "1st Tab - Features Allocation" in the Administrator Guide.

Select [Store to Folder] on the Services Home screen.



#### **2** Select a feature on the [Store to Folder] screen.

Note

• If a passcode is set for the folder, the passcode entry screen may appear. Enter the passcode and select [Confirm]. If you have forgotten the passcode, set the folder passcode in the System Administration mode again.



#### **■** Folder

Select a folder to save the scanned data in.

Note • Select [▲] to return to the previous screen or [▼] to move to the next screen.

#### ■ Go to

Use the numeric keypad to enter a 3-digit folder number. The folder then appears at the top of the list.

#### **■** File List

Select a folder and then select this button to display the [File List] screen. You can confirm or delete files stored in the folder.

# Color Scanning (Selecting an Output Color)

You can specify the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.310).

# 2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.311).

# Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.312).

## Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.310).

## Store to USB

This section describes the procedure to select features on the [Store to USB] screen. The Store to USB service allows you to scan documents and save the scanned data to a USB memory device. The following describes features available on the [Store to USB] tab.

Save in (Specifying a Storage Location in the USB Memory Device)	344
Details (Displaying the Details of a Storage Location in the USB Memory Device)	345
Preview (Previewing the Scanned Images during a Scan Job)	345
Color Scanning (Selecting an Output Color)	346
2 Sided Scanning (Scanning Both Sides of a Document)	346
Original Type (Selecting the Document Type)	346
File Format (Selecting a File Format for Output Data)	346

Important • Before removing the USB memory device, make sure that the screen indicating that data is being transferred is not displayed. If you remove the USB memory device while the data is being stored, the data in the device may be damaged. You can also view the [Job Status] screen to confirm if the data has been stored to the USB memory device.

Note

- This feature may not be available depending on the setting set in the CentreWare Internet Services. For more information, refer to "6 CentreWare Internet Services Settings" > "Configuring Machine Settings Using CentreWare Internet Services" in the Administrator Guide.
- An optional component is required to use this service. For more information, contact our Customer Support Center.
- A USB memory device encrypted with software is not supported.
- Use the following USB memory devices:
  - A formatted USB memory device (The supported formats are FAT12, FAT16, FAT32, and VFAT.NTFS and exFAT are not supported.)
  - A USB 2.0 compliant memory device (USB 1.1 is not supported.)
  - A USB memory device with a storage capacity of up to 128 GB
- Commercially available Memory Card Reader with single slot<sup>\*1</sup> can be used for Media Print feature, but its safe performance is not guaranteed. When a Memory Card Reader with multi-slot<sup>\*2</sup> is used, only one particular slot is available. The available slot depends on the model, and the slot of media/ Memory Card that you want to use is not always available. Safe performance of a Memory Card Reader with multi-slot is not guaranteed, either.
- \*1 : Media/Memory Card that has one slot. Some allow only one type of media/Memory Card, while others allow more than one type (ex. SD card, xD-Picture Card).
- \*2 : Media/Memory Card that has two or more slots.

You can customize the layout of the features displayed on the [Store to USB] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "1st Tab - Features Allocation" in the Administrator Guide.

- **1** Insert the USB memory device into the USB memory slot on the control panel.
- **2** One of the following occurs.
  - The [USB Device Detected] screen appears.
  - The [Store to USB] screen appears.
  - The [Media Print Text] screen appears.
  - The [Media Print Photos] screen appears.
  - The screen display does not change.
  - Note The behavior depends on settings. Ask your system administrator for more information.
    - When a USB memory device is inserted into the USB memory slot in the Power Saver mode, the
      touch screen does not light. After exiting the Power Saver mode by pressing the <Power Saver>
      button, insert the USB memory device again or select [Store to USB] on the Services Home screen.
       For information on other ways to exit the Power Saver mode, refer to "Exiting the Power Saver Mode"
      (P.83).

- The screen status will be one of the above even when a USB memory device in which only encrypted data is stored is inserted or USB memory device in unsupported format is inserted. In such case, a warning message appears during operation and the operation is aborted.
- The screen status will be one of the above when a commercially available Memory Card Reader is inserted into the USB memory slot of the machine. It is the same if no media is inserted into the Memory Card Reader.
- If a commercially available Memory Card Reader is used and it is left inserted all the time, the machine does not detect media even when they are inserted into the slot of the Memory Card Reader.
- Screen display remains the same when the inserted USB memory device or Memory Card is removed. Press the <Services Home> button or do anything else to change the screen display before starting next operation.

#### When the [USB Device Detected] Screen Appears

**1** Select [Store to USB].



**2** The [Store to USB] screen appears.




#### When the [Store to USB] Screen Appears

Select a feature on the [Store to USB] screen.





# When the [Media Print - Text] Screen Appears

**1** Press the <Services Home> button.

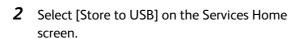



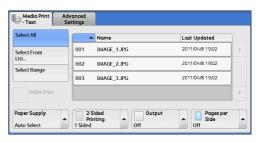

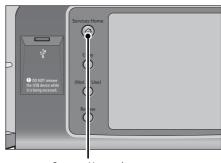

<Services Home> button




\* WSD stands for Web Services on Devices.



# When the [Media Print - Photos] Screen Appears

**1** Press the <Services Home> button.

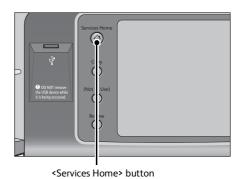

**2** Select [Store to USB] on the Services Home screen.




\* WSD stands for Web Services on Devices.





## When the Screen Display Does Not Change

If any screen other than the Services Home screen is displayed, press the <Services Home> button.

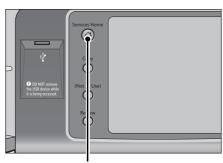

<Services Home> button

**2** Select [Store to USB] on the Services Home screen.



WSD stands for Web Services on Devices.

Advanced Layout Filing Options
Settings Adjustment

i Details...

ce Available: 4.5MB (Out of 5.3MB)

### **3** The [Store to USB] screen appears.

Important • Data stored in a USB memory device may be lost or damaged in the following cases. Make sure to back up the data in the device before


- When disconnecting/connecting the USB memory device by methods other than described in this guide.
- When receiving the effect of electrical noise or an electrical discharge
- When a fault or failure occurs during operation
- If the USB memory device receives mechanical damage
- We assume no responsibility for any direct and indirect damages arising from or caused by such

Note • If you do not specify the file storage location, the scanned data is saved in the root directory.

# Save in (Specifying a Storage Location in the USB Memory Device)

You can specify a file storage location in the USB memory device.

1 Select [Save in].

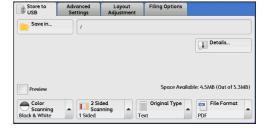

Last Updated

24/6/2011 13:37

24/6/2011 13:37

#### Select a folder to save the data in.

Note

- Select [▲] to return to the previous screen or
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can sort the order of folders displayed in ascending or descending order by selecting [Name] or [Last Updated].
- Up to 900 folder names can be displayed in the list of [Save in]. File names are not displayed.
- If a folder or file name has more than 170 characters long, the folder or file name is not displayed.

/SCAN\_001

SCAN 001

SCAN\_004

SCAN 005

- Folders in the DCIM folder of digital cameras cannot be displayed. Thus, you cannot save files in these folders either.
- Folder names which include characters that the machine does not support may not be correctly displayed. If you specify the folders as file storage locations, an error occurs. For more information on characters that the machine supports, refer to "Entering Text" (P.100).



- The machine does not distinguish between upper and lower cases of folder and file names that are created in Windows environment and that consist of eight characters or less. The names for these folders and files are displayed in capital letters.
- If a full path (a string of folder and file names in all directories) of the file created exceeds 257 characters long, an error occurs.
- **3** Select [Save].

#### **■** Previous

Allows you to move to the upper directory.

Note

• This button is grayed out if there is no upper directory.

#### 

#### ■ Next

Allows you to move to the lower directory.

Note

• This button is available when a folder is selected.

#### **Details**


# (Displaying the Details of a Storage Location in the USB Memory Device)

Selecting [Details] displays the [Details] screen.

#### [Details] Screen

This screen displays the folder directory in the USB memory device.

**1** Specify the folder directory, and then select [Save].

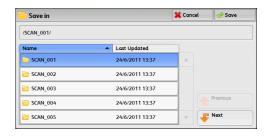

2 Select [Details].



**3** The folder and file names in all directories to be saved are displayed.



# Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.339).

# Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.310).

# 2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.311).

# Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.312).

## File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.312).

# Store & Send Link

Authenticate on the machine and scan a document, and the machine will store the scanned data and sends an e-mail to your registered address to notify you of the URLs for retrieving and deleting the scanned data.

Only the authenticated user who logs in to the machine can be the recipient of an e-mail transmission. The machine cannot send e-mail to multiple recipients.

After receiving the e-mail on a computer, the user can retrieve the scanned data using a web browser.

The following describes features available on the [Store & Send Link] tab.

- Important Scan files stored in the machine will be automatically deleted when the retention period expires. This retention period can be specified in [URL File Expiration] by the system administrator in the range of 1 to 168 hours. The default value is 3 hours. The files are to be always deleted automatically.
  - To strengthen security, after retrieving the scanned data, access the URL to delete the scanned data stored in the machine.

#### Note

- The Store & Send Link service does not provide features to manage documents such as backing up/ restoring files, deleting all data at one time, listing files, or displaying available storage space.
- The Store & Send Link service allows you to retrieve scanned data without specifying an e-mail address from the Address Book or a folder for each scan job. However, the size of the data and its retention period are restricted on the machine. If you want to avoid these restrictions, use the Scan to PC or E-mail service.


For more information, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Store & Send Link - Maximum File Size" and "URL File Expiration" in the Administrator Guide.


You can customize the layout of the features displayed on the [Store & Send Link] screen. For more information, refer to "5 Tools" > "Scan Service Settings" > "Screen Defaults" > "1st Tab - Features Allocation" in the Administrator Guide.

- Press the <Log In/Out> button on the control panel, or select the login information field on the touch screen.
- Enter the user ID.
- 3 Select [Store & Send Link] on the Services Home screen.



\* WSD stands for Web Services on Devices.

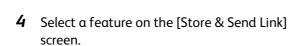

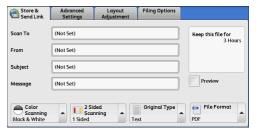

# Scan To (Displaying the E-mail Address of the Authenticated User)

Automatically obtains the pre-registered e-mail address of the authenticated user.

# can

# From (Displaying the E-mail Address of the Authenticated User)

Automatically obtains the pre-registered e-mail address of the authenticated user.

# **Subject (Setting the Subject)**

You can specify the e-mail subject using the following procedure.

#### ■ Auto Set

Automatically sets the subject to [Scan Reference from XXX] (where XXX is the host name of the machine).

#### ■ To set a user-defined subject

- **1** Select [Subject].
- **2** Enter a subject with up to 128 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.100).

# Message (Entering the E-mail Body)

You can enter the e-mail body using the following procedure.

- **1** Select [Message].
- **2** Enter a message with up to 512 characters using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.100).

# Color Scanning (Selecting an Output Color)

You can set the color mode to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.310).

# 2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan both sides of a 2-sided document.

By setting the binding style, both sides are scanned in the same orientation.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.311).

# Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.312).

# Preview (Previewing the Scanned Images during a Scan Job)

You can preview the scanned images while scanning the document.

For more information, refer to "Preview (Previewing the Scanned Images during a Scan Job)" (P.310).

# File Format (Selecting a File Format for Output Data)

You can select a file format for output data.

The Store & Send Link service allows you to retrieve scanned data from a computer without password authentication.

To prevent other parties from viewing your scan data, select [PDF] or [DocuWorks] in [File Format] and set a password in [PDF Security] or [DocuWorks Security] before scanning the document.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.312).

Note

• If you select [TIFF/JPEG Auto Select] or the [Single File for Each Page] check box on the [File Format] screen when scanning a document, a file is downloaded in zip format.

## Store to WSD

This section describes the procedure to select features on the [Store to WSD] screen.

The Store to WSD service allows you to scan documents set on the machine from a network computer. It also allows you to save the scanned data to a network computer.

Note

- WSD stands for Web Services on Devices.
- [Store to WSD] may not appear on the Services Home screen for some models. For more information, refer to "9 Scanner Environment Settings" > "Configuration of Store to WSD" in the
- This feature requires the scanner driver included as standard in Windows Vista Service Pack 2 or later. Thus, this feature is not available for computers with older OS.
- Resolution, file format and so on cannot be specified from the control panel of the machine. Specify these settings in [Scan Profiles] of Windows. For more information on how to specify the settings, refer to Windows Help.
- Select [Store to WSD] on the Services Home screen.



2. Select "Operate From Computer"

3. At your computer, select this device and start the scan job

Operate From Computer

Note: Collect your originals after scanning is complete

Select a feature on the [Store to WSD] screen.

#### ■ Start Scan Job From

Select from where to start a scan job.

Computer

Starts a scan job by sending a request from a network computer.

This Device

Starts a scan job with the scan command from the machine, and save the scanned data to a network computer.

# Computer (Starting a Scan Job via Computer Operation)

You can scan documents set on the machine by sending a request from a network computer.

Note • WSD stands for Web Services on Devices.

Select [Computer].





**2** Load the document on the document glass or in the document feeder, and select [Operate From Computer].



**3** The standby screen is displayed on the touch screen.

Note

 Select [Delete] to exit standby mode. After exiting standby mode, [Remove Your Originals] screen is displayed on the touch screen.



Remove your originals after scanning is complete or if the scan job has been

4 Operate scan from a network computer. To operate scan from a network computer, use application which supports image loading feature such as [Windows Fax and Scan]. The following describes the method using [Windows Fax and Scan] with Windows 7.

Note

- This method is not available for computers with Windows Vista Home Basic or Windows Vista Home Premium. To operate scan from such a computer, use another method, for example, selecting [From Scanner or Camera] in the Paint application.
- 1) Click the [Start], click [All Programs], and then click [Windows Fax and Scan].
- 2) Click [Scan] at the bottom of the left pane, and then click [New Scan] on the toolbar.
- 3) In the [New Scan] dialog box, click [Change], and then select the machine.
- 4) Check that the machine model name is displayed to the right of [Scanner:].

Note • If the machine model name is not displayed, click [Change] and select the machine.

- 5) Click the [Profile] list, and then select [Document].
- 6) Specify the settings as necessary, and then click [Scan].
- **5** After being scanned, the scanned data is forwarded to the specified computer.
- 6 [Store to WSD Remove Your Originals] screen appears on the touch screen after a scan job has been completed. Remove the originals from the document glass and then click [OK].

Note


- If the standby screen is not displayed, a scan job will not be started even when the network computer recognizes the machine.
- Select [Delete] to abort an operation. After an operation is aborted, [Store to WSD -Remove Your Originals] screen is displayed on the touch screen.
- The machine will not enter the Power Saver mode while the standby screen is displayed. For information on Power Saver mode, refer to "Power Saver Mode" (P.82).

This Device (Storing Data Scanned by the Machine on a Network Computer)

# You can forward the data scanned with the command from the machine to a specified computer on the network.

**Note** • WSD stands for Web Services on Devices.

1 Load the document on the document glass or in the document feeder, and select [This Device].

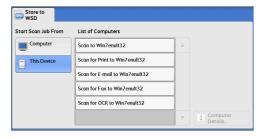

2 Computer names and 5 processing methods are displayed in the [List of Computers]. Select destination from the list in accordance with the intended use.




#### **■** List of Computers

Lists destination and URL.

Note

- Select from among 5 kinds of processing methods (Scan to PC, Scan for Print to PC, Scan for E-mail to PC, Scan for Fax to PC, Scan for OCR to PC) in accordance with the intended use.
- **3** Press the <Start> button.

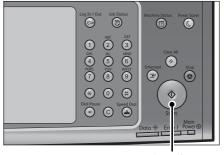

<Start> button

- **4** The scanned data will be forwarded to the specified destination.
  - Note Select [Delete] to abort scanning.
- **5** Check the forwarded data on the destination computer.

# **Advanced Settings**

This section describes the features you can select on the [Advanced Settings] screen under [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB]. The following shows the reference section for each feature.

Color Scanning (Selecting an Output Color)	
Original Type (Selecting the Document Type)	353
Photographs (Scanning a Color Photograph)	354
Image Options (Adjusting Scan Density and Image Sharpness)	354
Image Enhancement (Erasing the Background Color of Documents/Adjusting Contrast)	355
Shadow Suppression (Suppressing the Document Background)	355
Color Space (Specifying the Color Space)	356

On the Services Home screen, select [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].






\* WSD stands for Web Services on Devices.

**2** Select a feature on the [Advanced Settings] screen.

Note

• To activate [Color Space], a prior setting must be made in the System Administration mode. For information on the setting procedure, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Color Space" in the Administrator Guide and "Color Space (Specifying the Color Space)" (P.356).

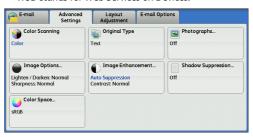

# Color Scanning (Selecting an Output Color)

You can set the output color to scan a document.

For more information, refer to "Color Scanning (Selecting an Output Color)" (P.310).

# Original Type (Selecting the Document Type)

You can select the type of the document.

For more information, refer to "Original Type (Selecting the Document Type)" (P.312).


# Photographs (Scanning a Color Photograph)

Use this feature when scanning a color photograph.

This feature is available only when [Color Scanning] is set to [Color].

Important • You cannot use the document feeder with this feature.

- When this feature is enabled, the Shadow Suppression and Background Suppression features cannot be used.
- **1** Select [Photographs].

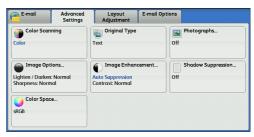


**2** Select [Enhance Photographs].



# Image Options (Adjusting Scan Density and Image Sharpness)

This feature allows you to adjust the scan density and image sharpness.

**1** Select [Image Options].

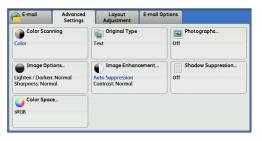


**2** Select any option.

#### ■ Lighten/Darken

You can select a scan density level from seven levels between [Lighten] and [Darken].

Selecting an upper cell on the bar makes the scan density lighter, and selecting a lower cell makes darker.

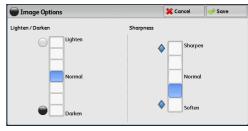

#### ■ Sharpness

You can select a sharpness level from five levels between [Sharpen] and [Soften].

Selecting an upper cell on the bar makes the contours of images sharper, and selecting a lower cell makes softer.


💢 Cancel 🥜 Save

# **Image Enhancement**

# (Erasing the Background Color of Documents/Adjusting Contrast)

This feature allows you to suppress the background color of a document such as newspaper and colored paper. In addition, when [Color Scanning] is set to [Color] or [Grayscale], you can adjust the contrast.

**1** Select [Image Enhancement].

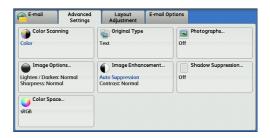

**2** Set [Background Suppression] and [Contrast].

#### ■ Background Suppression

Off

Scans the document backgrounds with no filtering.

Auto Suppression

When [Color Scanning] is set to [Black & White], the background of a document printed on colored paper, such as newspaper, will be suppressed.

When [Color Scanning] is set to [Color], the background of a document printed on white-color paper will be suppressed.

#### ■ Contrast

Allows you to select a contrast level from five levels between [Less] and [More]. Selecting an upper cell on the bar makes the difference between light and dark areas greater; light areas become lighter and dark areas darker. In contrast, selecting a lower cell on the bar makes the difference between light and dark areas smaller.


# **Shadow Suppression (Suppressing the Document Background)**

When you scan a 2-sided document printed on thin paper, this feature allows you to suppress the image and colors on the reverse side of each document page from appearing in the scan image.

This feature is available only when [Color Scanning] is set to [Color] or [Grayscale].

Important • This feature cannot be used with [Photographs].

1 Select [Shadow Suppression].

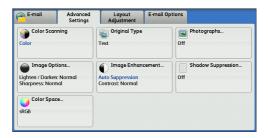

**2** Select [Auto Suppression].




# Color Space (Specifying the Color Space)

This feature allows you to set the color space.

Note

- [Color Space] is available when [Color Scanning] is set to [Color].
- To activate [Color Space] on the [Advanced Settings] screen, a prior setting must be made in the System Administration mode. For more information, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Color Space" in the Administrator Guide.
- [Device Color Space] is not selectable when [Searchable Text] is set to [Searchable] on the [File Format] screen.
- Select [Color Space].

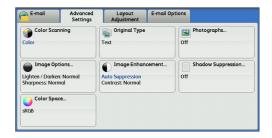

**2** Select either [sRGB] or [Device Color Space].

#### ■ sRGB

Documents are scanned based on color representation (color space) that conforms to sYCC.



#### ■ Device Color Space

Documents are scanned based on the original color representation (color space) of the machine. Recommended for advanced color processing using high-quality color.

Note

- You can find ICC profile data for Device Color Space in the Driver CD Kit. ICC profile is useful when using color processing application and performing special processing of data scanned based on Device Color Space.
- When [Device Color Space] is selected, the following image quality features are changed to their defaults:
  - Lighten/Darken, Sharpness, Shadow Suppression, Contrast, Background Suppression
- $\bullet \ \ When \ [Color \ Scanning] \ is \ set \ to \ [Auto \ Detect], \ [sRGB] \ is \ applied \ to \ color \ pages \ of \ the \ documents.$
- When the duplex automatic document feeder B1-PC is installed, and when [Device Color Space] is selected, [2-sided] cannot be selected in the [2-side scanning].

# **Layout Adjustment**

This section describes the features you can select on the [Layout Adjustment] screen under [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB]. The following shows the reference section for each feature.


Resolution (Specifying a Scanning Resolution)	357
2 Sided Scanning (Scanning Both Sides of a Document)	358
Book Scanning (Scanning Facing Pages on Separate Sheets)	358
Original Size (Specifying a Scan Size)	359
Mixed Size Originals (Scanning Different Size Documents Simultaneously)	360
Edge Erase (Erasing Edges and Margin Shadows in the Document)	361
Reduce/Enlarge (Specifying a Scanning Ratio)	362
Original Orientation (Specifying the Orientation of the Loaded Document)	363

On the Services Home screen, select [E-mail], [Store to Folder], [Scan to PC], [Store & Send Link], [Network Scanning], or [Store to USB].





**2** Select a feature on the [Layout Adjustment] screen.

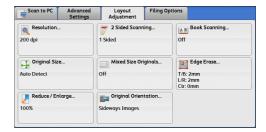


\* WSD stands for Web Services on Devices.

# Resolution (Specifying a Scanning Resolution)

This feature allows you to set the resolution to scan a document.

As the value increases, the scan becomes more detailed, but the data size also increases. The scanning and transfer time increases as well.

#### **1** Select [Resolution].

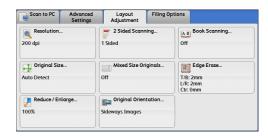

#### 2 Select any option.

#### Note

- Select either [200 dpi] or [300 dpi] when [MRC High Compression] is set to [On] for PDF, DocuWorks, or XPS\* files on the [File Format] screen.
- \* : XPS stands for XML Paper Specification.
- Select either [200 dpi] or [300 dpi] when [Searchable Text] is set to [Searchable] for PDF or DocuWorks files on the [File Format] screen.
- Select either [200 dpi] or [300 dpi] when the [Specific Color] check box is selected for PDF or DocuWorks files on the [File Format] screen.



# 2 Sided Scanning (Scanning Both Sides of a Document)

You can automatically scan the both sides of a 2-sided document.

To scan the both sides in the same orientation, set the binding style.

For more information, refer to "2 Sided Scanning (Scanning Both Sides of a Document)" (P.311).


# **Book Scanning (Scanning Facing Pages on Separate Sheets)**

This feature allows you to scan facing pages of a document onto separate sheets of paper in page order.

It is useful if you want to separately scan facing pages of a bound document such as a booklet.

Note

- You cannot use the document feeder with this feature.
- A non-standard size document or undetectable size document may not be separated into two accurately.
- **1** Select [Book Scanning].

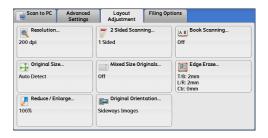

#### **2** Select any option.

#### ■ Off

Does not scan as a bound document.

#### ■ Left Page then Right

Scans the left page and then the right page of facing pages.



#### ■ Right Page then Left

Scans the right page and then the left page of facing pages.

#### ■ Top Page then Bottom

Scans the top page and then the bottom page of facing pages.

#### ■ Both Pages

Scans both pages in page order.

#### ■ Left Page Only

Scans the left page only in page order. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

#### ■ Right Page Only

Scans the right page only in page order. You can select this option when [Left Page then Right] or [Right Page then Left] is selected.

## ■ Top Page Only

Scans the top page only in page order. You can select this option when [Top Page then Bottom] is selected.

#### ■ Bottom Page Only

Scans the bottom page only in page order. You can select this option when [Top Page then Bottom] is selected.

#### ■ Binding Edge Erase


Erases the shadow from the center section of the document. You can specify the binding erase width in the range from 0 to 50 mm in 1 mm increments.

# Original Size (Specifying a Scan Size)

This feature allows you to set the scan size for a document.


Use this feature when a document is a non-standard size, or when you want to scan a document at a size different from the original size. You can also add margins, or delete unnecessary margins using this feature.

## **1** Select [Original Size].

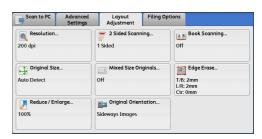

### **2** Select any option.

When you select a non-standard size, specify values for the X and Y directions.

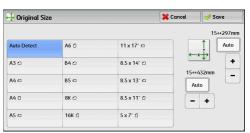

#### ■ Auto Detect

Detects the document size automatically. The following table shows the document sizes that can be detected automatically.

	Document feeder	Document glass
Auto-detectable Document Size	B5, B5①, B4, A5, A5①, A4, A4①, A3, 8.5 x 11", 8.5 x 11"①, 11 x 17", 16K①, 8K	B6, B5, B5☐, B4, A6, A5, A5☐, A4, A4☐, A3

Note

• If the document size cannot be detected automatically, a screen to enter the document size

The standard document sizes that can be detected automatically depend on [Paper Size Settings] in the System Administration mode. For information on [Paper Size Settings], refer to "5 Tools" > "Common Service Settings" > "Other Settings" > "Paper Size Settings" in the Administrator Guide.

#### ■ Standard Size

Allows you to select from preset sizes.

#### ■ Variable Size

Allows you to enter the desired scan size when scanning a non-standard size document or when scanning at a size different from the original document size. You can specify a value in the range from 15 to 432 mm for the scan width (X), and a value in the range from 15 to 297 mm for the scan length (Y), in 1 mm increments. The scales attached on the upper and left edges of the document glass are helpful for you to specify values.

- When [MRC High Compression] is set [On] for PDF, DocuWorks, and XPS\* files on the [File Format] screen, or when the [Specific Color] check box is selected, the variable ranges are 50 to 432 mm for the scan width (X) and 50 to 297 mm for the scan length (Y), in 1 mm increments.
  - \* : XPS stands for XML Paper Specification.

# Mixed Size Originals (Scanning Different Size Documents Simultaneously)

When loading documents in the document feeder, you can simultaneously scan different size documents with the respective sizes and copy. You can also specify a size to scan different size documents with the same size.

Important • When you select [Color] in [Color Scanning], and [2 Sided] in [2 Sided Scanning], set [Resolution] to [400dpi] or lower.

- When you select [2 Sided] in [2 Sided Scanning] to scan A3 documents, set [Resolution] to [400 dpi] or lower. Selecting [600 dpi] will cause an error message to be displayed.
- Always load A5 documents in portrait orientation.
- When loading B5 documents together with A3 documents loaded in landscape orientation or A4 documents loaded in portrait orientation, load the B5 documents in portrait orientation.
- When loading documents, align the top left corners of the documents properly. Otherwise, a paper jam may occur.
- The recommended document size combinations are A4 portrait and A3 landscape, or B5 portrait and B4 landscape. If another combination of document sizes is used, the documents can be fed at an angle and may not be scanned properly.

Note

- When you select [Enter Output Size] in [Reduce/Enlarge] and specify the output size in [Enter Output Size], the scanned data is automatically reduced/enlarged to the specified size.
- If the document size cannot be detected automatically, a screen to enter the document size appears.

Original Orientation

♣ Upright Images

Sideways Images

#### Select [Mixed Size Originals].



Align the top-left corners of your Originals and load them in the Document Feeder

Load 5.5 x 8.5" and A5 originals in portrai

Adjust the Guides to just touch the largest size paper.

Select any option.

#### ■ Off

Select this option when all documents are of the same size.

#### ■ On

When scanning documents of different sizes, the machine automatically detects the size of each document.

#### ■ Original Orientation

Specify the orientation of the loaded document.

Note

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

Mixed Size Originals

X Off

· Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

· Sideways Images


Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

#### Edge Erase (Erasing Edges and Margin Shadows in the Document)


When you scan a document with the document cover open or when you scan a book, the edges and center margin of the document may be scanned as black shadows. The Edge Erase feature allows you to erase such shadows.

Note

- For 2-sided originals, the same edge erase amounts are set for the front and back sides.
- If you set [Reduce/Enlarge], the edge erase amounts will be reduced or enlarged in proportion to the ratio you specified.
- 1 Select [Edge Erase].

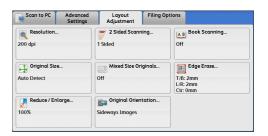

**2** Select any option.

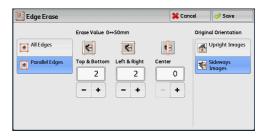

- **3** If you select [Parallel Edges], use [+] and [-] to specify the erase widths of top and bottom, left and right, and center of the document.
- **4** Select [Original Orientation].

#### ■ All Edges

The edge width to erase is set to 2 mm for the top and bottom, and left and right edges.

#### ■ Parallel Edges

Allows you to specify the edge erase amounts.

Top & Bottom

Erases the shadows of top and bottom edges of the document according to the orientation of the loaded document. You can specify the edge width to erase in the range from 0 to 50 mm in 1 mm increments.

• Left & Right

Erases the shadows of left and right edges of the document according to the orientation of the loaded document. You can specify the edge width to erase in the range from 0 to 50 mm in 1 mm increments.

Center

Erases the shadow in the center of facing pages of a bound document. You can specify the center erase width in the range from 0 to 50 mm in 1 mm increments.

#### ■ Original Orientation

Specify the orientation of the loaded document.

Note • II the

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

· Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder. Always select [Sideways Images] when the top of the document is placed facing the left side (horizontal text).

#### Reduce/Enlarge (Specifying a Scanning Ratio)

This feature allows you to set the scanning ratio for the document to be scanned.

Note

• When [Searchable Text] is set to [Searchable] and the [Specific Color] check box is selected on the [File Format] screen, [Reduce/Enlarge] is [100%] and cannot be changed.

86% A3→B4, A4→B5

115% B4→A3, B5→A4


122% A4→B4, A5→B5

141% A4→A3, B5→B4 200% A5→A3, B6→B4

### . .

# 5

#### **1** Select [Reduce/Enlarge].

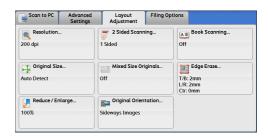

Preset %

100%

50% A3→A5, B4→B6

61% A3→B5

70% A3→A4, B4→B5

81% B4→A4, B5→A5

#### 2 Select any option.

#### ■ Proportional %

Allows you to select a preset ratio, or enter a value in the range from 25 to  $400\,\%$  in  $1\,\%$  increments

Use the numeric keypad or [+] and [-] to enter a value.

Variable %

Enter the scanning ratio. Specifying "100 % " scans at the same image size as the original document.

🗾 Reduce / Enlarge

Enter
Output Size

25 ↔ 400%

100

Preset %
 Select from preset ratios.


You can change the default values of scan ratios other than [100%]. For information on the settings, refer to "5 Tools" > "Scan Service Settings" > "Reduce/Enlarge Presets" in the Administrator Guide.

#### **■** Enter Output Size

In [Output Size], select the output size of the scanned document. The machine automatically calculates the scanning ratio based on the selected output size and the original document size.

Note

• Selecting [Enter Output Size] may generate blank margin areas.

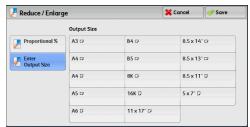

#### Original Orientation (Specifying the Orientation of the Loaded Document)

This feature allows you specify the orientation of the loaded document.

• If the [Original Orientation] setting differs from the actual document orientation, the machine may not detect the top of the document correctly.

· Upright Images

Select this option when placing the top edge of the document against the top side of the document glass or document feeder.

· Sideways Images

Select this option when placing the top edge of the document against the left side of the document glass or document feeder.

#### **E-mail Options/Filing Options**

This section describes the features you can select on the [E-mail Options]/[Filing Options] screen under [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB]. The following shows the reference section for each feature.

Quality/File Size (Specifying an Image Compression Ratio When Scanning)	364
File Format (Selecting a File Format for Output Data)	365
Read Receipts (Specifying Read Receipts)	365
Split Send (Sending in Sections)	366
File Name (Specifying a Name for the File to be Sent)	366
Reply To (Specifying a Reply Address)	367
File Name Conflict (Setting the Action to be Taken for File Name Conflict)	367
File Name (Specifying a Name for the File to be Saved)	368
Encryption (Sending E-mail Encrypted by S/MIME)	368
Digital Signature (Sending E-mail with a Digital Signature by S/MIME)	369
Login Name	369
Password	369
Mota Data	360

On the Services Home screen, select [E-mail], [Store to Folder], [Network Scanning], [Scan to PC], [Store & Send Link], or [Store to USB].






\* WSD stands for Web Services on Devices.

2 Select a feature on the [E-mail Options]/[Filing Options] screen.

Note

 The features displayed on the screen depend on the Scan service selected on the Services Home screen. The screen on the right appears when [E-mail] is selected.

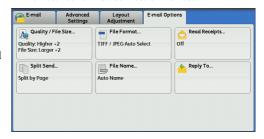


#### Quality/File Size (Specifying an Image Compression Ratio When Scanning)

This feature allows you to select an image compression level when [Color Scanning] is set to [Color] or [Grayscale].

A

#### **1** Select [Quality/File Size].

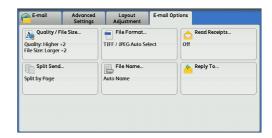

2 Select any button.

#### ■ Normal Quality

The image is saved with high compression. Image quality degrades, but the file size decreases.

#### ■ High Quality

The image is saved with low compression. Image quality improves, but the file size increases.

#### File Format (Selecting a File Format for Output Data)

You can select the file format of the output data.

For more information, refer to "File Format (Selecting a File Format for Output Data)" (P.312).

#### **Read Receipts (Specifying Read Receipts)**

When using the E-mail service, you can receive read receipts from e-mail recipients. This feature is available only when recipients support the MDN feature.


Note

• [Read Receipts] is displayed only when [Tools] > [System Settings] > [E-mail/Internet Fax Settings] > [E-mail Control] > [Read Receipts] is set to [On].

Quality / File Siz

A

- When multiple e-mails are sent using [Split Send], a read receipt is requested for each e-mail.
- Read receipts are returned to the address specified in [Reply To], or they are returned to the address specified in [From] on the [E-mail] screen if [Reply To] is not set.
- This feature is only available when the recipient also sets to return read receipts.
- **1** Select [Read Receipts].

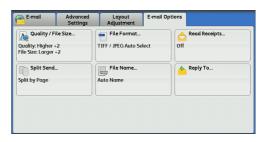

2 Select [On].

#### ■ Off

Select this option when you do not request read receipts.

#### ■ On

Select this option when you request read receipts.




#### Split Send (Sending in Sections)

When using the E-mail service, and the size of the data to be attached is large, you can split the data at page breaks or by a certain data size and then send the data.

For information on [Split Send], refer to "5 Tools" > "E-mail/Internet Fax Service Settings" > "E-mail Control" > "Split Send Method" in the Administrator Guide.

#### Select [Split Send].

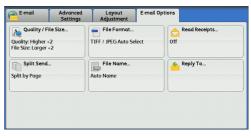

#### Select any option.

#### ■ Split by Page

The data is split at page breaks.

Note

- [Split by Page] is available only when [File Format] on the [E-mail] screen is set to [PDF], [DocuWorks], or [XPS]\*, or when [File Format] is set to [TIFF] with [Single File for Each Page] check box not selected.
- \* : XPS stands for XML Paper Specification.

# Split Send Split by Data Size

#### ■ Split by Data Size

The data is split by a certain data size.

Note

• Select this option if your e-mail application supports message/partial.

#### File Name (Specifying a Name for the File to be Sent)

When using the E-mail, Scan to PC, Network Scanning, or Store & Send Link service, you can specify a name for the file to be sent.

#### ■ Auto Name

When you select the E-mail, Scan to PC, or Store & Send Link service, the file name is set by the system administrator. When you select the Network Scanning service, the file name is "DOC".

The extension depends on the setting in [File Format].

- When [TIFF] is selected in [File Format]: tif
- When [JEPG] is selected in [File Format]: jpg
- When [PDF] is selected in [File Format]: pdf
- When [XPS] is selected in [File Format]: xps
- When [DocuWorks] is selected in [File Format]: xdw
- When [Microsoft® Word] is selected in [File Format]: doc
- When [Microsoft® Excel®] is selected in [File Format]: xls

Note

- XPS stands for XML Paper Specification.
- For information on the file name automatically generated when you select E-mail, Scan to PC, and Store & Send Link service, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Filename Format" and "Add Date to E-mail Attachment Name" in the Administrator Guide.

#### ■ To set the file name

- **1** Select [File Name].
- **2** Enter a file name using the displayed keyboard.

For information on how to enter characters, refer to "Entering Text" (P.100).


Note

- When each page is saved as one file, the page number is added to the end of each file name.
- Up to 128 characters can be entered as a file name for the Scan to PC service.
- Up to 28 characters can be entered as a file name for the E-mail service.
- Up to 28 characters can be entered as a file name for the Store & Send Link service.
- Up to 40 characters can be entered as a file name for the Network Scanning service.

#### Reply To (Specifying a Reply Address)

When using the E-mail service, you can specify the address for reply.

**1** Select [Reply To].

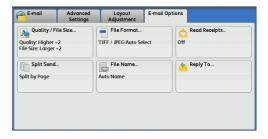

**2** Enter an address for reply.

#### ■ Reply To

Select the [Reply To] box to display the keyboard screen on which you can enter an address for reply.

Note

• For information on how to search the Address Book by entering a part of the e-mail address, refer to "New Recipient (Specifying an E-mail Address)" (P.305).





#### ■ Clear

Deletes the address entered in [Reply To].

#### ■ Reply To Me

Uses the address specified in [From] on the [E-mail] screen as a reply address.

Note • [Reply To Me] is selectable only when an address is specified in [From] on the [E-mail] screen.

#### ■ Address Book


Allows you to select a reply address from the Address Book.

For more information, refer to "Address Book" (P.297).

#### File Name Conflict (Setting the Action to be Taken for File Name Conflict)

When using the Scan to PC service, you can set the action to be taken when the file name conflicts with another file stored in the destination.

#### **1** Select [File Name Conflict].

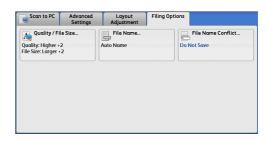

2 Select any option.

#### ■ Do Not Save


Cancels the job without saving the file.

#### ■ Rename New File

Automatically changes the file name by appending a number (0001 - 9999) to the file name, and saves the file.

#### ■ Overwrite Existing File

Replaces the existing file with the new one.

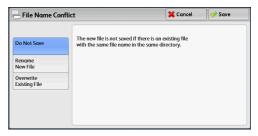

#### File Name (Specifying a Name for the File to be Saved)

When using the Store to Folder service, you can specify a name for the file to be saved.

#### ■ Auto Name

The file name is set by the system administrator.

Note

- If a file name is deleted, [(Auto Set)] is displayed.
- For information on the file name automatically generated when you select the Store to Folder service, refer to "5 Tools" > "Scan Service Settings" > "Other Settings" > "Filename Format" in the Administrator Guide.

#### ■ To set the file name

- **1** Select [File Name].
- **2** Enter a file name with up to 28 characters using the displayed keyboard.

Note

 If a document stored in a folder of the machine is imported to a computer, the specified name may not be reflected on it depending on import method.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### Encryption (Sending E-mail Encrypted by S/MIME)

When using the E-mail service, you can send e-mail encrypted by S/MIME.

When sending encrypted e-mail, select an e-mail address associated with a certificate that can be encrypted, from the Address Book.

Note

- You can change the default value of [E-mail Encryption] in the System Administration mode. For information on how to change the default value, refer to "5 Tools" > "Scan Service Settings" > "Scan Defaults" > "E-mail Encryption" in the Administrator Guide.
- This feature is supported only by the ApeosPort series models.

#### ■ Off

Sends e-mail without encryption.

#### ■ On

Sends e-mail with encryption.

#### Digital Signature (Sending E-mail with a Digital Signature by S/MIME)

When using the E-mail service, you can send e-mail with a digital signature by  $\mathsf{S}/\mathsf{MIME}.$ 

Digital Signature allows a recipient to confirm whether contents of the e-mail are changed, or whether the e-mail is sent from the proper sender.

To use this feature, the machine's mail address must be linked to a certificate.

• This feature is supported only by the ApeosPort series models.

For information on how to link a certificate to the machine's e-mail address, refer to "12 Encryption and Digital Signature Settings" > "Configuration of E-mail Encryption/Digital Signature" in the Administrator Guide.

#### ■ Off

Sends e-mail without a digital signature.

#### ■ On

Sends e-mail with a digital signature.

#### Login Name

You can use this feature to enter the login name for a destination server.

• This feature is displayed only when [Network Scanning] is selected on the Services Home screen.

- **1** Select [Login Name].
- **2** Enter the login name using the keyboard displayed on the screen.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### **Password**

You can use this feature to enter the password for a destination server.

• This feature is displayed only when [Network Scanning] is selected on the Services Home screen.

- **1** Select [Password].
- **2** Enter the password using the keyboard displayed on the screen.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### Meta Data

You can use this feature to change the values of the DMF if they are specified for a selected job template.

• This feature is displayed only when [Network Scanning] is selected on the Services Home screen.

## **6** Send from Folder

This chapter describes the basic operations and features to use folders.

•	Folder Operating Procedure	.372
•	Selecting a Folder	374
•	Checking/Operating Files in a Folder	375
•	Checking File Details	377
•	Printing Files in α Folder	380
•	Configuring/Starting Job Flow	383

#### Folder Operating Procedure

This section describes the basic procedure to operate files in folders.

You can store print files submitted by a computer, scan files, and fax files in folders on the machine.

These files stored in a folder can be sent by e-mail and be retrieved from a network computer.

You can also automate routine tasks, or register private folders and shared folders separately.

The following shows the reference section for each procedure.


Step 1 Opening the [Send from Folder] Screen	372
Step 2 Selecting a Folder	372
Step 3 Checking/Selecting Files in a Folder	373
Step 4 Operating Files in a Folder	373

#### Step 1 Opening the [Send from Folder] Screen

The following describes how to select features on the [Send from Folder] screen.

Note • The features displayed on the screen depend on your machine configuration.

Press the <Services Home> button.

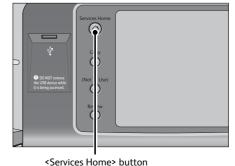

**2** Select [Send from Folder].



#### Step 2 Selecting $\alpha$ Folder

Access to some folders may be restricted, depending on the settings of the Authentication feature.

For information on selectable folders depending on the Authentication feature, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.

Select a folder on the [Send from Folder] screen.



If a passcode is set for the folder, enter the passcode and select [Confirm].


#### Step 3 Checking/Selecting Files in a Folder

Select the display style from [List] and [Thumbnail].



**2** Select a file to send by e-mail or to print.

For information on the [File List] screen, refer to "Checking/ Operating Files in a Folder" (P.375).

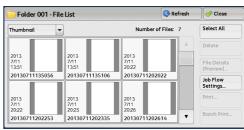

#### Step 4 Operating Files in a Folder

The following shows the reference sections for operations available on the [Send from Folder] screen.

Selecting a Folder	374
Checking/Operating Files in a Folder	375
Checking File Details	377
Printing Files in a Folder	380
Configuring/Starting Job Flow	383

#### Selecting a Folder

The following describes how to select a folder.

Access to some folders may be restricted, depending on the settings of the Authentication feature.

For information on selectable folders depending on the Authentication feature, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.

Select a folder on the [Send from Folder] screen.

#### Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- An arrow is displayed next to each folder which has a link to a job flow sheet and for which the auto start is set.
- If the passcode entry screen appears, enter the passcode and select [Confirm].



Displays a folder at the top when you enter the 3-digit folder number with the numeric keypad.



#### Checking/Operating Files in a Folder

You can check or operate files stored in a folder.

• When selecting print files, [Job Flow Settings] cannot be selected for some models.

Select a folder on the [Send from Folder] screen.




Select a file.



Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can also switch to list view as shown below.

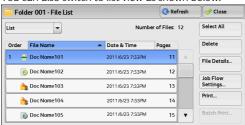

- You can sort files in ascending or descending order by selecting either [File Name] or [Date & Time].
- At the left of each file name, an icon is displayed to show the file type.



- You can select up to 100 files separately, or select all files at a time. If you select files separately, a number appears to the left of the icon indicating the order in which it was selected. Files are processed in this order.
- Select any option.

#### ■ Refresh

Displays the updated information.

#### **■** List

Lists the files stored in the folder, with their stored dates and pages.



#### ■ Thumbnail

Displays the images and names of the files stored in the folder.

- **Important** If power is cut off immediately after a scanned file is stored in a folder, or if the hard disk space is insufficient to display thumbnails, files in the folder may not be displayed in thumbnail view. In that case, display them in list view.
  - Characters and images in thumbnail view may not be correctly displayed because they are scaled down from the actual sizes.

Note

• The orientation of an image displayed in thumbnail view depends on which orientation the document was stored in.

#### **■** Number of Files

Displays the number of files stored in the selected folder.

#### ■ Select All

Selects all the files in the folder. To deselect all the files, select this button again while all the files are being selected.

#### ■ Delete

Deletes the selected files in the folder.

#### ■ File Details (Preview)

Previews the selected file to allow you to check its details.

Refer to "Checking File Details" (P.377).

#### ■ Job Flow Settings

Displays the [Job Flow Settings] screen on which you can create, link, and execute job flows. Refer to "Configuring/Starting Job Flow" (P.383).

Note

• Files stored in a folder by specifying [Store in Remote Folder] on a print driver are called "print files". Job flows are not available for print files. If print files are included in the selected files, a job flow can be executed for the files other than the print files.

#### ■ Print

Allows you to print the selected files separately. Refer to "Print" (P.380).

#### ■ Batch Print

Allows you to print the selected multiple files as one file.


Refer to "Batch Print" (P.381).

#### **Checking File Details**

You can preview the selected file to check its details.

Note


- Monochrome images with high gradation levels may appear bluish when previewed.
- When the Image Log Control feature is used, it may take more time than expected to preview a file.
- Select a file on the [Folder File List] screen.

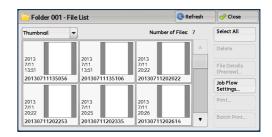


Click [File Details (Preview)].



When you select multiple files, select a file to check details.

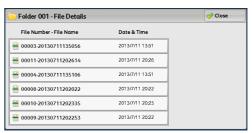

Select any option.

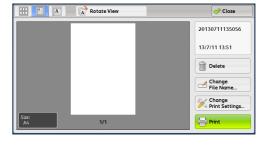

#### ■ (Thumbnail view)

A previewed image is displayed in a thumbnail view. In the thumbnail view, the following operations are available:

- Drag or flick the preview area up and down to switch pages.
- Tap a thumbnail to move to entire view.

Note

• For information on how to drag or flick, refer to "Touch Screen" (P.98).


#### (Entire view)

An entire previewed image is displayed.



**⊘** Close

• When the page switching buttons are displayed

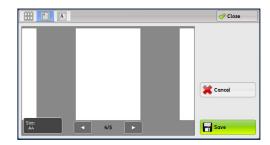

• When the thumbnail bar is displayed



In the entire view, the following operations are available:

- Drag or flick the preview area side to side to switch pages.
- Double-tap a previewed image to move to the enlarged view.
- Tap the preview area to switch whether to display the page switching button or thumbnail bar.
- Tap the previous or next page displayed on the preview area to display the tapped page on the center of the screen.
- Drag the thumbnail bar side to side to scroll thumbnails. Tap the desired thumbnail to be displayed.

#### ■ [A] (Enlarged view)

A previewed image is enlarged or reduced.

• When the slider is displayed



• When the thumbnail bar is displayed



In the enlarged view, the following operations are available:

• Drag or flick the enlarged image side to side or up and down to move the position to be displayed.

- Double-tap a previewed image to change the ratio of the image size.
- Tap the preview area to switch whether to display the slider or thumbnail bar.
- Drag the slider to change the ratio of the image size.
- Drag the thumbnail bar side to side to scroll thumbnails. Tap the desired thumbnail to be displayed.



Rotates all previewed images 90 degrees right from the currently displayed angle.

#### **■** Delete

Deletes the selected files in the folder.

#### ■ Change File Name

Allows you to change the file name. Use the displayed keyboard to enter a new name.

#### ■ Change Print Settings

Allows you to change the print settings of the file previewed on the screen.

#### ■ Print

Prints the selected files.

#### Printing Files in a Folder

You can print selected files in a folder.

Select files on the [Folder - File List] screen.




#### Select [Print] or [Batch Print].

• When multiple files are selected, [Batch Print] allows you to print the selected files as a single file, while [Print] allows you to print them as separate files.

For information on [Print] and [Batch Print], refer to "Print" (P.380) and "Batch Print" (P.381).

Select any option. Enter the number of print sets using the numeric keypad, if necessary.



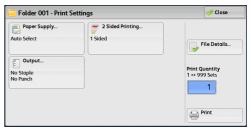

#### Select [Print]

Note

• When a file stored by [Store in Remote Folder] of a print driver is printed, the settings specified on the control panel or CentreWare Internet Services will override the settings specified on the print driver except the [Pages Per Sheet (N-Up)], [Skip Blank Page], and [Print Position] settings.

#### **Print**

Allows you to set printing.

#### ■ Paper Supply

Allows you to select paper.

#### ■ 2 Sided Printing

Allows you to set 2-sided printing.

#### **■** Output

Allows you to set stapling, punching, and a tray where the output is delivered.

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

For examples of the settings of stapling and hole punching, refer to "When stapling/punching holes" (P.381).

#### ■ File Details

Displays the [File Details] screen. Select a file from the list to check its preview image. For information on how to preview a file, refer to "Checking File Details" (P.377).

#### ■ Print Quantity

Specify the number of print sets.

#### ■ Print

Prints the selected file.

#### **Batch Print**

Allows you to set batch printing.

You can print multiple files as one file. Up to 100 files can be bound in the selected order.

Note

- For 2-sided printing, the last page becomes blank when the total number of printed pages is odd. For printing of multiple files, a blank page is inserted after the final page of each file.
- If a different size document is included in multiple files, it may be printed in improper orientation.
- [Batch Print] is not available while interrupting another job.
- [Batch Print] is not available for files received by fax or Internet Fax, or files for Secure Polling. When the selected files contain fax or Internet Fax files, the machine will not print the fax or Internet Fax files but only the scan and print files.

#### ■ Paper Supply

Allows you to select paper.

#### ■ 2 Sided Printing

Allows you to set 2-sided printing.

#### **■** Output

Allows you to set stapling and punching, and a tray where the output is delivered. The number of sheets that can be stapled is 2 - 50 sheets (when 90 gsm paper is use).

Note

- If the C3 Finisher Staple Unit 65 Sheets (optional) is installed, the maximum number of sheets that can be stapled is 65 (when 90 gsm paper is used and thickness of bundled paper is 5.7 mm or less).
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

For examples of the settings of stapling and hole punching, refer to "When stapling/punching holes" (P.381).

#### ■ File Details

Displays the [File Details] screen. Select a file from the list to check its preview image. For information on how to preview a file, refer to "Checking File Details" (P.377).

#### **■** Print Quantity

Specify the number of print sets.


#### ■ Print

Prints the selected file.

#### When stapling/punching holes


The following table shows the stapling/punching positions for print files stored in a folder by specifying [Store in Remote Folder] on a print driver, and for scan files. The following uses the example of [1 Staple] for stapling and [2 Holes] for punching.

• For print files in a folder stored by specifying [Store in Remote Folder] on a print driver

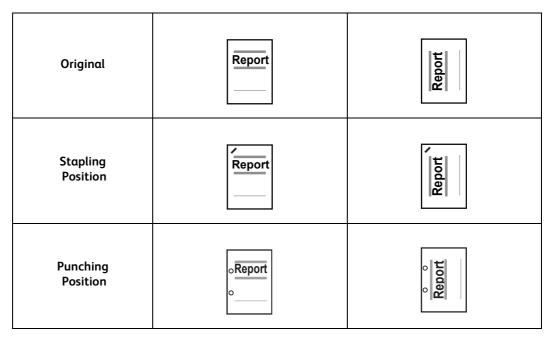

• For scan files stored in a folder

Important • Ensure that the actual orientation of the original document matches the [Original Orientation] setting in [Edge Erase] or in [2 Sided Scanning] on the [Layout Adjustment] screen.

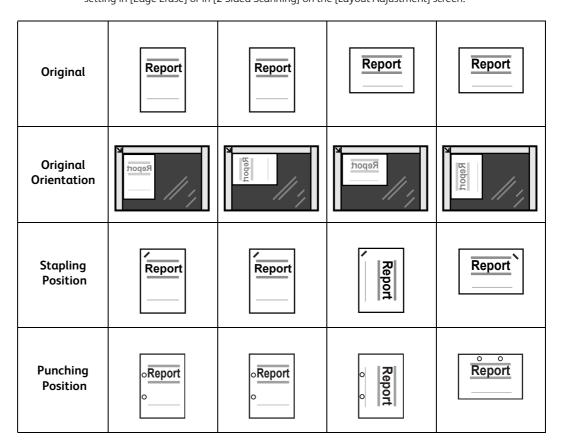

#### Configuring/Starting Job Flow

Job Flow is a feature that allows you to register transfer settings of scan data, such as a transfer method and destination, to simplify data-transfer tasks.

Job flow sheets are categorized into two types according to the target. One type of job flow sheet targets files stored in folders, and the other type targets scan files. This section describes the first type of job flow sheet, targeting files stored in folders.

A job flow operates files stored in a folder, and starts in either of the following ways: 1) automatically start a job flow when a file is stored in a folder, or 2) select a job flow to manually operate files stored in a folder.

To automatically start a job flow, you must make a link with a folder and a job flow sheet in advance. Files are automatically processed with the job flow sheet when they are stored in the linked folder.

#### Note

- When the Authentication feature is disabled, a job flow created in [Send from Folder] can only be used/edited/duplicated/deleted through the folder where the job flow is created. This type of job flow is not displayed on the [Create Job Flow Sheet] screen. When the Authentication feature is enabled, job flows sheets whose owners are authenticated are displayed on the [Create Job Flow Sheet1 screen.
- To use the Job Flow feature, the HDD Extension Kit (optional) is required for some models.

For information on job flows that target scan files, refer to "Job Flow Sheets (ApeosPort Series Models Only)" (P.389).

You can register the following features:

- Forward
- F-mail Notification
- Print

For information on the restrictions on the combination of features, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" in the Administrator Guide.

#### **■** Forward

Multiple forwarding recipients can be configured for each forwarding method.

FTP (ApeosPort Series Models only)

Forwards via FTP. Up to 2 recipients can be specified.

• SMB (ApeosPort Series Models only)

Forwards via SMB. Up to 2 recipients can be specified.

• Mail (ApeosPort Series Models only)

Forwards via E-mail. Up to 100 recipients can be specified.

Fax

Forwards via fax. Up to 100 recipients can be specified.

Internet Fax

Forwards via Internet Fax. Up to 100 recipients can be specified.

• IP Fax (SIP)

Forwards via IP Fax. Up to 100 recipients can be specified.

#### **■** E-mail Notification

You can receive the job results by e-mail.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Create New Job Flow Sheet" in the Administrator Guide.


#### **■** Print

Files in a folder can be printed.

Select files on the [Folder - File List] screen.



**2** Select [Job Flow Settings].

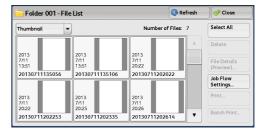

Select any option.

#### ■ Auto Start

This sets auto start of the job flow for files stored in the folder. The job flow automatically starts when a file is stored.



■ Folder 001 - Job Flow Settings

#### ■ Start Current Job Flow

Select files in the folder, and then select this button to start the job flow linked to this folder.

Important • After executing the job flow, confirm the [Job Status] screen or print a Job History Report to check the result. For information on the Job History Report, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Job History Report" in the Administrator Guide.

#### **■ Cut Link**

Cancels the link between a folder and the linked job flow sheet.

#### ■ Create/Change Link

Displays the [Link Job Flow Sheet to Folder] screen. Refer to "[Link Job Flow Sheet to Folder] Screen" (P.384).

#### ■ Select Job Flow Sheet

Select this button while files are selected to display the [Select Job Flow Sheet] screen. Refer to "[Select Job Flow Sheet] Screen" (P.386).

#### [Link Job Flow Sheet to Folder] Screen

You can change the link between the folder and its job flow sheet.

Note • Linking, delinking, and auto start settings can be also performed when you create a folder.

Refresh

13

14

15

✓ Close

Delete

File Details.

Job Flow Settings.

Print...

#### Select a job flow sheet to link to.

**Important** • Selecting [Save] without selecting a job flow sheet does not set a link. If the selected job flow sheet is already linked, the link is canceled.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can sort the list in ascending or descending order by selecting either [Name] or [Updated].

Folder 001 - File List


o Doc Name102

🏂 Doc Name104

Doc Name105

Order File Name

M Doc No

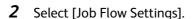



▲ Date & Time

2011/6/23 7:33PM

2011/6/23 7:33PM

Select [Create/Change Link].



Select any option.

#### ■ Refresh

Displays the updated information.

#### ■ Create

Displays the [Create New Job Flow Sheet] screen.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Create New Job Flow Sheet" in the Administrator Guide.

#### **■** Edit/Delete

Displays the [Details] screen.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Edit/Delete" in the Administrator Guide.

#### ■ Search by Name

Searches for job flows that partially match the entry. The machine searches through job flow sheet names that were registered upon each job flow sheet creation. The entry can be up to 128 characters long.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Search by Keyword

Searches for job flows that fully match the entry. The machine searches through keywords that were registered upon each job flow creation. The entry can be up to 12 characters long. You can select from preset keywords if they have been registered in the System Administration mode.



For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Select Keyword

Displays the [Select Keyword] screen. Select a keyword registered in the System Administration mode to search for job flows. Job flows that fully match the entry are searched. The machine searches through keywords that were registered upon each job flow creation.

#### ■ Sheet Filtering

Displays the [Sheet Filtering] screen.

Refer to "[Sheet Filtering] Screen" (P.386).

#### [Sheet Filtering] Screen

This screen allows you to filter the job flow sheets displayed.

Displayed job flow sheets may vary depending on the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.

#### Select the filtering conditions, and select [Save].

Note

• The job flows that can be displayed on [Send from Folder] are those whose [Target] is [Folder], and those stored in the machine.

# Sheet Filtering

#### Owner

Select the owner of job flow sheets to filter.

#### ■ Target (ApeosPort Series Models only)

Select the target of job flow sheets to filter.

#### [Select Job Flow Sheet] Screen

This screen allows you to select and execute a job flow for the selected files.

#### 1 Select a job flow, and select [Start].

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can sort the list in ascending or descending order by selecting either [Name] or [Updated].



#### **■** Start

Executes the selected job flow sheet.

#### ■ Refresh

Displays the updated information.

#### ■ Details

Displays the [Details] screen.

For more information, refer to "5 Tools" > "Setup" > "Create Job Flow Sheet" > "Edit/Delete" in the Administrator Guide.

#### ■ Change Settings

If the selected job flow sheet setting is editable, the [Change Settings] screen appears. You can temporarily change the settings.

#### ■ Search by Name

Searches for job flows that partially match the entry. The machine searches through job flow names that were registered upon each job flow creation. The entry can be up to 128 characters long.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Search by Keyword

Searches for job flows that fully match the entry. The machine searches through keywords that were registered upon each job flow creation. The entry can be up to 12 characters long. You can select from preset keywords if they have been registered in the System Administration mode.

For information on how to enter characters, refer to "Entering Text" (P.100).

#### ■ Select Keyword

Displays the [Select Keyword] screen. Select a keyword registered in the System Administration mode to search for job flows. Job flows that fully match the entry are searched. The machine searches through keywords that were registered upon each job flow creation.

#### ■ Sheet Filtering

Displays the [Sheet Filtering] screen.

Refer to "[Sheet Filtering] Screen" (P.386).

#### **Job Flow Restrictions**

A job flow sheet can be used by only one user, can be shared by multiple users, or can be used for only certain folders.

Job flow restrictions may vary depending on the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" in the Administrator Guide.

# 7 Job Flow Sheets (ApeosPort Series Models Only)

This chapter describes the scanning operation using  $\alpha$  job flow sheet registered on the machine.

Job Flow Sheets is a service that allows you to register transfer settings of scan data, such as a transfer method and destination, to simplify data-transfer tasks.

• Job flow sheets targeting scanned documents and print files are supported only by the ApeosPort series models.

- Selecting/Changing a Job Flow Sheet......392

#### **Job Flow Procedure**

Job flow sheets are categorized into two types according to the target. One type of job flow sheets targets scanned documents, and the other type targets files stored in folders. This section describes the first type of job flow sheets, targeting scanned documents.

For information on job flow sheets that target files stored in folders, refer to "Configuring/Starting Job Flow" (P.383).

The following describes the procedure to operate  $\alpha$  job flow. Refer to the following section for each procedure.

Step 1 Opening the [Job Flow Sheets] Screen	390
Step 2 Selecting a Job Flow Sheet	390
Step 3 Confirming/Changing the Job Flow Sheet	391
Step 4 Starting the Job Flow Sheet	391

To create and register a job flow sheet, use a computer.


Note

• To create a job flow sheet, use Device Setup Tool. You can download Device Setup Tool from our official web site.

#### Step 1 Opening the [Job Flow Sheets] Screen

The following describes how to open the [Job Flow Sheets] screen.

**1** Press the <Services Home> button.

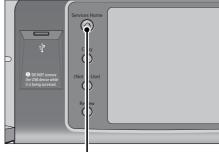

<Services Home> button

**2** Select [Job Flow Sheets].




\* WSD stands for Web Services on Devices.

#### Step 2 Selecting $\alpha$ Job Flow Sheet

**1** Select a job flow sheet.


For more information on the [Job Flow Sheets] screen, refer to "Selecting/Changing a Job Flow Sheet" (P.392).

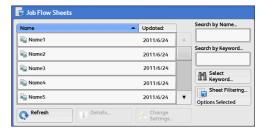

#### Step 3 Confirming/Changing the Job Flow Sheet

To confirm the details, select [Details]. To change the settings, select [Change Settings].

For information on how to check or change job flow settings, refer to "Selecting/Changing a Job Flow Sheet" (P.392).

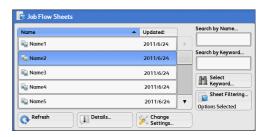

#### Step 4 Starting the Job Flow Sheet

- Load a document.
  - Note • A job flow with an application linked does not require you to load a document.
- 2 Press the <Start> button.

**Important** • After executing the job flow, be sure to print a Job History Report to check the result. For information on the Job History Report, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Job History Report" in the Administrator Guide.

#### Selecting/Changing a Job Flow Sheet

This section describes how to select or edit a job flow sheet created on a network computer with Device Setup Tool.

Important • If characters not supported by the machine are used in the name or description of a job flow sheet, the characters will not be displayed or will be garbled on the screen. For information on characters that can be used in the names or descriptions of job flow sheets, refer to "16 Appendix" > "Notes and Restrictions" > "Notes and Restrictions on the Use of the Machine" in the Administrator Guide.

Note

- To communicate with network computers, enable the SOAP port on the machine.
- A job flow sheet created on a network computer can be deleted, but cannot be changed or duplicated. However, you can temporarily change some items that are permitted to be changed.

For information on how to enable the port, refer to "5 Tools" > "Connectivity & Network Setup" > "Port Settings" in the Administrator Guide.

#### Select a job flow sheet.

• Displayed job flow sheets may vary depending on the settings of the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" > "Creating/ Using Job Flow Sheet" in the Administrator Guide.



- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Drag or flick to scroll the list to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can sort the list in ascending or descending order by selecting either [Name] or [Updated].

#### ■ Refresh

Displays refreshed information.

#### ■ Details

Displays the [Details] screen. You can confirm the details of a job flow such as the name, last updated date, target, owner, and save location. When you select [1], the whole text of the description which was registered when creating the job flow sheet is displayed.

#### ■ Change Settings

Displays the [Change Settings] screen. You can change the job flow settings. Refer to "[Change Settings] Screen" (P.393).

#### ■ Search by Name

Searches for job flows that partially match the entry. The machine searches through job flow names that were registered upon each job flow creation. The entry can be up to 128 characters long.

#### ■ Search by Keyword

Searches for job flows that fully match the entry. The machine searches through keywords that were registered upon each job flow creation. The entry can be up to 12 characters long. You can select from preset keywords if they have been registered in the System Administration mode.

#### ■ Select Keyword


Displays the [Select Keyword] screen. Select a keyword registered in the System Administration mode to search for job flows. Job flows that fully match the entry are searched. The machine searches through keywords that were registered upon each job flow creation.

#### **■** Sheet Filtering

Displays the [Sheet Filtering] screen on which you can filter the job flow sheets displayed. Refer to "[Sheet Filtering] Screen" (P.393).

#### [Change Settings] Screen


**1** Select [Change Settings].

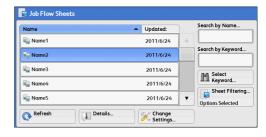

2 Select a group to be changed from [Group of Items].

Note


• The screen on the right does not appear if only one group is registered.

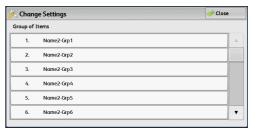

#### **3** Select the item to be changed.

Note

• A triangle icon appears at the left of each mandatory item.

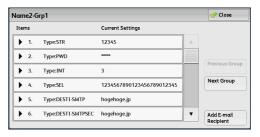

#### **4** Select any option.

#### **■** Items

Displays the items set for the job flow sheet.

#### **■** Current Settings

Displays the values set for the job flow sheet.

#### **■** Previous Group

Displays the items of the previous group.

#### ■ Next Group

Displays the items of the next group.

#### ■ Add E-mail Recipient

Adds recipients for the e-mail.

#### [Sheet Filtering] Screen

This screen allows you to filter the job flow sheets displayed.

Job flow sheets displayed vary depending on the settings of the Authentication feature. For more information, refer to "14 Authentication and Accounting Features" > "Authentication for Job Flow Sheets and Folders" > "Creating/Using Job Flow Sheet" in the Administrator Guide.

Select [Sheet Filtering].



Select the filtering conditions, and select [Save].


#### ■ Owner

Select the owner of job flow sheets to filter.

#### **■** Target

Select the target of job flow sheets to filter.

• Job flow sheets whose [Target] is [Folder] can be used only from [Send from Folder]. Note

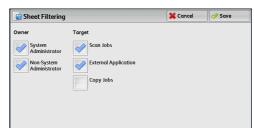

# 8 Stored Programming

This chapter describes the Stored Programming service that enables you to store customized job settings.

•	Stored Programming Overview	.396
•	Registering/Deleting/Renaming Stored Programs	.397
•	Calling a Stored Program	<u>ፈ</u> ሰ3

#### **Stored Programming Overview**

The Stored Programming service allows you to store settings that you expect to use frequently and call them with a single button operation. You can also assign a screen to a stored program button, to use the button as a short-cut to the screen.

A stored program can store not only settings of a feature, but a flow of settings configured on multiple screens.

For example, this service is available when you want to record a procedure starting from pressing the <Machine Status> button, to displaying the screen under [Print Reports] to print a Job History Report.

In addition, while Build Job is running, this service can be used for the remaining document

For information on Build Job, refer to "Build Job (Processing Documents Scanned with Different Settings as One Job)" (P.177).

• Drag and flick operation cannot be registered to the stored program. Note


The following shows the reference section for each feature.

Registering/Deleting/Renaming Stored Programs	397
Callina a Stored Program	403

# Registering/Deleting/Renaming Stored Programs

You can register and delete stored programs on the [Stored Programming] screen.

Press the <Services Home> button.

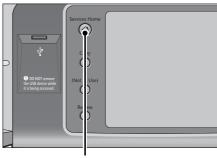


<Services Home> button

Select [Setup].



Select [Stored Programming].

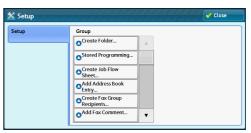

2. <Available>

6. <Available>

🔀 Job Store

Enter / Change

### Select a feature.

### **■** Store

**■** Delete

Register a stored program. Refer to "Registering Stored Programs" (P.398).

### ■ Store Build Job

Register a stored program for Build Job. Refer to "Registering Stored Programs for Build Job" (P.400).

Deletes a stored program. Select the stored program number to be deleted. Refer to "Deleting Stored Programs" (P.400).

### ■ Enter/Change Name

Enter or change the name of a stored program. Refer to "Entering/Changing a Stored Program Name" (P.401).

### ■ Assign/Change Icon

Specify an icon for a registered stored program.

Refer to "Assigning/Changing Icons for Stored Programs" (P.401).



# **Registering Stored Programs**

Up to 100 actions can be registered with one stored program. Up to 40 stored programs can be registered in the machine.

Actions registered in stored programs No.1 and 2 or No.1 to No.12 can also be performed by using one-touch buttons <M01> and <M02> or <61> to <M02>. (This feature is available only when the optional Fax service is installed).

The following describes how to register actions with stored programs.

Important • If registered settings such as tray paper size and comments, or default values in the System Settings are changed after a stored program is registered, the program's content also changes.

Note

- Services using System Settings, Job Flow Sheet, Network Scanning, or Address Book cannot be registered.
- The registering procedure for a stored program is canceled when the <Interrupt> button is pressed, the Auto Clear feature causes a time-out, or a pop-up window (paper jam, etc.) appears.
- There are two ways in which address numbers and stored programs are assigned to the one-touch buttons. Select either of the following. By default, [Type 1] is selected. For information on how to change the settings registered to the one-touch buttons, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" in the Administrator Guide.
  - [Type 1]

The buttons 1 to 70 are used for address numbers and they correspond to the registered address numbers 0001 to 0070, while the buttons M01 and M02 are used for stored programs and they correspond to the registered stored programs 1 and 2.

- [Type 2]

The buttons 1 to 60 are used for address numbers and they correspond to the registered address numbers 0001 to 0060, while the buttons 61 to 70, M01, and M02 are used for stored programs and they correspond to the registered stored programs 1 to 12.

### Select [Store].



### Select a number to register a stored program.

Note

- Once a job is stored to a button, it cannot be overwritten.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- Set the feature you want to register.

Note

- The machine sounds an audible tone while a stored program is being registered.
- Press the <Interrupt> button to cancel registration.

You can change the volume of the sound that notifies that a stored program is being registered. For information on the setting, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Tone" in the Administrator Guide.

### Press the <Start> or <Clear All> button.

• If no name is entered for a registered stored program, the name becomes "(No Name)". For information on how to name a registered stored program, refer to "Entering/Changing a Stored Program Name" (P.401).

# Notes and Restrictions on Registering Stored Programs

The following notes and restrictions apply when you register stored programs.

- When registering a stored program to select a paper size or type loaded on the bypass tray, register both the paper size and the paper type. If only the paper size or type is registered, the stored program may not be called properly.
- If any of the following operations is performed while a stored program is being registered, the stored program may not be registered or may not work correctly.
  - Removing or inserting a paper tray
  - Loading or reloading paper in the bypass tray
- If any of the following operations is performed after a stored program is registered, the registered stored program may not be called properly.
  - If the stored program has the Watermark feature and the default values of that feature are changed.
  - If the stored program has an operation for a folder and the folder passcode is changed.
  - If the settings of the control panel are changed.
  - If the services assigned to the <Custom> buttons are changed.
  - If any setting is changed under [Tools] > [System Settings] > [Copy Service Settings] > [Preset Buttons].
  - If the selection is made from a list of the Address Book or Job Flow Sheet.
  - If any optional components installed on the machine, such as a finisher, are changed, and thereby the associated buttons become no longer available.
  - If the measurement unit, millimeters or inches, is changed.
  - If a job is selected from the list of the stored jobs in [Secure Print Jobs & More] under Job Status.
  - Selecting items using the scroll bar
- The following features and operations cannot be registered in Stored Programming.
  - Registration and call of a stored program
  - EP Diagnostic Request
  - System Settings
  - The [Media Print Text] and [Media Print Photos] on the Services Home screen
  - The [Store to USB] on the Services Home screen
  - The [Network Scanning], [Job Flow Sheets], and [Web Applications] on the Services Home screen (ApeosPort Series Models only).
  - The <Custom> button to which the Network Scanning or Job Flow Sheets service is assigned.
  - The Address Book for the Fax/Internet Fax, E-mail, and Scan to PC services
  - Unselectable buttons
  - The [Language] on the Services Home screen
  - The [Screen Brightness] on the Services Home screen
  - Scrolling operation while previewing
  - Drag and flick operation
  - The [Browse] for the Scan to PC service
  - Operations to edit e-mail addresses for the E-mail service (the pop-up menu [Keyboard], [Remove], and [Edit] displayed by selecting [Recipient(s)] or [From]).
  - The <Power Saver> button
- A stored program registration is canceled when the <Interrupt> button is pressed, the Auto Clear feature causes a time-out, or a pop-up window (such as a paper jam window) appears.
- If the Fax service is available, one-touch buttons can be used.

# Registering Stored Programs for Build Job

Up to 100 actions can be registered with one stored program for Build Job. Up to 40 stored programs can be registered in the machine.

The following describes how to register actions with stored programs.

**1** Select [Store Build Job].



**2** Select a number to register a stored program.

Note

- Once a job is stored to a button, it cannot be overwritten.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- **3** Set the feature you want to register.

Note

- The machine sounds an audible tone while a stored program is being registered.
- Press the <Interrupt> button to cancel registration.

You can change the volume of the sound that notifies that a stored program is being registered. For information on the settings, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Tone" in the Administrator Guide.

4 Press the <Start> or <Clear All> button.

Note

- An icon is displayed to the left of each registered stored program for Build Job.
- If no name is entered for a registered stored program, the name becomes "(No Name)".

For information on how to name a registered stored program, refer to "Entering/Changing a Stored Program Name" (P.401).

# **Deleting Stored Programs**

The following describes how to delete stored programs.

**1** Select [Delete].



**2** Select the number to be deleted.

Note

- $\bullet$  Select [  $\blacktriangle$  ] to return to the previous screen or [  $\blacktriangledown$  ] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

### **3** Select [Delete].


### **■** Delete

Deletes the stored program.

Note • Deleted stored programs cannot be restored.

### ■ Cancel

Cancels deleting the stored program.

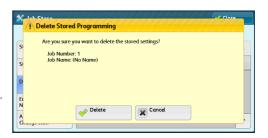

# Entering/Changing a Stored Program Name

The following describes how to enter or change the name of a stored program.

Up to 36 characters are allowed for a stored program's name.

For information on how to enter characters, refer to "Entering Text" (P.100).

**1** Select [Enter/Change Name].



**2** Select the number to register or change a name.

Note

- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- **3** Enter a name, and select [Save].



# **Assigning/Changing Icons for Stored Programs**

The following describes how to assign or change an icon of a stored program. You can select from 12 icons.

**1** Select [Assign/Change Icon].



**2** Select the number to assign or change an icon.

Note

- $\bullet$  Select [  $\blacktriangle$  ] to return to the previous screen or [  $\blacktriangledown$  ] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- Select an icon, and select [Save].

### ■ No Icon

No icon is assigned to a registered stored program.

### **■** Icon

Select an icon according to the content of the registered stored program.




# Calling a Stored Program

The following describes how to call a stored program.

When you call a specified stored program, the last screen shown when you registered the stored program appears.

**1** Press the <Services Home> button.

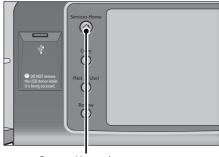

<Services Home> button

**2** Select [Stored Programming].



**3** Select a number of a stored program containing the features you want to use.

Note

- You can only select registered numbers.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).




1. (No Name)

• After the stored program has been called, the machine sounds an audible tone. If a failure occurs, the machine sounds a fault tone.

📴 Stored Programmi

For information on how to change the volume of the sound that notifies that a stored program has been called, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Complete Tone" in the Administrator Guide.

- 4 After the stored program is called, select other features if necessary.
- **5** Press the <Start> button.

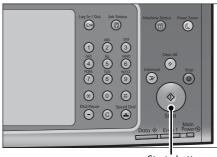

<Start> button

# Calling a Stored Program for Build Job

You can call a stored program for Build Job on the [Copy] screen displayed while Build Job is running.

Select [Change Settings].



- **2** Select the [Job Assembly] tab.
- Select [Stored Programming].
- **4** Select a number of a stored program containing the features you want to use.

Note

- You can only select registered numbers.
- After the stored program has been called, the machine sounds an audible tone. If a failure occurs, the machine sounds a fault tone.

For information on how to change the volume of the sound that notifies that a stored program has been called, refer to "5 Tools" > "Common Service Settings" > "Audio Tones" > "Stored Programming Complete Tone" in the Administrator Guide.

# 9 Web Applications (ApeosPort Series Models Only)

This chapter describes h	now to operate	web applications.
--------------------------	----------------	-------------------

N.I	

- This service is supported only by the ApeosPort series models.
  - This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

# **Web Applications Overview**

Web Applications is a service that allows you to access to web applications via a network using the browser on the machine in order to display and store data.

The machine provides the following features:

- Accessing web applications from the machine, and displaying the web application screen on the machine
- Storing scanned documents directly in a web application folder
- Printing a file directly that is stored on a remote server

Note

• The web applications that can be displayed on the machine are those which are compatible with the machine. You cannot access website on the Internet.

To access the web application on the machine, prior settings are required. For information on the settings, refer to "5 Tools" > "Web Applications Service Setup (ApeosPort Series Models Only)" in the Administrator Guide.


# **Accessing Web Applications**

The following describes how to access web applications.

You need to register an access destination in advance.

For information on how to register an access destination, refer to "5 Tools" > "Web Applications Service Setup" > "Server Setup" in the Administrator Guide.

1 Press the <Services Home> button.

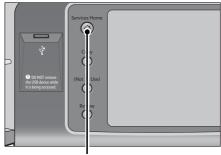


<Services Home> button

**2** Select [Web Applications].



\* WSD stands for Web Services on Devices.

**3** Select an access destination.

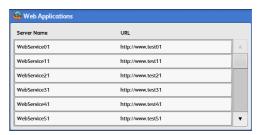

**4** Select [Open] from the pop-up menu displayed.

### ■ Open

Accesses the specified remote service.

### ■ Details

Displays the information of the specified remote service.

### **■** Close Menu

Hides the pop-up menu.




# **Accessing Using Buttons Registered on the Services Home Screen**

You can register frequently used web applications on the Services Home screen as buttons. The following describes how to access the applications by selecting the buttons.

For information on how to register a web application to a button on the Services Home screen, refer to "5 Tools" > "Common Service Settings" > "Screen/Button Settings" > "Services Home" in the Administrator Guide.

Press the <Services Home> button.

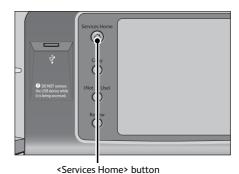

Select [Head Office] registered on the Services Home screen.

Note

• "Head Office" is registered as an example here. You can specify the name and the position of the button.



# 10 Media Print (Text and Photos)

This chapter describes the basic procedures and features of Media Print - Text and Media Print - Photos when a USB Memory Kit is connected.

• This service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

•	Overview of Media Print	410
•	Inserting USB Memory Device	.413
•	Media Print - Text	.416
•	Media Print - Photos	.418
•	Selecting the Printing Options	.420

# Overview of Media Print

If a USB memory device is connected to the machine, the data stored in the USB memory device can also be printed. You can also print scanned data stored with the Store to USB service.

The installation of commercially available Memory Card Reader allows the machine to retrieve and print image data (DCF1.0-compliant JPEG and TIFF) taken with a digital camera as well as document files (PDF, TIFF, XPS (Microsoft XPS format, OpenXPS format), XDW, XBD and JPEG (JFIF)).

Important • Data stored in USB memory device may be lost or damaged in the following cases. Make sure to back up data in media before use.

- When disconnecting/connecting the USB memory device by methods other than those described
- When receiving the effect of electrical noise or an electrical discharge
- When a fault or failure occurs during operation
- If the USB memory device receives mechanical damage
- We assume no responsibility for any direct and indirect damages arising from or caused by such
- For Media Print Photos, images can be displayed in thumbnail view, but cannot be previewed. For Media Print - Text, files cannot be displayed in thumbnail view and cannot be previewed either.

### Note

- XPS stands for XML Paper Specification.
- Commercially available Memory Card Reader with single slot \*1 can be used for Media Print feature (text/photo), but its performance is not quaranteed. When a Memory Card Reader with multi-slot \*2 is used, only one particular slot is available. The available slot depends on the model, and the slot of media/Memory Card that you want to use is not always available. Safe performance of a Memory Card Reader with multi-slot is not guaranteed, either.
- \*1 : Media/Memory Card that has one slot. Some allow only one type of media/Memory Card, while others allow more than one type (ex. SD card, xD-Picture Card).
- $^{*}2$ : Media/Memory Card that has two or more slots.
- This feature may not be available depending on the setting in the CentreWare Internet Services. For more information, refer to "6 CentreWare Internet Services Settings" > "Configuring Machine Settings Using CentreWare Internet Services" in the Administrator Guide.
- "Exif" is a file format that embeds information required to print the image data taken with a digital camera. The machine supports Exif 2.0 to 2.2.
- The Store to USB service is not available for some models. An optional component is required. For more information, contact our Customer Support Center.

The Media Print feature comprises two modes: Media Print - Photos and Media Print - Text. The Media Print - Photo mode prints data stored in the standard digital camera format, while the Media Print - Text mode prints data stored in text format. The feature also includes Index Printing that prints a list of files retrieved in the both modes.

# Supported Media and File Formats

The machine supports USB memory devices.

Supported media and file formats are as follows.

Supported Media	Supported File Format	
Supported Media	Media Print - Photos	Media Print - Text
USB 2.0 memory	JPEG files     TIFF files     Supports DCF1.0-compliant     JPEG/TIFF files (Exif2.0,     Exif2.1, Exif2.2)	<ul> <li>PDF files         Extension: pdf, PDF 1.3 or         later</li> <li>TIFF files         Extension: tif, Grayscale 4-bit/         8-bit uncompressed, 8-bit/24-         bit JPEG compressed, MH/         MMR compressed</li> <li>XPS files         Extension: xps, oxps</li> <li>DocuWorks files         Extension: xdw</li> <li>DocuWorks binder files         Extension: xbd</li> <li>JPEG (JFIF) files         Extension: jpg</li> </ul>

# **Important** • When you specify the save location, only folder names are displayed in the list. File names and shortcuts (symbolic link or alias) are not displayed.

- Folders that comply with the Design rule for Camera File system (DCF) standard used for digital cameras are not displayed.
- If a full path (a string of folder and file names in all directories) of the file created exceeds 257 characters long, an error occurs.
- If the medium contains more than 900 folders, the machine may not be able to recognize the medium correctly.
- If a file name contains characters that are not supported by the machine, the file name will not be displayed on the screen.

### Note

- XPS stands for XML Paper Specification.
- In the Media Print Photos mode, only 8 characters can be recognized as a file name. In the Media Print Text mode, up to 255 characters can be recognized.
- Up to 900 files can be processed with Media Print.
- Use media formatted with digital cameras or computers (FAT12, FAT16, FAT32 only).
- Use USB 2.0 compliant memory devices with the size up to 128 GB only. (USB 1.1 compliant memory devices are not supported.).
- If a file name contains machine-dependent codes, the file may not be recognized or displayed on the screen correctly.

### Notes and Restrictions on Media Print

The following notes and restrictions apply on the use of the Media Print service.

- Use the Media Print Photos service with a medium inserted. Otherwise, an error code (016-794/116-212) is displayed on the screen.
- Image files other than files in Exif format (JPEG/TIFF files created on computers) cannot be printed.
- Once an image file in Exif format is edited or saved on a computer, the file format is no longer the Exif format.

- If the medium fails, the process is terminated within a few minutes, and an error message is displayed.
- Eject the medium before switching off the power.
- Be sure to wait until printing is completed and then eject the medium by following the procedure described in this chapter.
- Always back up data in medium before use.
- Printing data may take from a few minutes to several tens of minutes, depending on the size and number of files in the medium.
- Before storing document files, format the USB memory with a computer (FAT12, FAT16, FAT32 only).
- When you print a PDF file using Media Print, [PDF Bridge] is selected regardless of the [Print Processing Mode] setting in [PDF Direct Print].

For more information on [Print Processing Mode], refer to "16 Appendix" > "PDF Direct Print" in the Administrator Guide.

- You can use a USB host adapter to print from your USB memory device or via your USB cable (as necessary), but the operation is not guaranteed.
- Multiple USB memory devices cannot be used simultaneously.
- Use USB 2.0 compliant memory devices only. USB 1.1 compliant memory devices are not supported.

The following USB memory devices are not supported:

- A USB memory device with multiple media partitions that require other utilities to access to the contents therein.
- A USB memory device connected via an external hub.
- Do not use a medium if it stores data that cannot be backed up, such as music data with the copyright protection function. We assume no responsibility for any direct and indirect damages arising from or caused by such data loss.
- The machine does not display a menu to prevent you from removing a USB memory device while it is being accessed.

# **Inserting USB Memory Device**

- 1 Insert the USB memory device into the USB memory slot on the control panel.
- **2** One of the following occurs.
  - The [USB Device Detected] screen appears.
  - The [Store to USB] screen appears.
  - The [Media Print Text] screen appears.
  - The [Media Print Photos] screen appears.
  - The screen display does not change.

Note


- The behavior depends on the settings. Ask your system administrator for more information.
- When a USB memory device is inserted into the USB memory slot in the Power Saver mode, the touch screen does not light. After exiting the Power Saver mode by pressing the <Power Saver> button, insert the USB memory device again or select [Store to USB] on the Services Home screen. For information on other ways to exit the Power Saver mode, refer to "Exiting the Power Saver Mode" (P.83).
- The screen status will be one of the above even when a USB memory device in which only encrypted data is stored is inserted or USB memory device in unsupported format is inserted. In such case, a warning message appears during operation and the operation is aborted.
- The screen status will be one of the above when a commercially available Memory Card Reader is inserted into the USB memory slot of the machine. It is the same if no media is inserted into the Memory Card Reader.
- If a commercially available Memory Card Reader is used and is left inserted all the time, the machine does not detect media even when they are inserted into the slot of the Memory Card Reader.
- The screen display remains the same when the inserted USB memory device or Memory Card is removed. Press the <Services Home> button or do anything else to change the screen display before starting next operation.

### When the [USB Device Detected] Screen Appears

Select [Media Print - Text] or [Media Print - Photos].




2 The [Media Print - Text] screen or the [Media Print - Photos] screen appears.

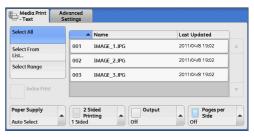

### When the [Store to USB] Screen Appears

Press the <Services Home> button.

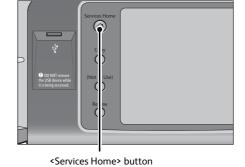

Advanced Layout Filing Options
Settings Adjustment

2 Sided Scanning 1 Sided

i Details..

Original Type
Text
File Format
PDF

Select [Media Print - Text] or [Media Print -Photos] on the Services Home screen.


Note • WSD Stands for Web Service on Devices.



\* WSD stands for Web Services on Devices.


The [Media Print - Text] screen or the [Media Print - Photos] screen appears.



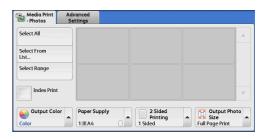

### When the [Media Print - Text] Screen Appears

Select a feature on the [Media Print - Text] screen.

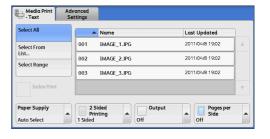


### When the [Media Print - Photos] Screen Appears

Select a feature on the [Media Print - Photos] screen.



### When the Screen Display Does Not Change

1 If any screen other than the Services Home screen is displayed, press the <Services Home> button.

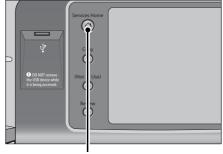


<Services Home> button

2 Select [Media Print - Text] or [Media Print - Photos] on the Services Home screen.



\* WSD stands for Web Services on Devices.


3 The [Media Print - Text] screen or the [Media Print - Photos] screen appears.

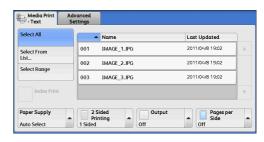

Important • Data stored in a USB memory device may be lost or damaged in the following cases. Make sure to back up the data in the device before use.

- When disconnecting/connecting the USB memory device by methods other than described in this guide
- When receiving the effect of electrical noise or an electrical discharge
- When a fault or failure occurs during operation
- If the USB memory device receives mechanical damage
- We assume no responsibility for any direct and indirect damages arising from or caused by such

Note • If you do not specify the file storage location, the scanned data is saved in the root directory.

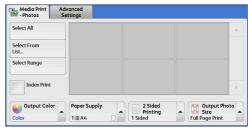

# **Media Print - Text**

# **Selecting Files**

You can select files using any of the following three methods:

- Selecting all files
- Selecting the desired files on the [Select From List] screen
- Selecting one file or a range of files with index numbers

• You can select up to 32 files simultaneously. Note

Select either [Select All], [Select From List], or [Select Range] to specify files.



**2** After selecting the files to be printed, set the printing options.

For more information on the printing options, refer to "Selecting the Printing Options" (P.420).

Note

- On the pop-up menu displayed when selecting files, you can cancel the selection or display the details
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

### ■ Select All

Selects all document files to be printed.

• Depending on the type of files stored in the medium or the directory configuration, some files may not be printed.

### **■** Select From List

Displays the [Select From List] screen.

Refer to "[Select From List] Screen" (P.416).

# ■ Select Range

Use [+] and [-] to specify the range of files to be printed in [First File] and [Last File].

• Select [Select From List] to display a list of files, and reference the list when selecting the range of files to be printed.

### **■** Index Print

Prints a list of the selected files with the index numbers automatically assigned.

For more information on Index Print, refer to "Index Print" (P.422).


# [Select From List] Screen

This screen displays a list of files with their folder and file names and stored dates and times. You can select the desired files from a list of files.

### 1 Select the desired files from a list of files.

Note

- Select [▲] to return to the previous screen or
   To move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can sort the list in ascending or descending order by selecting [# ▲], [Name], or [Last Updated].

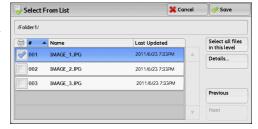

- A check mark is placed in the check box for each file selected. To deselect the file, select the file again while the file is selected (highlighted).
- If a folder or file name has more than 170 characters long, the folder or file name is not displayed.
- Folder names which include characters that the machine does not support may not be correctly displayed. If you specify the folders as file storage locations, an error occurs. For more information on characters that the machine supports, refer to "Entering Text" (P.100).
- The machine does not distinguish between upper and lower cases of folder and file names that are created in Windows environment and that consist of eight characters or less. The names for these folders and files are displayed in capital letters.

### ■ Select all files in this level

Selects all files in the current folder.

### ■ Details

Displays detailed information on the selected (highlighted) file. To print the file, select the [Print] check box on the [Details] screen.

### **■** Previous

Allows you to move to the upper directory.

**Note** • This button is grayed out if there is no upper directory.

### ■ Next

Allows you to move to the lower directory.

Note • This button is available when a folder is selected.

# **Media Print - Photos**

# **Selecting Files**

You can select files using any of the following three methods:

- Selecting all files
- Selecting the desired files on the [Select From List] screen. You can select up to 100 files simultaneously
- Selecting one file or a range of files with index numbers
- Select either [Select All], [Select From List], or [Select Range] to specify files.



**2** After selecting the files to be printed, set the printing options.

For more information on the printing options, refer to "Selecting the Printing Options" (P.420).

Note

- On the pop-up menu displayed when selecting files, you can cancel the selection or display the details.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

### ■ Select All

Selects all files to be printed.

Note

• Depending on the type of files stored in the USB memory device or the directory configuration, some files may not be printed.

### ■ Select From List

Displays the [Select From List] screen.

Refer to "[Select From List] Screen" (P.419).

### ■ Select Range

Use [+] and [-] to specify the range of files to be printed in [First picture] and [Last picture] under [Media Print - Photos].

Note • Select [Select From List] to display a list of files, and reference the list when selecting the range.

### **■** Index Print

Prints a list of the selected files with the index numbers automatically assigned.


For more information on Index Print, refer to "Index Print" (P.422).

# [Select From List] Screen

You can select the desired files from a list of files.

Note

- Select [▲] to return to the previous screen or
   To move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- A check mark is placed in the check box for each file selected. To deselect the file, select the file again while the file is selected (highlighted).

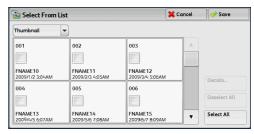

### **■** List

Displays a list of files with their names and stored dates and times.

Note

• You can sort the list in ascending or descending order by selecting [# ▲], [Name], or [Date & Time]. The number of files selected appears on the top on the screen.

### ■ Thumbnail

Displays a list of the images and names of the files.

**Important** • The thumbnail view may not be available for some files. If a file is not displayed in thumbnail view, display it in list view or in Index Print.

• Characters and images may not be correctly displayed in thumbnail view because they are reduced in size.

Note

• An image is displayed in thumbnail view in the orientation with which the file was stored.

### ■ Details

Displays detailed information on the selected (highlighted) file. To print the file, select the [Print] check box on the [Details] screen.

### **■** Deselect All

Deselects all selected files.

### ■ Select All

Selects all files.

# **Selecting the Printing Options**

You can set the printing options on the [Media Print -Text] or [Media Print - Photos], and [Advanced Settings] tabs.

By default, pressing the <Custom 3> (Review) button on the control panel allows you to view a list of the setting values.

# Media Print - Photos

Tαb	Item	Setting Value
-	Quantity	Specify the number of print sets in the range of 1 - 999, using the numeric keypad.
Media Print - Photos	Output Color	Color, Black & White
	Paper Supply	Trays 1 - 6
		Note • Select the tray in which any of the following sizes of paper is loaded: SRA3, A3, B4, A4, A4 ☐, B5, B5 ☐, 8.5 x 11" ☐, 100 x 148 mm.
		<ul> <li>When the desired tray is not displayed, select [More], and select the tray on the displayed screen.</li> </ul>
		<ul> <li>When you select [More] and then [Bypass], you can set [Paper Size] and [Paper Type].</li> <li>Paper Size     Select the paper size to be used from the list: SRA3,     A3, B4, A4, A4□, B5, B5□, 8.5 x 11", 8.5 x 11"□, 100     x 148 mm.</li> <li>Paper Type     Select the paper type to be used from the list.</li> </ul>
	2 Sided Printing	Off, Long Edge Flip, Short Edge Flip
	Output Photo Size	<ul> <li>Full Page Print</li> <li>5 x 7"</li> <li>When you select [Output Size] on the screen displayed after selecting [More], the following sizes are selectable:</li> <li>A4, 8.5 x 11", 100 x 148 mm, 3.5 x 5", 5 x 7"</li> </ul>
		<ul> <li>Note         <ul> <li>According to the size selected here and the paper size, only the photos fitting on one sheet of paper are aligned and printed. If you select [1 Picture per Page], one sheet of paper is used for one file and printed.</li> </ul> </li> <li>3 Pictures per Page (Center)         <ul> <li>When you select [Pictures per Page] on the screen displayed after selecting [More], the following options are available:</li> <li>2 Pictures, 3 Pictures (Center), 3 Pictures (Left), 4 Pictures, 6 Pictures, 8 Pictures</li> </ul> </li> </ul>
Advanced Settings	Bitmap Smoothing	Off, On

Note

 $\bullet \ \text{When you select a paper size smaller than the image size, the image is automatically reduced. When } \\$ you select a paper size larger than the image size, the image is printed at its original size.

• The features displayed on the [Media Print - Photos] and [Advanced Settings] screens may vary depending on the combination of the optional components installed on the machine.

# **Media Print - Text**

Tab	Item	Setting Value
-	Quantity	Specify the number of print sets in the range of 1 - 999, using the numeric keypad.
Media Print - Text	Output Color	Color, Black & White
	Paper Supply	Trays 1 - 6
		• Select [Auto Select] or the tray in which any of the following sizes of paper is loaded: A3, B4, A4, A4, A4, B5, B5, B5, A5, A5, A5, 8.5 x 11", 8.5 x 11", 8.5 x 11", 8.5 x 14", 11 x 17".
		When you select [Auto Select], the machine automatically selects a tray that contains the same size of paper as the document, and prints the document at its original size.
		<ul> <li>When the desired tray is not displayed, select [More], and on the screen displayed, select the tray.</li> </ul>
		<ul> <li>When you select [More] and then [Bypass], you can set [Paper Size] and [Paper Type].</li> <li>Paper Size     Select the paper size to be used from the list: A3, B4, A4, A4□, B5, B5□, A5, A5□,     8.5 x 11", 8.5 x 11"□, 8.5 x 14", 11 x 17".</li> <li>Paper Type     Select the paper type to be used from the list.</li> </ul>
	2 Sided Printing	1 Sided, Long Edge Flip, Short Edge Flip
	Staple	Specify the stapling/punching positions. When the desired stapling/punching positions are not displayed, select [More].
		Important • If you select and print multiple documents, all of the documents are stapled together. To staple only one document, print only that document.
Advanced Settings	Pages per Side	Off, 2 Pages, 4 Pages
	Bitmap Smoothing	Off, On

### Note

- When you select a paper size smaller than the document size, the document image is automatically reduced. When you select a paper size larger than the document size, the document is printed at its original size.
- The features displayed on the [Media Print Text] and [Advanced Settings] screens may vary depending on the combination of the optional components installed on the machine.

### **Index Print**

- In the Media Print Photos mode, a list of 30 x 40 mm reduced images, plus index numbers, file names, and dates when images were stored in the medium are printed.
- In the Media Print Text mode, names, dates when files were stored in the medium, and the total number of files are printed.

You can specify only the number of print sets for Index Print, in the range from 1 - 999 sets in 1 set increments. For other printing options, the settings you have specified for Media Print - Text or Media Print - Photos before selecting the [Index Print] check box will be effective. To change these settings, deselect the [Index Print] check box, change the print settings, and then perform Index Print. The setting values return to the defaults if the machine is rebooted.

The following setting items are restricted when you select Index Print.

Setting Item	Value	
Output Color	In the Media Print - Photos mode  • Color only In the Media Print - Text mode  • Black & White only	
Paper Supply	Trays 1 - 6	
	• Select the tray in which any of the following sizes of paper is loaded: A3, A4, or 8.5 x 11".	
2 Sided Printing	Not available	
Staple	Not available	
Pages per Side	Not available	

# 11 Job Status

Th	This chapter describes how to check the status of jobs and operate the jobs.		
•	Job Status Overview	424	
•	Checking Current/Pending Jobs	425	
•	Checking Completed Jobs	427	
•	Printing and Deleting Stored Jobs	428	
•	Printing Pending Jobs	445	


Handling Error Terminations......446

# 11

# **Job Status Overview**

The Job Status feature allows you to check current, pending, and completed jobs. You can also cancel printing and print jobs that are waiting to be output or resumed.

**1** Press the <Job Status> button.

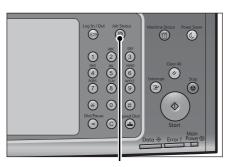

<Job Status> button

You can operate the following on the [Job Status] screen.

### ■ Checking current/pending jobs

Lists current and pending jobs, and displays their details. Also allows you to cancel current or pending jobs.

For more information, refer to "Checking Current/Pending Jobs" (P.425).

### ■ Checking completed jobs

Displays the status of completed jobs, and their details.

For more information, refer to "Checking Completed Jobs" (P.427).

### ■ Checking stored jobs

Prints or deletes jobs stored using the Charge Print, Secure Print, Private Charge Print, Sample Set, and Delayed Print features.

For more information, refer to "Printing and Deleting Stored Jobs" (P.428).

### ■ Printing pending jobs

Prints jobs that are waiting to be output or resumed.

For more information, refer to "Printing Pending Jobs" (P.445).

# **Checking Current/Pending Jobs**

This section describes how to check current or pending jobs. On the status screen, you can cancel or preferentially execute jobs.

**1** Press the <Job Status> button.



<Job Status> button

Print Waiting Jobs

55/66

66

Status

Copying

Print Wait

Completed Secure Print Jobs Jobs & More

Remote Termino

11x22mm:3%

11x22mm:3%

All Jobs

File / Job Type

02222-Copy

02223 - Print

**2** Select the job to be canceled or preferentially executed.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- From the drop-down menu, you can select and display the desired type of jobs.
- **3** Select [Delete] or [Promote Job].

### ■ Print Waiting Jobs

Prints the jobs that are waiting to be output or resumed.

For more information, refer to "Printing Pending Jobs" (P.445).



# **■** Delete

Cancels the current or pending job.

### **■** Promote Job

Preferentially executes the selected job.

If you select this button, [♥] appears under the [Status] of the selected job.

### **■** Delete

Stops processing the job.

### ■ Last Original

Select this button to end scanning of documents. The job is then executed.

### ■ Next Original

Select this button when you have another document to scan.

### ■ Start

Resumes the suspended job.

# ■ Change Quantity

Displays the [Change Quantity] screen, on which you can change the number of print sets. Enter the number using the numeric keypad.

Group Parent Jobs

1/1

1/1

Status

Completed

Completed

# **Checking Completed Jobs**

This section describes how to check completed jobs.

You can check whether a job has been completed successfully. Selecting a job allows you to see its details.

**1** Press the <Job Status> button.



<Job Status> button

Secure Print Jobs & More

Folder 001

A4:100%

### 2 Select the [Completed Jobs] tab.

Note

- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- From the drop-down menu, you can select and display the desired type of jobs.
- Deselect the [Group Parent Jobs] check box to display child jobs of the completed Broadcast Sends.
   Select a child job from the list to show its details.
   When the [Group Parent Jobs] check box is selected, select a parent job to show its child jobs, and select a child job from the list to show its details.

All Jobs

File / Job Type

00005 - Store to Folder

- Copy

Сору

- The values under [Result] show quantity, pages, and percentage. The value type depends on the job type. Select a job and switch to the job status screen to check the value type.
- **3** Select a job to see the details.
- **4** Select [Close] after the confirmation.

### ■ Group Parent Jobs

Allows you to check the list or history of related jobs (such as job flow jobs).

### ■ Show Child Jobs


Displays a job list.

### ■ Print this Job History Report

Prints the Job History Report.

### ■ Print this Job Report

Prints the Job Report.

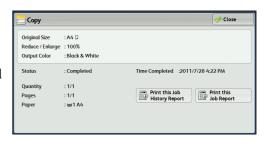

# 11


# **Printing and Deleting Stored Jobs**

This section describes how to print or delete jobs stored with the Secure Print or Sample Set feature, or stored with the [Receive Control] setting of the Charge Print feature. The [Secure Print Jobs & More] screen allows you to print or delete stored jobs.

The following shows the reference section for each feature.

Secure Print	428
Sample Set	431
Delayed Print	
Charge Print	436
Private Charge Print	439
Public Folder	442
I Indelivered Faxes	443

### **1** Press the <Job Status> button.

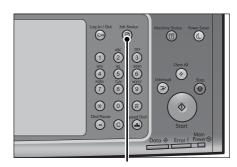

<Job Status> button

# **2** Select the [Secure Print Jobs & More] tab.

[Secure Print] and [Private Charge Print] are not displayed simultaneously on the screen. For more information on the settings, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.



# **Secure Print**

This feature allows you to temporarily store print data in the machine to print it with the print command from the machine. The feature also enables you to set a passcode, which is helpful to print confidential documents.

The following describes how to print or delete jobs stored with the Secure Print feature.

Note

- This feature does not appear when [Receive Control] in [Charge/Private Print Settings] is set to either of the following:
  - Select [According to Print Auditron], and then select [Save as Private Charge Print Job] in [Job Login Success].
  - Select [Save as Private Charge Print Job].

When [Save as Private Charge Print Job] or [Save as Charge Print Job] is selected in [Receive Control] under [Charge/Private Print Settings], jobs will not be saved in [Secure Print] under [Secure Print Jobs & More] even if you select [Secure Print] on the print driver. For more information, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/ Private Print Settings" in the Administrator Guide.

For information on how to operate a Secure Print job, refer to the print driver's help.

### **1** Select [Secure Print].

Refresh 🕜 Close

Go to 001 ↔ 200

Job List.

**⊘** Close

# **2** Select the user to be checked, and select [Job List].

Note

- Select [Refresh] to display the updated information.
- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can enter a user ID in [Go to] using the numeric keypad to display the user ID at the top of the

User 1

21/6/2013 11:41:36 1Pgs

Secure Print

001 User 1

**3** Enter the passcode, and select [Confirm].

Note

• If the passcode is not set, the passcode entry screen does not appear.



Auto Bklet Off

**4** Select the job to be printed or deleted.

Note

- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.
- Files in a folder can be displayed in a list or thumbnail view. You can also preview the files.
- You can set whether or not to display detailed information in the list screen of the stored files. For more information refer to "5 Tools" > "Stored File Settings" > "Display Details of Stored Print Job" in the Administrator Guide.
- When the booklet layout is set using a printer driver, the icon for booklet is displayed if the machine is the Type 2 (T2) model.
- **5** Select any option.
- **6** When printing, specify the number of print sets using the numeric keypad.

### ■ Select All

Selects all jobs. To deselect all the jobs, select this button again.

### ■ Delete

Deletes the Secure Print job.

**Note**• If jobs with the same Billing ID are all deleted, the Billing ID will be deleted. Refer to "When [Delete] is Selected" (P.430).

### **■** Preview

Displays the previewed image on the first page of the selected job.

**Note** • If you select multiple documents, the [Preview] cannot be selected. Refer to "When [Preview] is Selected" (P.430).

### ■ Print Quantity

Specify the number of print sets using the numeric keypad.

### ■ Print

Prints the Secure Print job. After printing, the job is deleted.



Refer to "When [Print] is Selected" (P.431).

### When [Delete] is Selected

Select [Delete].

### **■** Delete

Deletes the job.

**Important** • Once the job is deleted, it cannot be restored.

### ■ Cancel

Cancels deleting the job.

### When [Preview] is Selected

Select any option.

Note

- Only the first page is displayed for the preview screen.
- A preview image cannot be rotated.

# (Entire view)

An entire preview image is displayed.

In the entire view, the file name, Stored Date, Pages, and setting values of Staple and Hole Punch are displayed on the right side of the preview area.

Double-tap the preview area to move to the enlarged view.

# ■ A (Enlarged view)

A previewed image is enlarged or reduced.

In the enlarged view, the following operations are available.

- Drag or flick the enlarged image to move the position to be displayed.
- Double-tap the previewed image to change the ratio of the image size.
- Drag the slider to change the ratio of the image size.

### **■** Print Quantity

Specifies the number of print sets.

### **■** Output Color

Displays the output color of the document to be printed.

### ■ 2 Sided Printing

Displays 1 Sided, Flip on Short Edge, and Flip on Long Edge.

### ■ Booklet Creation (Type 2 (T2) model only)

Displays Left/Top Bind and Right/Bottom Bind.

Note

- $\bullet$  This item is displayed when the booklet layout is set using a printer driver.
- When the orientation of booklet creation cannot be detected, "Booklet Creation" is displayed only.



💢 Cancel

Booklet Creation F Left / Top Bind

Print

**X** Cance

1 Set(s)

Output Color:
Color
(Auto Detect)

Booklet Creation

F Left / Top Bind





### ■ Print

Prints the Secure Print job.

Refer to "When [Print] is Selected" (P.431).

### When [Print] is Selected

**1** Specify how to process the job after printing.

• The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.



### ■ Print and Delete

Starts printing the job. After printing, the job is deleted.

### ■ Print and Save

Starts printing the job. After printing, the job remains undeleted.

### ■ Cancel

Cancels printing the job.

# Sample Set

The following describes how to print or delete jobs stored with the Sample Set feature.

Before printing multiple sets of a document, you can first print one set for trial, and then print the remaining sets from the machine.

For information on how to operate a Sample Set job, refer to the print driver's help.


• When [Save as Private Charge Print Job] or [Save as Charge Print Job] is selected in [Receive Control] under [Charge/Private Print Settings], jobs will not be saved in [Sample Set] under [Secure Print Jobs & More] even if you select [Sample Set] on the print driver.

For more information, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

- **1** Select [Sample Set].
- **2** Select the user to be checked, and select [Job List].

Note

- Select [Refresh] to display the updated information.
- Select [▲] to return to the previous screen or  $[ lackbox{ } lackbox{ }$
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- You can enter a user ID in [Go to] using the numeric keypad to display the user ID at the top of the list.

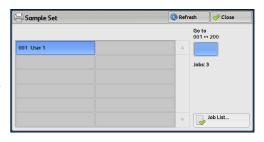

# **3** Select the job to be printed or deleted.

### Note

- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.
- The files in a folder can be displayed in a list or thumbnail view. You can also preview the files.
- You can set whether or not to display detailed information in the list screen of the stored files. For more information refer to "5 Tools" > "Stored File Settings" > "Display Details of Stored Print Job" in the Administrator Guide.

User 1

- When the booklet layout is set using a printer driver, the icon for booklet is displayed if the machine is the Type 2 (T2) model.
- 4 Select any option.
- 5 When printing, specify the number of print sets using the numeric keypαd.

### ■ Select All

Selects all jobs. To deselect all the jobs, select this button again.

### **■** Delete

Deletes the Sample Set job.

Refer to "When [Delete] is Selected" (P.432).

### **■** Preview

Displays the previewed image on the first page of the selected job.

**Note**• If you select multiple documents, the [Preview] cannot be selected.

Refer to "When [Preview] is Selected" (P.432).

### ■ Print Quantity

Specify the number of print sets using the numeric keypad.

Note • If you select multiple documents, the [Preview] cannot be selected.

### ■ Print

Prints the Sample Set job. After printing the remaining sets of the job, the job is deleted. Refer to "When [Print] is Selected" (P.433).

### When [Delete] is Selected

**1** Select [Delete].

### **■** Delete

Deletes the job.

**Important** • Once the job is deleted, it cannot be restored.

### ■ Cancel

Cancels deleting the job.

# When [Preview] is Selected

Select any option.

Note

- Only the first page is displayed for the preview screen.
- A preview image cannot be rotated.



### ■ (Entire view)

An entire preview image is displayed.

In the entire view, the file name, Stored Date, Pages, and setting values of Staple and Hole Punch are displayed on the right side of the preview area.

Double-tap the preview area to move to the enlarged view.

### ■ (Enlarged view)

A previewed image is enlarged or reduced.

In the enlarged view, the following operations are available.

Note

- Drag or flick the enlarged image to move the position to be displayed.
- Double-tap the previewed image to change the ratio of the image size.
- Drag the slider to change the ratio of the image size.

# 



### ■ Print Quantity

Specify the number of print sets.

### **■** Output Color

Displays the output color of the document to be printed.

### ■ 2 Sided Printing

Displays 1 Sided, Flip on Short Edge, and Flip on Long Edge.

### ■ Booklet Creation (Type 2 (T2) model only)

Displays Left/Top Bind and Right/Bottom Bind.

Note

- This item is displayed when the booklet layout is set using a printer driver.
- When the orientation of booklet creation cannot be detected, "Booklet Creation" is displayed only.

### ■ Print

Prints the Sample Set job.

Refer to "When [Print] is Selected" (P.433).

### When [Print] is Selected

### Select [Yes].

Note

• The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.



### ■ Yes

Starts printing the job. After printing, the job is deleted.

Note

• After a sample set is output, the remaining sets will automatically be output if the machine is not instructed for the period specified in [Auto Job Release]. To prevent the remaining sets from being output automatically, set [Auto Job Release] to [Off]. For information on how to set [Auto Job Release], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Job Release" in the Administrator Guide.

#### ■ No

Cancels printing the job.

### **Delayed Print**

This feature allows you to temporarily store print data on the machine to print it at specified time.

Up to 100 jobs can be stored (queued) simultaneously for the Delayed Print feature. If the power is switched off when jobs are in queue (before the specified print time), the jobs whose print time has elapsed will automatically be printed immediately after the power is switched on again.

The following describes how to print or delete jobs stored with the Delayed Print feature. For information on how to operate a Delayed Print job, refer to the print driver's help.

Note

When [Save as Private Charge Print Job] or [Save as Charge Print Job] is selected in [Receive Control] under [Charge/Private Print Settings], jobs will not be saved in [Delayed Print] under [Secure Print Jobs & More] even if you select [Delayed Print] on the print driver. For more information, refer to "5 Tools" > Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

- Select [Delayed Print].
- **2** Select the job to be printed or deleted.

Note

- Select [Refresh] to display the updated information.
- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- [Print Time] shows the time to start printing.
- The files in a folder can be displayed in a list or thumbnail view. You can also preview the files.
- You can set whether or not to display detailed information in the list screen of the stored files. For more information refer to "5 Tools" > "Stored File Settings" > "Display Details of Stored Print Job" in the Administrator Guide.
- When the booklet layout is set using a printer driver, the icon for booklet is displayed if the machine is the Type 2 (T2) model.
- **3** Select any option.

### ■ Delete

Deletes the Delayed Print job.


Refer to "When [Delete] is Selected" (P.435).

#### ■ Preview

Displays the previewed image on the first page of the selected job.

**Note**• If you select multiple documents, the [Preview] cannot be selected.

Refer to "When [Preview] is Selected" (P.435).

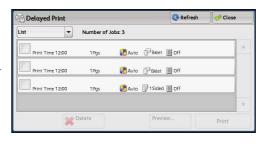

#### ■ Print

Prints the Delayed Print job. After printing, the job is deleted. If printed manually, the job will not be printed at the specified time.

Refer to "When [Print] is Selected" (P.436).

### When [Delete] is Selected

**1** Select [Delete].


#### **■** Delete

Deletes the job.

**Important** • Once the job is deleted, it cannot be restored.

#### ■ Cancel

Cancels deleting the job.

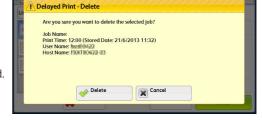

### When [Preview] is Selected

Select any option.

Note

- Only the first page is displayed for the preview screen.
- A preview image cannot be rotated.

### ■ (Entire view)

An entire preview image is displayed.

In the entire view, the file name, Stored Date, Pages, and setting values of Staple and Hole Punch are displayed on the right side of the preview area.

Double-tap the preview area to move to the enlarged view.

## ■ [A] (Enlarged view)

A previewed image is enlarged or reduced.

In the enlarged view, the following operations are available.

- Drag or flick the enlarged image to move the position to be displayed.
- Double-tap the previewed image to change the ratio of the image size.
- Drag the slider to change the ratio of the image size.

### **■** Print Quantity

Specify the number of print sets.

### **■ Output Color**

Displays the output color of the document to be printed.

### ■ 2 Sided Printing

Displays 1 Sided, Flip on Short Edge, and Flip on Long Edge.





### ■ Booklet Creation (Type 2 (T2) model only)

Displays Left/Top Bind and Right/Bottom Bind.

Note

- This item is displayed when the booklet layout is set using a printer driver.
- When the orientation of booklet creation cannot be detected, "Booklet Creation" is displayed only.

#### **■** Print

Prints the Delayed Print job. After printing, the job is deleted. If printed manually, the job will not be printed at the specified time.

Refer to "When [Print] is Selected" (P.436).

### When [Print] is Selected

### 1 Select [Yes].

Note

• The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.



#### ■ Yes

Starts printing the job. After printing, the job is deleted.

#### ■ No

Cancels printing the job.

### **Charge Print**

This feature authenticates users on the machine to prevent unauthorized users from operating print jobs. When this feature is enabled, the machine prints only the jobs of authenticated users. You can also configure the machine to store print jobs temporarily, and then print them from the machine's control panel.

If received print jobs are set to be saved as Charge Print under [Tools] > [Authentication/ Security Settings] > [Authentication] > [Charge/Private Print Settings] > [Receive Control], the jobs are saved for each Billing ID. Any jobs that were not given a Billing ID on the print driver are saved in [No User ID].

For more information on how to register user IDs on the machine, refer to "5 Tools" > "Accounting" > "Create/View User Accounts" in the Administrator Guide.

Note

- Unlike the Private Charge Print feature, the Charge Print feature can store jobs without a user ID, such as e-mail printing and print jobs sent from ContentsBridge or CentreWare Internet Services, and can print the jobs after authenticating users.
- [Charge Print] appears when [Save as Charge Print Job] is selected by using one of the following procedures in the System Administration mode:
  - Select [Save as Charge Print Job] in [Receive Control].
  - Select [According to Print Auditron] in [Receive Control], and then select [Save as Charge Print Job] in [Job Login Failure].
  - Select [According to Print Auditron] or [Save as Private Charge Print Job] in [Receive Control], and then select [Save as Charge Print Job] in [Job without User ID].

For information on how to set Charge Print, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

The following describes how to print and delete a job stored with the Charge Print feature.

4m m)

Refresh 🔗 Close

Go to 001 ↔ 200

Job List.

1 2 3 4 5 6 7 8 9 0

q w e r t y u i o p

z x c v b n m ,

002 User 1

a s d f g h j k l

1 Press the <Log In/Out> button on the control panel, or select the login information field on the touch screen.

🧸 Login

More Characters

Charge Print

001 (No User ID)


**2** Enter the user ID, and select [Enter].


Note

- When the passcode is set, enter the user ID and select [Next]. Then, enter the passcode and select [Enter].
- While a user is authenticated, the <Log In/ Out> button lights up on the control panel.
- To log out of the machine, press the <Log In/ Out> button on the control panel.
- **3** Select [Charge Print].
- 4 Select the user to be checked, and select [Job List].

Note


- Select [Refresh] to display the updated information.
- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).

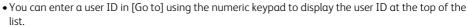

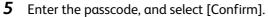

Note

• If the passcode is not set, the passcode entry screen does not appear.

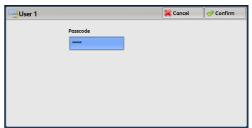

**6** Select the job to be printed or deleted.

#### ■ Select All

Selects all jobs. To deselect all the jobs, select this button again.

Note

- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.
- The files in a folder can be displayed in a list or thumbnail view. You can also preview the files.
- You can set whether or not to display detailed information in the list screen of the stored files. For more information refer to "5 Tools" > "Stored File Settings" > "Display Details of Stored Print Job" in the Administrator Guide.
- When the booklet layout is set using a printer driver, the icon for booklet is displayed if the machine is the Type 2 (T2) model.
- **7** Select any option.
- **8** When printing, specify the number of print sets using the numeric keypad.

### **■** Delete

Deletes the Charge Print job.

Refer to "When [Delete] is Selected" (P.438).



# tus

#### **■** Preview

Displays the previewed image on the first page of the selected job.

**Note**• If you select multiple documents, the [Preview] cannot be selected.

Refer to "When [Preview] is Selected" (P.438).

### ■ Print Quantity

Specify the number of print sets using the numeric keypad.

### **■** Print

Prints the Charge Print job. After printing, the job is deleted. Refer to "When [Print] is Selected" (P.439).

### When [Delete] is Selected

**1** Select [Delete].

#### ■ Delete

Deletes the job.

Important • Once the job is deleted, it cannot be restored.

#### ■ Cancel

Cancels deleting the job.

### When [Preview] is Selected

**1** Select any option.

Note

- Only the first page is displayed for the preview screen.
- A preview image cannot be rotated.

### ■ (Entire view)

An entire preview image is displayed.

In the entire view, the file name, Stored Date, Pages, and setting values of Staple and Hole Punch are displayed on the right side of the preview area.

Double-tap the preview area to move to the enlarged view.

### ■ 🔝 (Enlarged view)

A previewed image is enlarged or reduced.

In the enlarged view, the following operations are available.

- Drag or flick the enlarged image to move the position to be displayed.
- Double-tap the previewed image to change the ratio of the image size.
- Drag the slider to change the ratio of the image size.

### ■ Print Quantity

Specify the number of print sets.







### **■** Output Color

Displays the output color of the document to be printed.

### ■ 2 Sided Printing

Displays 1 Sided, Flip on Short Edge, and Flip on Long Edge.

### ■ Booklet Creation (Type 2 (T2) model only)

Displays Left/Top Bind and Right/Bottom Bind.

Note

- This item is displayed when the booklet layout is set using a printer driver.
- When the orientation of booklet creation cannot be detected, "Booklet Creation" is displayed only.

#### ■ Print


Prints the Charge Print job. After printing, the job is deleted. Refer to "When [Print] is Selected" (P.439).

### When [Print] is Selected

### **1** Specify how to process the job after printing.

Note

• The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.

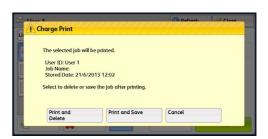

### ■ Print and Delete

Starts printing the job. After printing, the job is deleted.

### ■ Print and Save

Starts printing the job. After printing, the job remains undeleted.

### ■ Cancel

Cancels printing the job.

### **Private Charge Print**

This feature allows you to temporarily store print data in the machine for each authentication user ID, and request on the machine's control panel to print the data. As the feature enables you to select and print only necessary jobs, you can avoid printing unnecessary jobs. Furthermore, the machine displays only the jobs of authenticated users and their associated sub users to securely protect the privacy of the users. The Private Print feature is suitable for authenticating and managing specific users managed by the system administrator.

If received print jobs are set to be saved with Private Charge Print, the jobs are saved for each authentication user ID.

- An application (sold separately) is required to use the feature that associates sub users with the user ID of a login user. For more information, contact our Customer Support Center.
- [Private Charge Print] is displayed when [Receive Control] in [Charge/Private Print Settings] is set to either of the following:

- Select [According to Print Auditron] in [Receive Control], and then select [Save as Private Charge Print Job] in [Job Login Success].
- Select [Save as Private Charge Print Job] in [Receive Control].
- When the Private Charge Print feature is selected, you cannot specify normal print, Secure Print, Sample Set, Delayed Print on the print driver.

The Private Charge Print feature restricts the use of the machine through either user ID authentication or card authentication (only the IC Card Reader (optional) is available), or the combination of both. For information on the types of authentication, refer to "14 Authentication and Accounting Features" > "Overview of Authentication and Accounting Feature" > "Types of Authentication" in the Administrator Guide.


To delete a print job instructed with an invalid user ID, display the list of print jobs after logging in as a system administrator, and then select the job to be deleted. For more information, refer to "3 Maintenance" > "Deleting a Private Charge Print Job with an Invalid User ID" in the Administrator Guide. For information on how to set a User ID, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide.

The following describes how to print or delete a job stored with the Private Charge Print feature.

- **1** Press the <Log In/Out> button on the control panel, or select the login information field on the touch screen.
- **2** Enter the user ID, and select [Enter].

Note

- When the passcode is set, enter the user ID and select [Next]. Then, enter the passcode and select [Enter].
- While the user is authenticated, the <Log In/ Out> button lights up on the control panel.
- To log out of the machine, press the <Log In/ Out> button on the control panel.

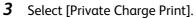

Note

• If you are authenticated as a system administrator, selecting [Private Charge Print] will display a list of authentication user IDs. Select a user ID from the list, and then select [Job List] to display a list of jobs stored for the selected user.

nivate Charge Print

21/6/2013 11:41:21 1Pgs

21/6/2013 11:41:03 1Pas

### **4** Select the job to be printed or deleted.

Note

- You can select up to 100 files simultaneously to print or delete the files. If you select multiple files, they are printed in the selected order.
- The files in a folder can be displayed in a list or thumbnail view. You can also preview the files.
- You can set whether or not to display detailed information in the list screen of the stored files. For more information refer to "5 Tools" > "Stored File Settings" > "Display Details of Stored Print Job" in the Administrator Guide.
- When the booklet layout is set using a printer driver, the icon for booklet is displayed if the machine is the Type 2 (T2) model
- **5** Select any option.
- **6** When printing, specify the number of print sets using the numeric keypad.

#### ■ Select All

Selects all jobs. To deselect all the jobs, select this button again.

#### **■** Delete

Deletes the Private Charge Print job.

**Note**• If jobs with the same user ID are all deleted, the user ID will be deleted.

Refer to "When [Delete] is Selected" (P.441).



Auto Bklet Off

Auto Bklet Off

■ Auto 1 Sided 1 Off

#### **■** Preview

Displays the previewed image on the first page of the selected job.

**Note** • If you select multiple documents, the [Preview] cannot be selected. Refer to "When [Preview] is Selected" (P.441).

### ■ Print Quantity

Specifies the number of print sets using the numeric keypad.

### ■ Print

Prints the Private Charge Print job. After printing, the job is deleted. Refer to "When [Print] is Selected" (P.442).

### When [Delete] is Selected

**1** Select [Delete].

#### **■** Delete

Deletes the job.

**Important** • Once the job is deleted, it cannot be restored.

#### ■ Cancel

Cancels deleting the job.

### When [Preview] is Selected

Select any option.

Note

- Only the first page is displayed for the preview screen.
- A preview image cannot be rotated.

### ■ (Entire view)

An entire preview image is displayed.

In the entire view, the file name, Stored Date, Pages, and setting values of Staple and Hole Punch are displayed on the right side of the preview area.

Double-tap the preview area to move to the enlarged view.

### ■ 🔝 (Enlarged view)


A previewed image is enlarged or reduced.

In the enlarged view, the following operations are available.

- Drag or flick the enlarged image to move the position to be displayed.
- Double-tap the previewed image to change the ratio of the image size.
- Drag the slider to change the ratio of the image size.

### ■ Print Quantity

Specifies the number of print sets.

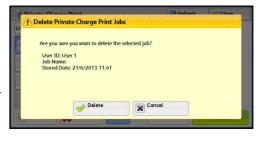





### **■ Output Color**

Displays the output color of the document to be printed.

### ■ 2 Sided Printing

Displays 1 Sided, Flip on Short Edge, and Flip on Long Edge.

### ■ Booklet Creation (Type 2 (T2) model only)

Displays Left/Top Bind and Right/Bottom Bind.

Note

- This item is displayed when the booklet layout is set using a printer driver.
- When the orientation of booklet creation cannot be detected, "Booklet Creation" is displayed only.

### ■ Print

Prints the Private Charge Print job. After printing, the job is deleted. Refer to "When [Print] is Selected" (P.442).

### When [Print] is Selected

**1** Specify how to process the job after printing.

Note

• The screen as shown on the right does not appear if [Print Job Confirmation Screen] is set to [Disabled] in the System Administration mode. If [Disabled] is selected, the machine automatically deletes the job after printing without displaying the confirmation screen. For more information, refer to "5 Tools" > "Stored File Settings" > "Print Job Confirmation Screen" in the Administrator Guide.



### ■ Print and Delete

Starts printing the job. After printing, the job is deleted.

### ■ Print and Save

Starts printing the job. After printing, the job remains undeleted.

### ■ Cancel

Cancels printing the job.

### **Public Folder**

This feature allows you to store data in the machine and send the data by operating on a remote machine.

The following describes how to print or delete a job stored in a public folder.

For information on how to operate public folders, refer to "Store for Polling (Storing Files on the Machine that a Remote Machine can Retrieve)" (P.263).

Note

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

✓ Close

Number of Files:

### **1** Select [Public Folder].



2011/6/25 7:26 PM

2011/6/25 7:26 PM

2011/6/25 7:26 PM

2011/6/25 7:26 PM

9999

9999

9999

9999

Public Folder

Number - Type

00001 - Store for Polling

00002 - Store for Polling

00003 - Store for Polling

00004 - Store for Polling

00005 - Store for Polling

### Select the job to be printed or deleted.

Note

- Select [Refresh] to display the updated information.
- Select [▲] to return to the previous screen or
   [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- **3** Select any option.

### ■ Select All

Selects all jobs. To deselect all the jobs, select this button again.

### **■** Delete

Deletes the selected job stored in the public folder.

Refer to "When [Delete] is Selected" (P.443).

### **■** Print

Prints the selected job stored in the public folder.

Refer to "When [Print] is Selected" (P.443).

### When [Delete] is Selected

**1** Select [Delete].

### **■** Delete

Deletes the job.

Important • Once the job is deleted, it cannot be restored.

#### ■ Cancel

Cancels deleting the job.


### When [Print] is Selected

Starts printing the job.

### **Undelivered Faxes**

The following describes how to re-send or delete an undelivered fax job.

- This feature may not appear depending on the settings in the System Administration mode.
- This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.
- Select [Undelivered Faxes].

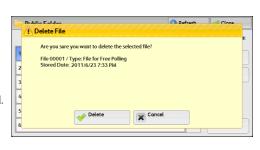

### **2** Select the job to be re-sent or deleted.

Note

- Select [Refresh] to display the updated information.
- Select [▲] to return to the previous screen or [▼] to move to the next screen.
- Scroll the list by drag or flick operation to switch the screen to be displayed. For information on how to drag or flick, refer to "Touch Screen" (P.98).
- **3** Select any option.

To re-send to the previously specified fax number, press the <Start> button.

### ■ Delete This Fax

Deletes the undelivered fax job. Refer to "When [Delete This Fax] is Selected" (P.444).

### ■ Change Recipients

Allows you to change the fax recipient and re-send the undelivered fax job. Refer to "When [Change Recipients] is Selected" (P.444).

Undelivered Faxes

Job Type

Send Fax

Send Fax

Broadcast Fax

Broadcast Fax

Undelivered Faxes

# of Recipients : 1000

: Send Fax

: Forced 4800 bps

Job Type

Refresh

123456789012345678901234567890123456789012345678

123456789012345678901234567890123456789012345678

123456789012345678901234567890123456789012345678

123456789012345678901234567890123456789012345678

123456789012345678901234567890123456789012345678

: File 00012

Delete This Fax

Time Completed : 2011/6/23 7:33 PM

Close

### When [Delete This Fax] is Selected


Select [Delete].

#### ■ Delete

Deletes the undelivered fax job.

#### ■ Cancel

Cancels deleting the undelivered fax job.

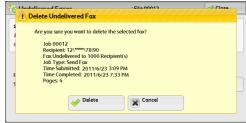

### When [Change Recipients] is Selected

Specify a fax recipient for the undelivered fax job.

Besides the fax recipient, the following features can be changed on the control panel:

- Fax type
- · Starting Rate

Important • If the fax recipient has been changed, header information will not be added even if [Transmission Header Text] is set to [Display Header].

For information on how to specify fax recipients, refer to "Step 3 Specifying Destinations" (P.191).



## **Printing Pending Jobs**

After the last user operation on the control panel of the machine, a job is waiting to be printed until the period of time specified in [Auto Print] elapses, instead of being printed immediately. You can forcibly print this pending job without waiting for this time period to elapse.

If a job is paused by the <Stop> button and is waiting to be resumed, you can also resume the job. If there are multiple jobs, subsequent jobs are printed after the paused job has been printed.

Note • If there are no pending jobs, [Print Waiting Jobs] is disabled.


For information on how to set [Auto Print], refer to "5 Tools" > "Common Service Settings" > "Machine Clock/Timers" > "Auto Print" in the Administrator Guide.

**1** Press the <Job Status> button.



<Job Status> button

**2** Select [Print Waiting Jobs].

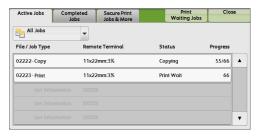

## 11

## **Handling Error Terminations**

This section describes how to handle error terminations.

### ■ For a Print Job

Select a job shown as an error termination on the [Completed Jobs] tab to check the error code. Follow the instructions of the error code to solve the problem.

If an error occurs during a print job, the machine can be configured either to pause the print job until the error is confirmed by the user, or to automatically cancel the error job so that subsequent jobs can be printed.

For more information on the setting, refer to "5 Tools" > "Print Service Settings" in the Administrator Guide.

For information on error codes, refer to "15 Problem Solving" > "Error Code" in the Administrator Guide.

### ■ For a Fax Job

### A Transmission Report - Job Undelivered is printed.

For more information on the Transmission Report - Job Undelivered, refer to "4 Machine Status" > Machine Information" > "Automatically Printed Reports/Lists" > "Transmission Report - Job Undelivered" in the Administrator Guide. For more information on how to print the Transmission Report - Job Undelivered automatically, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Transmission Report - Job Undelivered" in the Administrator Guide.

### ■ For a Scan Job

### A Transmission Report - Job Undelivered is printed.

For more information on the Transmission Report - Job Undelivered, refer to "4 Machine Status" > "Machine Information" > "Automatically Printed Reports/Lists" > "Transmission Report - Job Undelivered" in the Administrator Guide. For more information on how to print the Transmission Report - Job Undelivered automatically, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Transmission Report - Job Undelivered" in the Administrator Guide.

### **■** For Other Jobs

### Print a Job History Report, and check the execution results.

For information on the Job History Report, refer to "5 Tools" > "Common Service Settings" > "Reports" > "Job History Report" in the Administrator Guide.

When an error code is listed in the Transmission Report - Job Undelivered or the Job History Report, refer to "15 Problem Solving" > "Error Code" in the Administrator Guide.

# **12 Computer Operations**

This chapter describes how to print documents, import scanned files, use Direct Fax, and operate CentreWare Internet Services on your computer.

- Some models do not support the features described in this chapter. An optional component is required. For more information, contact our Customer Support Center.
- The computer screen images shown in this chapter are as of April 2014.
- The procedures in this chapter may vary depending on the driver and utility software being used due to the upgrades.

•	Features Overview	448
•	Print	449
•	E-mail Printing	453
•	Sending Fax	454
•	Importing Scanned Data	457
•	CentreWare Internet Services	464

### Features Overview

This section describes an overview of features you can perform from a computer.

### **■** Printing

Submits a print job to the machine from a computer.

For more information, refer to "Print" (P.449).

### ■ E-mail Printing

Submits a print job to the machine from a computer by sending e-mail attached with a document. The received e-mail is automatically printed from the machine according to the settings on the machine.

For more information, refer to "E-mail Printing" (P.453).

### ■ Sending Fax

Sends a fax directly from a computer.

For more information, refer to "Sending Fax" (P.454).

### ■ Importing Scanned Data

Imports files stored in a folder of the machine to a computer.

For more information, refer to "Importing Scanned Data" (P.457).

### **■** CentreWare Internet Services

Displays the machine status and job status. The feature also allows you to change settings as well as to import files stored in a folder.

For more information, refer to "CentreWare Internet Services" (P.464).

For information on how to import scanned data stored in a folder, refer to "Importing Using CentreWare Internet Services" (P.462).

### **Print**

This section describes how to print with the machine by operating on a computer.

### **Print Features**

The main print features of the machine are as follows:

### Printing Using a Print Driver

For more information on print features, click [Help] on the print driver screen to view the print driver's help. For information on printing, refer to "Printing" (P.451).

• Some features become available after you make option settings on the [Configuration] tab. The unavailable features are grayed out.

### ■ Pages Per Sheet (N-Up)

Prints multiple pages onto one sheet of paper.

### ■ 2-Sided Print

Prints data on both sides of paper.

#### ■ Poster

Splits one page of print data into multiple sheets of paper and enlarges the printed image to fit the size of each sheet. Used to create large posters.

#### **■** Booklet Creation

Performs 2-sided printing and page allocation for printing a booklet in the correct page order.

### **■** Transparency Separators

Automatically inserts a blank sheet of paper as a separator each time a transparency is printed.

#### **■** Watermark

Prints preset text, such as "Confidential", over the print data.

### **■** Secure Print

Temporarily stores the print data on the machine, to print it with the print command from the machine. This feature allows you to set a passcode, which is helpful to print confidential

For information on how to print a Secure Print job, refer to "Secure Print" (P.428).

### ■ Sample Set

Before printing multiple sets of a document, you can first print one set for trial, and then print the remaining sets from the machine.

For information on how to print a Sample Set job, refer to "Sample Set" (P.431).

### ■ Delayed Print

Temporarily stores the print data on the machine to print it at specified time.

For information on how to print a Delayed Print job, refer to "Delayed Print" (P.434).

#### ■ Store in Remote Folder

Temporarily stores the print data in a registered folder, to print the data with the print command from the machine.

Important • The print result of the Store in Remote Folder feature may be inferior to the other print results in

• This feature does not appear for some models. An optional component is required. For more information, contact our Customer Support Center.

For information on how to print files in a folder, refer to "Printing Files in a Folder" (P.380).

### ■ Universal Emphasis Print

Detects the original document to find the text in red, and then applies shaded or underlined style for printing.

Note

• This feature enables the people with color vision deficiency to enhance the readability of the color documents. The Color Universal Design Organization (CUDO) gave its design certification to this

### ■ Dual Color

Prints color documents using two colors (black and the selected color). You can select the color form six colors.

Note

• Dual Color printing is treated as the same as Specific Color printing for accounting.

### **Direct Printing**

Allows you to directly send TIFF, PDF, JPEG, XPS (Microsoft XPS Format, Open XPS Format), XDW (DocuWorks), or XBD (DocuWorks binder) format files from a computer to the machine without using a print driver.

For information on Direct Printing, refer to "Print" > "Job Submission" in the help of CentreWare Internet Services.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

Note

• XPS stands for XML Paper Specification.

### E-mail Printing

Allows you to send e-mail with the TIFF, PDF, JPEG (JFIF), XPS (Microsoft XPS Format, Open XPS Format), XDW (DocuWorks), or XBD (DocuWorks binder) format documents attached from a computer to the machine. The received e-mail is automatically printed from the machine.

Note

- XPS stands for XML Paper Specification.
- If the Authentication feature is enabled, received e-mails are not printed automatically.

For information on how to use E-mail Printing, refer to "E-mail Printing" (P.453).

### **Print Features Using Authentication Information**

### ■ Charge Print

This feature authenticates users on the machine to prevent unauthorized users from operating print jobs. When this feature is enabled, the machine prints only the jobs of authenticated users. The machine can also be configured to store multiple print jobs temporarily until the user requests to print them on the control panel.

In addition, by registering an authentication user ID and passcode on the machine in advance, only the registered user can print the jobs.

• To prohibit other users from operating jobs, register a passcode for your Billing ID on the print driver. For information on how to set Charge Print, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide. For information on how to print a Charge Print job, refer to "Charge Print" (P.436).

### ■ Private Charge Print

This feature allows you to temporarily store print data in the machine for each authentication user ID, and request on the machine's control panel to print the data. As the feature enables you to select and print only necessary jobs, you can avoid printing unnecessary jobs. Furthermore, the machine displays only the jobs of authenticated users and their associated sub users to securely protect the privacy of the users. This feature is suitable for authenticating and managing specific users managed by the system administrator.

Note

- If you do not want to store unnecessary jobs, you can configure the machine to store only the jobs whose authentication succeeded.
- An application (sold separately) is required to use the feature that associates sub users with the User ID of a login user. For more information, contact our Customer Support Center.

For information on how to set Private Charge Print, refer to "5 Tools" > "Authentication/Security Settings" > "Authentication" > "Charge/Private Print Settings" in the Administrator Guide. For information on how to print a Private Charge Print job, refer to "Private Charge Print" (P.439).

### Setup

To print from your computer, your computer must have a print driver installed.

For information on how to install the print driver, refer to the manual included in the Driver CD Kit.

Note

• When printing using authentication information, you must configure the printer settings on your computer. Make the necessary settings on the [Configuration] tab of the printer's properties. For more information, refer to the print driver's help.

### **Printing**

This following describes how to print documents.


The printing procedure depends on the application software you use. For more information, refer to the documentation provided with the application.

For more information on print features, click [Help] on the print driver screen to view the print driver's help.

- **1** Select [Print] from the [File] menu on the application.
- 2 Confirm [Printer Name] and set [Properties] if necessary.

• You can change the print feature in [Job Type].

**3** Click [OK].

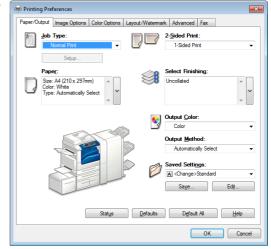

4 Click [OK] in the [Print] dialog box.

- If the document monitor is installed and set to monitor the machine, the notification screen is displayed when printing has been completed. The document monitor is available in the CD-ROM of the Driver CD Kit. For information how to install the document monitor, refer to the manual included in the Driver CD Kit.
- ullet Environment-friendliness level is indicated on the notification screen with leaves lacktriangle. This information is provided only when [Normal Print] or [Sample Print] is selected in the [Job Type].

### E-mail Printing

You can send e-mail with documents attached from a computer to the machine. The received e-mail is automatically printed from the machine according to the settings on the machine. This feature is called "E-mail Printing".

Note

- If the Authentication feature is enabled, received e-mails are not printed automatically.
- The following file formats can be used: TIFF, PDF, JPEG (JFIF), XPS\*, XDW (DocuWorks) or XBD (DocuWorks binder).
- \*: XPS stands for XML Paper Specification.

### Setup

To use the E-mail Printing feature, the following settings are required. Check with your system administrator or network administrator whether these settings have been completed.

### **■** E-mail Account Registration

Registering an e-mail account in advance.

### ■ Configuration on the Machine

Configuring the required settings on the machine.

For information on E-mail Environment Settings, refer to "8 E-mail Environment Settings" in the Administrator Guide.

### Receiving E-Mail

The following describes how to receive e-mails from Microsoft® Outlook® Express on a computer as an example.

- **1** Use your e-mail software to create an e-mail body, and then attach a document to the e-mail if necessary.
  - **Important** Only plain text is available for the e-mail body. Change the body text format to plain text on your e-mail application.
    - Any forwarded e-mail (that is attached to another e-mail) cannot be printed.

Note

- If the extension of the attached file is other than ".tif", ".tiff", ".pdf", ".jpeg", ".jpg", ".jpe", ".jfif", ".xps", ".oxps", ".xdw", and ".xbd", the file may not be printed correctly.
- Up to 31 documents can be attached.
- \* : XPS stands for XML Paper Specification.
- **2** Enter the machine's e-mail address as a recipient.

Example: print@device1.example.com

3 Send the e-mail.

Note

- The machine prints the e-mail body and the attached documents according to the following settings. The offset output setting is disabled in all cases.
  - E-mail body:
    - Default values of the PCL print driver for this machine which is installed on the computer
  - TIFF or JPEG formatted attached file:
     Default values of the logical printer set in [Memory Settings] of [TIFF/JPEG] in [Language Emulations] of CentreWare Internet Services
  - PDF formatted attached file:

Settings of PDF Direct Print when [Print Processing Mode] is set to [PDF Bridge] in PDF Direct Print.

Default values of the logical printer configured under [Language Emulations] > [PostScript 3] > [Logical Printer Number] in CentreWare Internet Services when [Print Processing Mode] is set to [PS] in PDF Direct Print.

### **Sending Fax**

This section describes how to send a fax using the Direct Fax feature. The following procedure uses Windows XP WordPad as an example.


The Direct Fax procedure depends on the application you use. For more information, refer to the documentation provided with the application.

For more information on the Direct Fax feature, click [Help] on the print driver screen to view the print driver's help.

**Important** • The Direct Fax feature is not available when the Server Fax service is enabled.

Note

- This feature does not appear for some models. To use the feature, an optional component is required. For more information, contact our Customer Support Center.
- **1** Select [Print] from the [File] menu on the application.
- **2** Select a fax printer from [Printer Name].
- 3 Click [Properties], and select [Fax] in [Job Type].
- **4** Click [OK].
- **5** Click [OK] in the [Print] dialog box.

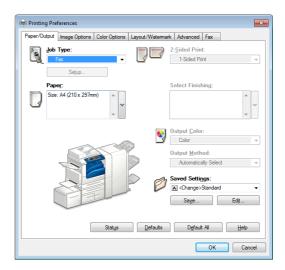

**6** Specify a destination in the [Fax Recipient] dialog box.

Note

• If a problem occurs, an error message appears on the touch screen. Solve the problem according to the message.

**7** Click [OK].

The [Fax Job Confirmation] dialog box appears after you have sent a fax job. A list of recipients to whom the fax job is being sent will be displayed.

### **Registering Destinations**

The following describes how to register fax destinations from the machine to another machine (ApeosPort-V C7775/C6675/C5575/C4475/C3375/C3373/C2275, DocuCentre-V C7775/C6675/C5575/C4475/C3375/C3373/C2275) in a single operation through a computer.

You can use the same procedure to register fax destinations from another machine (ApeosPort-V C7775/C6675/C5575/C4475/C3375/C3373/C2275, DocuCentre-V C7775/C6675/C5575/C4475/C3373/C2275) to this machine.

Use CentreWare Internet Services to register fax destinations.

For information on CentreWare Internet Services, refer to "6 CentreWare Internet Services Settings" > "Configuring Machine Settings Using CentreWare Internet Services" in the Administrator Guide.

You can register fax destinations separately on the control panel. For more information, refer to "5 Tools" > "Setup" > "Add Address Book Entry" in the Administrator Guide.

- Important Because CentreWare Internet Services is accessible by multiple users simultaneously, the registered data will have a risk to be overwritten if a system administrator ID and passcode are not set. We recommend that data edit is permitted only by a system administrator with a passcode.
  - Be sure not to perform this operation simultaneously with the address number registration from the control panel.
  - If a number is duplicated, the existing number will be overwritten by the new one.
  - A file in CSV format exported by CentreWare Internet Services (Address book data) is not designed to be edited or changed by editing software. Such a file cannot be imported into the machine. Therefore, do not edit or change the file in CSV format (Address book data) with software such as Microsoft® Excel®.
  - To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

#### Note

• Using CentreWare Internet Services, you can import a CSV format file which is created by other than the machine to the Address Book of the machine. For more information, refer to the help of CentreWare Internet Services.

This feature is not available depending on the version of the CSV format file or the model of the machine.

- $\bullet \ \, \text{Using CentreWare Internet Services, you can download a blank form of the Address Book (CSV) }$ format file) to a computer. After completing the form on a computer, batch registration of it (a CSV format file) on the machine is available via CentreWare Internet Services. For more information, refer to the help of CentreWare Internet Services.
- Start up the computer, and a web browser.
- Enter the machine's IP address or Internet address in the browser address field, and press the <Enter> key.

- If your network uses DNS (Domain Name System) and the machine's host name is registered in the domain name server, you can access the machine using the URL with the combination of the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com", then the URL is "myhost.example.com".
- Ask your system administrator for the IP address or Internet address.
- When specifying a port number, add ":" and the port number after the address. The default port number is "80".
- When the Authentication feature is enabled on the machine, enter a user ID and passcode in the [User Name] and [Password] fields respectively. Ask your system administrator for the user ID and
- If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.
- **3** Click the [Properties] tab, and select [Services] > [E-mail] > [Public Address Book] in the left frame on the screen.
- Click [Export] in [Data Export (Export Public Address Book)].



- **5** Click [Save] in the Security Warning dialog box.
- Specify the destination to save the file in.
- Enter the IP address or Internet address of another machine (ApeosPort-V C7775/C6675/ C5575/C4475/C3375/C3373/C2275, DocuCentre-V C7775/C6675/C5575/C4475/C3375/ C3373/C2275) in the browser address field, and press the <Enter> key.

- **8** Click the [Properties] tab, and select [Public Address Book] in the left frame on the screen.
  - Note
- [Data Import (Import Public Address Book)] on the [Properties] tab is not available for the Address Book data created based on a CSV file which is downloaded from the [Export Template with Column Headings only] or [Download Template] on [Address Book] tab. For the Address Book data, perform [Import] on the [Address Book] tab.
- **9** Click [Browse] in [Data Import (Import Public Address Book)] to specify the file saved in step 6.
- 10 Click [Import].

## **Importing Scanned Data**

This section describes how to import files from a machine's folder to your computer. The following four methods are available.

Importing to a TWAIN Compatible Application	457
Importing Using Stored File Manager 3	459
Importing Using CentreWare Internet Services	467

### Importing to a TWAIN Compatible Application

The following describes how to import files from a machine's folder to application software. Network Scanner Driver is used to import stored files.

Network Scanner Driver is software that allows a client-side application to import stored files (scan data) from a machine's folder via a network.

To use Network Scanner Driver, you must have Network Scanner Utility 3 installed on your computer.

Note

- The Network Scanner Utility 3 is included in the Driver CD Kit.
- When Secondary Ethernet (optional) is installed on the machine and the IP address of Ethernet2 is specified, Network Scanner Utility 3 cannot operate. For more information, refer to "5 Tools" > "Connectivity & Network Setup" > "Protocol Setup" > "TCP/IP Network Settings (Ethernet 2)" in the Administrator Guide.

To import files stored in a folder, prior settings are required, such as enabling ports. For more information, refer to "9 Scanner Environment Settings" > "Configuration of Store to Folder" in the Administrator Guide. For information on the operation of the application, refer to the documentation provided with the application.

For information on how to install Network Scanner Driver, refer to the "Readme" file included in the Driver CD Kit.

To learn about fields in the displayed dialog box, click [Help] to view the Network Scanner Driver's help.

1 Launch application software to which files are imported.

 $\textbf{Important} \ \bullet \text{The application must support TWAIN. TWAIN is a standard for scanners and other input devices.}$ 

Note

- For notes and restrictions on the use of application software, refer to the "Readme" included in Network Scanner Utility 3.
- 2 From the [File] menu, select the command for selecting the scanner (source).
- **3** Select [FX Network Scanner 3 TWAIN], and click [Select].



4 From the [File] menu, select the command for importing the image from the scanner.


From the displayed list, click the scanner name of the machine, and click [Next].

Note

- If no scanners are shown in the list, click [Search Again]. The application searches for
- To change the display of scanner names, use the dialog box that appears by clicking [Search/Display Settings]. For more information, refer to "Changing the display of scanner names" (P.459).
- Only scanners on the network are automatically listed. To view a scanner on another network, click [Search/Display Settings], and register the IP Address and scanner name. For information on how to register a scanner, refer to "Changing the display of scanner names" (P.459).
- **6** In the [Folder Number] field, enter the number of the folder (001 - 200) that contains the file to be imported. In the [Passcode] field, enter a passcode (up to 20 digits).

Note

- You can also select a folder number from [Registered Folders].
- Clicking [Select Scanner] returns to step 5, where you can reselect a scanner.
- Click [Confirm].

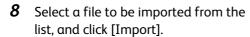


Note

- You can select multiple files.
- [Import], [Refresh], and [Delete] are available from the menu that appears when you rightclick on the list.

When the import starts, the scan data is forwarded from the folder to the computer.

After being forwarded, the data is loaded onto the application software and is deleted from the folder.

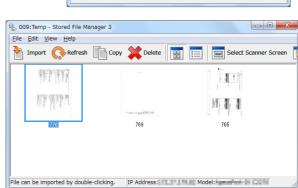

Temp

dust our

Specify Scanner Specify Scanner

IP Address or FQDN

Scanners Detected: Scanner Name

<u>A</u>bout

Specify Folder Specify Folder

Enter the folder

Scanner Name

Folder Number

IP Address:

Start network scanner settings. Either enter the scanner IP address or select it from the scanners detected

IP Address / FQDN Installed Location


Search Again Search / Display Settings...

Next > Cancel <u>H</u>elp

Set to Often-Used Folders

Confirm Cancel <u>H</u>elp

192.0.2.24 2001:DB8:1:1:1:1:1:1

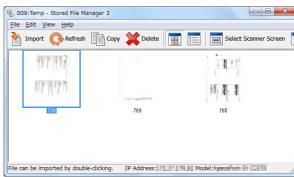

Note

- An icon is displayed next to the file that is scanned in pages and whose forwarding operation has not been completed.
- For most applications except DocuWorks, Network Scanner Driver expands the compressed data and transfers the data to the applications in BMP format. For DocuWorks, on the other hand, Network Scanner Driver transfers the data without data expansion processing. For this reason, it does not take much time for data transfer.
- The machine can be configured not to delete files from a folder after forwarding them. For information on the setting, refer to "5 Tools" > "Setup" > "Create Folder" in the Administrator Guide.

### **Changing Network Scanner Driver Settings**

To learn about fields in the displayed dialog box, click [Help] to view the Network Scanner Driver's help.



### ■ Changing the display of scanner names

You can change the display of scanner names listed.

To change the display of scanner names, use the dialog box that appears by clicking [Search/ Display Settings] in the scanner selection dialog box.

Under [Scanner Name Display], you can change the method in which scanner names are displayed in [Scanners Detected].

Specify scanners to search for under [Search Target Settings].


Note

 If you click [Add] and then register a scanner, you can display scanners from other networks.

### ■ Import method for scanned files

You can change the display and the import settings for files scanned from a folder.

To change the import method, click [Import Settings] from [File] menu in the file selection dialog box, and configure the settings in the dialog box that appears.

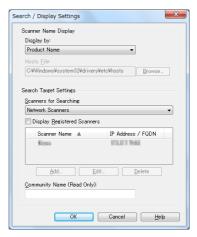



### **Importing Using Stored File Manager 3**

The following describes how to use Stored File Manager 3 to import files from a machine's folder.

Stored File Manager 3 is software to import files from a machine's folder to a computer without using any client-side application.

To use Stored File Manager 3, your computer must have Network Scanner Utility 3 installed.

Note

- The Network Scanner Utility 3 is included in the Driver CD Kit.
- When Secondary Ethernet (optional) is installed on the machine and the IP address of Ethernet2 is specified, Network Scanner Utility 3 cannot operate. For more information, refer to "5 Tools" > "Connectivity & Network Setup" > "Protocol Setup" > "TCP/IP Network Settings (Ethernet 2)" in the Administrator Guide

To import files stored in a folder, prior settings are required, such as enabling ports. For more information, refer to "9 Scanner Environment Settings" > "Configuration of Store to Folder" in the Administrator Guide. For information on the operation of the application, refer to the documentation provided with the application.

For information on how to install Stored File Manager 3, refer to the "Readme" file included in the Driver CD Kit.

To learn about fields in the displayed dialog box, click [Help] to view the Stored File Manager 3 help.


1 Click [Start] and select [Programs] > [Fuji Xerox] > [Network Scanner Utility 3] > [Stored File Manager 3].

Note • If you used another directory for installation, specify the directory instead.

From the displayed list, click the scanner name of the machine, and click [Next].

Note

- If no scanners are shown in the list, click [Search Again]. The application searches for scanners.
- To change the display of scanner names, use the dialog box that appears by clicking [Search/Display Settings]. For more information, refer to "Changing the display of scanner names" (P.461).
- Only when the machine is connected to the network, the scanner name is automatically listed. To view the machine connected to another network, click [Search/Display Settings] and register the IP address and scanner name. For information on how to change the settings, refer to "Changing the display of scanner names" (P.461).

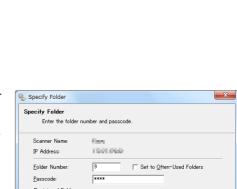

Start network scanner settings.
Either enter the scanner IP address or select it from the scanners detected

IP Address / FQDN Installed Locatio

Search / Display Settings...

<u>C</u>lose

Next > <u>C</u>lose

192.0.2.24 2001:DB8:1:1:1:1:1:1

& Specify Scanne

Specify Scanner

IP Address or FQDN

Scanners Detected

Scanner Name

<u>A</u>bout

**3** In the [Folder Number] field, enter the number of the folder (001 - 200) that contains the file to be imported. In the [Passcode] field, enter a passcode (up to 20 digits).

Note

- You can also select a folder number from [Registered Folders].
- Clicking [Select Scanner] returns to step 2, where you can reselect a scanner.
- Click [Confirm].
- Select a file to be imported from the list. To import a file, there are two ways as follows:

### ■ Importing a file by clicking [Import]


Click [Import].

The file is extracted and stored in the specified save location.

Note

- You can select multiple files.
- When [File Saving Options] is set to [Set Destination for Each File] under the import settings, a dialog box for specifying a save destination is displayed. When the dialog box appears, specify a save destination, and click [OK].

For information on the import settings, refer to "Import settings for scanned files" (P.461).

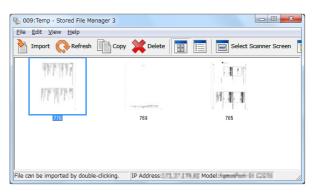


# ■ Importing a file by drag and drop operation

Drag and drop the file to the save location such as the desktop.

The dropped file is stored in the folder.

Note

- The file can be imported by copy and paste operation. The file to be pasted remains in the folder
- To delete the file in the folder, click [Delete] on the toolbar.

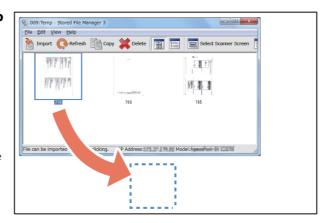

### **6** The file is imported to the specified directory.

Note

• When [File Saving Options] is set to [Save in Fixed Destination] under the import settings, a file is saved in the specified directory. For information on the import settings, refer to "Import settings for scanned files" (P.461).

### **Changing Stored File Manager 3 Settings**

To learn about fields in the displayed dialog box, click [Help] to view the Stored File Manager 3 help.

### ■ Changing the display of scanner names

You can change the display of scanner names listed.

To change the display of scanner names, use the dialog box that appears by clicking [Search/ Display Settings] in the scanner selection dialog box.

Under [Scanner Name Display], you can change the method in which scanner names are displayed in [Scanners Detected].

Specify scanners to search for under [Search Target Settings].


Note


• If click [Add] and then register a scanner, you can display scanners from other networks.


### ■ Import settings for scanned files


You can change the display and the import settings for files scanned from a folder.

To change the import method, click [Details] from [File] menu in the file selection dialog box, and configure the settings in the dialog box that appears.

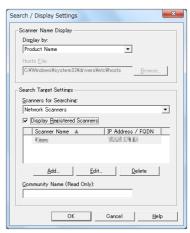

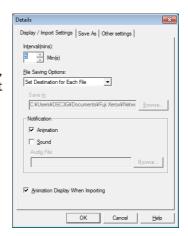

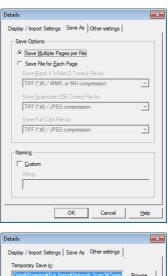

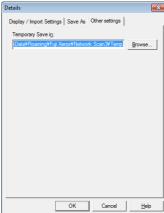

### **Importing Using CentreWare Internet Services**

This following describes how to import files stored in a machine's folder using CentreWare Internet Services.

When the machine is installed in a TCP/IP environment, CentreWare Internet Services allows you to import files stored in a machine's folder by accessing the machine from a computer via a web browser. You can also use a Macintosh computer to import files via a web browser.

Note

• You can retrieve scanned data in DocuWorks or PDF format, but cannot encrypt the DocuWorks or PDF files and cannot attach a signature to the files when retrieving them.

For information on an overview of CentreWare Internet Services, refer to "CentreWare Internet Services" (P.464).


For more information on this operation, click [Help] in the top frame to view the help.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

- Start up the computer, and a web browser.
- **2** Enter the machine's IP address or Internet address in the browser address field, and press the <Enter> key.

- If your network uses DNS (Domain Name System) and the machine's host name is registered in the domain name server, you can access the machine using the Internet address with the combination of the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com", then the Internet address is "myhost.example.com".
- Ask your system administrator for the IP address or Internet address.
- When specifying a port number, add ":" and the port number after the IP address or the Internet address.

- If the authentication feature is enabled on the machine, enter a user ID and passcode in the [User Name] and [Password] fields. Ask your system administrator for the user ID and passcode.
- If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.
- Select [Folder] on the [Scan] tab.

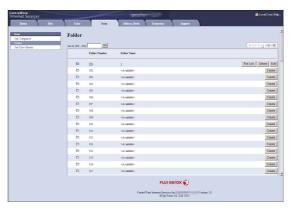

Click [File List] of the folder that contains the files to be imported.

• If a passcode is set, enter the passcode in the [Passcode] field (up to 20 digits). Note

5 Place a check mark next to each file to be imported, set the necessary items, and then click [Retrieve].

Note

• When you import files in PDF format from a folder, they cannot be optimized for web view.



Click a file name and save a file.

Note

• In [Internet Services Settings] in the [Properties] tab, when [Name of File(s) When Retrieved From Folder] is set to [File Name], the file name may be changed automatically when retrieving a file from the folder, depending on the file name. For more information, refer to the online help for CentreWare Internet Services.

**Important** • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by

Click [Save].





### CentreWare Internet Services

CentreWare Internet Services requires a TCP/IP environment, and enables you to view the status of the machine and its jobs, as well as change settings via a web browser. You can also import files stored in a folder.

For information on how to import files, refer to "Importing Using CentreWare Internet Services" (P.462).

For information on the settings of CentreWare Internet Services, refer to "6 CentreWare Internet Services Settings" in the Administrator Guide.

### CentreWare Internet Services Screen

The [CentreWare Internet Services] screen consists of five frames (divided windows). The information displayed in each frame depends on the selected category: [Status], [Jobs], [Print], [Scan], [Address Book], [Properties], or [Support].

• Clicking [Help] in the top frame displays the help for CentreWare Internet Services.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.



### **■** Top Frame

Displays the model of the machine, user information, a link to the online help, and the tabs (links) to go to each category.

[Logout] is displayed on the right of the user information when you log in as the authenticated user using the Authentication feature or as the System Administrator.

Click [Logout] to cancel the Authentication mode or log out of the System Administrator mode.

For information on each feature provided by CentreWare Internet Services, click [Help] in this frame to view the help.

Important • To display the online help for CentreWare Internet Services, users need to have the environment to connect to the Internet. The communication fee shall be borne by you.

### ■ Upper Left Frame

Displays the menu tree (list of the setting items) of the selected category. The item selected from the menu tree is displayed on the upper right frame.

For the [Print] and [Support] tabs, the machine information and status, and the [Refresh] button are displayed on the frame instead of the menu tree. Click the [Refresh] button to update the displayed information.

### ■ Upper Right Frame

Displays the screens to display or configure the setting of the item selected on the category tab or the menu tree.

### **■ Lower Left Frame**

This frame is displayed on the [Jobs] and [Scan] tabs only.

For the [Jobs] tab, the machine status and information, and the [Refresh] button are displayed. Click the [Refresh] button to update the displayed information.

For the [Scan] tab, the button to add a job template and the list of the job templates are displayed.

### ■ Lower Right Frame

The Fuji Xerox logo and the version information of CentreWare Internet Services are displayed. When you click the logo, our website appears in a new window.

Main features of CentreWare Internet Services are listed below.

Tab Name	Main Features
Status	<ul> <li>Displaying the machine status         Displays the status of the paper trays, output trays, and consumables such as toner cartridges.     </li> <li>Usage Counters         Displays the total number of pages used for each feature and cumulative numbers.     </li> <li>Total Runtime         Displays [Output Device Runtime], [Scanner Runtime], [Standby Time], [Low Power Time], [Sleep Time], [Warm-up Time], and [Power Off Time] by minutes.     </li> </ul>
Jobs	• Listing active jobs and allowing you to delete the jobs, and displaying completed jobs and error information
Print	• Job Submission Allows you to specify and print a file stored on your computer.
Scan	<ul> <li>Job Templates         Allows you to create, edit, copy, and delete job templates.</li> <li>Folder         Allows you to create and set folders. You can also delete and import files in a folder.</li> <li>Job Flow Sheets (ApeosPort Series Models only)         Allows you to create, edit, and delete job flow sheets.</li> </ul>
Address Book	<ul> <li>Adding, editing, and deleting recipients in the Address Book.</li> <li>Address Book         Allows you to view a list of the Address Book, delete the Address Book data, and restrict users to access to the Address Book.     </li> <li>CSV file         Allows you to import a CSV file which is created by other than the machine, and download the sample CSV file and a blank CSV file.     </li> </ul>
Properties	Displaying and setting the items such as Machine configuration, Interface, and Emulation settings.
Support	Displaying support information

- Some field settings take effect after a reboot (after switching the power off and then on again, or after changing the System Settings from the control panel).
- During operation on the control panel, settings cannot be changed by CentreWare Internet Services.
- To change the settings of items set by the system administrator, you need to enter the system administrator ID and passcode. Ask your system administrator for the ID and passcode.

### **Browser Settings**

Before using this service, ensure the following settings on your browser.

The following describes the setting procedure for Internet Explorer<sup>®</sup> 8.0.

Note

- Depending on the web browser used on your computer, CentreWare Internet Services may not work normally.
- Select [Internet Options] from the [Tools] menu.
- **2** On the [General] tab, click [Settings] for [Browsing history].
- 3 In the [Temporary Internet Files and History Settings] dialog box, select [Every time I visit the webpage] or [Every time I start Internet Explorer] for [Temporary Internet Files].
- Click [OK].

### **Proxy Server and Port Number**

The following describes proxy server settings and a port number required for this service.

### ■ Proxy Server

We recommend that you access this service directly, not through a proxy server.

Note

• If using a proxy server, specifying the machine's IP address in the browser results in slower responses, and could prevent some screens from appearing. In this case, set the machine's IP address on the browser not to use a proxy server. For information on the setting instructions, refer to the documentation provided with your browser.

### **■** Port Number

The default port number of this service is "80". The port number can be changed in [Properties] > [Connectivity] > [Protocols] > [HTTP]. Usable ports are "1" to "65535".

If you set the port to a number other than 80, you must add ":" and the port number after the IP address or the Internet address when entering the address into your browser.

For example, if the port number is 8080, the URL is:

http://[the machine's IP address]:8080/

or

http://[the machine's Internet address]:8080/

You can check the port number in a Configuration Report. For information on the Configuration Report, refer to "4 Machine Status" > "Machine Information" > "Print Reports" in the Administrator Guide.

Note

• If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.

### **Starting CentreWare Internet Services**

To use this service, perform the following procedure on your computer.

- Start up the computer, and a web browser.
- Enter the machine's IP address or Internet address in the browser address field, and press the <Enter> key.

- If your network uses DNS (Domain Name System) and the machine's host name is registered in the domain name server, you can access the machine using the URL with the combination of the host name and the domain name. For example, if the host name is "myhost", and the domain name is "example.com", then the Internet address is "myhost.example.com".
- Ask your system administrator for the IP address or Internet address.
- When specifying a port number, add ":" and the port number after the IP address or the Internet address.

- If the Authentication feature is enabled on the machine, enter a user ID and passcode in the [User Name] and [Password] fields. Ask your system administrator for the user ID and passcode.
- If communications are encrypted, you must specify an address that starts with "https" instead of "http" to access CentreWare Internet Services.
- $\bullet$  If authentication of the system administrator fails, the following message is displayed in the right frame of web browser:
- "Login failed."
- If the number of times that authentication fails exceeds the specified number, the following message is displayed in the right frame of web browser:
  - "Switch the machine Off and then On for System Administrator login."

## 13 Appendix

Th	nis chapter contains a glossary of terms used in this guide.	
•	Glossary	470

## Glossary

Term	Description
A3	420 x 297 mm paper
A4	297 x 210 mm paper
A5	210 x 148 mm paper
Alias	An alternative name of the machine's e-mail address. For example, when the e-mail address for the machine is internet_fax@mb1.abc.example.com, you can use internet_fax@example.com (alias) to reach the same location.
Auto Center	A feature that automatically moves an image to the center of paper when copying.
Auto Clear	A feature that automatically returns the touch screen to its default display when the machine is inactive for a certain period of time.
Auto Select	Based on the document loaded and the magnification selected, the machine automatically selects an appropriate paper size.
Auto Tray Switching	When paper runs out during copying or printing, another tray of identical paper size and orientation automatically begins supplying paper.
B4	364 x 257 mm paper
B5	257 x 182 mm paper
Binding Shift	When creating a booklet, this feature adds margins to the center binding area of documents.
Book Scanning	A feature that copies the left and right pages of an unfolded document onto two separate sheets of paper.
Border Limit (Page split threshold value)	One more sheet is used when the length of the transmitted document exceeds the length of paper installed on the receiving terminal. A margin at the bottom of a received document can be eliminated so that the data can be printed on one page. The amount of space that can be removed from the bottom of a document is the border limit. When the border limit value is small, the data can be printed on the next page. But when it is large, a larger space can be cut so that data can be printed on one page.
Calibration	This refers to smoothness of colors. Calibration levels are shown in gradation steps. The greater the step, the smoother the color will be.
CMS	An abbreviation of Color Management System. It corrects device- dependent color differences to match the colors printed on your output with the colors displayed on your screen.
Collate	A feature where each copy set is delivered in the same order the documents were copied.
Communication(s)	A communications network that can offer voice data (telephone), image data (fax), video data (videotex) and PC data (PC communication service) over the same channel. In this guide, it is mostly referred to as transmitting/receiving images as well as speaking with a remote user.
CSV File	CSV (Comma Separated Values) is a file format that is often used for saving data by spreadsheets and database programs.

Term	Description
Cut Paper	Standard paper sizes, such as A4 and B5.
Default Screen	A screen displayed on the touch screen immediately after switching the power on, or pressing the <clear all=""> button. The screen is also displayed when the Auto Clear feature is used.</clear>
Default Value	A factory default value, or a value set in the System Administration mode.
Dial	In this guide, it refers to entering a recipient's fax number. The method of dialing provided by the machine include: manual dialing using the numeric keypad, speed dialing, one-touch dialing, and using the Address book, etc.
Dial Tone	A tone generated from the telephone line. It indicates that you are connected to the line.
Dial Type	The dial type of connected line. The machine offers two dial types: Tone (push circuit) and 10PPS (dial circuit / 10PPS).
Direct Internet Fax	Allows you to send e-mail directly to the Internet Fax-compatible machines without going through the SMTP server, while Internet Fax uses the SMTP server to send e-mail.
Document Image	An image of a document scanned by the machine.
DPI	An abbreviation of Dots Per Inch. A unit used to describe printing resolution in terms of the number of dots printed in one inch. Used as a unit to describe resolution.
ЕСМ	An abbreviation of Error Correction Mode.  A type of G3 transmission. ECM transmission sends the document image data in segments and retransmits segments that the remote machine receives incorrectly.  "ECM" described on the Activity Report shows that the communication was processed using ECM.
Edge Erase	A feature that erases the top/bottom, left/right or center edge of a document image when copying.
Emulation	This refers to operating the printer to achieve the same print results as when printing with other manufacturers' printers. This mode is called the Emulation Mode.
Power Saver Feature	A feature that switches the machine status to standby after a period of inactivity.  The following power saver features can be set for the machine.  • Low Power Mode:  The power to the fusing unit and motor is lowered when the machine is left unused for a fixed amount of time. The touch screen goes out, and the <power saver=""> button lights up.  • Sleep Mode:  Most of the units in the machine are in standby status. The machine consumes the least power.</power>
Error Code	A code is displayed on the touch screen or a report when a problem occurs.

Term	Description
F Code	A transmission method defined by Communications and Information Network Association of Japan (CIAJ) for use of T.30* sub-addresses standardized by ITU-T. Between the machines with the F Code feature, including those manufactured by other companies, various features making use of F Code can be used.
	(*: Communication standard) With IP Fax (SIP) communication and the Internet Fax feature of the machine, you can use F Code to forward fax documents received in folders by e-mail.
F4800	This refers to communicating with a remote terminal outside the country.  It is also one of the Transmission Mode selections that reduces transmission speed to enable reliable communications even under poor line conditions.
Fax Gateway	Connects the Internet network to regular telephone lines, enabling e-mail documents to be sent as fax documents to regular fax machines.
Fax Server	A feature that transfers image data received by the machine to a Server Fax server and transfers image data received by a Server Fax server to the machine via a network based on the settings you made.  Using this feature enables you to manage multiple machines.
G3	A facsimile communication system standardized by the advisory committee for International Telecommunications (CCITT, now the ITU-T).
Header	A record of the sender. It is printed on the top edge of a received document.
FQDN	FQDN (Fully Qualified Domain Name) is fully specified with a domain name, a sub-domain name, and a host name so that it is identified properly over the network.
ICM	An abbreviation of Image Color Matching. A color management software used with Windows 2000, Windows XP, and Windows Server 2003. It corrects device-dependent color differences to match the colors printed on your output with the colors displayed on your screen.
Image Enhancement	A feature which makes the border between black and white smooth, with rough edges reduced, giving the appearance of a higher resolution.
Image Rotation	This feature rotates a document image by 90 degrees when the document orientation is not the same as the paper supply orientation.
Independent X - Y %	A feature that transforms a document image horizontally or vertically.
Internet	A worldwide communications network that combine miscellaneous networks.
Internet Fax	Unlike a regular fax machine, Internet Fax uses corporate networks or the Internet to send or receive e-mail (TIFF attachments).
Job Offset	This feature outputs sheets in alternating offsets to make each set easier to recognize.

Term	Description
Line Monitor	Allows you to audibly monitor a transmission through the speaker after dialing and until you are connected.
Low Toner Alert Tone	A tone the device sounds when the toner cartridge needs to be replaced.
Machine Ready Tone	A tone produced when the status of the machine changes from standby to ready, such as when the power is switched on.
MIME Type	Multipurpose Internet Mail Extension.  A method for determining what kind of data was received by email. A MIME type refers to the type of data.
NAT/NAPT	NAT (Network Address Translation) converts private IP addresses to global IP addresses.  NAPT (Network Address Port Translation) also converts IP addresses to global addresses. It modifies port numbers as well.
NV Memory	A non-volatile memory, which stores the settings information of the printer even when the power is switched off.
Off-hook Dialing	Dialing with the receiver off the hook.
On-hook Dialing	Dialing with the receiver on the cradle.
Optional component	This refers to a product that is sold separately. In addition to the machine's basic configuration, various optional features are available as separately-sold optional components. (For more information on optional components, contact our Customer Support Center.)
Pages per Side	A feature that copies two or four documents onto one sheet of paper.
PCL	An abbreviation of Printer Control Language. A page description language developed by Hewlett Packard.
PJL	An abbreviation of Printer Job Language. A command language for controlling printers developed by Hewlett Packard.
Polling	A feature that allows you to retrieve a file from a remote machine.
POP3	An abbreviation of Post Office Protocol Version 3.  One of the commonly used communications protocols used for receiving e-mail.  It sets up a private mailbox on a provider's e-mail server, and receives messages when a communication is made. POP3 is for receiving only. SMTP is used for sending e-mail.
Print Page Buffer	The memory area where printing images are stored.
Printable Area	The actual area on paper which can be printed.
Profile	A protocol controlling image resolution, paper size, and other attributes when sending or receiving faxes using Internet Fax. The profiles that can be used vary with the Internet Fax of the remote terminal. When specifying a profile, check that it can be handled by the other party's Internet Fax-compatible machine.
QoS	QoS (Quality of Service) is a technology to ensure a certain level speed for specific network communications.
RAM	An abbreviation of Random Access Memory. It is a storage device (memory) where information can be retrieved as well as stored.
Receive Buffer	The area in the machine's memory or hard disk drive. Data sent from client computers is stored in this area.

Term	Description
Receiving Paper Size	A feature that specifies the output paper size for received fax documents. The specified paper size will be declared to recipients from the sender.
Recipient	The person or terminal you send a document to "Dialing" indicates the operation of entering a recipient's telephone number. For Internet Fax, this refers to the recipient's e-mail address.
Remote Terminal	A terminal with which you want to communicate. This is a general term for terminals such as telephones, facsimile machines and personal computers.
Resolution	Represents a fineness of detail that can be distinguished on an image. It is usually described in terms of the number of dots per inch (dpi), and a higher value indicates a higher resolution (finely represented).
ROM	An abbreviation of Read Only Memory. It is a storage device (memory) specific for the retrieval of information.
ROS	An abbreviation of Raster Output Scanner. It is a device for writing image signals to a drum (light sensitive). A ROS is often referred to as a laser beam scanner.
Scan	Sensing or reading a paper document and converting the optical image of the document to an electronic image.  The machine offers two scanning devices: document glass and document feeder.
Screen	The screen that is displayed on the touch screen. It displays messages and feature buttons.
Select	In this document, "Select" refers to highlighting a feature selection by touching the feature button on the touch screen with your finger.
Send Password	This feature requires to enter an "S" and the ID of a remote terminal after entering its fax number. This prevents transmission errors.
Sender	Originator of a communication. It is used as opposed to "recipient".
Separator	A blank, colored, or copied paper inserted between two copy sets.
SIP	SIP (Session Initiation Protocol) is a signaling protocol call control protocol which is necessary to communicate in IP network.
SIP Server	Servers such as SIP proxy server, SIP register server, and others.
SIP proxy server	SIP proxy server forwards requests from SIP terminals to other SIP terminals and SIP servers.
SIP user name	In SIP communication, user names are specified in "xxx@yyyy" format. (example: 1111@192.0.2.1) The part before "@" ("1111" in the example) is SIP user name.
SIP register server	The SIP register server receives registration requests from the SIP terminal and registers information.
SMTP	An abbreviation of Simple Mail Transfer Protocol. A communications protocol (an agreement governing the way data is transmitted) commonly used for sending and receiving email.

Term	Description
Start Reservation	In this guide, this refers to loading a document, selecting features, and pressing the <start> button immediately after switching the power on. Once the machine is warmed up and ready, it will automatically start copying.</start>
Status Display Code	A code that indicates the machine status. When an error occurs on the machine, a status display code appears on the touch screen.
Store	In this guide, it is referred to as scanning an image of a document and saving the image on the machine.
Stored Programming	By registering a series of operations, the machine executes the operations with just one press of [Stored Programming] on the touch screen.
Т.38	T.38 is a protocol for timely fax communication over the IP network. The protocol is also necessary for fax communication between existing public phone lines and the IP network.
Transmission Interval	The period between transmissions.
Transparency Copy	A feature that copies on transparency films or inserts a sheet of blank or copied paper between transparency films.
UNC	An abbreviation of Universal Naming Convention. UNC is a way to specify a path describing the location of a network resource, such as shared folders, or shared printers, on a network, Microsoft Network® (SMB).  The UNC syntax uses "\\" before the hostname, hostname and resource name are delimited by "\".  If the hostname is "myhost", and its shared folder name is "sharefolder", the path is described as follows: \\myhost\sharefolder
VoIP Gateway	The device that relays voice signals including fax communication between the IP network and public phone lines. It has a feature to convert the communication using VoIP and G3 fax communication in public phone lines.

## Index

Symbols	booklet unit	73, 74
-	booklet unit side cover	73
+ Add220	bottom left cover	67
	broadcast	267
Numerics	broadcast send	201, 220, 271
	browse	333
1 staple (simple copy)117	build job	177
10BASE-T/100BASE-TX connector68		
2 pages per side (simple copy)116	C	
2 sided book copying139		
2 sided copying (simple copy)115	C (clear) button	86, 91
2 sided scanning218, 234, 311	C3 finisher	74
2-sided print (print driver)449	C3 finisher with booklet maker	74
	calculator %	120
Α	calibration	96
	calling a stored program	403
access lamp67	calling a stored program for Build Job	404
activity report96	center tray	72, 74, 75
add current recipient303	CentreWare Internet Services	462, 464
add from current location331	change quantity	426
add me306	changing a job flow sheet	392
add new address226, 303, 329, 330	changing a stored program name	401
adding the sender's address306	chapter start	179
additional feature buttons96	charge print	436, 450
address book220, 321, 322	checking completed jobs	
adjusting contrast132, 355	checking/selecting files in a folder	
adjusting foot67	circuit breaker	80
adjusting scan density and image sharpness354	clear all button	86, 90
advanced settings353	color balance	134
annotations157	color effects	133
auto detect238, 360	color scanning	310
auto receive275	color shift	135
auto/color/black & white (simple copy)115	color space	356
	combine original sets	182
В	compression method	
	confirmation indicator	
background suppression355	confirming a recipient	232
batch print381	confirming the fax job in Job Status	
book copying138	constant velocity transport glass	
book faxing239	contrast	
book scanning358	control panel	66, 85
booklet creation (print driver)449	copies	ŕ
booklet staple cartridge73, 75	copy output	
booklet tray74	cover page	

covers	153	enlarged copies	118
creaser unit	73	enter output size	363
custom button 1	86, 90	entering a stored program name	401
custom button 2	86, 90	entering specific symbols	232
custom button 3	87, 90	entering text	100
		entering the e-mail body	348
D		erasing edges and margin shadows	in the document
			361
data indicator	86, 89	erasing the background color of do	cuments 355
delay start	246	error indicator	86, 90
delayed print	434	error terminations	446
delayed print (print driver)	449	exit 2 tray	66
delete outside/delete inside	183	EXT.LINE	71
deleting charge print jobs	438		
deleting delayed print jobs	435	F	
deleting private charge print jobs	441		
deleting sample set jobs	432	F code	255
deleting secure print jobs		facsimile information services	261, 265, 278
deleting stored jobs	428	fax	219
deleting stored programs		fax receiving mode	97
density levels		fax/internet fax options	
dial pause button		file format	
digital signature		file name	•
direct fax		file name conflict	•
direct printing		finisher front door	
document cover		finisher transport center tray	
document feeder		finisher tray	
document feeder tray		Finisher-A1	
document glass		Finisher-B1	
document guides		folder receive	
document output tray		folder unit cover	
document stopper		forced 4800 bps	245
DocuWorks		from	
DocuWorks security		front cover	66, 72
drum cartridge cover		front door	73
drum cartridge release lever		front transport cover	
drum cartridges		fusing unit	
dual color (print driver)		5	
duplex automatic document feede		G	
E		G3	245
		G4	245
edge erase	143, 361		
e-mail	296	Н	
e-mail printing	450, 453		
encryption	260, 368	handout tray	170

HANDSET	71	lighten/darken	129, 132, 233
hidden text	166	lighten/darken (simple copy)	116
hole punch kit	73	LINE	72
hole-punch waste container	73, 74	line cut	266
		list all certificates	321
I		list all public entries	301
		loading documents	282
IC card reader	88	local terminal information	230
ID card copy	175	lock out printer	96
image enhancement	132, 355	locking casters	66
image options	131, 354	log in/out button	85, 90
image rotation	147	login information field	94
image shift	144	login name	369
importing scanned data	457	low power mode	82
independent X - Y %	120	lower center tray	66
index print	422		
inner cover	69	М	
internet fax	202, 219		
internet fax message	250	machine components	66
internet fax profile	259	machine status button	85, 91
internet fax subject	250	main power indicator	86, 90
interrupt button	86, 90	main power switch	68
invert image	146	making enlarged/reduced copies	118
IP Fax (SIP)	207	making multiple copies on a single shee	t168
		manual receive	275
J		manual send	265
		Media Print	410
job assembly	177	Media Print - Photos	420
job flow sheet	390	Media Print - Text	421
job status	424	message	309, 348
job status button	85, 91	message field	93
job template	324	meta data	369
JPEG	313	Microsoft Office	314, 323
		mirror image	146
L		mixed size originals	142, 238, 360
		more options	261
language	96	MRC high compression	314
language of the original	317		
large size color UI	89	N	
last original	425		
layout adjustment	136, 237, 357	negative image	146
left cover	69, 70	network entries	299, 322
lever	69, 70	network scanner driver	458
license	36	network scanning	324

new recipient	305	printing	451
next original	425	printing charge print jobs	
non-standard size document	140	printing delayed print jobs	436
non-target area color	127	printing files in α folder	
numeric keypad	86, 90	printing pending jobs preferentially	445
		printing private charge print jobs	442
0		printing sample set jobs	433
		printing secure print jobs	431
one-touch buttons87, 216	, 228, 304, 332	printing stored jobs	428
one-touch panels	87	priority send	246
on-hook	265	private charge print	439, 451
original orientation		promote job	425
137, 142, 144, 145, 147	, 155, 158, 363	proportional %	119, 363
original size	141, 238, 359	public entries	298, 321
original type130	, 217, 235, 312	public folder	442
originals	137	punching	172
output color	124	push-button power switch	66, 76
output format	149		
output tray	66, 74	Q	
Р		quality/file size	365
pages per sheet (N-Up) (print driver)	449	R	
pages per side		K	
paper clip tray		read receipts	365
paper supply		rear right cover	
paper supply (simple copy)		receiver	
parallel interface connector		recipient print sets	
password		recipients	
PDF	-	reduce/enlarge	
PDF security		reduce/enlarge (simple copy)	
photo		reduced copies	
photo & text		registering stored programs	
photographs		release printer	
poster		remote folder	
poster (print driver)	449	remote polling	261
power saver button		removing a recipient	
power saver mode	82	reply to	367
preset repeat image	168	reset button	67
previewing charge print jobs		resolution	217, 236, 357
previewing print jobs		retrieve entries using index	302, 322
previewing private charge print jobs		RSA BSAFE	
previewing sample set jobs			
previewing secure print jobs		S	
print driver			
print mode	97	sample job	181

sample set	431	Smart WelcomEyes	66, 67, 83
sample set (print driver)	449	source color	126
saturation	132	specific color	315
save in	335	specifying a destination using a one-tou	uch button
saving the scanned data	289		228
scan density	354	specifying a destination using a one-too	uch buttons
Scan To	347		216
Scan to PC	326	specifying a destination using the addre	ess book 220
scanning a color photograph	354	specifying a destination using the keybo	oard screen
scanning different size documents simultar	neously		229
	360	specifying a destination using the nume	eric keypad
scanning facing pages on separate sheets	358		214
screen brightness	96	specifying α line (port)	230
search network	302	specifying a name for the file to be sent	t366
search public	302	specifying a reply address	367
searchable text	315	specifying a scan size	359
secure print	428	specifying a scanning ratio	362
secure print (print driver)	449	specifying a scanning resolution	357
secure watermark		specifying an image compression ratio	when scanning
segment separators	180		_
selecting a file format for output data	349	specifying color space	356
selecting a folder		specifying destinations	
selecting a job flow sheet		specifying read receipts	
selecting the document type		specifying the scanning resolution	
selecting the paper for copying	121	speed dial button	86, 90
selecting the printing options		speed dialing	225
sending in sections	366	split send	366
separator & handout	170	standard size	238, 360
separator tray	170	staple cartridge	72, 73, 74
server	335	start button	86, 90
server fax	212	starting a scan job via computer operat	ion350
service buttons	94	starting rate	245
services home button	85, 91	stop button	86, 90
services home screen	93	stopping a copy job	110
setting the subject	348	stopping a fax job	195
setup	96	stopping a scan job	290
shadow suppression	355	Store & Send Link	347
shared name	335	store for polling	263
sharpness	132, 354	store in remote folder (print driver)	450
side tray	67	Store to Folder	338
sideways images		Store to USB	
simple copy		Store to WSD	350
sleep mode		Stored File Manager 3	
smart card certificate		storing scanned data on a network com	
		<del>-</del>	•

stylus pen	67	Tray 6 (HCF B1)	66
stylus pen holder	67	Tray 6 (top cover)	66
subject	309, 348	tray attachment	73, 101
suppressing the document background	355	tri-fold output tray	75
		tri-fold output tray button	74
Т			
		U	
tandem tray module	71		
target area color	127	undelivered faxes	443
TEL	72	universal emphasis print (print driver)	450
telephone line connectors	71	upper left cover	67
text	312	upright images	312
text compression	317	USB 2.0 interface connector	67, 68
TIFF	312, 313	USB memory device	413
TIFF/JPEG auto select	312, 313	USB memory slot	87
TIFF-F	259	user name	336
TIFF-J	260		
TIFF-S	259	V	
toner cartridge	68		
top cover	72, 73	variable size	360
top left cover	67	VoIP gateway	207, 208, 210
touch screen	85, 89, 98		
transfer protocol	327	W	
transmission header text	248		
transmitting 2-sided originals	218	waste toner container	68
transparency options	169	watermark	162
transparency separators (print driver)	449	watermark (print driver)	449
transparency tray	169	web applications	406
Tray 1	66	WSD	285
Tray 2	66		
Tray 3	66, 71	X	
Tray 4	66, 71		
Tray 5 (Bypass)	66	XPS	313

ApeosPort-V C7775/C6675/C5575/C4475/C3375/C3373/C2275 DocuCentre-V C7775/C6675/C5575/C4475/C3375/C3373/C2275 User Guide

> ME6948E2-1 (Edition 1) April 2014 Copyright © 2014 by Fuji Xerox Co., Ltd.

Fuji Xerox Co., Ltd.